


Quick Setup Guide

SPA Guía de instalación rápida KOR 간편 설치 안내서 POR Guia de Instalação Rápida

1 Carry the printer


SPA Traslade la impresora
KOR 프린터를 운반합니다
POR Transporte a impressora

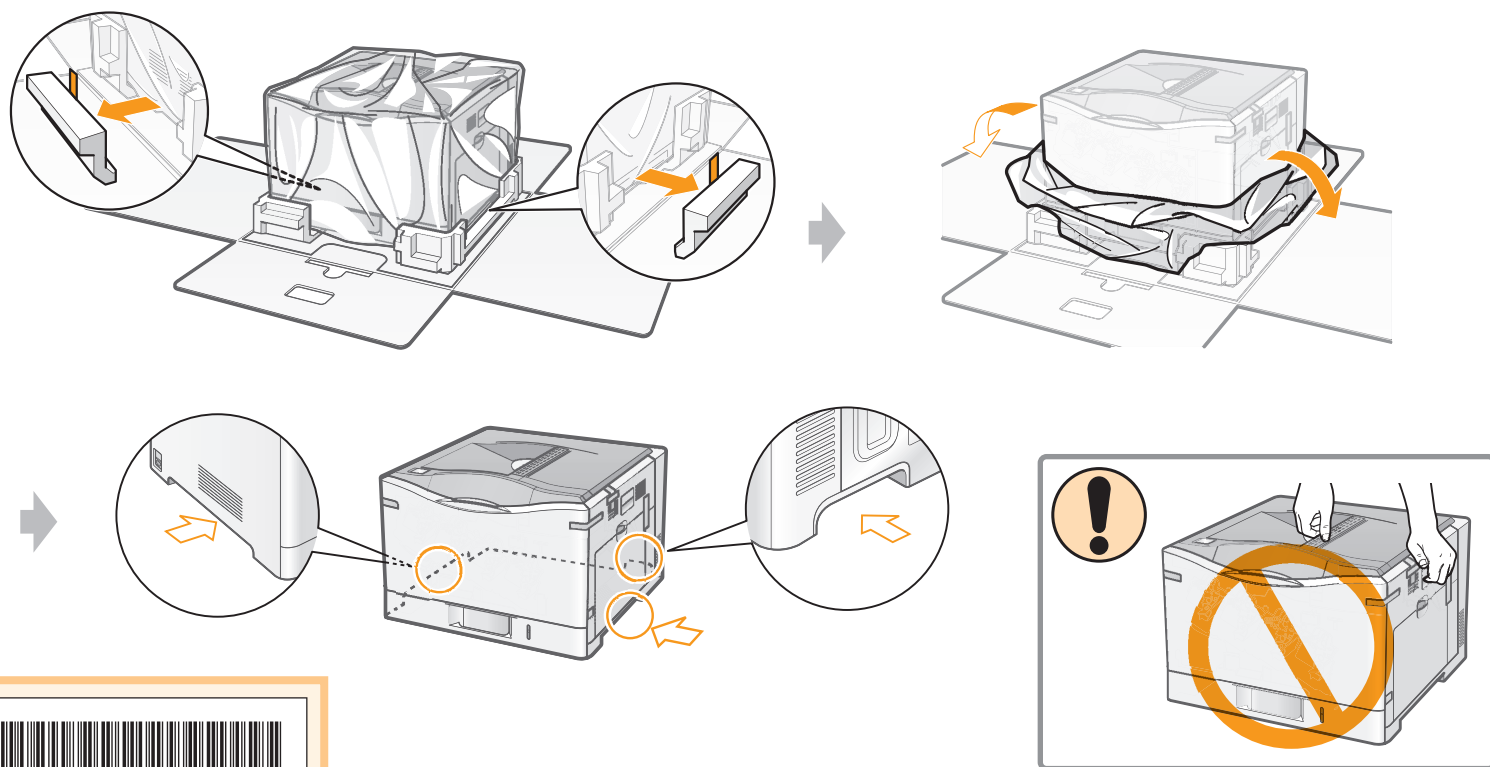

RT5-0428 (010) XXXXXXXXXX © CANON INC. 2009 PRINTED IN CHINA


3 Remove the packing materials

SPA Retire de los materiales de embalaje
KOR 포장재를 제거합니다
POR Remova o material de embalagem

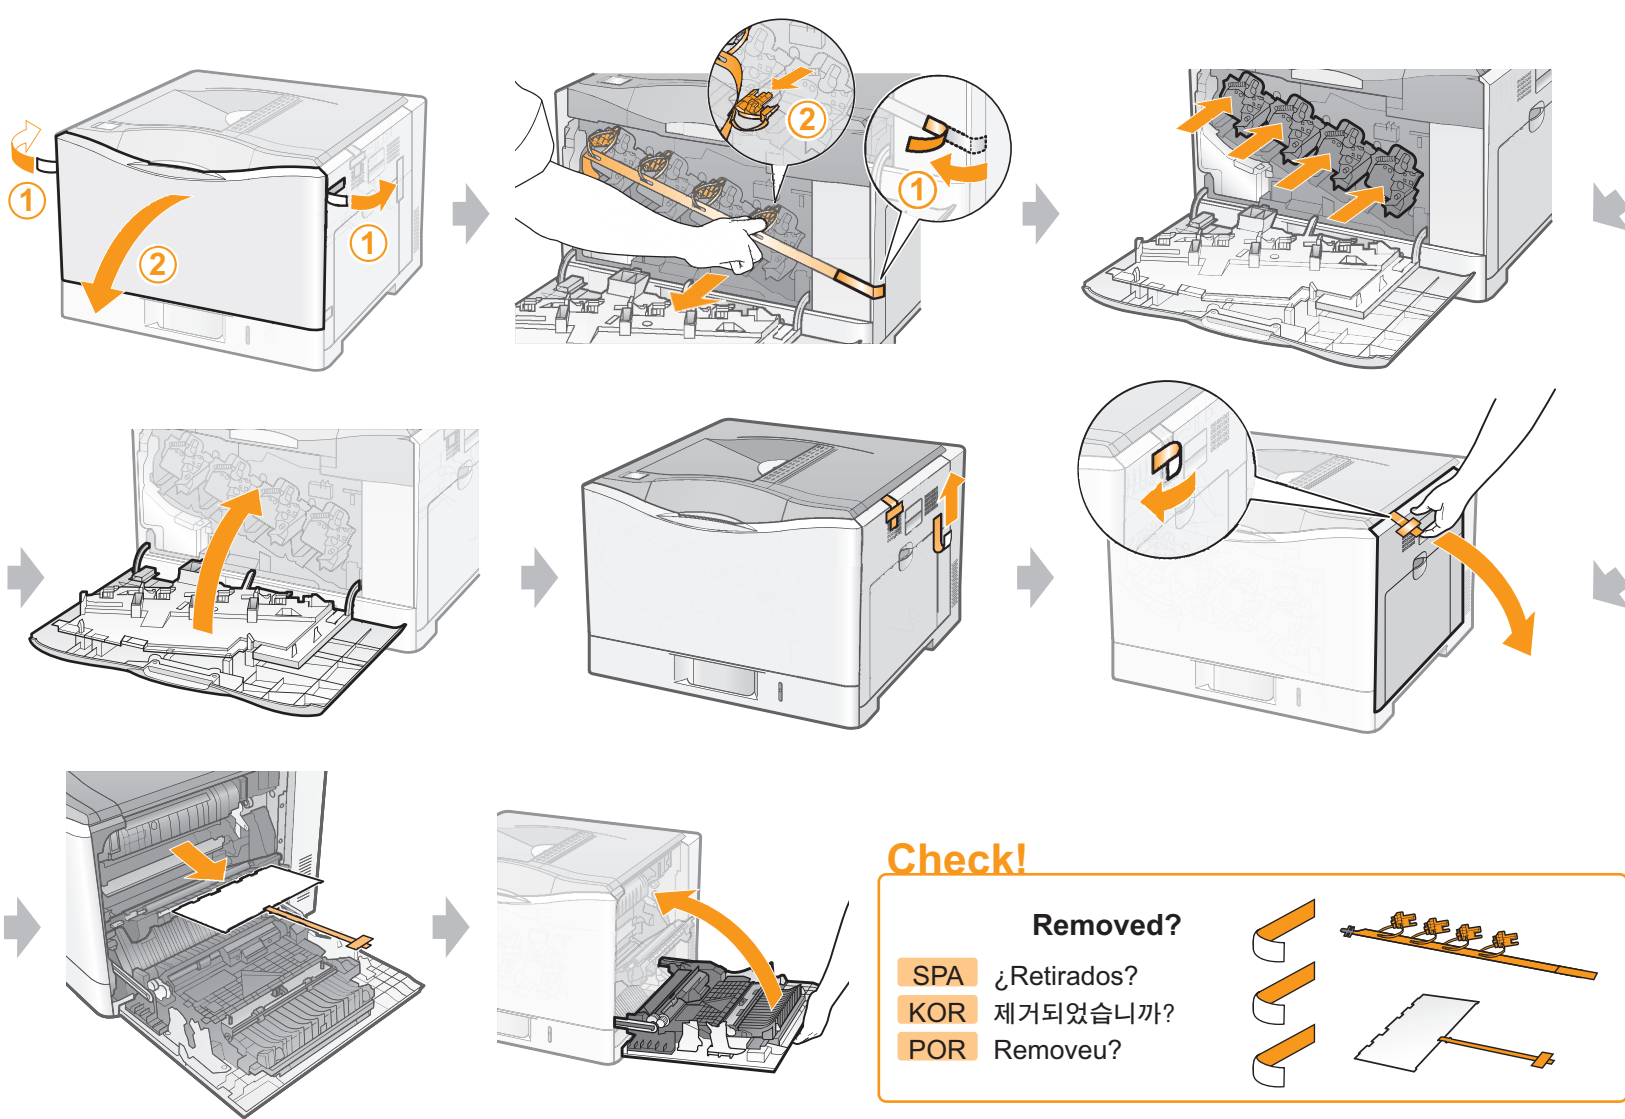



2 Check the supplied accessories

SPA Compruebe los accesorios suministrados
KOR 동봉된 부속품을 확인해 주십시오
POR Verifique os acessórios fornecidos

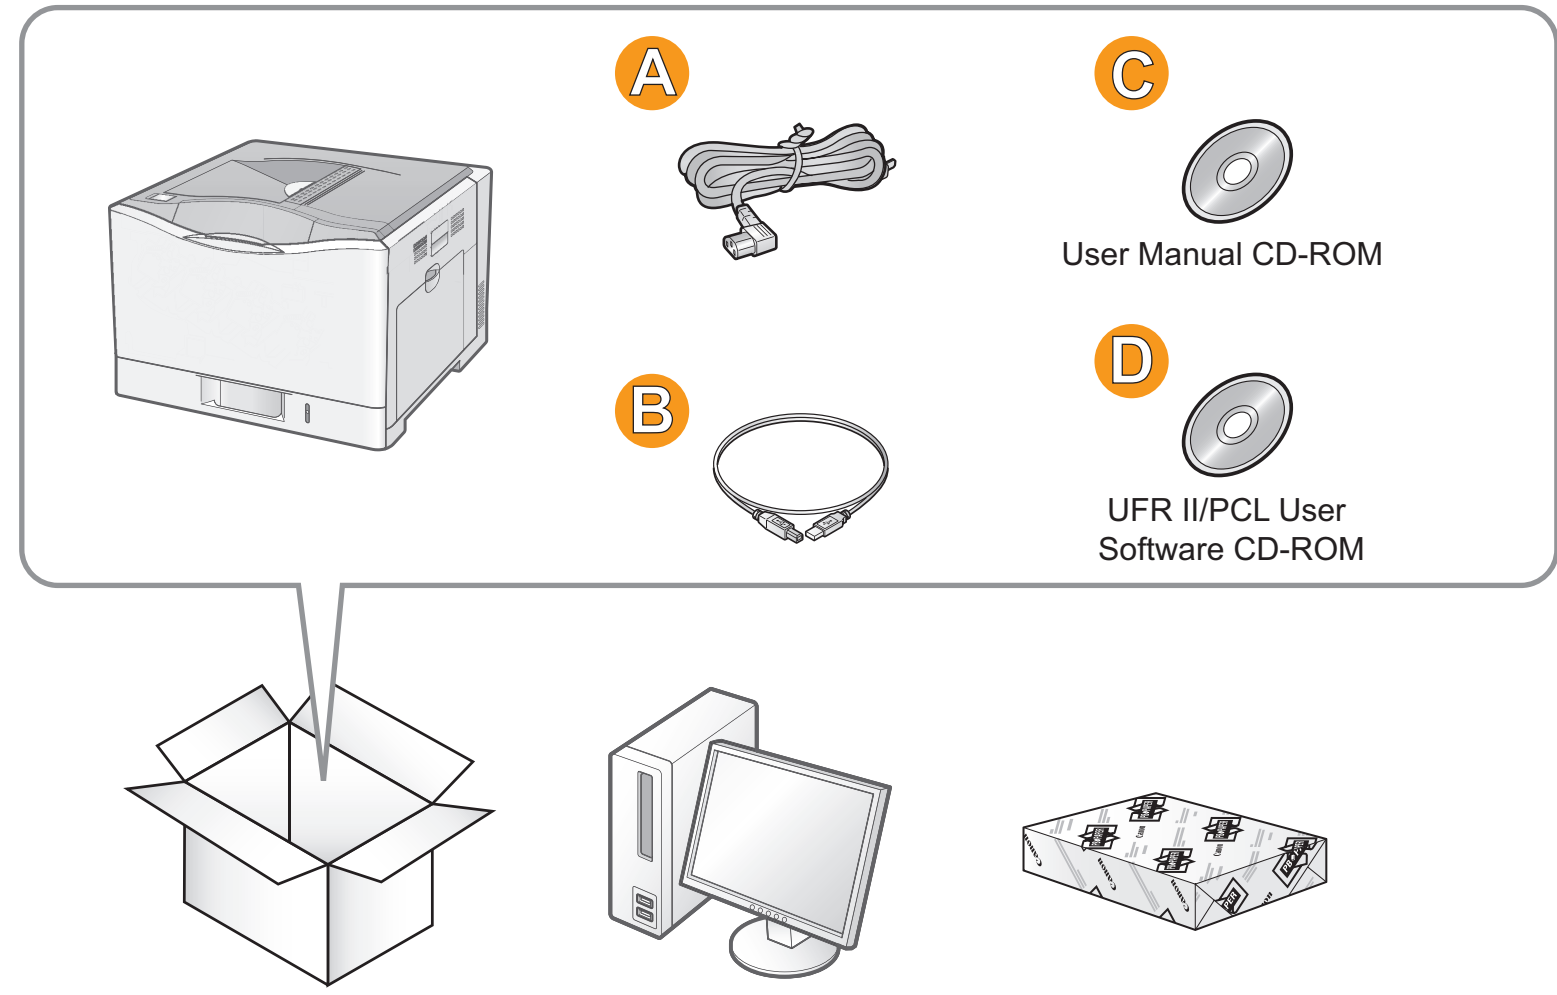


4 Load paper

SPA Cargue papel
KOR 용지를 넣습니다
POR Carregue o papel

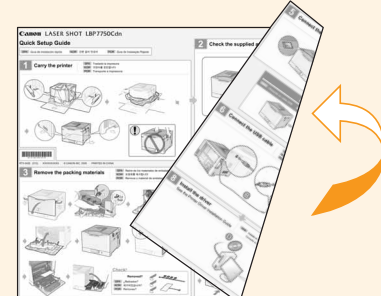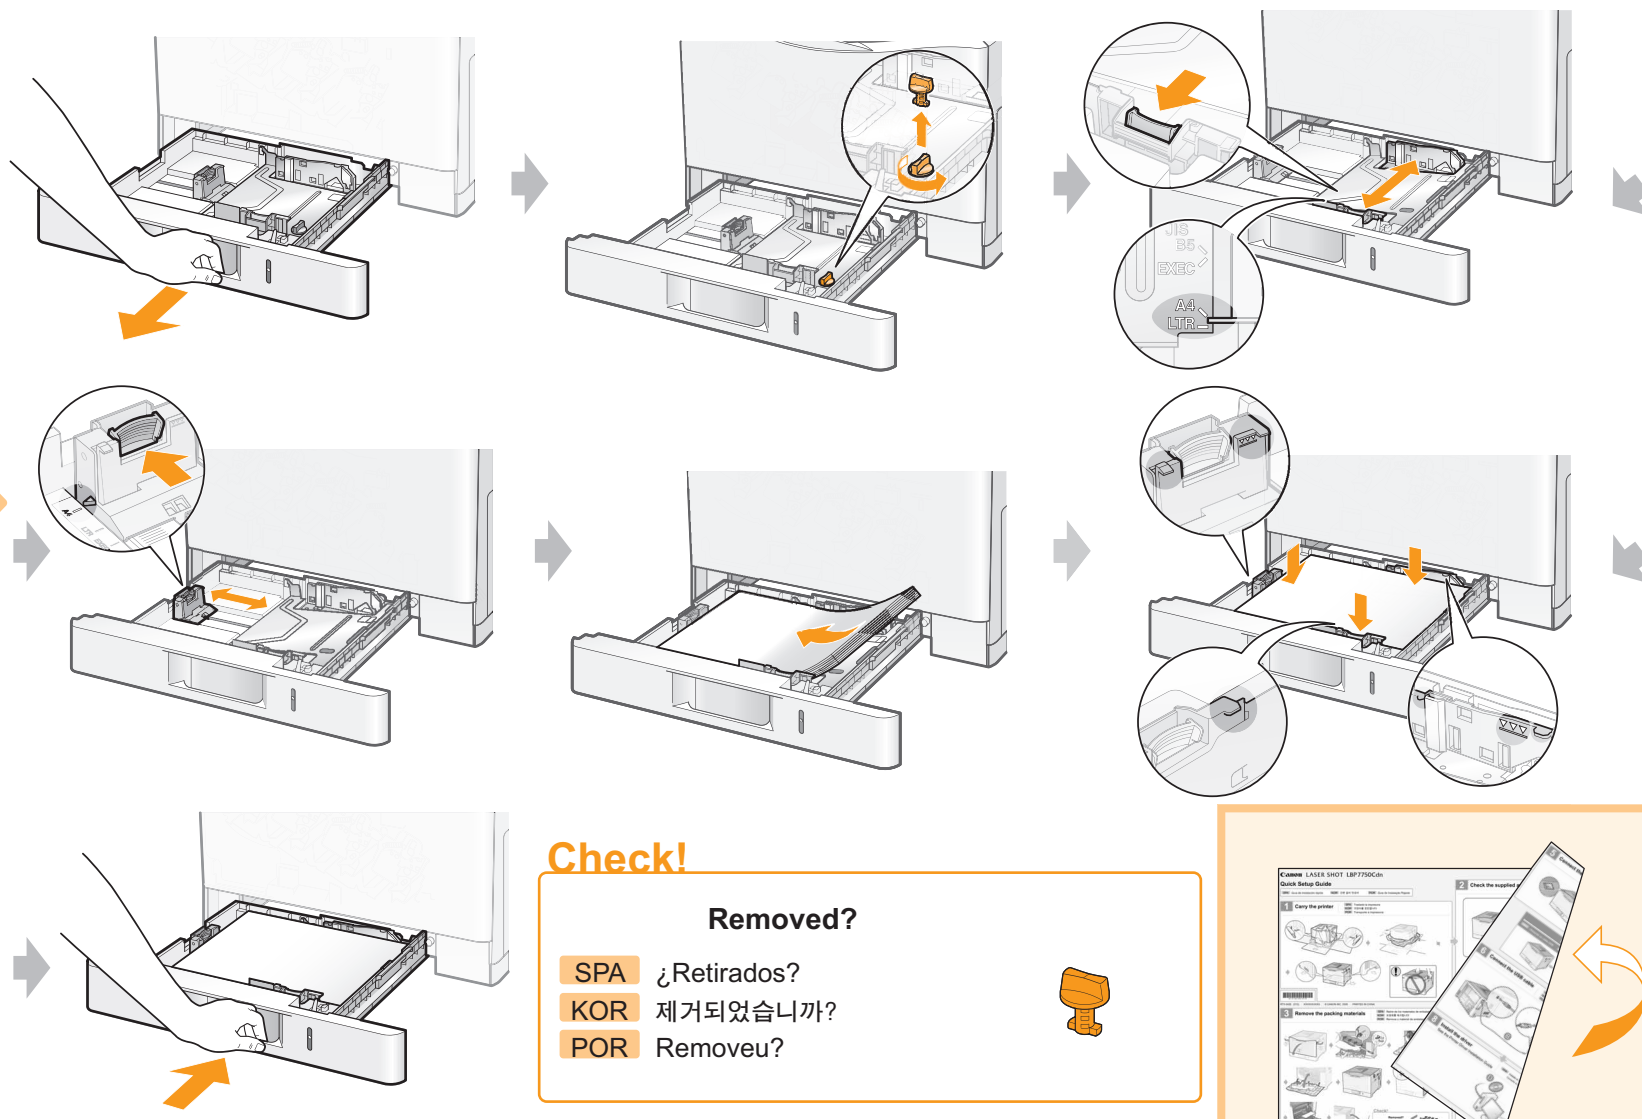

5 Connect the power cord

- SPA Conecte el cable de alimentación
- KOR 전원 코드를 연결합니다
- POR Conecte o cabo de energia

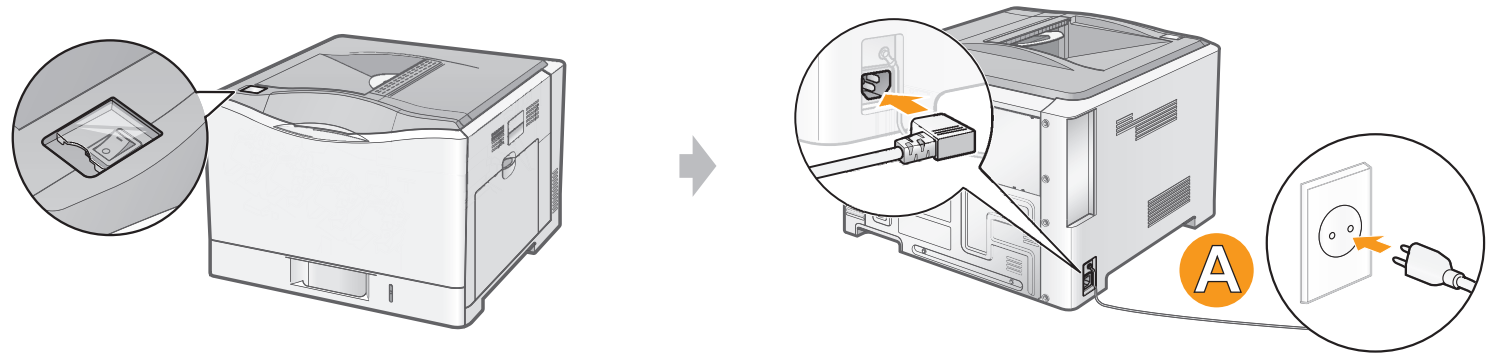


Using a USB Cable

- SPA Utilizando un cable USB
- KOR USB 케이블 사용
- POR Usando um cabo USB




6 Connect the USB cable

- SPA Conecte el cable USB
- KOR USB 케이블을 연결합니다
- POR Conecte o cabo USB

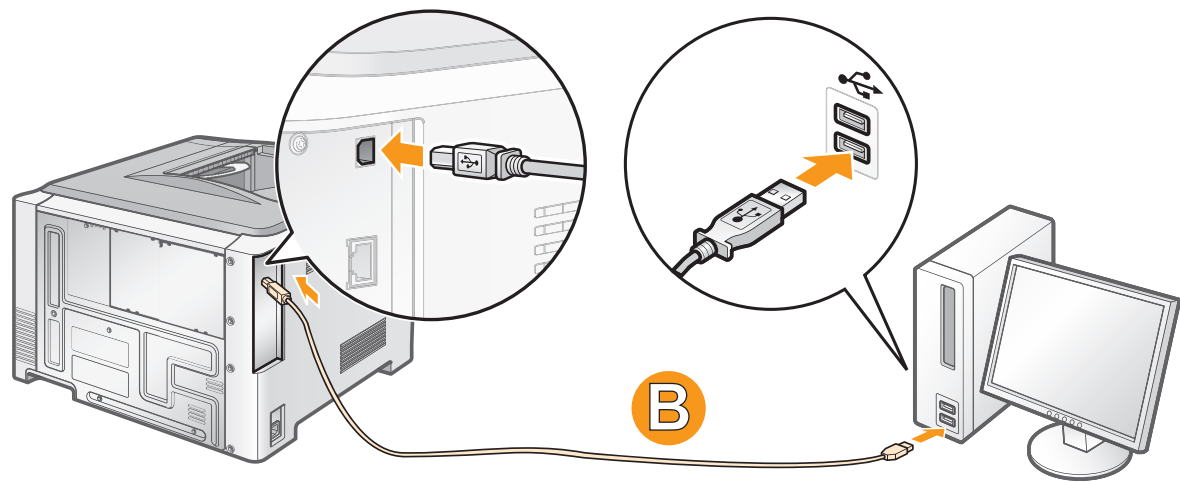


Using a LAN Cable

- SPA Utilizando un cable de LAN
- KOR LAN 케이블 사용
- POR Usando um cabo LAN

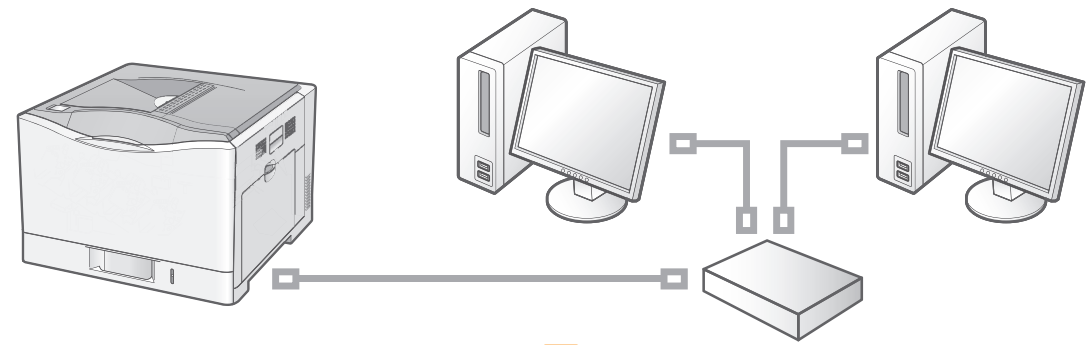

6 Connect the LAN cable



- SPA Conecte el cable de LAN
- KOR LAN 케이블을 연결합니다
- POR Conecte o cabo LAN

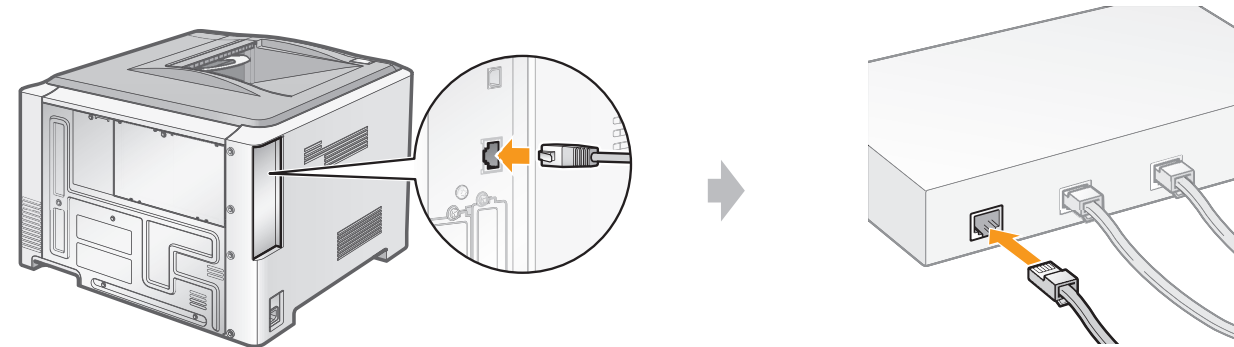

7 Configure the network settings

See the User's Guide




- SPA Configure los ajustes de red
Consulte la Guía del usuario
- KOR 네트워크 설정을 구성합니다
사용자 안내서를 참조해 주십시오
- POR Configure os parâmetros da rede
Consulte o Guia do Usuário

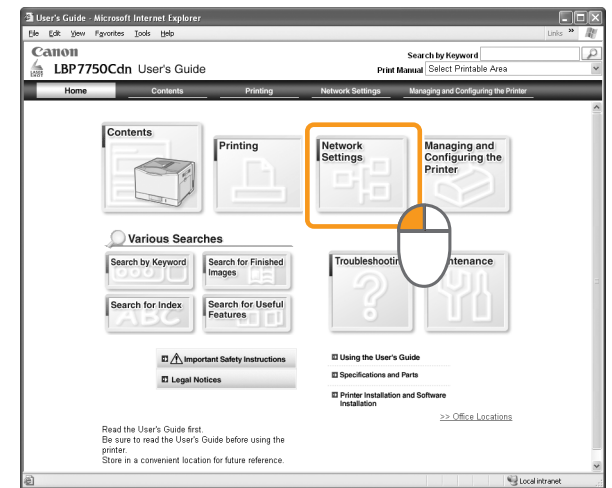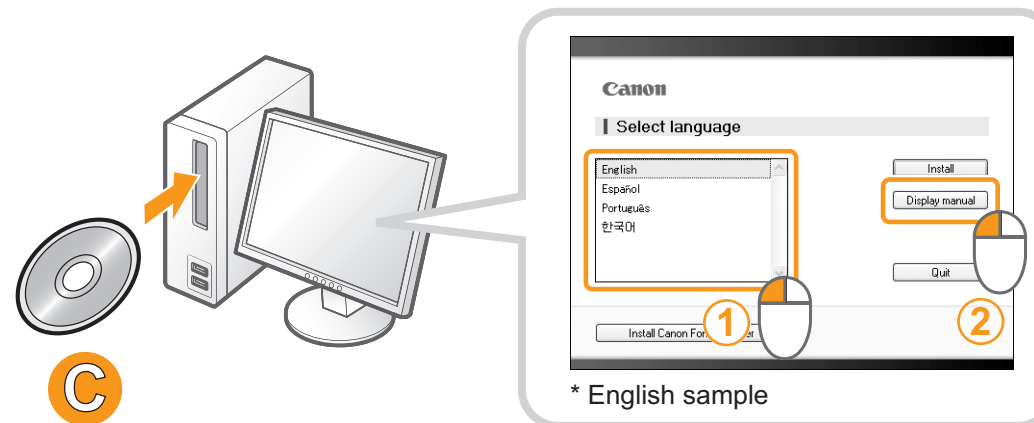

8 Install the driver

See the Printer Driver Installation Guide

- SPA Instale el controlador
Consulte la Guía de instalación del controlador de impresora
- KOR 드라이버를 설치합니다
프린터 드라이버 설치 설명서를 참조해 주십시오
- POR Instale o driver
Consulte o Printer Driver Installation Guide

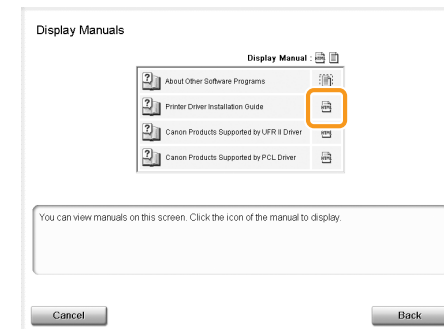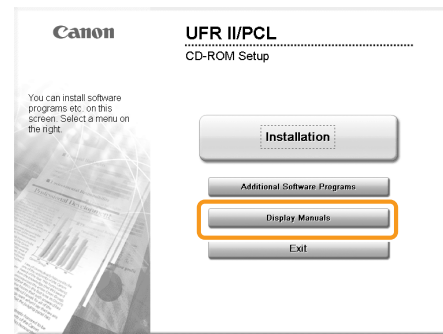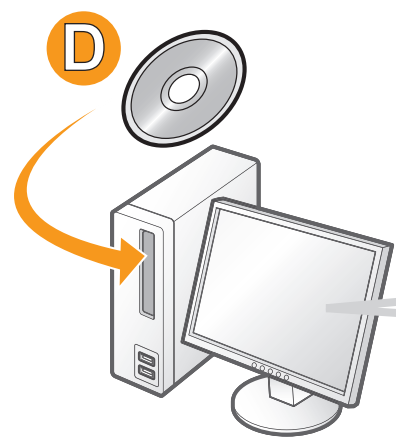

* English sample