



# bizhub 362/282/222

User's Guide Network Scanner Operations

# **Contents**

-4	100	diam			-40	
	- II In	ıtr	nr	וור	ctı	nπ
			$\sim$	им:	$\sim$ $\sim$	$\sim$ 111

1.1	Energy Star® 1-
	What is an ENERGY STAR® Product? 1-
1.2	Trademarks and registered trademarks1-License information1-OpenSSL Statement1-Kerberos1-
1.3	About this manual 1-
	Structure of the manual 1-
	Notations
1.4	User manuals
1.4	User manual [Copy Operations]
	User manual [Network Scanner Operations] (this manual) 1-1
	User manual [Box Operations] 1-1
	User manual [Print Operations] 1-1
	User manual [Advanced Scan Operations] 1-1
	User manual [Facsimile Operations] 1-1
1.5	Explanation of manual conventions 1-1
	Safety advices1-1
	Sequence of action
	Tips
	Special text markings 1-1
Fea	tures
2.1	Scan to E-Mail 2-
2.2	Scan to FTP 2-
2.3	Scan to SMB 2-
2.4	Scan to HDD 2-
2.5	Internet faxing 2-
2.6	PageScope Web Connection 2-

2

# 3 Setup

3.1	Connecting to a LAN	
	Connecting the LAN cable	3-3
3.2	Specifying the network settings	3-4
	Network setting table	3-4
	To specify initial network settings	3-7
3.3	Basic Settings	3-9
	Settings	
	DHCP	. 3-10
	IP Address Setting	. 3-11
	Subnet Mask	
	Gateway	
	Network Board Set	
	To specify the network board settings	. 3-14
3.4	DNS Settings	. 3-15
	DNS Setting	. 3-16
	Host Name	. 3-16
	Domain Name	
	DNS Server Address	. 3-17
3.5	Machine Name	. 3-18
	To specify the machine name	. 3-18
3.6	SMTP Settings	. 3-19
	SMTP Server Address	. 3-20
	E-Mail Address	
	SMTP Authentication User Name	. 3-23
	SMTP Authentication Password	. 3-24
3.7	POP3 Settings	. 3-25
	POP3 Server Address	
	POP3 User Name	
	POP3 Password	
	Auto-RX Check	. 3-29
3.8	Priority Compress Level (E-Mail Mode)	. 3-30
	TX Size (Max.)	
	TX Quality (Max.)	
	Coding Method	
3.9	Priority Compress Level (Scan Mode)	. 3-34
	To specify the scan mode settings	

	3.10	Scanner Settings	3-35
		Activity Report	3-37
		RX Doc. Header Print	3-38
		E-Mail Header Text	3-39
		Gateway TX	
		Subject Registration	
		Divide Settings	
	3.11	LDAP Setting	
		LDAP Search	
		LDAP Server Setting	
		To specify the LDAP server settings	
		Search Default Setting	
	3.12	IP Filtering	
		To specify IP filtering settings	
	3.13	Specifying e-mail server settings	
		To the network administrator	3-51
	3.14	Entering a domain name	3-52
		Registering a domain name	3-52
		Using a registered domain name	3-54
	3.15	Checking the network connection (Ping)	3-55
		To check the network connection	
	3.16	User authentication and account track	3-56
		User authentication and account track	3-56
		If user authentication settings have been specified	
		If account track settings have been specified	3-58
4	Sca	n to E-Mail	
	4.1	Specifying a destination with a one-touch dial button	4-3
		Selecting a one-touch dial button	
		Specifying a destination by touching a one-touch dial button	
		Entering the number of a one-touch dial button	
		Searching for a one-touch dial button	
		Specifying chain dialing	4-10
	4.2	Entering an address	4-11
		To enter an address	4-11
	4.3	Specifying the scanning quality and zoom ratio	4-14
		Quality	4-14
		To specify the scanning quality	
		Density	4-16
		To specify the density settings	
		Original Size Set	4-17

	4.4	Specifying additional functions	. 4-18
		Specifying the transmission report printing conditions	. 4-20
		To specify the transmission report printing conditions	
		Specifying 2in1 transmission	
		Specifying double-sided transmission	
		Specifying priority transmission	
		Specifying timer transmission	
		Specifying the stamp setting	
		Changing the subject	
		Specifying a reply address	
		Specifying a file name	
		Other functions	
	4.5	If transmission could not be completed	
		Viewing a transmission report	
		Resending	. 4-31
	4.6	Registering destinations	. 4-32
		Programming a one-touch dial button	. 4-32
		To program a one-touch dial button	
		Changing or deleting a one-touch dial button	
		Copying a one-touch dial button	
		Registering/deleting a secondary destination	
		Naming an index	
		To name an index	
		Registering mail programs	
		To register a mail program	
		Changing/deleting a mail program	. 4-46
5	Scar	n to FTP	
	5.1	Specifying a destination with a one-touch dial button	5_3
	J. I	Selecting a one-touch dial button	
		Specifying a destination by touching a one-touch dial button	
		Entering the number of a one-touch dial button	
		Searching for a one-touch dial button	
		-	
	5.2	Specifying the scanning quality and zoom ratio	
		Quality	
		To specify the scanning quality	
		Density	
		To specify a density setting	
		Original Size Set	
	5.3	Specifying additional functions	
		Specifying the transmission report printing conditions	
		To specify the transmission report printing conditions	
		Specifying 2in1 transmission	. 5-15

		Specifying double-sided transmission	5-18 5-18 5-19 5-20
	5.4	If transmission could not be completed	5-22
	5.5	Registering destinations	5-24 5-25 5-29
6	Scar	n to SMB	
	6.1	Specifying a destination with a one-touch dial button  Selecting a one-touch dial button  Specifying a destination by touching a one-touch dial button  Entering the number of a one-touch dial button  Searching for a one-touch dial button	. 6-3 . 6-3 . 6-5
	6.2	Specifying the scanning quality and zoom ratio  Quality  To specify the scanning quality  Density  To specify a density setting  Original Size Set	. 6-9 6-10 6-1 6-1
	6.3	Specifying additional functions  Specifying the transmission report printing conditions  To specify the transmission report printing conditions  Specifying 2in1 transmission  Specifying double-sided transmission  Specifying priority transmission  Specifying timer transmission  Specifying the stamp setting  Specifying the e-mail notification destination  Specifying a file name	6-14 6-15 6-16 6-18 6-19 6-20 6-21
	6.4	If transmission could not be completed  Viewing a transmission report  Resending	6-23

bizhub 362/282/222

6.5	Registering destinations	6-25
	Programming one-touch dial button	6-25
	To program a one-touch dial button	
	Changing or deleting a one-touch dial button	
	Copying a one-touch dial button	6-31
Inte	ernet faxing	
7.1	Specifying a destination with a one-touch dial button	
	Selecting a one-touch button	
	Specifying a destination by touching a one-touch dial button	
	Entering the number of a one-touch dial button	
	Searching for a one-touch dial button  Specifying chain dialing	
7.2	Entering an address	
	To enter an address	7-10
7.3	Specifying the scanning quality and zoom ratio	7-12
	Quality	
	To specify the scanning quality	
	Density	7-14
	To specify a density settings	
	Original Size Set	
7.4	Specifying additional functions	
	Specifying the transmission source setting	
	Specifying the transmission report printing conditions	
	Specifying 2in1 transmission	
	Specifying double-sided transmission	
	Specifying priority transmission	
	Specifying timer transmission	
	Specifying the stamp setting	
	Changing the subject	
	Specifying a reply address	
	Specifying a file name	7-28
7.5	If transmission could not be completed	
	Viewing a transmission report	
	Resending	7-30
7.6	Receiving Internet faxes	7-31
	Settings for Internet faxing	
	Receiving Internet faxes automatically	
	Data the can be received	
	Receiving Internet faxes manually	7-32

	7.7	Registering destinations	
		Programming a one-touch dial button  To program a one-touch dial button	
		Changing or deleting a one-touch dial button	
		Copying a one-touch dial button	
		Registering/deleting a secondary destination	
8	Usin	ng an LDAP server	
	8.1	Searching the destination information from the server	. 8-3
		Basic Search and Detail Search To search the destination information	. 8-3
	8.2	Registering destination information to one-touch	0.6
		To register destination information to a one-touch dial button	
9	Spe	cifying settings using PageScope Web Connecti	on
	9.1	Items that can be specified using PageScope	
		Web Connection	
		Scan tab (User mode)	
		Scan tab (Administrator mode)	
		Network tab (Administrator mode)	
	9.2	Using PageScope Web Connection	
		Operating environment	
		Accessing PageScope Web Connection	
		If user authentication settings have been applied	
		If account track settings have been applied	
		Page structure	
		Web browser cache	
		For Internet Explorer	
		For Netscape	
	9.3	One-Touch Key Registration (User mode)	9-14
		Naming an index	9-21
		Registering a one-touch dial destination	9-23
		Registering a secondary recipient	
		Changing the settings for a one-touch dial destination  Deleting a one-touch dial destination	
	9.4	FAX Program Registration (User mode)	9-33
		Registering fax programs	
		Changing the settings of the fax program	
		Deleting a fax program	9-39

bizhub 362/282/222

9.5	Domain Name Registration (User mode)  To register domain names	
9.6	Export/Import (Administrator mode)	9-43
9.7	TSI Registration	
9.8	TX Settings (Administrator mode)	9-50
9.9	RX Settings (Administrator mode)	
9.10	Scan Setting (Administrator mode)	
9.11	TX Document (Administrator mode)	
9.12	RX Document (Administrator mode)	9-59
9.13	Report Settings (Administrator mode)	
9.14	TCP/IP (Administrator mode)	
9.15	IP Filtering  To specify IP filtering settings	
9.16	LDAP (Administrator mode)  Specifying the LDAP settings	
9.17	LDAP Server Setting (Administrator mode)	9-73
9.18	E-Mail/Internet FAX (Administrator mode)	9-79 9-81 9-82
9.19	FTP Configuration (Administrator mode)	

	9.20	SNMP Specifying the SNMP setting	
	9.21	SSL/TLS (Administrator mode)  When a certificate is created  Creating certificates  Deleting certificates  Specifying the SSL/TLS settings	9-88 9-89 9-92
	9.22	User Authentication (Administrator mode)	
0	Spec	cifying management settings	
	10.1	Available parameters	. 10-3
	10.2	Registering transmission source names  To register a transmission source name	
	10.3	Specifying transmission report settings (TX Settings)	. 10-8
	10.4	Specifying the print timing for received documents (RX Settings)	10-12 10-14
	10.5	Specifying the transmission report printing conditions (Report Settings)	10-18
	10.6	Forwarding a transmission document to a specified destinatio (TX Forwarding)	10-20
	10.7	Specifying the processing method for received documents (Document Management)	10-22 10-23 10-25

bizhub 362/282/222 Contents-9

10.8	Specifying software switch settings (machine functions) 10-2	8
	Software switch settings10-2	8
	To specify a software switch setting 10-3	0
	Specifying whether or not the destination name is inserted	
	(mode 001)	2
	Specifying settings for address input and broadcast	
	transmissions (mode 018)	3
	Specifying settings for the image in the results report	
	(mode 023) 10-3	4
	Specifying administrator forwarding settings (mode 198) 10-3	
	Blocking calls from callers that are not specified (mode 306) 10-3	
	Specifying Internet fax settings (mode 350) 10-3	
	Specifying whether to add the transmission source information wher	
	faxing or when forwarding received documents (mode 352) 10-3	
	Specifying SMTP transmission timeout settings (mode 356) 10-3	
	Specifying SMTP reception timeout settings (mode 357) 10-4	
	Specifying POP3 reception timeout settings (mode 358) 10-4	
	Specifying the default address input screen (mode 366) 10-4	
	Specifying DNS query timeout setting (mode 367) 10-4	
	Including the scan transmission log in the activity report	
	(mode 368)	4
	Specifying switching of the SMTP server (mode 371) 10-4	
	Specifying the transmission interval when e-mail messages are	
	separated (mode 372)	6
	Specifying the Internet fax full mode function settings	_
	(mode 373)	7
	Specifying e-mail security functions (mode 380)	
	Specifying use of registered user authentication information	Ŭ
	to log on to the LDAP server (mode 466)	n
	Specifying whether to enable access locks, and whether	Ŭ
	to enable the password rules (mode 469)	1
	Specifying the export file format (mode 470)	
	Specifying settings to limit the use of communication	_
	modes-1 (mode 475)	3
	Specifying settings to limit the use of communication	٠
	modes-2 (mode 476)	5
	Specifying settings to limit the use of communication modes-3/	J
	Specifying restrictions for registering fax addresses and printing	
	reports and specifying how one-touch dial recipients are displayed	
		7
	(mode 477)	1
	(mode 478)	0
	Specifying settings for limiting user authentication to only	IJ
	Scan functions (mode 479)	
	30an iunchons iinoue 4731	U

Contents-10 bizhub 362/282/222

	10.9	Specifying SSL/TLS settings	10-61		
		To specify SSL/TLS settings	10-61		
11	Reports and lists				
	11.1	Checking the transmission conditions (TX Report)	11-3		
		To print a transmission report			
		Contents of the report	11-5		
	11.2	Checking the reception conditions (RX Report)	11-7		
		Printing a reception activity report	11-7		
		Contents of the report	11-8		
	11.3 Checking the destinations registered in one-touch dial k (One-Touch List)				
		Printing the One-Touch List			
		Contents of the list			
	11.4	Printing the mail program list	11-11		
	• • • • •	To print the mail program list			
		Contents of the list			
	11.5	Checking the function settings (Setting List)	11-13		
		Printing the setting list			
		Contents of the list			
12	Scan function troubleshooting				
	12.1	When the following are displayed	12-3		
	12.2	Network error list			
	12.2	Internet fax transmission/Scan to E-Mail			
		Internet fax reception			
		Scan to FTP			
		Scan to SMB	12-7		
	12.3	Troubleshooting	12-8		
		Internet fax transmission/Scan to E-Mail	12-8		
		Internet fax reception			
		Other	12-10		
13	Appendix				
	13.1	Product specifications	13-3		
		Internet fax specifications			
		Scan to E-Mail specifications	13-3		
		Scan to FTP specifications			
		Scan to SMB specifications	13-4		

13.2	Entering text	13-5
	To type text	13-5
	List of available characters	13-6
13.3	Glossary	13-7
13.4	Index	13-13

# 1 Introduction

# 1 Introduction

Thank you for choosing this machine.

This user manual contains details on the operation methods required for using the network connection and scanner functions of the bizhub 362/282/222, precautions on their use, and basic troubleshooting procedures. Carefully read this user manual before using the machine, to ensure proper and efficient use. After reading the manual, store it in the designated holder so that it can easily be referred to when questions or problems arise during operation.

Views of the actual equipment may be slightly different from the illustrations used in this user manual.

# 1.1 Energy Star®



As an ENERGY STAR  $^{\circledR}$  Partner, we have determined that this machine meets the ENERGY STAR  $^{\circledR}$  Guidelines for energy efficiency.

### What is an ENERGY STAR® Product?

An ENERGY STAR<sup>®</sup> product has a special feature that allows it to automatically switch to a "low-power mode" after a period of inactivity. An ENERGY STAR<sup>®</sup> product uses energy more efficiently, saves you money on utility bills and helps protect the environment.

1-4

# -

# 1.2 Trademarks and registered trademarks

KONICA MINOLTA, KONICA MINOLTA Logo, and The essentials of imaging are registered trademarks or trademarks of KONICA MINOLTA HOLDINGS, INC.

PageScope and bizhub are registered trademarks or trademarks of KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

Netscape Communications, the Netscape Communications logo, Netscape Navigator, Netscape Communicator, and Netscape are trademarks of Netscape Communications Corporation.

Compact-VJE

Copyright 1986-2003 VACS Corp.

RC4<sup>®</sup> is a registered trademark or trademark of RSA Security Inc. in the United States and/or other countries.

RSA® is a registered trademark or trademark of RSA Security Inc. RSA BSAFE® is a registered trademark or trademark of RSA Security Inc. in the United States and/or other countries.

### License information

This product includes RSA BSAFE Cryptographic software from RSA Security Inc.



### **OpenSSL Statement**

### OpenSSL License

Copyright © 1998-2000 The OpenSSL Project. All rights reserved. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- 2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- All advertising materials mentioning features or use of this software must display the following acknowledgment: FTP server "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (http://www.openssl.org/)"
- The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact opensslcore@openssl.org.
- Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
- 6. Redistributions of any form whatsoever must retain the following acknowledgment:
  - "This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (http://www.openssl.org/)"

THIS SOFTWARE IS PROVIDED BY THE OPENSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OPENSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (eay@crypt-Soft.com). This product includes software written by Tim Hudson (tih@cryptsoft.com).

1-6 bizhub 362/282/222

### Original SSLeay License

Copyright © 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved. This package is an SSL implementation written by Eric Young (eay@cryptsoft.com).

The implementation was written so as to conform with Netscapes SSL. This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, Ihash, DES, etc., code; not just the SSL code.

The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed. If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used. This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package. Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- 1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- 3. All advertising materials mentioning features or use of this software must display the following acknowledgement:
  - "This product includes cryptographic software written by Eric Young (eay@crypt-soft.com)"
  - The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related.
- 4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement:
  - "This product includes software written by Tin Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT

(INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

All other product names mentioned are trademarks or registered trademarks of their respective companies

### **Kerberos**

Copyright © 1985-2005 by the Massachusetts Institute of Technology. All rights reserved.

permission notice

WITHIN THAT CONSTRAINT, permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. Furthermore if you modify this software you must label your software as modified software and not distribute it in such a fashion that it might be confused with the original MIT software. M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTIBILITY AND FITNESS FOR A PARTICULAR PURPOSE.

THIS SOFTWARE IS NOT ORIGINAL MIT SOFTWARE, MODIFIED BY KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

1-8 bizhub 362/282/222

# •

### 1.3 About this manual

This user manual covers the bizhub 362, 282 and 222 network and scanning functions.

This section introduces the structure of the manual and notations used for product names, etc.

This manual is intended for users who understand the basic operations of computers and the machine. For operating procedures of the Windows or Macintosh operating system and application programs, refer to the respective manuals.

### Structure of the manual

This manual consists of the following chapters.

Chapter 1 Introduction

Chapter 2 Features

Chapter 3 Setup

Chapter 4 Scan to E-Mail

Chapter 5 Scan to FTP

Chapter 6 Scan to SMB

Chapter 7 Internet faxing

Chapter 8 Using an LDAP server

Chapter 9 Specifying settings using PageScope Web Connection

Chapter 10 Specifying management settings

Chapter 11 Reports and lists

Chapter 12 Scan function troubleshooting

Chapter 13 Appendix

### **Notations**

Product name	Notations in the manual
bizhub 362/282/222	This machine, 362/282/222
Internal network controller	Printer controller
Microsoft Windows NT 4.0	Windows NT 4.0
Microsoft Windows 2000	Windows 2000
Microsoft Windows XP	Windows XP
Microsoft Windows Vista	Windows Vista
Microsoft Windows Server 2003	Windows Server 2003
Microsoft Windows Server 2008	Windows Server 2008
When the operating systems above are written together	Windows NT 4.0/2000/XP

### Images that are used

Generally, the touch panel screens and application windows that appear in this manual show that the options have not been installed.

1-10 bizhub 362/282/222

# 1.4 User manuals

The following user manuals have been prepared for this machine.

### **User manual [Copy Operations]**

This manual contains details on basic operations and the operating procedures for the various copy functions.

 Refer to this user manual for details on operating procedures for copy functions, including precautions on installation/use, turning the machine on/off, loading paper, and troubleshooting operations such as clearing paper misfeeds.

### **User manual [Network Scanner Operations] (this manual)**

This manual contains details on specifying network functions for standard equipment and on operations for scanning functions.

 Refer to this user manual for details on operating procedures for network functions and for using the Scan to E-Mail, Scan to FTP, Scan to SMB and Internet fax operations.

### **User manual [Box Operations]**

This manual contains details on operating procedures for using the Box functions.

 Refer to this user manual for details on printing a proof copy or a locked job and on functions that use the optional hard disk drive, such as routing and saving documents in boxes.

### **User manual [Print Operations]**

This manual contains details on operating procedures using the standard built-in printer controller.

 For details on the printing functions, refer to user manual (PDF file) on User Software CD-ROM.

### **User manual [Advanced Scan Operations]**

This manual contains details on the operating procedures for the functions that can be used when the optional scanner unit is installed.

 Refer to this user manual for details on using the IP address faxing, IP Relay and Scan to PC operations and on using IP Scanner.

### **User manual [Facsimile Operations]**

This manual contains details on operating procedures for using the Fax functions.

 Refer to this user manual for details on operating procedures for the Fax functions when the fax kit is installed.



# 1.5 Explanation of manual conventions

The marks and text formats used in this manual are described below.

### Safety advices



# **DANGER**

Failure to observe instructions highlighted in this manner may result in fatal or critical injuries in fact of electrical power.

→ Observe all dangers in order to prevent injuries.



# WARNING

Failure to observe instructions highlighted in this manner may result in serious injuries or property damage.

Observe all warnings in order to prevent injuries and to ensure safe use of the copier.

# $\Lambda$

# **CAUTION**

Failure to observe instructions highlighted in this manner may result in slight injuries or property damage.

→ Observe all cautions in order to prevent injuries and to ensure safe use of the copier.

### Sequence of action

- The number 1 as formatted here indicates the first step of a sequence of actions.
- Subsequent numbers as formatted here indicate subsequent steps of a sequence of actions.
  - Text formatted in this style provides additional assistance.
  - → Text formatted in this style describes the action that will ensure the desired results are achieved.

An illustration inserted here shows what operations must be performed.

1-12 bizhub 362/282/222

### Tips



### Note

Text highlighted in this manner contains useful information and tips to ensure safe use of the copier.



# Reminder

Text highlighted in this manner contains information that should be reminded.



### Detail

Text highlighted in this manner contains references for more detailed information.

### Special text markings

[Copy] key

The names of keys on the control panel are written as shown above.

### **MACHINE SETTING**

Display texts are written as shown above.


# Features

# 2 Features

### 2.1 Scan to E-Mail

The Scan to E-Mail operation is used to send images scanned on this machine as e-mail attachments. By registering a destination with a one-touch dial button, paper documents can be sent by e-mail simply by touching a button in the One-Touch screen.


- The original document is attached to an e-mail (MIME format) and sent as an image file in the TIFF format or the PDF format. In order to view the received image on a computer, e-mail software that supports the MIME format and software that displays the TIFF format or PDF format must be installed.
- Images in the TIFF format can be viewed with a TIFF viewer, which is standard in Windows.
- Images in the PDF format can be viewed with Adobe Reader.
- This machine must be connected to a LAN, and the network settings must be specified. For details, refer to Chapter 2, "Setup" on page 3-3.
- For details, refer to Chapter 3, "Scan to E-Mail" on page 4-3.

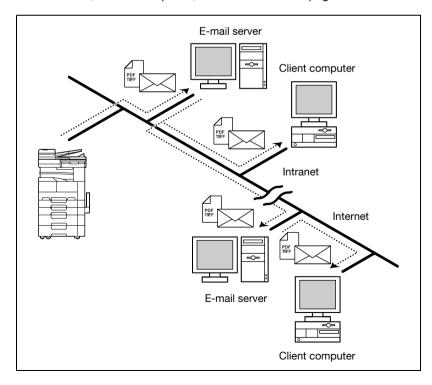

### 2.2 Scan to FTP

The Scan to FTP operation is used to upload the scanned data of an original document to an FTP sever on a network. By registering a destination with a one-touch dial button, paper documents can be converted into data and uploaded simply by touching a button in the One-Touch screen. The uploaded data can be downloaded to a computer on the network.

- The original document is sent as an image file in the TIFF format or the PDF format.
- You can specify whether to have an e-mail message sent to notify you of the location where the data was saved when the FTP transmission is complete (E-mail Notification function).
- This machine must be connected to a LAN, and the network settings must be specified. For details, refer to Chapter 2, "Setup" on page 3-3.
- For details, refer to Chapter 4, "Scan to FTP" on page 5-3.

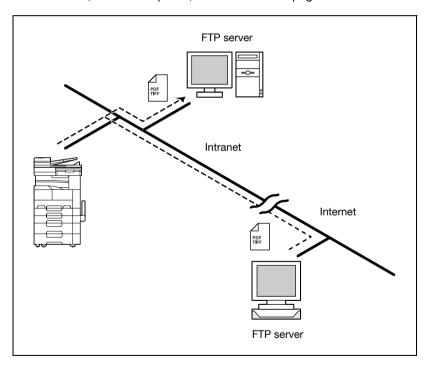




### 2.3 Scan to SMB

The Scan to SMB operation is used to send the scanned data of an original document to a shared folder on a computer on the network. By registering a destination with a one-touch dial button, paper documents can be converted into data and sent simply by touching a button in the One-Touch screen.

In order to perform a Scan to SMB operation, a shared folder must be specified in advance on the computer where the data is to be received.


- Data cannot be saved in shared folders created on the domain controller of Windows Server 2003 and Windows Server 2008.
- The original document is sent as an image file in the TIFF format or PDF format.
- You can specify that an e-mail message be sent to notify the recipient of the location where the data was saved when the Scan to SMB operation is complete (E-mail Notification function).
- Images in the TIFF format can be viewed with a TIFF viewer, which is standard in Windows.
- Images in the PDF format can be viewed with Adobe Reader.
- This machine must be connected to a LAN, and the network settings must be specified. For details, refer to Chapter 2, "Setup" on page 3-3.
- For details, refer to Chapter 5, "Scan to SMB" on page 6-3.

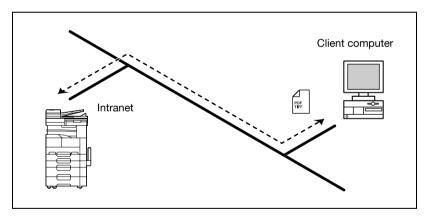

### 2.4 Scan to HDD

Data specified for copying, scanning or printing can be saved in a user box on the optional HDD. The saved file can be printed, downloaded or routed, depending on the mode in which it was saved.

- The original document is sent as an image file in the TIFF format or PDF format.
- You can specify whether to have an e-mail message sent to notify you of the location where the data was saved (E-mail Notification function).
- This machine must be connected to a LAN, and the network settings must be specified. For details, refer to Chapter 2, "Setup" on page 3-3.
- For details, refer to User manual [Box Operations].

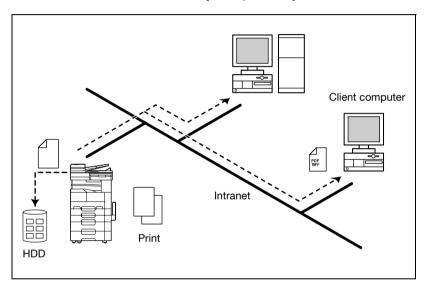

2-6 bizhub 362/282/222



# 2.5 Internet faxing


The Internet fax operation attaches the image data of an original document to an e-mail message and sends it over the Internet or an intranet to an Internet fax terminal.

You can send data simply by specifying an e-mail address at the same time that a fax number is specified for a transmission using a general telephone line.

By registering a destination with a one-touch dial button, the data can be sent simply by touching a button in the One-Touch screen.

The original document is attached to an e-mail (MIME format) and sent as an image file in the TIFF format.

- Internet faxing operates in an environment quite different from fax transmissions over a telephone line, and faxes are not transmitted directly to the destination. Therefore, there are certain limitations.
- When sending an Internet fax, the reception results at the destination can be checked. In addition, the reception capabilities of the destination machine can be detected and the transmission adapted accordingly (the destination machine must support full mode).
- This machine must be connected to a LAN, and the network settings must be specified. For details, refer to Chapter 2, "Setup" on page 3-3.
- For details, refer to Chapter 6, "Internet faxing" on page 7-3.

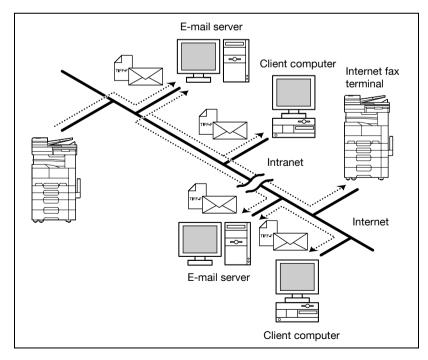

# 2.6 PageScope Web Connection

A computer can be used to check the transmission/printing status and fax log of the machine. In addition, one-touch dial buttons and mail programs can be registered.

PageScope Web Connection provides a User mode page and an Administrator mode page.

- This machine must be connected to a LAN, and the network settings must be specified. For details, refer to Chapter 2, "Setup" on page 3-3.
- For details, refer to Chapter 8, "Specifying settings using PageScope Web Connection" on page 9-3.

# 3 Setup

# 3 Setup

# 3.1 Connecting to a LAN

This machine communicates with the TCP/IP protocol using a LAN. Therefore, a LAN cable must be connected.

To connect to a LAN, use a LAN cable (Fast Ethernet 100BASE-TX cable).

### Connecting the LAN cable

Connect the LAN cable connector to the port (LAN) on the right of this machine and the other end to the hub.

The port is located on the right side of the machine.

Use a Fast Ethernet 100BASE-TX (category 5) cable for the LAN cable.




#### Note

The LAN cable is not supplied with this machine. Use a suitable cable for the installation environment.

The status of each LED is described below.

LED color	Status	Description
Green and yellow	Off	The machine is not turned on. The LAN is not properly connected.
Green	On	The LAN is properly connected (100 Mbps).
	Flashes	Data is being received (100 Mbps).
Yellow	On	The LAN is properly connected (10 Mbps).
	Flashes	Data is being received (10 Mbps).

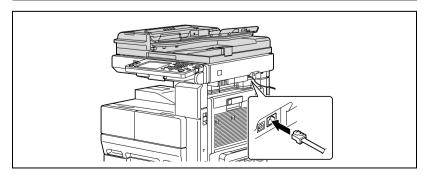

# 3.2 Specifying the network settings

The operations that are available depend on the LAN environment of the machine.

Specify the network settings according to the LAN environment and the operation to be performed.



#### Detail

Before specifying any settings, contact your network administrator for the required information.

Specify the network settings in Administrator mode by using either this machine's control panel or PageScope Web Connection. The setting procedure using this machine's control panel is described below.

To specify the settings using on PageScope Web Connection, refer to Chapter 8, "Specifying settings using PageScope Web Connection" on page 9-3.

## **Network setting table**

The network settings required for each operation are described below.

O: A setting is required.

▲: A setting is required depending on the environment.

✓: The parameter is available.

-: The parameter is not available.

Operation Parameter	Scan to E-Mail	Scan to FTP	Scan to SMB	Scan to HDD	Internet faxing
Basic Settings					
DHCP	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
IP Address Setting	0	0	0	0	0
Subnet Mask	0	0	0	0	0
Gateway	0	0	0	0	0
Self-Domain Name	-	-	-	-	_
Network Board Set	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
DNS Settings					
YES/NO	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Host Name	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Domain Name	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
DNS Server Address	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>

Operation Parameter	Scan to E-Mail	Scan to FTP	Scan to SMB	Scan to HDD	Internet faxing
Machine Name					
Machine Name	~	~	~	~	~
SMTP Settings					
SMTP Server Address	0	<b>▲</b> *1	<b>▲</b> *1	<b>▲</b> *1	0
E-Mail Address	0	<b>▲</b> *1	<b>▲</b> *1	<b>▲</b> *1	0
SMTP Authentication User Name	<b>A</b>	<b>▲</b> *1	<b>▲</b> *1	<b>▲</b> *1	<b>A</b>
SMTP Authentication Password	<b>A</b>	<b>▲</b> *1	<b>▲</b> *1	<b>▲</b> *1	<b>A</b> .
POP3 Settings					
POP3 Server Address	-	_	_	_	0
POP3 User Name	-	_	-	_	0
POP3 Password	-	_	_	_	0
Auto-RX Check	-	_	-	_	0
Mail/Scan Setting					
E-Mail Mode	-	-	-	_	~
Scan Mode	~	~	~	~	-
Scanner Settings					
Activity Report	-	-	-	-	~
RX Doc. Header Print	-	-	-	-	~
E-Mail Header Text	~	-	_	_	~
Gateway TX	-	-	-	-	-
Subject Registration	~	-	-	-	~
Divide Settings	~	-	-	-	~
Ping: Perform as necessary.					
Frame Type Setting: Specify when connected to a NetWare server and printing from a computer.					
LDAP Settings: Specify who	en using the L	DAP search f	unction.		
IP Filtering: Specify the range of IP addresses that can be accessed and the range that is blocked.					
FTP Configuration: Specify	in Administra	tor mode by u	sing PageSco	ppe Web Con	nection.
Proxy IP Address		<b>A</b>	_	_	_
D 111					

<sup>\*1</sup> When using the E-Mail Notification function, also specify the e-mail transmission (SMTP) settings.

bizhub 362/282/222 3-5

Port Number

FTP Connection Timeout




# Reminder

If the [Utility/Counter] key was pressed to register items and specify settings, be sure to press the [Reset] key in the control panel after returning to the initial screen.


3-6


# To specify initial network settings

- 1 Press the [Utility/Counter] key.
- 2 Touch [Admin. Management].

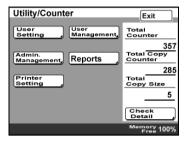


- Type in the administrator password using the keypad, and then touch [Enter].
  - "12345678" is registered at the factory.
  - To change the administrator password, refer to the User manual [Copy Operations].
- 4 Touch [Admin. 2].

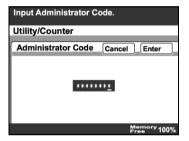


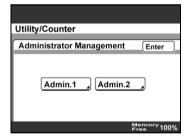


5 Touch [Network Settings].

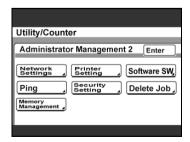

If the optional scanner unit or fax kit has been installed, touch [Network Setting 1].

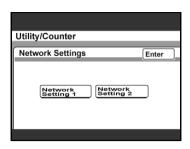

7 Specify each network setting, and then touch [Enter].

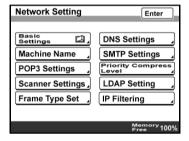

- To apply the settings specified on a screen that is displayed by touching a button marked with , turn the machine off, then on again.
  - When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off.



The machine may not operate correctly if it is turned on immediately after being turned off.

9 Touch [Enter] until the first screen appears.

# 3.3 Basic Settings


# Settings

Settings can be specified for the following.


Item	Description
DHCP	Specify whether to acquire an IP address automatically from the DHCP server or use a fixed IP address.
IP Address Setting	Set the machine's IP address. Specify when "DHCP" is set to "IP Input".
Subnet Mask	Enter the subnet mask of the network to be connected. Specify when "IP Input" was selected in [DHCP].
Gateway	Enter the gateway address of the network to be connected. Specify when "DHCP" is set to "IP Input".
Self-Domain Name	Specify the domain name of this machine.
Network Board Set	Specify the network board (LAN board) transmission speed.

#### **DHCP**

- 1 In the Network Setting screen, touch [Basic Settings].
- 2 Touch [DHCP].

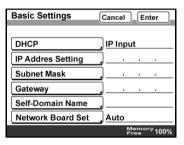

- To use the DHCP server, touch [Auto-Obtain]. To use a fixed IP address, touch [IP Input].
  - When [IP Input] was selected, specify the settings for "IP Address Setting" and "Subnet Mask".

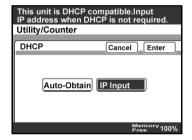


4 Touch [Enter].


## **IP Address Setting**

Specify a setting when "DHCP" is set to "IP Input".

- In the Network Setting screen, touch [Basic Settings].
- 2 Touch [IP Address Setting].

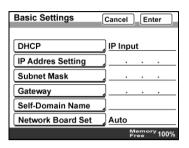

- 3 Use the keypad to type in the IP address.
  - You cannot specify an IP address that begins with 0, 127, or 224 or higher.
  - When less than three digits are entered, use to move the cursor to the next number.

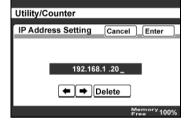


Enter IP Address.

4 Touch [Enter].

#### Subnet Mask

Specify a setting when "DHCP" is set to "IP Input".

- 1 In the Network Setting screen, touch [Basic Settings].
- 2 Touch [Subnet Mask].

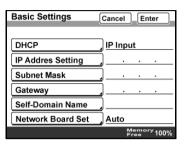

- 3 Use the keypad to type in the IP address.
  - When less than three digits are entered, use to move the cursor to the next number.




4 Touch [Enter].

## Gateway

Specify a setting when "DHCP" is set to "IP Input".

- In the Network Setting screen, touch [Basic Settings].
- 2 Touch [Gateway].

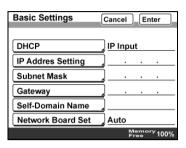

- 3 Use the keypad to type in the IP address.
  - You cannot specify an IP address that begins with 0, 127, or 224 or higher.
  - When less than three digits are entered, use to move the cursor to the next number.



4 Touch [Enter].


#### **Network Board Set**

Settings can be specified for the following.


Item	Description
Auto	Selects the transmission speed automatically by auto-negotiation.
100M-Full	Manually specifies a transmission speed of 100 Mbps in full-duplex mode when the transmission speed cannot be selected automatically.
100M-Half	Manually specifies a transmission speed of 100 Mbps in half- duplex mode when the transmission speed cannot be selected automatically.
10M-Full	Manually specifies a transmission speed of 10 Mbps in full-du- plex mode when the transmission speed cannot be selected au- tomatically.
10M-Half	Manually specifies a transmission speed of 10 Mbps in half-du- plex mode when the transmission speed cannot be selected au- tomatically.

# To specify the network board settings

- 1 In the Network Setting screen, touch [Basic Settings].
- 2 Touch [Network Board Set].

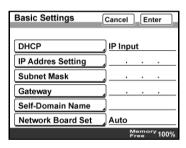

- Touch [Network Board Set], and then select the transmission speed.
  - "Auto" is the usual setting.

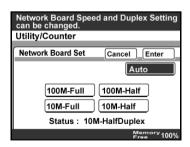

4 Touch [Enter].


# 3.4 DNS Settings

Settings can be specified for the following.


Item	Description
DNS Setting	Specify "YES" or "NO" for the DNS (Domain Name System). When using a DNS server within a network, specify "YES". When not using a DNS server within a network, specify "NO". When using an external server such as an Internet provider, specify "NO" if the IP address of the e-mail server is public. If the DNS name of the e-mail server is public and the IP address is not public, specify "YES". For details on the network environment, contact the network administrator.
Host Name	Specify the host name of this machine. Contact the network administrator for the information to be entered. Specify when "DNS Setting" is set to "YES".
Domain Name	Specify the domain name of the DNS server. Contact the network administrator for the information to be entered. Specify when "DNS Setting" is set to "YES".
DNS Server Address	Specify the IP addresses of the DNS server. Contact the network administrator for the information to be entered. Specify when "DNS Setting" is set to "YES".

## **DNS Setting**

In the Network Setting screen, touch [DNS Settings].

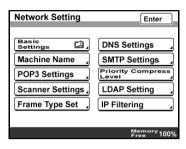


- To use the DNS server, touch [YES]. If the DNS server is not to be used, touch [NO].
  - If "YES" is selected, specify settings for "Host Name", "Domain Name", and "DNS Server Address".

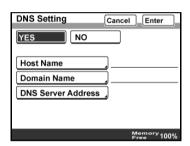

3 Touch [Enter].


#### **Host Name**

- 1 In the DNS Setting screen, touch [Host Name].
- Type in the host name of this machine, and then touch [Enter].

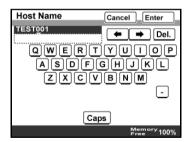


#### **Domain Name**

- 1 In the DNS Setting screen, touch [Domain Name].
- Type in the domain name of the DNS server, and then touch [Enter].

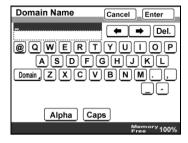

#### **DNS Server Address**

- 1 In the DNS Setting screen, touch [DNS Server Address].
- 2 Touch [DNS Server Address 1].

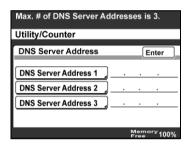

- Type in the IP address of DNS server 1, and then touch [Enter].
  - You cannot specify an IP address that begins with 0, 127, or 224 or higher.
  - When less than three digits are entered, use to move the cursor to the next number.



- 4 When specifying multiple DNS servers, type in the IP addresses for DNS server 2 and DNS server 3.
- 5 Touch [Enter].


# 3.5 Machine Name

Specify the name of this machine.


The machine name is used as part of the file name with Scan to E-Mail, Scan to FTP, Scan to SMB, Scan to HDD, and Internet faxing. In addition, part of the Subject line is used in Scan to E-Mail and Internet fax transmissions.

# To specify the machine name

1 In the Network Setting screen, touch [Machine Name].

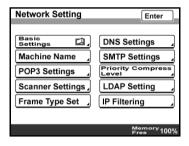

- 2 Enter the machine name.
  - Up to 16 alphanumeric characters can be entered.

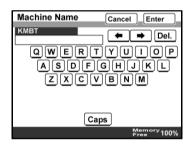

3 Touch [Enter].

3-18 bizhub 362/282/222

# 3.6 SMTP Settings

Settings can be specified for the following.

Item	Description
SMTP Server Address	Specify when performing Scan to E-Mail or Internet faxing. In addition, specify when using the E-Mail notification function with Scan to FTP, Scan to SMB or Scan to HDD.  Contact the network administrator for the information to be entered.
E-Mail Address	Enter the e-mail address of this machine. Contact the network administrator for the information to be entered.
SMTP Authentication User Name	Specify the user name when using the e-mail transmission authentication (SMTP authentication) function.  Contact the network administrator for the information to be entered. It is not necessary to specify the setting when the SMTP authentication user name and the POP3 user name are the same.
SMTP Authentication Password	Specify the password when using the e-mail transmission authentication (SMTP authentication) function.  Contact the network administrator for the information to be entered. It is not necessary to specify the setting when the SMTP authentication password and the POP3 password are the same.



#### Note


The following appear when bits 6 and 2 of mode 380 are set to "1" in the Software Switch Setting screen. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

- SMTP Authentication User Name
- SMTP Authentication Password


If bit 4 of mode 371 is set to "1" in the Software Switch Setting screen, two SMTP servers can be registered. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

#### **SMTP Server Address**


- 1 In the Network Setting screen, touch [SMTP Settings].
- 2 Touch [SMTP Server Address].

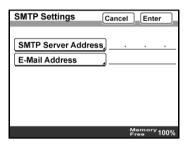

- 3 Type in the SMTP server address.
  - When "DNS Setting" is set to "YES", you can enter the IP address and the host name.

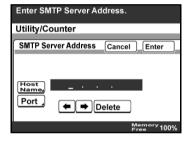


To specify the host name, touch [Host Name], type in the host name, and then touch [Enter].

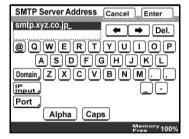

5 To change the port, touch [Port]. The Port screen appears.


- Type in the port number using the keypad, and then touch [Enter].
  - To return to the default setting, touch [Default].

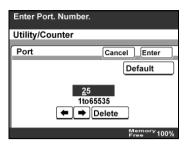

7 Touch [Enter].

#### E-Mail Address

- 1 In the Network Setting screen, touch [SMTP Settings].
- 2 Touch [E-Mail Address].

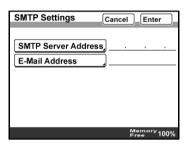


3 Enter the e-mail address of this machine, and then touch [Enter].




#### **SMTP Authentication User Name**

- 1 In the Network Setting screen, touch [SMTP Settings].
- Touch [SMTP Authentication User Name].

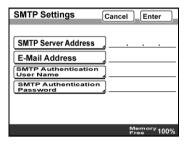


3 Type in the SMTP authentication user name, and then touch [Enter].

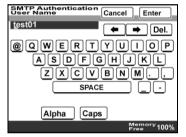


#### **SMTP Authentication Password**

- 1 In the Network Setting screen, touch [SMTP Settings].
- 2 Touch [SMTP Authentication Password].

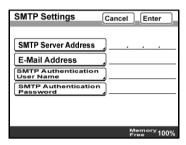

Touch [New Password], type in the SMTP password, and then touch [Enter].

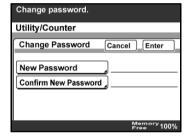

4 Touch [Confirm New Password], type in the SMTP password again, and then touch [Enter].


# 3.7 POP3 Settings

Settings can be specified for the following.


Item	Description
POP3 Server Address	Required setting for receiving Internet faxes. Contact the network administrator for the information to be entered.
POP3 User Name	Specify the POP3 user name of this machine. Contact the network administrator for the information to be entered.
POP3 Password	Specify the POP3 password of this machine. Contact the network administrator for the information to be entered.
Auto-RX Check	Specify the interval at which to connect to the POP3 server and check for e-mail messages (Internet faxing). (1—99 minutes)

#### POP3 Server Address


- 1 In the Network Setting screen, touch [POP3 Settings].
- 2 Touch [POP3 Server Address].

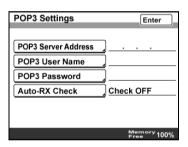

- Type in the POP3 server address using the keypad.
  - When "DNS Setting" is set to "YES", you can enter the IP address and the host name.

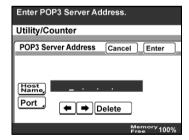

4 To specify the host name, touch [Host Name], type in the host name, and then touch [Enter].

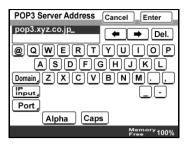


- 5 To change the port, touch [Port]. The Port screen appears.
- Type in the port number using the keypad, and then touch [Enter].
  - To return to the default setting, touch [Default].




7 Touch [Enter].

#### **POP3 User Name**

- 1 In the Network Setting screen, touch [POP3 Settings].
- 2 Touch [POP3 User Name].

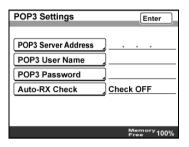


3 Type in the POP3 user name, and then touch [Enter].

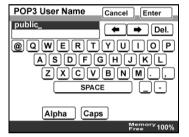


#### POP3 Password

- 1 In the Network Setting screen, touch [POP3 Settings].
- 2 Touch [POP3 Password].

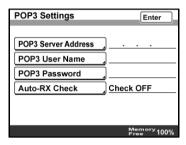


Touch [New Password], type in the POP3 password, and then touch [Enter].

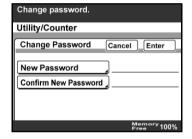


4 Touch [Confirm New Password], type in the SMTP password again, and then touch [Enter].

#### **Auto-RX Check**

- 1 In the Network Setting screen, touch [POP3 Settings].
- 2 Touch [Auto-RX Check].

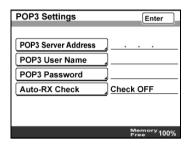

- Type in the interval for POP3 reception using the keypad, and then touch [Enter].
  - If POP3 reception is not to be performed automatically, touch [Check OFF].

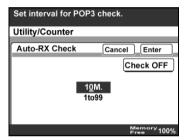

# 3.8 Priority Compress Level (E-Mail Mode)

You can specify the maximum transmission size, the maximum transmission quality, and the encoding method that are given priority when sending an Internet fax. The transmission size setting specified here is the default setting when programming a one-touch dial button.

When sending Internet faxes, the recipient may not be able to view the data if the receiving machine does not support the transmitted size, quality, or encoding method. If the maximum settings have been specified in E-Mail Mode in advance, the transmission settings are adjusted to the specified maximum, even if the settings specified for the transmission exceed the maximum.


In E-Mail Mode, settings can be specified for the following.

Item	Description
TX Size (Max.)	Specify the maximum document size that can be transmitted. Select "Letter", "Legal", or "11 $\times$ 17".
TX Quality (Max.)	Specify the maximum resolution that can be sent. Select "200 dpi", "400 dpi", or "600 dpi".
Coding Method	Select the encoding method for data to be sent. Select "MH", "MR", or "MMR". The data capacity is lowest with "MMR" and highest with "MH".


3-30 bizhub 362/282/222

# TX Size (Max.)


- 1 In the Network Setting screen, touch [Priority Compress Level].
- 2 Touch [E-Mail Mode].

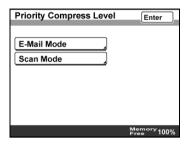

3 Touch [TX Size (Max.)].

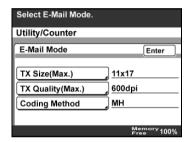


4 Select the maximum document size for transmission, and then touch [Enter].

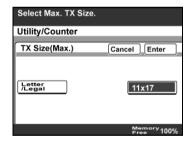


# TX Quality (Max.)


- 1 In the Network Setting screen, touch [Priority Compress Level].
- 2 Touch [E-Mail Mode].

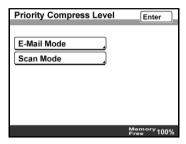

3 Touch [TX Quality (Max.)].

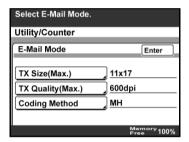


4 Select the maximum resolution for transmission, and then touch [Enter].

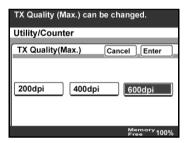


# **Coding Method**


- 1 In the Network Setting screen, touch [Priority Compress Level].
- 2 Touch [E-Mail Mode].

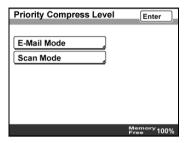

3 Touch [Coding Method].

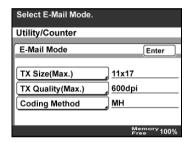

4 Select the encoding method, and then touch [Enter].

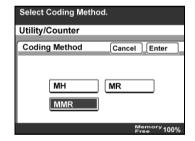

# 3.9 Priority Compress Level (Scan Mode)


You can specify the file format and encoding method for transmitting files with the Scan to E-Mail, Scan to FTP, Scan to SMB, or Scan to HDD operations. The transmission size setting specified here is the default setting when programming a one-touch dial button.

In Scan Mode, settings can be specified for the following.


Item	Description
File Type	Select the file format (TIFF or PDF) for sending files. If "TIFF" was selected, the setting changes to "Multi Page TIFF" with the Scan to FTP, Scan to SMB or Scan to HDD operation.
Coding Method	Select either "MH" or "MMR" as the encoding method for the selected file format. The data capacity is lowest with "MMR" and highest with "MH".

#### To specify the scan mode settings

- 1 In the Network Setting screen, touch [Priority Compress Level].
- 2 Touch [Scan Mode].

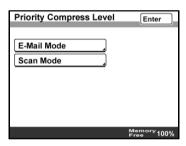

3 Select the file format and encoding method, and then touch [Enter].

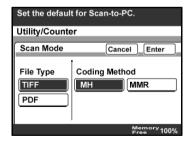

# 3.10 Scanner Settings

Settings can be specified for the following.


Item	Description
Activity Report	Specify whether to be notified of the Internet fax reception results.
RX Doc. Header Print	Select whether to print the e-mail header on the first page of a document received through Internet faxing.
E-Mail Header Text	Text can be added to Scan to E-Mail and Internet fax text. Fixed Text: Inserts the text that has been registered on this machine in advance.  Custom Text: Inserts any desired text.  OFF: Does not insert any text. With Scan to E-Mail, fixed text is inserted, even if "OFF" is selected.
	Note You can save any text using PageScope Web Connection. For details, refer to "E-Mail/Internet FAX (Administrator mode)" on page 9-76.
Gateway TX	Always select "Restrict" for this machine.  If the optional scanner unit or fax kit has been installed, select "Allow" to use this machine in the following ways.  • When this machine is used as a relay machine with an IP relay transmission  Note  For details on IP relay transmission operations, refer to the User manual [Advanced Scan Operations].
Subject Registration	When sending with Scan to E-Mail or Internet faxing, the subject can be specified. Up to 4 subjects can be registered, allowing you to use different subjects depending on the contents of the transmission.  Up to 40 characters can be entered.
Divide Settings	When performing Scan to E-Mail or sending Internet faxes, specify whether to separate and attach the scanned original document data. The separation types that can be specified are described below. Page Division: Used when performing Scan to E-Mail and sending Internet faxes. Sends the scanned data separated into pages. Binary Division: Used when performing Scan to E-Mail. Sends the specified data separated into portions of a specified size.  Note  The binary division function may not be usable depending on the e-mail software used by the recipient.

In the Divide Settings screen, settings can be specified for the following.


Item	Description
Page Division	Used when performing Scan to E-Mail and sending Internet faxes. Select whether scanned data is divided into pages when being sent.
Binary Division	Used when performing Scan to E-Mail. Select whether scanned data is divided into fixed portions when being sent.
	<b>0</b>
	Note The binary division function may not be usable depending on the e-mail software used by the recipient.
Binary Division Size	When "Binary Division" is set to "ON", enter a division size between 16 and 2,000 KB.

# **Activity Report**

- 1 In the Network Setting screen, touch [Scanner Settings].
- 2 Touch [Activity Report].

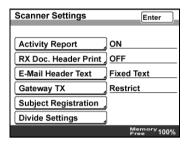


3 Select "ON" or "OFF", and then touch [Enter].

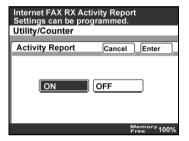


### **RX Doc. Header Print**

- 1 In the Network Setting screen, touch [Scanner Settings].
- 2 Touch [RX Doc. Header Print].

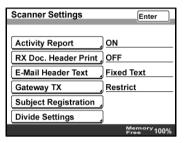


3 Select "ON" or "OFF", and then touch [Enter].

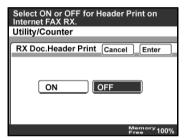


### E-Mail Header Text

- 1 In the Network Setting screen, touch [Scanner Settings].
- 2 Touch [E-Mail Header Text].

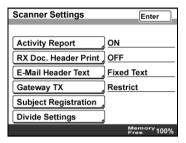


3 Select the text insertion method, and then touch [Enter].

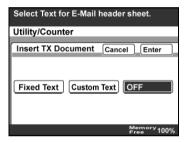


# **Gateway TX**

- 1 In the Network Setting screen, touch [Scanner Settings].
- 2 Touch [Gateway TX].

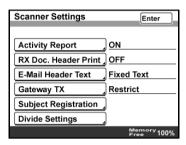


3 Select whether to allow or restrict gateway transmissions, and then touch [Enter].

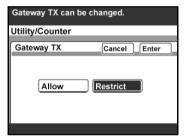


# **Subject Registration**

- In the Network Setting screen, touch [Scanner Settings].
- 2 Touch [Subject Registration].

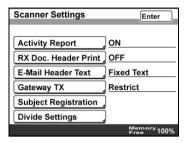


3 Touch the number of the subject to be registered or changed, type in the text, and then touch [Enter].

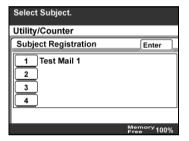


4 Touch [Enter].

# **Divide Settings**


- 1 In the Network Setting screen, touch [Scanner Settings].
- 2 Touch [Divide Settings].

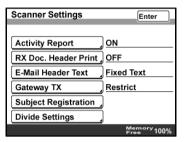


3 Select "ON" or "OFF" for Page Division and Binary Division.

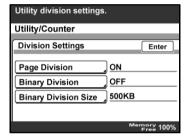

4 If "Binary Division" is set to "ON", touch [Binary Division Size].

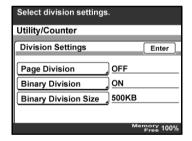

5 Type in the data division size, and then touch [Enter].

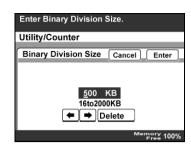

6 Touch [Enter].

# 3.11 LDAP Setting


The settings used by the LDAP (Lightweight Directory Access Protocol) server in a network can be specified.

Settings can be specified for the following.


Item	Description
LDAP Search	Select whether to enable or disable the address search used by an LDAP server. When "Yes" is selected, an LDAP server can be specified.
LDAP Server Setting	Register the LDAP server to be accessed. Up to 5 LDAP servers can be registered in this machine.
Search Default Setting	When multiple LDAP servers are registered, select the primary LDAP server for performing searches.

### **LDAP Search**

- 1 In the Network Setting screen, touch [LDAP Setting].
- 2 Touch [LDAP Search].

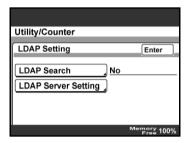

- 3 Select whether to allow LDAP searches.
  - If [Yes] was selected, specify the LDAP server settings.

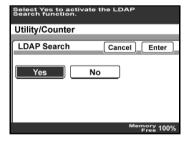


# **LDAP Server Setting**

LDAP server settings can be specified for the following.


Item	Description		
LDAP Server Name	Enter the LDAP server name. Up to 16 characters can be entered.		
Server Address	Enter the IP address or host name of the LDAP server. Up to 64 characters can be entered.		
Search Base	Specify the location on the LDAP server where searches are to be started.  Up to 255 alphanumeric characters can be entered, excluding ^.		
Authentication Setting	Specify the authentication settings. General Settings: Select the LDAP authentication method. Login name: Enter if "General Settings" is set to "Anonymous". Up to 64 alphanumeric characters can be entered, excluding ^. Password: Enter if "General Settings" is set to "Anonymous". Up to 32 alphanumeric characters can be entered, excluding ^. Domain Name: Enter if "General Settings" is set to "GSS-SPNE-GO". Up to 64 alphanumeric characters can be entered, excluding ^.		
Maximum number of search	Specify the maximum number of hits to be received in an LDAP search between 5 and 100.		
Connection time out	Specify a search timeout between 5 and 300 seconds.		
SSL/TLS	Select whether to perform encryption of the send data using SSL/TLS.		
Port Number	Enter a number between 1 and 65535 for the port used to communicate with the LDAP server.		
Initialize Setting	Clears all of the settings that were entered. After the settings are cleared, check the message, and then touch [Enter].		
Check Connection	Check the connection to the LDAP server, using the entered settings.		

# To specify the LDAP server settings


- 1 In the Network Setting screen, touch [LDAP Setting].
- 2 Touch [LDAP Server Setting].

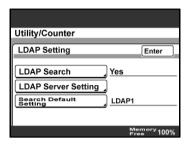


- Touch the button for the LDAP server to be registered or changed.
  - To register a new LDAP server, touch a button with no name on it.

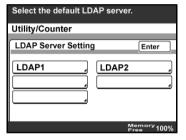

4 Specify the detailed LDAP server settings.

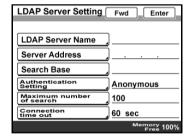


5 Touch [Fwd], and then specify the settings.

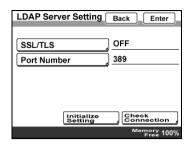


6 Check the settings, and then touch [Enter].

# **Search Default Setting**

- ✓ [Search Default Setting] appears when two or more LDAP servers have been registered.
- 1 In the Network Setting screen, touch [LDAP Setting].
- 2 Touch [Search Default Setting].

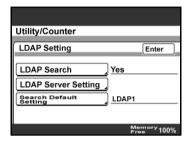

3 Select the primary LDAP server for performing searches, and then touch [Enter].

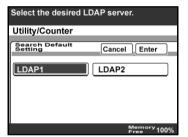

# 3.12 IP Filtering

Select whether or not reception is possible within the range of specified IP addresses. As an example, this section provides the procedure for specifying the range where access is permitted. The range where access is denied is specified in the same way as the range where access is permitted.

Settings can be specified for the following.

Item	Description
Accept Setting	Reception of only the IP addresses in the specified range is permitted.
Deny Access	IP addresses in the specified range are blocked.




### Note


0.0.0.0 cannot be included in a specified range. For example, to specify the range of addresses before 192.168.1.20, specify the range from 0.0.0.1 to 192.168.1.20.

### To specify IP filtering settings


- 1 In the Network Setting screen, touch [IP Filtering].
- 2 Touch [Accept Setting] or [Deny Access].

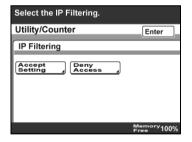

3 Touch [Enable] or [Disable].

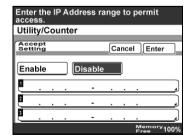

- 4 Touch [1] of the range.
- Touch [Start], and then type in the IP address at the beginning of the range.
  - To change an entered value, touch and to move the cursor to the number to be changed, touch [Delete], and then type in the desired number.
  - To clear all entered values, press the [C] (clear) key.

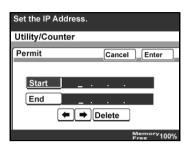

Touch [Enter], and then touch [Enter] in the next two screens that appear.
IP filtering is specified.

3-50

# 3.13 Specifying e-mail server settings

To be able to use the scanning functions of this machine, it is necessary to specify certain settings according to the network environment of the machine. For the required settings, contact your network administrator.

### To the network administrator

The following settings are required to be able to use the scanning functions of this machine. For each setting, refer to the operation manual for the e-mail server.

- IP address of this machine
- E-mail account (e-mail address) of this machine
- POP3 user name and POP3 password of this machine
- Acquisition of SMTP for the account that is the sub-domain of this machine (device domain name)
- Specify the delivery of e-mail from the e-mail server to this machine (DNS server setting)

When setup of the network is complete, inform the users of this machine of the information described below.

- The network subnet mask to connect to this machine
- The network gateway address to connect to this machine
- The IP address and host name (when using DNS) of the SMTP server
- The IP address and host name (when using DNS) of the POP3 server

# 3.14 Entering a domain name

When entering an e-mail address with this machine's control panel, the destination address can be entered quickly when the character string of a domain name that is entered often has been registered.

On this machine's control panel, the domain names can be automatically entered by touching [Domain] when it appears.




### Note


Up to 6 domain names can be registered.

### Registering a domain name


- 1 Press the [Utility/Counter] key.
- 2 Touch [User Setting].

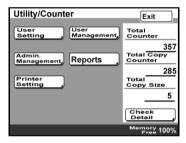

- 3 Touch [E-Mail Input].
  - If the optional fax kit has been installed, touch [FAX].

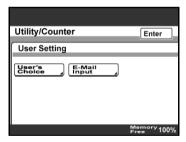


4 Touch [Domain Name].

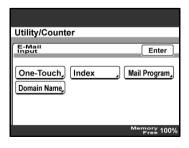


3-52

3-53

- Touch the button for the domain name to be registered or changed.
  - To register a new domain name, touch a button with no name on it.

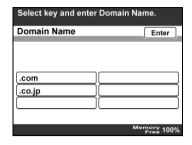

- Type in the domain name, and then touch [Enter].
  - Up to 64 characters can be entered.

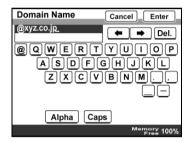

7 Touch [Enter] until the initial screen appears.

bizhub 362/282/222


# Using a registered domain name

On a screen where [Domain] appears, you can enter the registered characters with a single operation.

1 On an input screen, touch [Domain].



- 2 Touch the key where the domain name to be entered.
  - Touch [Alpha] to return to the text input screen.

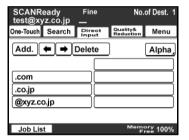


# 3.15 Checking the network connection (Ping)

By sending a ping, you can check whether the network (LAN) is properly connected.

The connection to an SMTP server, POP3 server, or any server (with a specified IP address) can be checked.

### To check the network connection


- 1 Enter Administrator mode, and then touch [Admin. 2].
- 2 Touch [Ping].

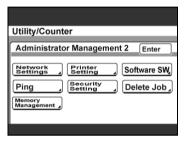

- 3 Select the connected server.
  - If [Ping IP Address] is selected, enter the IP address of the appropriate server.



- 4 Press the [Start] key.
  Pinging is performed.
- 5 Check the results, and then touch [Enter].

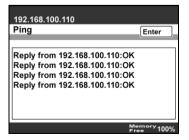

# 3.16 User authentication and account track

To limit the users of this machine, settings for user authentication and account track can be specified.

For details on the user authentication and account track settings, refer to the User manual [Copy Operations].

The various procedures for accessing the machine are described below.

### User authentication and account track

If settings for user authentication and account track have both been specified, the operating procedure differs depending on the specified authentication settings. For details on the authentication settings specified on this machine, consult with the administrator.


Authentication Setting	Description		
When synchronizing user authentication and account track	When a user is registered, the account that the user belongs to is also registered. When the user name and password is entered for authentication, the user is automatically logged on and can perform opera- tions as a user of the registered account.		
When not synchronizing user authentication and account track	Users and accounts are registered separately. User authentication, then account authentication must be completed before machine operations can be performed.		


3-56 bizhub 362/282/222

# If user authentication settings have been specified


Contact the administrator for the user name and password to be used.

- Touch [User Name], type in the user name, and then touch [Enter].
  - If user authentication is performed with an external server and a domain other than the default domain name is used as an Active Directory, type in the user name as

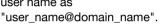

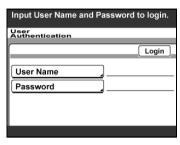

- If user authentication is performed with an external server, select the domain for performing authentication with Active Directory.
- Touch [Password], type in the password, and then touch [Enter].

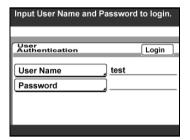


Touch [Login] or press the [Access] key in the control panel.

The initial screen appears.

# If account track settings have been specified

Contact the administrator for the track name and password to be used.

Touch [Account Name], type in the account number, and then touch [Enter].

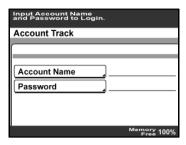

Touch [Password], type in the password, and then touch [Enter].



3 Press the [Access] key on the control panel.

The initial screen appears.

# Scan to E-Mail

# 4 Scan to E-Mail

# 4.1 Specifying a destination with a one-touch dial button

You can transmit data simply by touching a one-touch dial button if the email address of a destination or a mail program has been registered with a one-touch dial button in advance.

For registering one-touch dial buttons and mail programs, refer to "Registering destinations" on page 4-32.


### Selecting a one-touch dial button

A one-touch dial button can be selected in any of the following ways. Use the appropriate method according to the number of recipients and the desired use.

- Directly touching the one-touch dial button
- Entering the number of the one-touch dial button
- Specifying chain dialing

# Specifying a destination by touching a one-touch dial button

- Position the document to be scanned.
- Press the [Fax/Scan] button.
  - After pressing [Fax/Scan], you can specify Priority Screen settings in the User's Choice screen that appears. For details, refer to the User manual [Copy Operations].

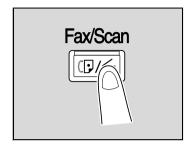


- 3 Touch [One-Touch].
- 4 Select the index containing the desired destination, and then touch the one-touch dial button.
  - To select an index, touch the corresponding tab, or touch or to select a different one.
  - You can specify multiple destinations for one transmission with the same one-touch dial

button. Up to 300 destinations can be specified at a time.




- 5 Specify the Quality & Reduction setting for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 4-14.

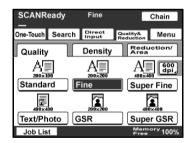




- Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 4-18.
- Press the [Start] key.

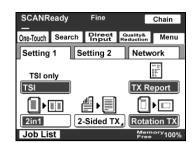


# Entering the number of a one-touch dial button

A one-touch dial button is assigned a number, as shown in the illustration.


You can quickly select a destination by specifying the number of a one-touch dial button instead of touching the button.

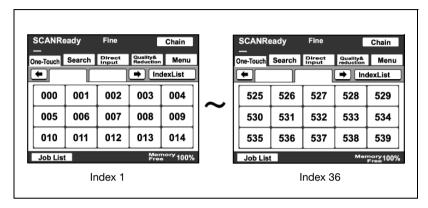

- 1 Position the document to be scanned.
- 2 Press the [Fax/Scan] key.

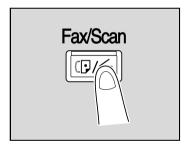

3 Press the [#] key on the control panel.

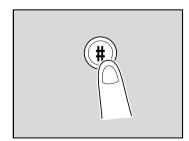


4-6




- 4 Use the keypad to type in the number of the one-touch dial button.
  - The specified one-touch dial button is highlighted.
  - You can specify multiple destinations for simultaneous transmission with the same onetouch dial button. Up to 300 destinations can be specified at a time.



- 5 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 4-14.

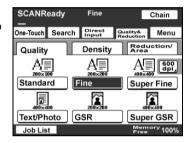


- Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 4-18.
- 7 Press the [Start] key.

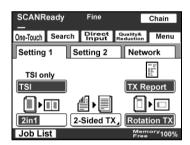

### Searching for a one-touch dial button

To find a one-touch dial button, the name of a destination registered with the button can be searched for.

- Position the document to be scanned.
- Press the [Fax/Scan] key.

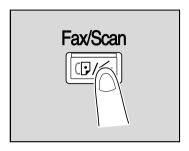

- 3 Touch [Search].
  - If "LDAP Search" in the Network Settings screen is set to "Yes", a screen appears, allowing you to select the search method. Touch [Search One-Touch Keys] when the screen appears.
- 4 Type in the destination name, and then touch [Search].

A screen appears, containing the one-touch dial buttons programmed with a destination that begins with the entered name.




- 5 Touch the desired one-touch dial button.
  - You can specify multiple destinations for simultaneous transmission with the same onetouch dial button. Up to 300 destinations can be specified at a time.
  - If LDAP searches are possible, touch [LDAP Search] to perform a searches.





- 6 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 4-14.
- **SCANReady** Fine Chain One-Touch Search Direct Quality& Menu Reduction/ Density Quality A∭ A≣ A GOO Standard Fine Super Fine GSR Super GSR Text/Photo Job List
- 7 Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 4-18.
- 8 Press the [Start] key.

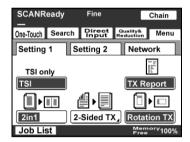

## Specifying chain dialing

If the destination address is longer than 64 characters, the address can be specified by combining addresses registered to one-touch dial buttons and an entered address.

Touch [Chain], and then select one-touch dial buttons or enter an address.



### Detail

Chain dialing can only be used with one destination per transmission.

With chain dialing, the address can contain up to 192 digits (64 characters from a one-touch dial button + 64 characters from a one-touch dial button + 64 characters from an entered address).



The one-touch dial buttons to be used with chain dialing must be programmed in advance.

4-10 bizhub 362/282/222

# 4.2 Entering an address

You can directly enter destinations that have not been registered in a one-touch dial button. In addition, multiple destinations can be specified using chain dialing to combine destinations registered in a one-touch dial button and destinations that are entered.



### Note

If bit 3 of mode 018 is set to "1" in the Software Switch Setting screen, addresses cannot be directly entered. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

### To enter an address


- 1 Position the document to be scanned.
- 2 Press the [Fax/Scan] key.



- 3 Touch [Direct Input].
- 4 To select the communication mode, touch [Change Comm. Mode].




- 5 Touch [PC], [E-Mail], then [Enter].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

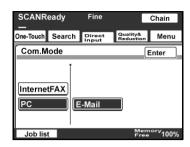


- 6 Type in the destination address.
  - To change an entered address, press the [C] (clear) key, and then enter a new address.
  - If parts of frequently used addresses are registered, they can be quickly entered by touching [Domain]. For details, refer to "Registering a domain name" on page 3-52.
- To select the file format and encoding method, touch [Scan Mode].



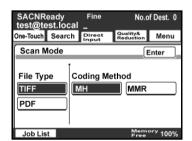


- Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 4-14.

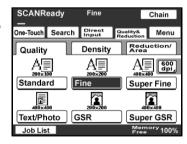



- 9 Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 4-18.
- 10 Press the [Start] key.

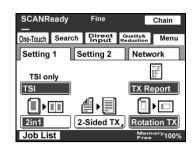

# 4.3 Specifying the scanning quality and zoom ratio

You can specify the scanning quality and zoom ratio by touching [Quality & Reduction] in the screen that appears when the [Fax/Scan] key on the control panel is pressed.



### Detail

When the transmission is complete, the specified settings return to their default.

### Quality

You can select the scan resolution (amount of details). Select from the following resolution settings according to the type of document being scanned.

Item	Description
Standard	For documents containing plain text such as handwriting
Fine Super Fine 600 dpi Text	For documents containing small print, such as newspapers, or detailed illustrations
Text/Photo 600 dpi Text&Photo	For documents containing both text and images with color shades, such as photos
GSR Super GSR 600 dpi Photo	For documents containing color shades, such as photos



### Detail

If data is sent using the "Text/Photo" setting, moiré patterns may appear in some photos. To reduce the appearance of moiré patterns, send the data using the "GSR" or "Super GSR" setting.

When a high resolution is selected to send a clearer image, the size of the attached image data may exceed the size limitations of the provider or server being used. Before sending the data, check the transmission capacity.

4-14 bizhub 362/282/222




# To specify the scanning quality

1 Touch [Quality & Reduction].



- 2 Touch [Quality], and then touch the desired quality setting.
  - To select a higher resolution, touch [600dpi].

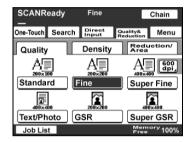

# **Density**

According to the type of document being sent, select the appropriate density from the settings described below.

Item	Description
Light  Std.	For documents with a dark background color, such as newspapers and blueprints
Dark	For normal documents
Dark	For documents with faint or colored text



## Detail


If "600 dpi Text" or "600 dpi Text & Photo" is selected, the density can be set to one of three levels: "Light", "Std.", and "Dark".

## To specify the density settings

1 Touch [Quality & Reduction].



2 Touch [Density], and then touch the desired density setting.

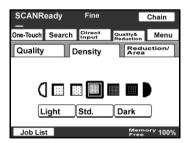

4-16


## Original Size Set.

You can specify the scan area as a standard size. A portion of a large original document as well as a non-standard-sized document can be sent in a standard size.


1 Touch [Quality & Reduction].



- 2 Touch [Reduction/Area], and then touch [Original Size Set.].
  - The "Zoom" parameter has no effect, even if settings have been specified.

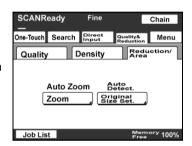

- 3 Select a scan area size, and then touch [Enter].
  - Touch [Auto Detect] to automatically select the size closest to the size of the original document. However, Letter size is selected for documents smaller than Letter size.
  - Touch [Metric] to specify metric size.

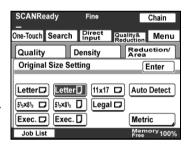

# 4.4 Specifying additional functions

You can add the following functions by pressing the [Fax/Scan] key on the control panel, then touching [Menu] on the screen that appears.



#### Note

If the optional fax kit has been installed, [Menu] changes to [Fax Menu].



## Note

The following functions have no effect, even if settings have been specified.

- "TSI" on the Setting 1 tab
- "Rotation TX" on the Setting 1 tab
- "E-Mail Notification" on the Network tab

Item		Description		
Setting 1 *(Set 1)	TX Report	Select under which conditions the transmission report is to be outp Default: Outputs according to the specifications of the administrat ON: Prints regardless of the transmission results. If TX Fails: Prints only when undeliverable. OFF: Does not print regardless of the transmission results.		
	2in1	Select whether to send using the 2in1 function (printing two pages to fit on one page).		
	2-Sided TX	Select whether to perform double-sided transmission. You can specify the position of the binding margin and the document orientation.		
Setting 2	Priority TX	Select whether a job is given priority over other.		
*(Set 2)	Timer TX Setting	Select whether to set the send time. Specifies the send time when "ON" is selected.		
	Stamp	Specify whether the document is stamped to indicate that it has been scanned. The document must be loaded into the ADF.		
		Note To use the Stamp function, optional stamp unit must be installed.		
Network *(Net.)	Subject Selection	The Subject line of an e-mail can be selected from Subject lines specified in advance.		
	Reply Ad- dress	Displays the e-mail address of this machine as the sender of the e-mail message. When specifying e-mail addresses other than that of this machine, select an address from a registered one-touch dial button.		
	File Name	Enter when a set file name is to be specified as the file name when saving the file. Up to 16 characters can be entered.		

4-18 bizhub 362/282/222

\* Changes to () if the optional fax kit has been installed.

# Specifying the transmission report printing conditions

You can specify the conditions for printing a transmission report (TX Report).

The printing conditions for a transmission report are preset with the Report Settings parameters from the Administrator Management screen. Select the appropriate printing condition.

Settings can be specified for the following.


Item	Description
Default	Displays the printing conditions specified in Administrator Management screen.
ON	Prints regardless of the results.
If TX Fails	Prints when the transmission failed.
OFF	Does not print regardless of the results.

## To specify the transmission report printing conditions

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].




- 2 Touch [Setting 1], then [TX Report].
  - If the optional fax kit has been installed, touch [Set 1], then [TX Report].

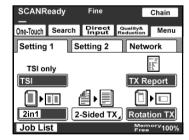

4-20 bizhub 362/282/222




3 Specify the desired printing conditions, and then touch [Enter].

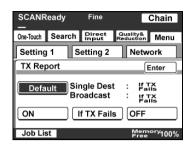

# Specifying 2in1 transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 1], then [2in1].
  - If the optional fax kit has been installed, touch [Set 1], then [2in1].
  - Touch the button again to cancel the setting.

The button is highlighted.

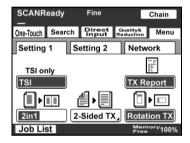

bizhub 362/282/222

Chain

Quality& Reduction Menu

Network


Original Direction

Auto

Enter

# Specifying double-sided transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- Touch [Setting 1], then [2-Sided TX].
  - If the optional fax kit has been installed, touch [Set 1], then [2-Sided TX].

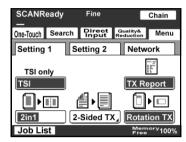

Setting 2

OFF

**SCANReady** 

Setting 1


2-Sided TX

One-Touch Search Direct

Original Bind Direction

Left Bind Top Bind

- 3 Select the desired binding margin position.
  - Left Bind: The document is scanned with a binding margin on the left side.
  - Top Bind: The document is scanned with a binding margin at the top.
  - Auto: The binding margin is set according to the scanning direction.
- 4 Touch [Original Direction].
- 5 Select the orientation of the document, and then touch [Enter].
  - Auto: The long side of the document is automatically set as the binding position.

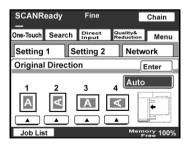

- 6 Touch [Enter].
  - Touch [OFF] to cancel the settings.

4-22






## Detail

When loading a double-sided document with pages of different widths, we recommend loading the pages with the same orientation. When a document with pages of different orientations is scanned, the orientation of the image data may not be correct.

# Specifying priority transmission


- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Priority TX].
  - If the optional fax kit has been installed, touch [Set 2], then [Priority TX].
  - Touch the button again to cancel the setting.

The button is highlighted.

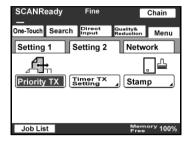


# Specifying timer transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Timer TX Setting].
  - If the optional fax kit has been installed, touch [Set 2], then [Timer TX Setting].

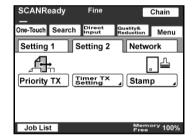

- 3 Enter the time for transmission.
  - Touch [Hour] or [Minute], and then type in the desired value using the keypad.

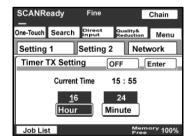


- 4 Touch [Enter].
  - Touch [OFF] to cancel the settings.

4-24


# 4

# Specifying the stamp setting

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Stamp].
  - If the optional fax kit has been installed, touch [Set 2], then [Stamp].

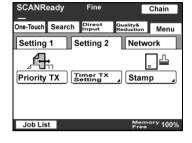

3 Select the print position of the stamp, and then touch [Enter].

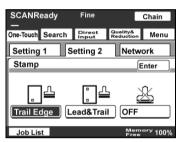


# Changing the subject

The subject line of an e-mail message can be selected from subject lines registered in advance. To specify settings, refer to the Scanner Settings screen, displayed from the Administrator Management screen on page 3-35.


- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- 2 Touch [Network], then [Subject Selection].
  - If the optional fax kit has been installed, touch [Net.], then [Subject Selection].

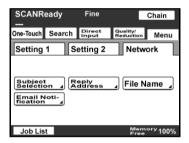

- 3 Select a subject, and then touch [Enter].
  - Touch [OFF] to cancel the settings.

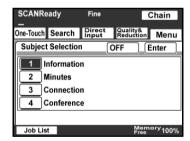



#### Detail

If no subject has been registered, the e-mail message is sent with the subject line "[Image File] <one-touch\_name>, <machine\_name>, <number>".

4-26 bizhub 362/282/222




# Specifying a reply address

From the e-mail addresses registered with a one-touch dial button, you can specify the return e-mail address displayed to the recipient.

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- Touch [Network], then [Reply Address].
  - If the optional fax kit has been installed, touch [Net.], then [Reply Address].

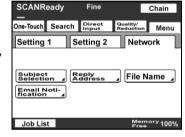

- 3 Select a return address, and then touch [Enter].
  - Touch [OFF] to cancel the setting.




# Specifying a file name

You can specify the file name of the image data to be attached in an e-mail. Up to 16 characters can be entered.

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- 2 Touch [Network], then [File Name].
  - If the optional fax kit has been installed, touch [Net.], then [File Name].

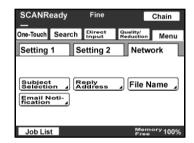

- Type in the file name, and then touch [Enter].
  - Touch [OFF] to cancel the setting.
  - It is not necessary to type in an extension.





#### Note

When no file name is specified, the file is automatically sent with a name in the following format:

<machine\_name><scan\_date\_and\_time>.<extension>.

4-28 bizhub 362/282/222



# Other functions

Other settings related to sending e-mail messages can be specified. Contact the administrator of this machine for the administrator management settings.

Item	Description	Refer to
Changing the body text	You can specify custom text other than the text that was specified at the factory to be inserted into an e-mail message. Specify this text in the Scanner Settings screen, displayed from the Administrator Management screen.	page 3-35
Page Division and Binary Division	When attaching the data of multi-page documents or data of a large volume, you can send the data separated into pages or portions of specified size. Specify this setting in the Scanner Settings screen, displayed from the Administrator Management screen.	page 3-35

# 4.5 If transmission could not be completed


If the transmission could not be completed correctly, a transmission report is printed.



#### Detail

You can change the transmission report printing conditions. For details, refer to "Specifying the transmission report printing conditions (Report Settings)" on page 10-17.

## Viewing a transmission report

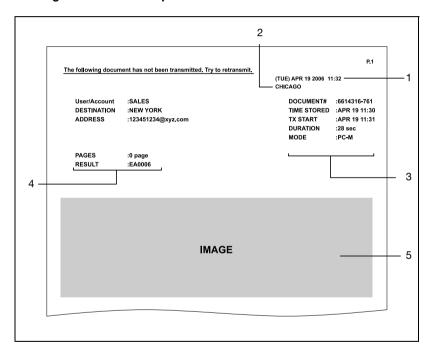

No.	Item	Description
1	Report output date and time	Shows the date and time that the report was printed.
2	Transmission source information (TSI)	Shows the registered transmission source name.
3	Transmission information	Prints the document number, the duration of the transmission, and the transmission mode.

4-30 bizhub 362/282/222

No.	Item	Description
4	Transmission result	Shows the transmission result. Any of the following may appear.  OK: The transmission was completed successfully. INTERR: The transmission was interrupted.  F. MEM: The memory capacity was exceeded. NG: The transmission failed.  PT. DEL: The transmission to some destinations failed.  Error code: For details, refer to "Network error list" on page 12-4.
5	Transmission Image	Prints a part of the sent image.

# Resending

You can resend up to 20 failed transmissions.

- 1 Touch [Job List], then [Type], and then select the document that could not be sent.
  - If [Retry] and [Change Destination] appear in the screen, the document does not need to be scanned again.
- 2 To send to the same destination, touch [Retry].
  - To send to a different destination, touch [Change Destination].

bizhub 362/282/222

# 4.6 Registering destinations

## Programming a one-touch dial button

By registering a destination with a one-touch dial button, transmissions can be performed easily and accurately.

You can register two types of destinations with a one-touch dial button: a main destination and a secondary destination, where the data is sent if transmission to the main destination fails.



#### Note

A secondary recipient can be specified if the optional scanner unit or fax kit is installed.

If the "Restrict One-Touch Editing" parameter on the Administrator Set screen (displayed from the Administrator Management screen) is set to "ON", [E-Mail Input] is added to the Administrator Management 1 screen and can be used to register, change and delete one-touch dial buttons. For details on the Administrator Set screen, refer to the User manual [Copy Operations].

If the optional fax kit has been installed, the [E-Mail Input] changes to the [FAX].



### Detail

The following communication modes can be specified for the secondary destination.

- PC (E-Mail)
- PC (Scanner)\*
- InternetFAX (Internet FAX)
- InternetFAX (IP-TX)\*
- InternetFAX (IP Relay)\*
- FAX (G3)\*\*

\*The communication mode can be specified if the optional scanner unit or fax kit is installed.

\*\*The communication mode can be specified if the optional fax kit is installed.


4-32 bizhub 362/282/222

# Settings can be specified for the following.


Item	Description
One-Touch Name	Type in the destination name that will appear on the one-touch dial button. Up to 12 characters can be entered.
Destination	Type in the destination e-mail address. Up to 64 characters can be entered.
File Type	Select the file format (TIFF or PDF) for sending files.
Coding Method	Select either "MH" or "MMR" as the encoding method for the selected file format. The data capacity is lowest with "MMR" and highest with "MH".

# To program a one-touch dial button


Press the [Utility/Counter] key.

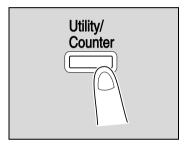


2 Touch [User Setting].

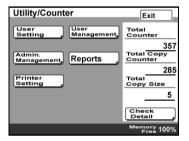


- 3 Touch [E-Mail Input].
  - If the optional fax kit has been installed, touch [FAX].

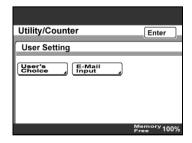

4 Touch [One-Touch].

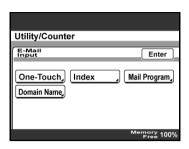

- 5 Touch the one-touch dial button to be programmed.
  - Touch an index tab or [Index List], then the desired one-touch dial button
  - If the machine is set to allow LDAP searches, a screen appears, allowing you to permit or prohibit the address registered

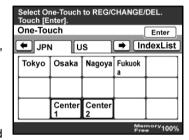


with the one-touch dial button to be found with an LDAP search. If LDAP searches are not to be allowed, select "No".

Type in the destination name that will appear on the one-touch dial button, and then touch [Next].



- 7 Select the communication mode. Touch [PC], [E-Mail], then [Next].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

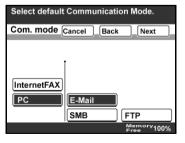

Next

→ Del.

- 8 Enter the destination e-mail address.
  - If parts of frequently used addresses are registered, they can be quickly entered by touching [Domain]. For details, refer to "Entering a domain name" on page 3-52.

To change the file format and

encoding method, which were

administrator, touch [Scan Mode].

specified in advance by the

- To change an entered address, touch - or - to move the cursor, or press the [C] (clear) key to enter a address.

E-Mail Address

Cancel


Domain, ZXCVBNM.

@QWERTYUIOP


ASDFGHJKL

Back

**4** 

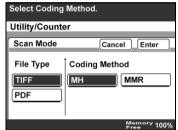


- 10 Touch [Enter].
- 11 Check the information to be registered, and then touch [Enter].

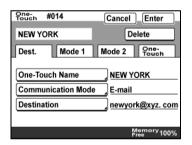


12 Touch [Enter] until the initial screen appears.

# Changing or deleting a one-touch dial button

Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".

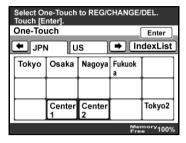


- 2 Touch the one-touch dial button to be change or deleted.
  - If the specified one-touch dial button is programmed as an administrator forwarding destination, the screen for entering the administrator number appears.
- Touch the button for the information to be changed, and then make the change.
  - To delete the information, touch [Delete], check that the correct information is to be deleted, and then touch [OK].

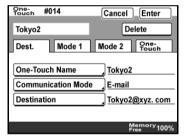


- 4 Check the information to be registered, and then touch [Enter].
- 5 Touch [Enter] until the initial screen appears.

# Copying a one-touch dial button

- 1 Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- 2 Touch the one-touch dial button to be copied.
- Touch [One-Touch], then [One-Touch Copy].

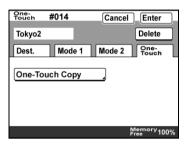


- 4 Touch the one-touch dial button where the information is copied to.
  - Select a one-touch dial button that has not yet been programmed.
  - To deselect the one-touch dial button where the information is to be copied to, touch the selected one-touch dial button again.

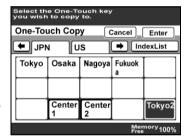


5 Touch [Enter] until the initial screen appears.


# Registering/deleting a secondary destination

- A secondary recipient can be specified if the optional scanner unit or fax kit is installed.
- Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- 2 Touch the one-touch dial button where the secondary destination is to be registered.
- Touch [One-Touch], then [Sub-Address Registration].

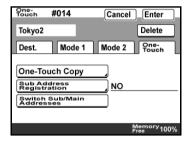

- 4 Select the communication mode for the secondary destination.
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.
- Enter the secondary destination information, and then touch [Enter].

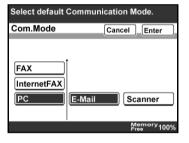

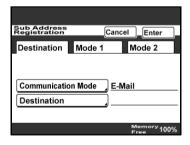

6 Touch [Enter] until the initial screen appears.

4-38



# Naming an index

By classifying one-touch dial buttons into indexes named, for example, "Branches" or "Clients", you can easily find a desired one-touch dial button.




## Detail

An index name can contain up to 8 characters.


36 indexes containing up to 15 one-touch dial button can be programmed.

## To name an index


- 1 Perform steps 1 through 3 of the procedure in "To program a one-touch dial button".
- 2 Touch [Index].

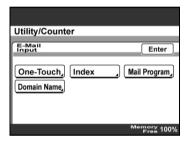

3 Touch the index button to be programmed.

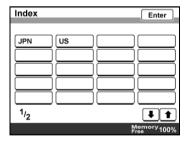

4 Type in the index name, and then touch [Enter].

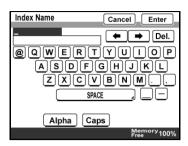

5 Touch [Enter] until the first screen appears.

# Registering mail programs

If settings to be applied to a transmission are registered with the destination information, a transmission can be performed with the registered settings simply by touching a one-touch dial button. This is known as a mail program and is convenient when always sending transmissions with specific settings to a specific destination.

If the optional fax kit has been installed, the [Mail Program] changes to the [FAX Program].

As shown below, the settings of certain parameters may not be available for registration in a program, depending on the operation used. Refer to the page for each item.

O: Available

▲: Available under certain conditions

-: Unavailable

Operation Parameter	Scan to E-Mail	Scan to FTP	Scan to SMB	Scan to HDD	Internet fax
Quality	0	0	0	0	0
Density	0	0	0	0	0
Zoom	_	-	_	-	-
Original Size Set.	0	0	0	0	0
TSI	_	-	-	1	0
TX Report	0	0	0	0	0
2in1	0	0	0	0	0
2-Sided TX	0	0	0	0	0
Rotation TX	_	-		1	<b>A</b>
Priority TX	0	0	0	0	0
Timer TX Set- ting	0	0	0	0	0
Stamp	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Subject	_	-		1	<b>A</b>
Reply	0	-	=	-	<b>A</b>
File Name	0	0	0	0	<b>A</b>
E-Mail Notifi- cation	-	0	0	0	-



#### Detail

Up to 30 mail programs can be registered. However, the total number of mail programs and one-touch button may not exceed 540.

Up to 300 destinations can be registered per mail program.



## Note

To use the Stamp function, optional stamp unit must be installed.



### **Detail**

For procedures on specifying settings for the various operations, refer to the following pages.

Scan to E-Mail (p. 4-11, p. 4-14)

Scan to FTP (p. 5-9, p. 5-13)

Scan to SMB (p. 6-9, p. 6-13)


Scan to E-HDD (User manual [Box Operations])

Internet fax (p. 7-10, p. 7-12)

4-42 bizhub 362/282/222

# To register a mail program


1 Press the [Utility/Counter] key.

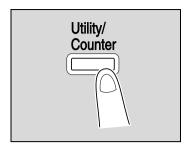


2 Touch [User Setting].




- 3 Touch [E-Mail Input].
  - If the optional fax kit has been installed, touch [FAX].

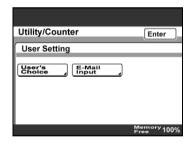

- 4 Touch [Mail Program].
  - If the optional fax kit has been installed, touch [FAX Program].

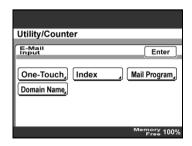


- 5 Touch the one-touch dial button to be registered.
  - Touch an Index tab or [Index List], then the desired one-touch dial button.

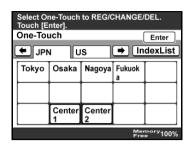


- Type in the program name which will appear on the one-touch dial button, and then touch [Next].
  - The program name can contain up to 12 characters.



If the optional fax kit has been installed, select the transmission type, and then touch [Next].

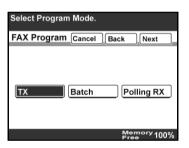

- 8 Specify the destination.
  - To specify the destination with a one-touch dial button, touch [One- Touch], touch the onetouch dial button for the desired destination, and then touch [Enter].
  - To specify the destination with a one-touch search, touch
    [Search], specify the destination, and then touch [Enter].

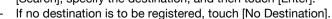


9 Touch [Next].







10 Touch [Transmission Setting].

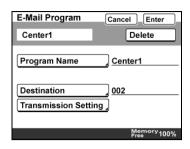

- **11** Specify the settings to be registered.
  - Touch [Quality] to specify settings for "Quality", "Density", "Zoom", and "Original Size Set.".
  - Touch [Menu 1] to specify settings for "TSI", "TX Report", "Priority TX", "Timer TX Setting", "2in1", "2-Sided TX", "Rotation TX", and "Stamp".

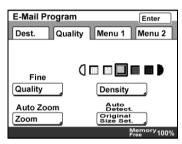


- Touch [Menu 2] to specify the settings for "Subject Selection",
   "Reply Address", "File Name", and "Email Notification".
- In order to use the "Stamp" function, the optional stamp unit must be installed.
- 12 Touch [Enter].
- 13 Check the information to be registered, and then touch [Enter].

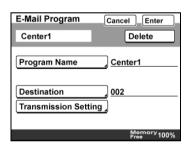


14 Touch [Enter] until the initial screen appears.

# Changing/deleting a mail program

- 1 Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- Touch the one-touch dial button with the mail program to be changed or deleted
  - Touch an Index tab or [Index List], then the desired one-touch dial button.

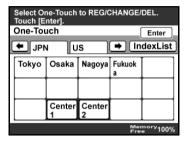

Touch the button for the setting to be changed, and then change the setting. To delete the mail program, touch [Delete].

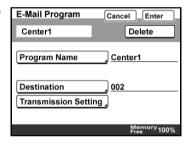

- 4 Check the information to be registered, and then touch [Enter].
- 5 Touch [Enter] until the initial screen appears.

# 5 Scan to FTP

# 5 Scan to FTP

# 5.1 Specifying a destination with a one-touch dial button

You can transmit data simply by touching a one-touch dial button if the secondary destination of the upload destination or a mail program has been registered with a one-touch dial button in advance.



#### Detail

For registering one-touch dial buttons, refer to "Registering destinations" on page 5-24.

For registering mail programs, refer to "Registering mail programs" on page 4-41.


## Selecting a one-touch dial button

A one-touch dial button can be selected in any of the following ways. Use the appropriate method according to the number of recipients and the desired use.

- Directly touching the one-touch dial button
- Entering the number of the one-touch dial button

# Specifying a destination by touching a one-touch dial button

- 1 Position the document to be scanned.
- 2 Press the [Fax/Scan] button.
  - After pressing [Fax/Scan], you can specify Priority Screen settings in the User's Choice screen that appears. For details, refer to the User manual [Copy Operations].

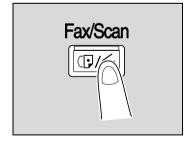

3 Touch [One-Touch].

→ IndexList

Chain

- 4 Select the index containing the desired destination, and then touch the one-touch dial button.
  - To select an index, touch the corresponding tab, or touch for to select a different one.
  - To change the index name, refer to "To name an index" on page 4-39.
  - You can specify multiple destinations for one transmission with the same one-touch dial button. Up to 300 destinations can be specified at a time.

**SCANReady** 

**←** JPN

Job List

- 5 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 5-9.
- **SCANReady** Fine Chain One-Touch Search Direct Menu Reduction/ Quality Density A≣ A**■** 😜 Standard Super Fine Fine Text/Photo GSR Super GSR Job List

Fine

One-Touch Search Direct Quality& Menu


Center

lus

Tokyo Osaka Nagoya Fukuoka

Center


- Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 5-13.
- 7 Press the [Start] key.

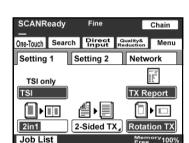


# Entering the number of a one-touch dial button

A one-touch dial button is assigned a number, as shown in the illustration.


You can quickly select a destination by specifying the number of a one-touch dial button instead the button.

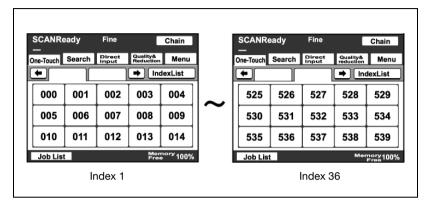

- 1 Position the document to be scanned.
- 2 Press the [Fax/Scan] key.

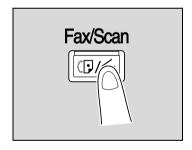


3 Press the [#] key on the control panel.

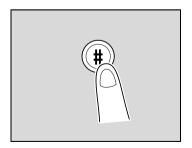


- 4 Use the keypad to type in the number of a one-touch dial button.
  - You can specify multiple destinations for simultaneous transmission with the same onetouch dial button. Up to 300 destinations can be specified at a time.


The specified one-touch dial button is highlighted.

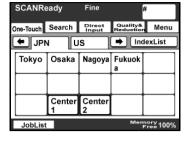

- 5 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 5-9.

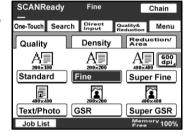


- Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 5-13.
- 7 Press the [Start] key.

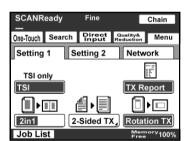

# Searching for a one-touch dial button

To find a one-touch dial button, the name of a destination registered with the button can be searched for.

- Position the document to be scanned.
- Press the [Fax/Scan] key.

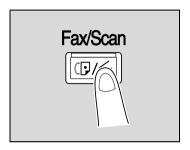


- 3 Touch [Search].
- 4 Type in the destination name, and then touch [Search].


A screen appears, containing the one-touch dial buttons programmed with a destination that begins with the entered name.




- 5 Touch the desired one-touch dial button.
  - You can specify multiple destinations for simultaneous transmission with the same onetouch dial button. Up to 300 destinations can be specified at a time.

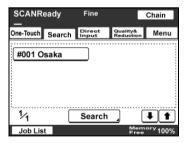

- 6 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 5-9.

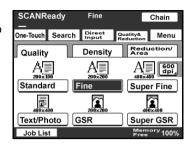

- 7 Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 5-13.
- 8 Press the [Start] key.

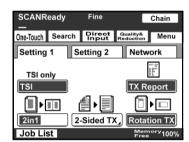

# 5.2 Specifying the scanning quality and zoom ratio

You can specify the scan quality and zoom ratio by touching [Quality & Reduction] in the screen that appears when the [Fax/Scan] key on the control panel is pressed.



#### Detail

When the transmission is complete, the specified settings return to their defaults.

## Quality

You can select the scan resolution (amount of details). Select from the following resolution settings according to the type of document being scanned.

Item	Description
Standard	For documents containing plain text such as handwriting
Fine Super Fine 600 dpi Text	For documents containing small print, such as newspapers, or detailed illustrations
Text/Photo 600 dpi Text&Photo	For documents containing both text and images with color shades, such as photos
GSR Super GSR 600 dpi Photo	For documents containing color shades, such as photos



# **Detail**

If data is sent using the "Text/Photo" setting, moiré patterns may appear in some photos. To reduce the appearance of moiré patterns, send the data using the "GSR" or "Super GSR" setting.


When a high resolution is selected to send a clearer image, the size of the attached image data may exceed the size limitations of the provider or server being used. Before sending the data, check the transmission capacity.

# To specify the scanning quality

1 Touch [Quality & Reduction].



- Touch [Quality], and then touch the desired quality setting.
  - To select a higher resolution, touch [600dpi].

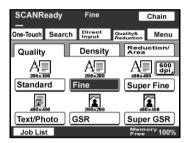

# **Density**

According to the type of document being sent, select the appropriate density from the settings described below.

Item	Description
Light  Std.	For documents with a dark background color, such as newspapers and blueprints
Std.  Dark	For normal documents
Dain	For documents with faint or colored text



#### Detail


If "600 dpi Text" or "600 dpi Text & Photo" is selected, the density can be set to one of three levels: "Light", "Std.", and "Dark".

# To specify a density setting

1 Touch [Quality & Reduction].



2 Touch [Density], and then touch the desired density setting.

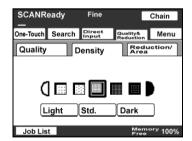


# Original Size Set.

You can specify the scan area as a standard size. A portion of a large original document as well as a non-standard-sized document can be sent in a standard size

1 Touch [Quality & Reduction].



- 2 Touch [Reduction/Area], and then touch [Original Size Set.].
  - The "Zoom" parameter has no effect, even if settings have been specified.

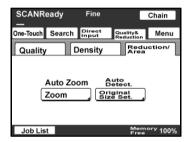

- 3 Select a scan area size, and then touch [Enter].
  - Touch [Auto Detect] to automatically select the size closest to the size of the original document. However, Letter size is selected for documents smaller than Letter size.
  - Touch [Metric] to specify metric sizes.



# 5.3 Specifying additional functions

You can add the following functions by pressing the [Fax/Scan] key on the control panel, then touching [Menu] on the screen that appears.



#### Note

If the optional fax kit has been installed, [Menu] changes to [Fax Menu].



#### Note

The following functions and parameters have no effect, even if settings have been specified.

- "TSI" on the Setting 1 tab
- "Rotation TX" on the Setting 1 tab
- "Subject Selection" on the Network tab
- "Reply Address" on the Network tab

Item		Description	
Setting 1 *(Set 1)	TX Report	Select under which conditions the transmission report is to be output. Default: Outputs according to the specifications of the administrator. ON: Prints regardless of the transmission results. If TX Fails: Prints only when undeliverable. OFF: Does not print regardless of the transmission results.	
	2in1	Select whether to send using the 2in1 function (printing two pages to fit on one page).	
	2-Sided TX	Select whether to perform double-sided transmission. You can specify the position of the binding margin and the document orientation.	
Setting 2	Priority TX	Select whether a job is given priority over others.	
*(Set 2)	Timer TX Setting	Select whether to set the send time. Specifies the send time when "ON" is selected.	
	Stamp	Specify whether the document is stamped to indicate that it has been scanned. The document must be loaded into the ADF.	
		<b>0</b>	
		Note To use the Stamp function, optional stamp unit must be installed.	
Network *(Net.)	File Name	Enter when a set file name is to be specified as the file name when saving the file. Up to 16 characters can be entered.	
	E-Mail Noti- fication	Specify whether to have an e-mail message sent to a specified one-touch destination to notify you when the transmission is complete.	

<sup>\*</sup> Changes to () if the optional fax kit has been installed.

# Specifying the transmission report printing conditions

You can specify the conditions for printing a transmission report (TX Report).

The printing conditions for a transmission report are preset with the Report Settings parameters from the Administrator Management screen. Select the appropriate printing condition.

Settings can be specified for the following.


Item	Description
Default	Displays the printing conditions specified in the Administrator Management screen.
ON	Prints regardless of the results.
If TX Fails	Prints when the transmission failed.
OFF	Does not print regardless of the results.

## To specify the transmission report printing conditions


- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- 2 Touch [Setting 1], then [TX Report].
  - If the optional fax kit has been installed, touch [Set 1], then [TX Report].

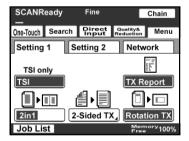


3 Specify the desired printing conditions, and then touch [Enter].

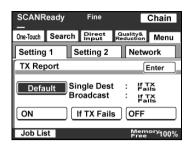

## Specifying 2in1 transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 1], then [2in1].
  - If the optional fax kit has been installed, touch [Set 1], then [2in1].
  - Touch the button again to cancel the setting.

The button is highlighted.

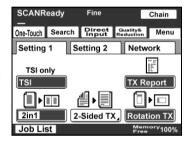

bizhub 362/282/222

Chain

Quality& Reduction Menu

Network


Original Direction

Auto

Enter

# Specifying double-sided transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- Touch [Setting 1], then [2-Sided TX].
  - If the optional fax kit has been installed, touch [Set 1], then [2-Sided TX].

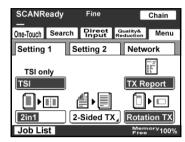

Setting 2

**SCANReady** 

Setting 1


2-Sided TX

One-Touch Search Direct

Original Bind Direction

Left Bind Top Bind

- 3 Select the desired binding margin position.
  - Left Bind: The document is scanned with a binding margin on the left side.
  - Top Bind: The document is scanned with a binding margin at the top.
  - Auto: The binding margin is set according to the scanning direction.
- 4 Touch [Original Direction].
- Select the orientation of the document, and then touch [Enter].
  - Auto: The long side of the document is automatically set as the binding position.

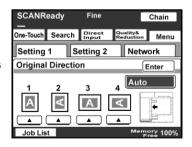

- 6 Touch [Enter].
  - Touch [OFF] to cancel the settings.

5-16




#### Detail

When loading a double-sided document with pages of different widths, we recommend loading the pages with the same orientation. When a document with pages of different orientations is scanned, the orientation of the image data may not be correct.

# Specifying priority transmission


- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Priority TX].
  - If the optional fax kit has been installed, touch [Set 2], then [Priority TX].
  - Touch the button again to cancel the setting.

The button is highlighted.

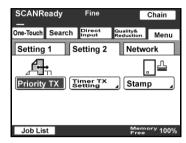


# Specifying timer transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Timer TX Setting].
  - If the optional fax kit has been installed, touch [Set 2], then [Timer TX Setting].

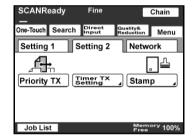


- 3 Enter the time for transmission.
  - Touch [Hour] and [Minute], and then type in the desired value using the keypad.

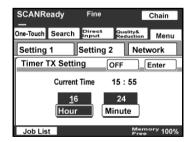


- 4 Touch [Enter].
  - Touch [OFF] to cancel the settings.

# Specifying the stamp setting

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Stamp].
  - If the optional fax kit has been installed, touch [Set 2], then [Stamp].

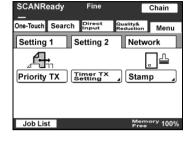

3 Select the print position of the stamp, and then touch [Enter].

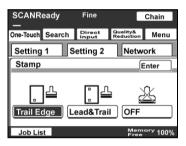


# Specifying the e-mail notification destination

When the transmission of the data is complete, an message can be sent to the destination specified in the URL of the uploaded destination.

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- Touch [Network], then [Email Notification].
  - If the optional fax kit has been installed, touch [Net.], then [Email Notification].

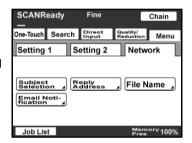

- 3 Select the destination address, and then touch [Enter].
  - Touch [OFF] to cancel the setting.



# Specifying a file name


You can specify the file name of the image data to be sent. Up to 16 characters can be entered.

When no file name is specified, the file is automatically sent with a name in the following format: <machine name><scan date and time>.<extension>.

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- 2 Touch [Network], then [File Name].
  - If the optional fax kit has been installed, touch [Net.], then [File Name].

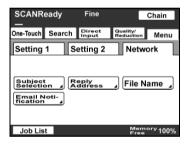

- Type in the file name, and then touch [Enter].
  - Touch [OFF] to cancel the setting.
  - It is not necessary to type in a extension.



5-21

bizhub 362/282/222

# 5.4 If transmission could not be completed


If the transmission could not be completed correctly, a transmission report is printed.



#### Detail

You can change the transmission report printing conditions. For details, refer to "Specifying the transmission report printing conditions (Report Settings)" on page 10-17.

## Viewing a transmission report

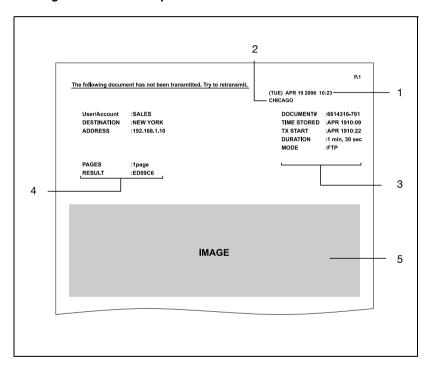

No.	Item	Description
1	Report output date and time	Shows the date and time that the report was printed.
2	Transmission source information (TSI)	Shows the registered transmission source name.
3	Transmission information	Prints the document number, the duration of the transmission, and the transmission-mode.

5-22 bizhub 362/282/222

No.	Item	Description
4	Transmission result	Shows the transmission result. Any of the following may appear. OK: The transmission was completed successfully. INTERR: The transmission was interrupted. F. MEM: The memory capacity was exceeded. NG: The transmission failed. PT. DEL: The transmission to some destinations failed. Error code: For details, refer to "Network error list" on page 12-4.
5	Transmission Image	Prints a part of the sent image.

# Resending

You can resend up to 20 failed transmission.

- 1 Touch [Job List], then [Type], and then select the document that could not be sent.
  - If [Retry] and [Change Destination] appear in the screen, the document does not need to be scanned again.
- 2 To send to the same destination, touch [Retry].
  - To send to a different destination, touch [Change Destination].

# 5.5 Registering destinations

## Programming a one-touch dial button

By registering a destination with a one-touch dial button, transmissions can be performed easily and accurately.



#### Note

If the "Restrict One-Touch Editing" parameter on the Administrator Set screen (displayed from the Administrator Management screen) is set to "ON", [E-Mail Input] is added to the Administrator Management 1 screen and can be used to register, change and delete one-touch dial buttons. For details on the Administrator Set screen, refer to the User manual [Copy Operations].

If the optional fax kit has been installed, the [E-Mail Input] changes to the [FAX].


Settings can be specified for the following.

Item	Description
Remote Destination Name	Type in the destination name that will appear on the one-touch dial button. Up to 12 characters can be entered.
FTP Server Address	Specifies the server address of the upload destination using an IP address or host name.
Use Proxy	Selects whether to use a proxy server to upload data.
FTP Port No.	Enter the port number to be used for FTP. Enter a numeric value within the range of 1 to 65535.
Anonymous	Select whether to permit anonymous access (access that does not require a user name or password). To permit anonymous access, select "Yes". To prohibit anonymous access, select "No", and then specify the login user name and password.
Directory	Specify the directory path to the upload destination. Up to 128 characters can be entered.
File Type/Coding Method	Sets the file type and encoding method for saving data. You can select from TIFF (multiple), TIFF (single), and PDF for the file type.  Select either "MH" or "MMR" as the encoding method for the selected file format. The data capacity is lowest with "MMR" and highest with "MH".


5-24 bizhub 362/282/222

# To program a one-touch dial button


1 Press the [Utility/Counter] key.

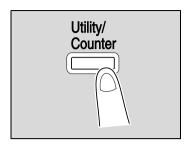


2 Touch [User Setting].

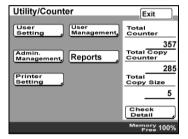


- 3 Touch [E-Mail Input].
  - If the optional fax kit has been installed, touch [FAX].

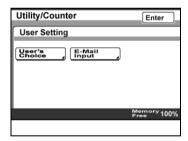

4 Touch [One-Touch].

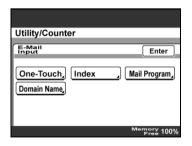


- 5 Touch the one-touch dial button to be registered.
  - Touch an Index tab or [Index List], then the desired one-touch dial button.
  - If the machine is set to allow LDAP searches, a screen appears, allowing you to permit or prohibit the address registered

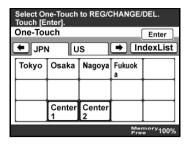


with the one-touch dial button to be found with an LDAP search. If LDAP searches are not to be allowed, select "No".


Type in the destination name that will appear on the one-touch dial button, and then touch [Next].

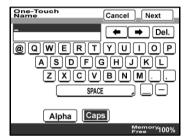


- 7 Select the communication mode. Touch [PC], [FTP], then [Next].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

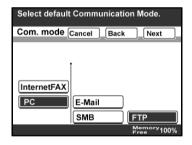


- Enter the upload destination host address, and then touch [Next].
  - To specify the host name, touch [Host Name], and then touch [Next].
  - To change an entered address, touch to move the cursor, or press the [C] (clear) key to enter a new address.

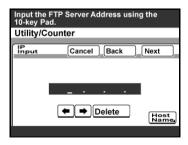


9 Select whether to use a proxy server, and then touch [Next].

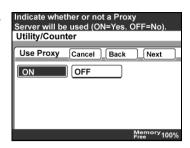


10 Enter the FTP port number. Press the [C] (clear) key to delete the number, type in the port number using the keypad, and then touch "Next".

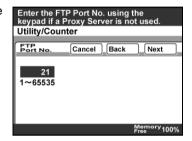


- 11 Specify the Account Information, and then touch [Next].
  - If "Private Site" is selected, enter the login user name and password.

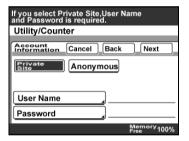


12 Enter the server directory name to be saved, and then touch [Next].

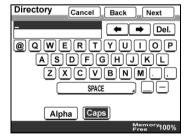


13 Check the FTP server information, and then touch [Enter].

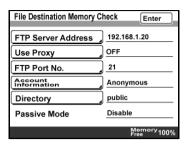

14 Check the information to be registered.

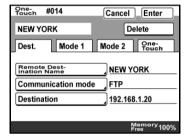


- 15 To specify the file type of the file to be saved and the encoding method, touch [Mode 1].
- 16 Select the file format and encoding method, and then touch [Enter].

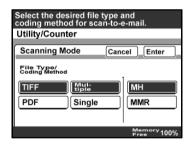

17 Touch [Enter] until the initial screen appears.

# Changing or deleting a one-touch dial button

- 1 Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- 2 Touch the one-touch dial button to be changed or deleted.
  - If the specified one-touch dial button is programmed as an administrator forwarding destination, the screen for entering the administrator number appears.

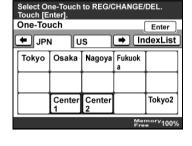

- Touch the button for the information to be changed, and then make the change.
  - To delete the information, touch [Delete].




- 4 Check the information to be registered, and then touch [Enter].
- 5 Touch [Enter] until the initial screen appears.

bizhub 362/282/222

# Copying a one-touch dial button

- 1 Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- 2 Touch the one-touch dial button to be copied.
- Touch [One-Touch], then [One-Touch Copy].

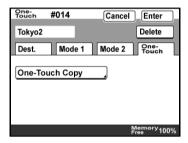

- 4 Touch the one-touch dial button where the information is copied to.
  - Select a one-touch dial button that has not yet been programmed.
  - To deselect the one-touch dial button where the information is to be copied to, touch the selected one-touch dial button again.



5 Touch [Enter] until the initial screen appears.

# 6 Scan to SMB

# 6 Scan to SMB

# 6.1 Specifying a destination with a one-touch dial button

You can transmit data simply by touching a one-touch dial button if the secondary destination of the upload destination or a mail program has been registered with a one-touch dial button in advance.



#### Detail

For registering a one-touch dial button, refer to "Registering destinations" on page 6-25.

For registering mail programs, refer to "Registering mail programs" on page 4-41.


# Selecting a one-touch dial button

A one-touch dial button can be selected in any of the following ways. Use the appropriate method according to the number of recipients and the desired use.

- Directly touching the one-touch dial button
- Entering the number of the one-touch dial button

# Specifying a destination by touching a one-touch dial button

- 1 Position the document to be scanned.
- 2 Press the [Fax/Scan] key.
  - After pressing [Fax/Scan], you can specify Priority Screen settings in the User's Choice screen that appears. For details, refer to the User manual [Copy Operations].

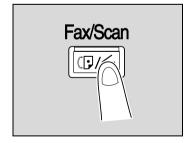

3 Touch [One-Touch].

→ IndexList

Chain

- 4 Select the index containing the desired destination, and then touch the one-touch dial button.
  - To select an index, touch the corresponding tab, or touch for to select a different one.
  - To change the index name, refer to "To name an index" on page 4-39.
  - You can specify multiple destinations for one transmission with the same one-touch dial button. Up to 300 destinations can be specified at a time.

**SCANReady** 

**←** JPN

Job List

- 5 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 6-9.
- **SCANReady** Fine Chain One-Touch Search Direct Menu Reduction/ Quality Density A≣ A**■** 😜 Standard Super Fine Fine Text/Photo GSR Super GSR Job List

One-Touch Search Direct Quality& Menu


Center

lus

Tokyo Osaka Nagoya Fukuoka

Center


- Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 6-13.
- 7 Press the [Start] key.

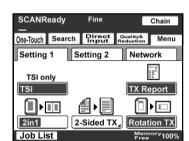


# Entering the number of a one-touch dial button

A one-touch dial button is assigned a number, as shown in the illustration.


You can quickly select a destination by specifying the number of a one-touch dial button instead of touching the button.

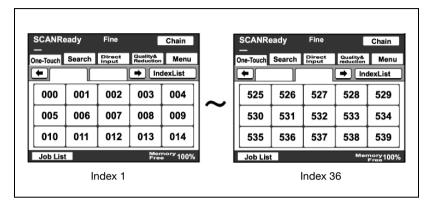

- 1 Position the document to be scanned.
- 2 Press the [Fax/Scan] key.

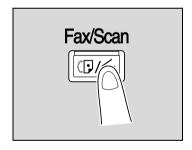

3 Press the [#] key on the control panel.

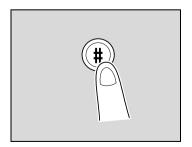

→ IndexList

- 4 Use the keypad to type in the number of a one-touch dial button.
  - You can specify multiple destinations for simultaneous transmission with the same onetouch dial button. Up to 300 destinations can be specified at a time.

The specified one-touch dial button is highlighted.

- 5 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 6-9.



Fine

One-Touch Search Direct Quality& Menu

2-Sided TX

Setting 2

Chain

Network

TX Report

Rotation TX

- 6 Specify the necessary Menu settinas.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 6-13.
- 7 Press the [Start] key.



One-Touch Search Direct Quality& Menu

Center

lus

Tokyo Osaka Nagoya Fukuok

Center

**SCANReady** 

**SCANReady** 

Setting 1

TSI only

Job List

TSI


2in1

**←** JPN

### Searching for a one-touch dial button

To find a one-touch dial button, the name of a destination registered with the button can be searched for.

- Position the document to be scanned.
- Press the [Fax/Scan] key.

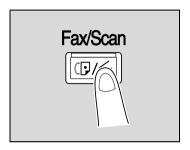


- 3 Touch [Search].
- 4 Type in the destination name, and then touch [Search].


A screen appears, containing the one-touch dial buttons programmed with a destination that begins with the entered name.



- 5 Touch the desired one-touch dial button.
  - You can specify multiple destinations for simultaneous transmission with the same onetouch dial button. Up to 300 destinations can be specified at a time.

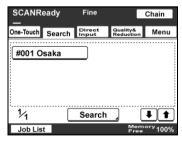

- 6 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 6-9.
- **SCANReady** Fine Chain One-Touch Search Direct Quality& Menu Reduction/ Density Quality A GOO A∭ Standard Fine Super Fine 2 GSR Text/Photo Super GSR Job List
- 7 Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 6-13.
- 8 Press the [Start] key.

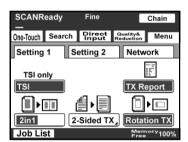

# 6.2 Specifying the scanning quality and zoom ratio

You can specify the scanning quality and zoom ratio by touching [Quality & Reduction] in the screen that appears when the [Fax/Scan] key on the control panel is pressed.



#### Detail

When the transmission is complete, the specified settings return to their defaults.

## Quality

You can select the scan resolution (amount of details). Select from the following resolution settings according to the type of document being scanned.

Item	Description
Standard	For documents containing plain text such as handwriting
Fine Super Fine 600 dpi Text	For documents containing small print, such as newspapers, or detailed illustrations
Text/Photo 600 dpi Text&Photo	For documents containing both text and images with color shades, such as photos
GSR Super GSR 600 dpi Photo	For documents containing color shades, such as photos



#### Detail

If data is sent using the "Text/Photo" setting, moiré patterns may appear in some photos. To reduce the appearance of moiré patterns, send the data using the "GSR" or "Super GSR" setting.


When a high resolution is selected to send a clearer image, the size of the attached image data may exceed the size limitations of the provider or server being used. Before sending the data, check the transmission capacity.

# To specify the scanning quality

1 Touch [Quality & Reduction].



- 2 Touch [Quality], and then touch the desired quality setting.
  - To select a higher resolution, touch [600dpi].

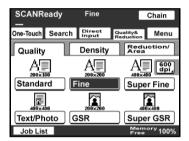

6-10

# **Density**

According to the type of document being sent, select the appropriate density from the settings described below.

Item	Description
Light  Std.	For documents with a dark background color, such as newspapers and blueprints
Std.  Dark	For normal documents
Daik	For documents with faint or colored text



#### Detail


If "600 dpi Text" or "600 dpi Text & Photo" is selected, the density can be set to one of three levels: "Light", "Std.", and "Dark".

# To specify a density setting

1 Touch [Quality & Reduction].



2 Touch [Density], and then touch the desired density setting.

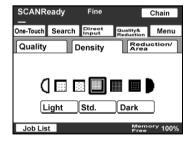


# Original Size Set.

You can specify the scan area as a standard size. A portion of a large original document as well as a non-standard-sized document can be sent in a standard size

1 Touch [Quality & Reduction].



- 2 Touch [Reduction/Area], and then touch [Original Size Set.].
  - The "Zoom" parameter has no effect, even if settings have been specified.

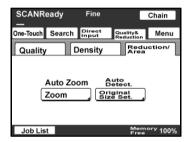

- 3 Select a scan area size, and then touch [Enter].
  - Touch [Auto Detect] to automatically select the size closest to the size of the original document. However, Letter size is selected for documents smaller than Letter size.
  - Touch [Metric] to specify metric sizes.



# 6.3 Specifying additional functions

You can add the following functions by pressing the [Fax/Scan] key on the control panel, then touching [Menu] on the screen that appears.



#### Note

If the optional fax kit has been installed, [Menu] changes to [Fax Menu].



#### Note

The following functions and parameters have no effect, even if settings have been specified.

- "TSI" on the Setting 1 tab
- "Rotation TX" on the Setting 1 tab
- "Subject Selection" on the Network tab
- "Reply Address" on the Network tab

Item		Description
Setting 1 *(Set 1) TX Report		Select under which conditions the transmission report is to be output. Default: Outputs according to the specifications of the administrator. ON: Prints regardless of the transmission results. If TX Fails: Prints only when undeliverable. OFF: Does not print regardless of the transmission results.
	2in1	Select whether to send using the 2in1 function (printing two pages to fit on one page).
	2-Sided TX	Select whether to perform double-sided transmission. You can specify the position of the binding margin and the document orientation.
Setting 2	Priority TX	Select whether a job is given priority over others.
*(Set 2)	Timer TX Setting	Select whether to set the send time. Specifies the send time when "ON" is selected.
	Stamp	Specify whether the document is stamped to indicate that it has been scanned. The document must be loaded into the ADF.
		<b></b>
		<b>Note</b> <i>To use the Stamp function, optional stamp unit must be installed.</i>
Network File Name *(Net.)		Enter when a set file name is to be specified as the file name when saving the file. Up to 16 characters can be entered.
	E-Mail Noti- fication	Specify whether to have an e-mail message sent to a specified one-touch destination to notify you when the transmission is complete.

<sup>\*</sup> Changes to () if the optional fax kit has been installed.



# Specifying the transmission report printing conditions

You can specify the conditions for printing a transmission report (TX Report).

The printing conditions for a transmission report are preset with the Report Settings parameters from the Administrator Management screen. Select the appropriate printing conditions.

Settings can be specified for the following.


Setting	Description
Default	Displays the printing conditions specified in the Administrator Management screen.
ON	Prints regardless of the results.
If TX Fails	Prints when the transmission failed.
OFF	Does not print regardless of the results.

## To specify the transmission report printing conditions


- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- 2 Touch [Setting 1], then [TX Report].
  - If the optional fax kit has been installed, touch [Set 1], then [TX Report].

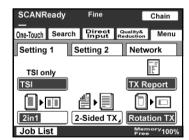


3 Specify the desired printing conditions, and then touch [Enter].

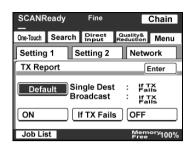

# Specifying 2in1 transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 1], then [2in1].
  - If the optional fax kit has been installed, touch [Set 1], then [2in1].
  - Touch the button again to cancel the setting.

The button is highlighted.

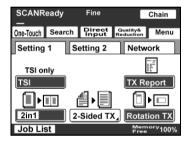

Chain

Quality& Reduction Menu

Network


Original Direction

Auto

Enter

# Specifying double-sided transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- Touch [Setting 1], then [2-Sided TX].
  - If the optional fax kit has been installed, touch [Set 1], then [2-Sided TX].

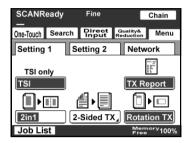

Setting 2

**SCANReady** 

Setting 1


2-Sided TX

One-Touch Search Direct

Original Bind Direction

Left Bind Top Bind

- 3 Select the desired binding margin position.
  - Left Bind: The document is scanned with a binding margin on the left side.
  - Top Bind: The document is scanned with a binding margin at the top.
  - Auto: The binding margin is set according to the scanning direction.
- 4 Touch [Original Direction].
- 5 Select the orientation of the document, and then touch [Enter].
  - Auto: The long side of the document is automatically set as the binding position.

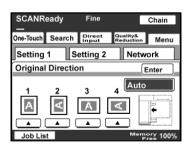



- 6 Touch [Enter].
  - Touch [OFF] to cancel the setting.




# Detail

When loading a double-sided document with pages of different widths, we recommend loading the pages with the same orientation. When a document with pages of different orientations is scanned, the orientation of the image data may not be correct.

# Specifying priority transmission


- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Priority TX].
  - If the optional fax kit has been installed, touch [Set 2], then [Priority TX].
  - Touch the button again to cancel the settings.

The button is highlighted.

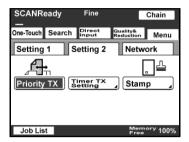


# Specifying timer transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Timer TX Setting].
  - If the optional fax kit has been installed, touch [Set 2], then [Timer TX Setting].

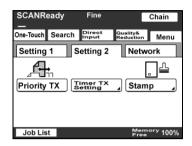


- 3 Enter the time for transmission.
  - Touch [Hour] or [Minute], and then type in the desired value using the keypad.

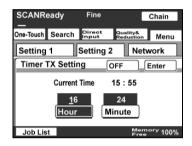


- 4 Touch [Enter].
  - Touch [OFF] to cancel the setting.

# Specifying the stamp setting

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Stamp].
  - If the optional fax kit has been installed, touch [Set 2], then [Stamp].

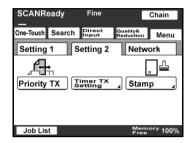

3 Select the print position of the stamp, and then touch [Enter].

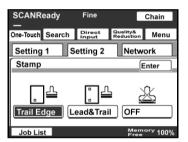


# Specifying the e-mail notification destination

When the transmission of the data is complete, an e-mail message can be sent to the destination specified in the URL of the upload destination.

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- 2 Touch [Network], then [Email Notification].
  - If the optional fax kit has been installed, touch [Net.], then [Email Notification].

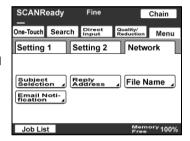

- 3 Select the destination address, and then touch [Enter].
  - Touch [OFF] to cancel the setting.



# Specifying a file name


You can specify the file name of the image data to be sent. Up to 16 characters can be entered.

When no file name is specified, the file is automatically sent with a name in the following format: <machine name><scan date and time>.<extension>.


- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- 2 Touch [Network], then [File Name].
  - If the optional fax kit has been installed, touch [Net.], then [File Name].

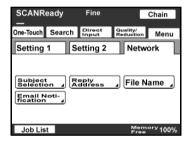

- Type in the file name, and then touch [Enter].
  - Touch [OFF] to cancel the setting.
  - It is not necessary to type in an extension.

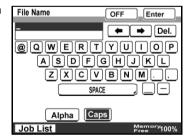

# 6.4 If transmission could not be completed


If the transmission could not be completed correctly, a transmission report is printed.



### **Detail**

You can change the transmission report printing conditions. For details, refer to "Specifying the transmission report printing conditions (Report Settings)" on page 10-17.

# Viewing a transmission report

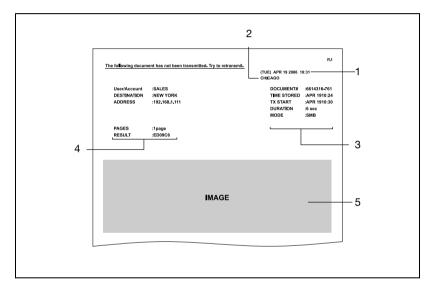

No.	Item	Description
1	Report output date and time	Shows the date and time that the report was printed.
2	Transmission source information (TSI)	Shows the registered transmission source name.
3	Transmission information	Shows the document number, the duration of the transmission, and the transmission mode.
4	Transmission result	Shows the transmission result. Any of the following may appear.  OK: The transmission was completed successfully. INTERR: The transmission was interrupted.  F. MEM: The memory capacity was exceeded. NG: The transmission failed.  PT. DEL: The transmission to some destinations failed. Error code: For details, refer to "Network error list" on page 12-4.
5	Transmission image	Shows a part of the sent image.

# Resending

You can resend up to 20 failed transmissions.

- 1 Touch [Job List], then [Type], and then select the document that could not be sent.
  - If [Retry] and [Change Destination] appear in the screen, the document does not need to be scanned again.
- 2 To send to the same destination, touch [Retry].
  - To send to a different destination, touch [Change Destination].

# 6.5 Registering destinations

# Programming one-touch dial button

By registering a destination with a one-touch dial button, transmissions can be performed easily and accurately.



#### Note

If the "Restrict One-Touch Editing" parameter on the Administrator Set screen (displayed from the Administrator Management screen) is set to "ON", [E-Mail Input] is added to the Administrator Management 1 screen and can be used to register, change and delete one-touch dial buttons. For details on the Administrator Set screen, refer to the User manual [Copy Operations].


If the optional fax kit has been installed, the [E-Mail Input] changes to the [FAX].

Settings can be specified for the following.


Item	Description
Remote Destination Name	Type in the destination name that will appear on the one-touch dial button. Up to 12 characters can be entered.
Host Address	Specifies the destination computer with an IP address or host name.
Directory	Type in the file path of the destination folder. Up to 128 characters can be entered.
	♥
	Note A shared folder created on the domain controller of Windows Server 2003 and Windows Server 2008 cannot be specified.
User Name	Type in the login name for the destination computer. Up to 32 characters can be entered.
Password	Type in the login password for the destination computer. Up to 14 characters can be entered.
File Type/Coding Method	Sets the file type and encoding method for saving data. You can select from TIFF (multiple), TIFF (single), and PDF for the file type.  Select either "MH" or "MMR" as the encoding method for the selected file format. The data capacity is lowest with "MMR" and highest with "MH".

# To program a one-touch dial button


1 Press the [Utility/Counter] key.

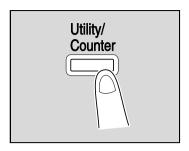


2 Touch [User Setting].

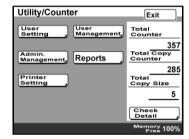


- 3 Touch [E-Mail Input].
  - If the optional fax kit has been installed, touch [FAX].

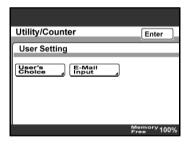

4 Touch [One-Touch].

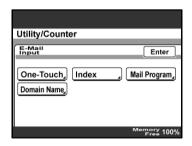

- 5 Touch the one-touch dial button to be programmed.
  - Touch an Index tab or [Index List], then the desired one-touch dial button.
  - If the machine is set to allow LDAP searches, a screen appears, allowing you to permit or prohibit the address registered

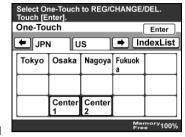


with the one-touch dial button to be found with an LDAP search. If LDAP searches are not to be allowed, select "No".


Type in the destination name that will appear on the one-touch dial button, and then touch [Next].




- 7 Select the communication mode. Touch [PC], [SMB], then [Next].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

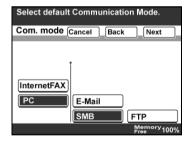


- Enter the destination host address, and then touch [Next].
  - To change the host name, touch [Host Name], and then touch [Next].
  - To reenter an address, touch
     to move the cursor,
     or press the [C] (clear) key to
     enter a new address.

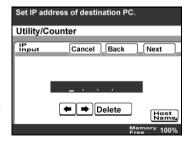


9 Enter the file path of the data to be saved, and then touch [Next].

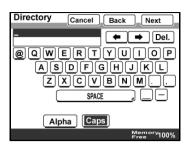


10 Type in the login user name, and then touch [Next].

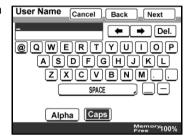

- 11 Type in the login password, and then touch [Next].
  - To confirm the password, enter the password again.

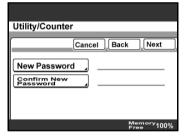


12 Check the destination information.

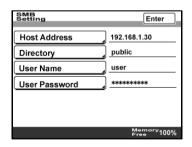

13 Check the information to be registered.




- 14 To specify the file type of the file to be saved and the encoding method, touch [Mode 1].
- 15 Select the file format and encoding method, and then touch [Enter].

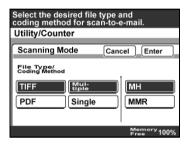

16 Touch [Enter] until the initial screen appears.

# Changing or deleting a one-touch dial button

- 1 Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- Touch the one-touch dial button to be changed or deleted.
  - If the specified one-touch dial button is programmed as an administrator forwarding destination, the screen for entering the administrator number appears.

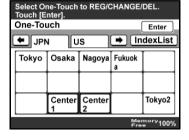


- Touch the button for the information to be changed, and then make the change.
  - To delete the information, touch [Delete].



- 4 Check the information to be registered, and then touch [Enter].
- 5 Touch [Enter] until the initial screen appears.

# Copying a one-touch dial button

- Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- 2 Touch the one-touch dial button to be copied.
- Touch [One-Touch], then [One-Touch Copy].

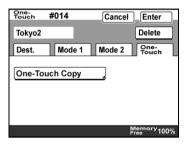

- 4 Touch the one-touch dial button where the information is copied to.
  - Select a one-touch dial button that has not yet been programmed.
  - To deselect the one-touch dial button where the information is to be copied to, touch the selected one-touch dial button again.



5 Touch [Enter] until the initial screen appears.

# 7 Internet faxing

# 7 Internet faxing

# 7.1 Specifying a destination with a one-touch dial button

You can transmit data simply by touching a one-touch dial button if the email address of a destination or a mail program has been registered with a one-touch dial button in advance.



#### Detail

For registering one-touch dial buttons, refer to "Registering destinations" on page 7-33.

For registering mail programs, refer to "Registering mail programs" on page 4-41.

To change the index name, refer to "Naming an index" on page 4-39.


# Selecting a one-touch button

A one-touch dial button can be selected in any of the following ways. Use the appropriate method according to the number of recipients and the desired use.

- Directly touching the one-touch dial button
- Entering the number of the one-touch dial button
- Specifying chain dialing

# Specifying a destination by touching a one-touch dial button


- 1 Position the document to be scanned.
- Press the [Fax/Scan] key.

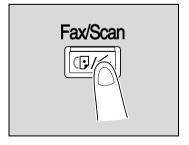


3 Touch [One-Touch].

- 4 Select the index containing the desired destination, and then touch the one-touch dial button.
  - To select an index, touch the corresponding tab, or touch or to select a different one.
  - You can specify multiple destinations for one transmission with the same one-touch dial


button. Up to 300 destinations can be specified at a time.

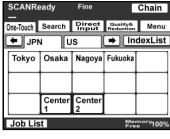

- 5 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 7-12.

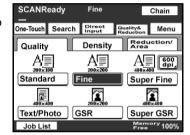


- Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 7-16.
- 7 Press the [Start] key.

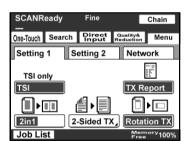


# Entering the number of a one-touch dial button

A one-touch dial button is assigned a number, as shown in the illustration.


You can quickly select a destination by specifying the number of a one-touch dial button instead of touching the button.

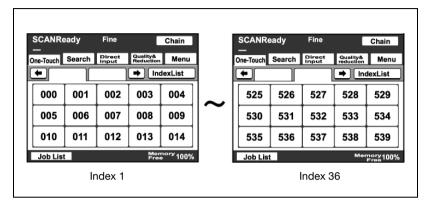

- 1 Position the document to be scanned.
- Press the [Fax/Scan] key.

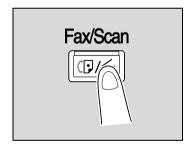


3 Press the [#] key on the control panel.

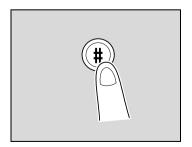


- 4 Use the keypad to type in the number of the one-touch dial button.
  - You can specify multiple destinations for simultaneous transmission with the same onetouch dial button. Up to 300 destinations can be specified at a time.


The specified one-touch dial button is highlighted.

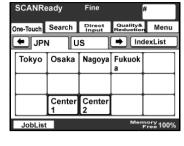

- 5 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 4-14.

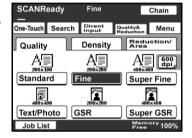


- Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 7-16.
- 7 Press the [Start] key.

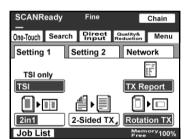

# Searching for a one-touch dial button

To find a one-touch dial button, the name of a destination registered with the button can be searched for.

- Position the document to be scanned.
- Press the [Fax/Scan] key.

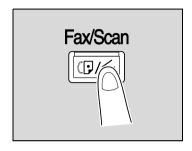


- 3 Touch [Search].
  - If "LDAP Search" in the Network Settings screen is set to "Yes", a screen appears, allowing you to select the search method. Touch [One-Touch Search] when the screen appears.
- 4 Type in the destination name, and then touch [Search].


A screen appears, containing the one-touch dial buttons programmed with a destination that begins with the entered name.




- Touch the desired one-touch dial button.
  - You can specify multiple destinations for simultaneous transmission with the same onetouch dial button. Up to 300 destinations can be specified at a time.

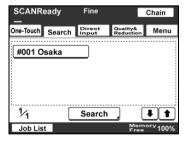

- 6 Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 7-12.

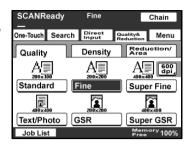

- 7 Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 7-16.
- 8 Press the [Start] key.

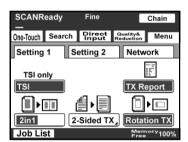

# Specifying chain dialing

If the destination address is longer than 64 characters, the address can be specified by combining addresses registered to one-touch dial buttons and an entered address.

Touch [Chain], and then select one-touch dial buttons or enter an address.



#### Detail

- Chain dialing can only be used with one destination per transmission.
- With chain dialing, the address can contain up to 192 digits (64 characters from a one-touch dial button + 64 characters from a one-touch dial button + 64 characters from an entered address).




- The one-touch dial buttons to be used with chain dialing must be programmed in advance.

# 7.2 Entering an address

You can directly enter destinations that have not been registered in a one-touch dial button. In addition, multiple destinations can be specified using chain dialing to combine destinations registered in a one-touch dial button and destinations that are entered.

#### To enter an address


- Position the document to be scanned.
- 2 Press the [Fax/Scan] key.

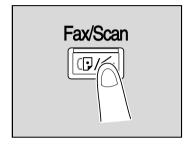

- 3 Touch [Direct Input].
- 4 To select the communication mode. Touch [Change Comm. Mode].



5 Touch [InternetFAX], [Internet FAX], then [Enter].

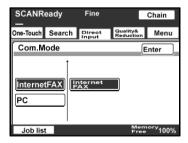

\_\_\_\_\_

No.of Dest. 0

Menu

Enter

11x17

600dpi

МН

- 6 Type in the destination address.
  - To change an entered address, press the [C] (clear) key, and then enter a new address.
  - If parts of frequently used addresses are registered, they can be quickly entered by touching [Domain]. For details, refer to "Registering a domain name" on page 3-52.

SACNReady test@test.local

E-Mail Mode

TX Size (Max.)


TX Quality (Max.)

Coding Method


Job List

One-Touch Search Direct

- To select the maximum transmission size and the encoding method, touch [E-Mail Mode].
  - For details, refer to "Priority Compress Level (E-Mail Mode)" on page 3-30.
  - After specifying the desired settings, touch [Enter].
- Specify the Quality & Reduction settings for the original document to be sent.
  - For details, refer to "Specifying the scanning quality and zoom ratio" on page 7-12.

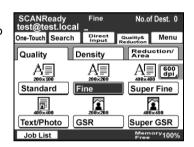

- 9 Specify the necessary Menu settings.
  - If the optional fax kit has been installed, specify the FAX Menu settings.
  - For details, refer to "Specifying additional functions" on page 7-16.
- 10 Press the [Start] key.

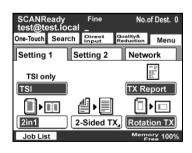

# 7.3 Specifying the scanning quality and zoom ratio

You can specify the scanning quality and zoom ratio by touching [Quality & Reduction] in the screen that appears when the [Fax/Scan] key on the control panel is pressed.



#### Detail

When the transmission is complete, the specified settings return to their defaults.

# Quality

You can select the scan resolution (amount of details). Select from the following resolution settings according to the type of document being scanned.

Item	Description
Standard	For documents containing plain text such as handwriting
Fine Super Fine 600 dpi Text	For documents containing small print, such as newspapers, or detailed illustrations
Text/Photo 600 dpi Text&Photo	For documents containing both text and images with color shades, such as photos
GSR Super GSR 600 dpi Photo	For documents containing color shades, such as photos



#### Detail

If data is sent using the "Text/Photo" setting, moiré patterns may appear in some photos. To reduce the appearance of moiré patterns, send the data using the "GSR" or "Super GSR" setting.

When a high resolution is selected to send a clearer image, the size of the attached image data may exceed the size limitations of the provider or server being used. Before sending the data, check the transmission capacity.


7-12 bizhub 362/282/222

# To specify the scanning quality

1 Touch [Quality & Reduction].



- 2 Touch [Quality], and then touch the desired quality setting.
  - To select a higher resolution, touch [600dpi].

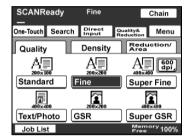

# **Density**

According to the type of document being sent, select the appropriate density from the settings described below.

Item	Description
Light  Std.	For documents with a dark background color, such as newspapers and blueprints For normal documents
Dark	For documents with faint or colored text



#### Detail


If "600 dpi Text" or "600 dpi Text & Photo" is selected, the density can be set to one of three levels: "Light", "Std.", and "Dark".

# To specify a density settings

1 Touch [Quality & Reduction].



2 Touch [Density], and then touch the desired density setting.

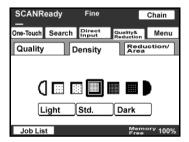


# Original Size Set.

You can specify the scan area as a standard size. A portion of a large original document as well as a non-standard-sized document can be sent in a standard size.


1 Touch [Quality & Reduction].



- 2 Touch [Reduction/Area], and then touch [Original Size Set.].
  - The "Zoom" parameter has no effect, even if settings have been specified.

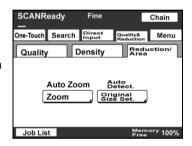

- 3 Select a scan area size, and then touch [Enter].
  - Touch [Auto Detect] to automatically select the size closest to the size of the document. However, Letter size is selected for documents smaller than Letter size.
  - Touch [Metric] to specify metric sizes.

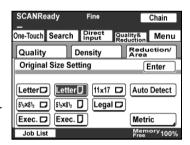

# 7.4 Specifying additional functions

You can add the following functions by pressing the [Fax/Scan] key on the control panel, then touching [Menu] on the screen that appears.



#### Note

If the optional fax kit has been installed, [Menu] changes to [Fax Menu].



# Note

The following functions have no effect, even if settings have been specified.

- "File name" on the Network tab
- "E-Mail Notification" on the Network tab

Item		Description		
Setting 1 **(Set 1)	TSI	Select the entered information, such as this machine's name, fax number or address, that is printed at the edge of the page. In addition, the destination name registered with a one-touch dial button can be printed in this information. For details on registering transmission source information, refer to "Registering transmission source names" on page 10-5.		
	TX Report	Select under which conditions the transmission report is to be output. Default: Outputs according to the specifications of the administrator. ON: Prints regardless of the transmission results. If TX Fails: Prints only when undeliverable. OFF: Does not print regardless of the transmission results.		
	2in1	Select whether to send using the 2in1 function (printing two pages to fit on one page).		
	2-Sided TX	Select whether to perform double-sided transmission. You can specify the position of the binding margin and the document orientation.		
	Rotation TX	Select whether to rotate the image according to the paper orientation of the receiving machine.  The quality can be specified as 200 dpi or less when sending A4 size.		
Setting 2	Priority TX	Select whether a job is given priority over others.		
**(Set 2)	Timer TX Setting	Select whether to set the send time. Specifies the send time when "ON" is selected.		
	Stamp	Specify whether the document is stamped to indicate that it has been scanned. The document must be loaded into the ADF.  Note  To use the Stamp function, optional stamp unit must be installed.		

7-16 bizhub 362/282/222

Item		Description
Network **(Net.)	Subject Se- lection*	The subject line of an e-mail message can be selected from subject lines registered in advance.
	Reply Ad- dress*	Displays the e-mail address of this machine as the sender of the e-mail message. When specifying e-mail addresses other than that of this machine, select an address from a registered one-touch dial button.
	File Name	Enter when a set file name is to be specified as the file name when saving the file. Up to 16 characters can be entered.
		♥
		Note The file name in Network functions only when the destination is a computer e-mail address.

<sup>\*</sup> The receiving machine prints these items when "Yes" is specified on the RX Doc. Header Print screen.


<sup>\*\*</sup> Changes to () if the optional fax kit has been installed.

# Specifying the transmission source setting


Entered text such as the name, fax number, and address can be printed at the top of the output page.

FROM: NEW YORK
Image data has been attached to the e-mail.

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 1], then [TSI].
  - If the optional fax kit has been installed, touch [Set 1], then [TSI].

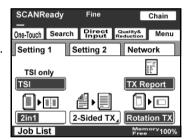


3 Select the desired type of transmission source information.

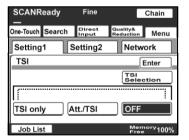

4 To print the transmission source information, touch [TSI Selection].

- 5 Select the name of the transmission source, and then touch [Enter].
  - Touch [OFF] to cancel the setting.

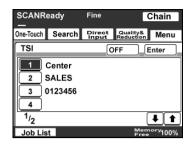


# Specifying the transmission report printing conditions


You can specify the conditions for printing a transmission report (TX Report).

The printing conditions for a transmission report are preset with the Report Settings parameters from the Administrator Management screen. Select the appropriate printing condition.

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 1], then [TX Report].
  - If the optional fax kit has been installed, touch [Set 1], then [TX Report].

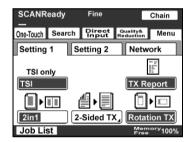


3 Check the printing conditions, and then touch [Enter].

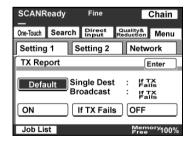

# Specifying 2in1 transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 1], then [2in1].
  - If the optional fax kit has been installed, touch [Set 1], then [2in1].
  - Touch the button again to cancel the settings.

The button is highlighted.

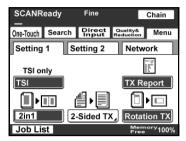

Chain

Quality& Reduction Menu

Network


Original Direction

Auto

Enter

# Specifying double-sided transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 1], then [2-Sided TX].
  - If the optional fax kit has been installed, touch [Set 1], then [2-Sided TX].

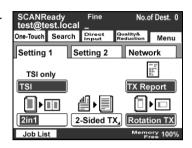

Setting 2

OFF

**SCANReady** 

Setting 1

2-Sided TX


Job List

One-Touch Search Input

Original Bind Direction

Left Bind Top Bind

- 3 Select the desired binding margin position.
  - Left Bind: The document is scanned with a binding margin on the left side.
  - Top Bind: The document is scanned with a binding margin at the top.
  - Auto: The binding margin is set according to the scanning direction.
- 4 Touch [Original Direction].
- 5 Select the orientation of the document, and then touch [Enter].
  - Auto: The long side of the document is automatically set as the binding position.

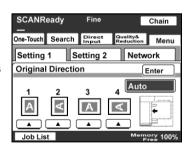

- 6 Touch [Enter].
  - Touch [OFF] to cancel the setting.




# Detail

When loading a double-sided document with pages of different widths, we recommend loading the pages with the same orientation. When a document with pages of different orientations is scanned, the orientation of the image data may not be correct.

# Specifying rotation transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 1], then [Rotation TX].
  - If the optional fax kit has been installed, touch [Set 1], then [Rotation TX].
  - Touch the button again to cancel the settings.


The button is highlighted.

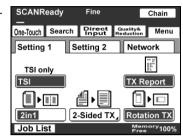

# Specifying priority transmission


- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Priority TX].
  - If the optional fax kit has been installed, touch [Set 2], then [Priority TX].
  - Touch the button again to cancel the settings.

The button is highlighted.

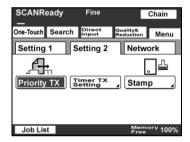


# Specifying timer transmission

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Timer TX Setting].
  - If the optional fax kit has been installed, touch [Set 2], then [Timer TX Setting].

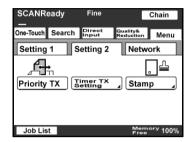


- 3 Enter the time for transmission.
  - Touch [Hour] or [Minute], and then type in the desired value using the keypad.

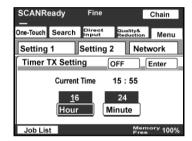


- 4 Touch [Enter].
  - Touch [OFF] to cancel the setting.

# Specifying the stamp setting

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Setting 2], then [Stamp].
  - If the optional fax kit has been installed, touch [Set 2], then [Stamp].

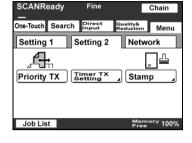


3 Select the print position of the stamp, and then touch [Enter].

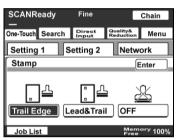


# Changing the subject

The subject line of an e-mail message can be selected from subject lines registered in advance. To specify settings, refer to the Scanner Settings screen, displayed from the Administrator Management screen on page 3-35.

- ✓ The subject line is printed by the receiving machine when "Yes" is specified in the RX Doc. Header Print screen.
- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Network], then [Subject Selection].
  - If the optional fax kit has been installed, touch [Net.], then [Subject Selection].

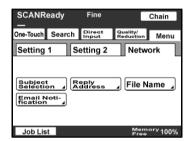

- 3 Select a subject, and then touch [Enter].
  - Touch [OFF] to cancel the setting.

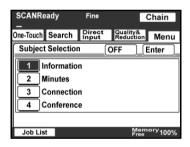




#### Detail

When no subject is registered, the e-mail subject line "[Image File] (one-touch name), (machine name), (number)" is sent.

# Specifying a reply address

From the e-mail addresses registered with a one-touch dial button, you can specify the return e-mail address displayed to the recipient.

- ✓ The reply address is printed by the receiving machine when "Yes" is specified in the RX Doc. Header Print screen.
- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].
- 2 Touch [Network], then [Reply Address].
  - If the optional fax kit has been installed, touch [Net.], then [Reply Address].

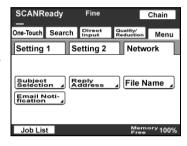

- 3 Select a return address, and then touch [Enter].
  - Touch [OFF] to cancel the setting.




# Specifying a file name

You can specify the file name of the image data to be attached in an e-mail. Up to 16 characters can be entered.

- 1 Touch [Menu].
  - If the optional fax kit has been installed, touch [FAX Menu].



- 2 Touch [Network], then [File Name].
  - If the optional fax kit has been installed, touch [Net.], then [File Name].

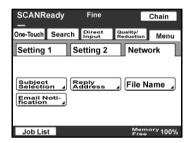

- Type in the file name, and then touch [Enter].
  - Touch [OFF] to cancel the setting.
  - It is not necessary to type in an extension.





#### Note

When no file name is specified, the file is automatically sent with a name in the following format:

<machine\_name><scan\_date\_and\_time>.<extension>.

7-28 bizhub 362/282/222

# 7.5 If transmission could not be completed


If the transmission could not be completed correctly, a transmission report is printed.



#### Detail

You can change the transmission report printing conditions. For details, refer to "Specifying the transmission report printing conditions (Report Settings)" on page 10-17.

# Viewing a transmission report

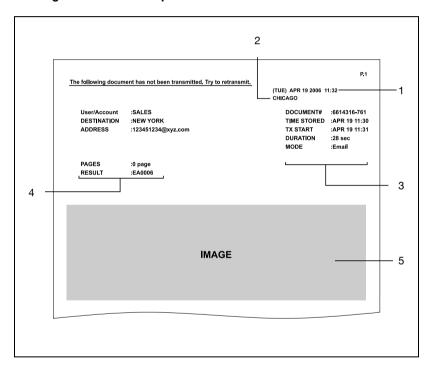

No.	Item	Description
1	Report output date and time	Shows the date and time that the report was printed.
2	Transmission source information (TSI)	Shows the registered transmission source name.
3	Transmission Information	Shows the document number, the duration of the transmission, and the transmission mode.

No.	Item	Description
4	Transmission result	Shows the transmission result. Any of the following may appear.  OK: The transmission was completed successfully. INTERR: The transmission was interrupted.  F. MEM: The memory capacity was exceeded. NG: The transmission failed.  PT. DEL: The transmission to some destinations failed. Error code: For details, refer to "Network error list" on page 12-4.
5	Transmission image	Shows a part of the sent image.

# Resending

You can resend up to 20 failed transmissions.

- Touch [Job List], then [Type], and then select the document that could not be sent.
  - If [Retry] and [Change Destination] appear in the screen, the document does not need to be scanned again.
- 2 To send to the same destination, touch [Retry].
  - To send to a different destination, touch [Change Destination].



# 7.6 Receiving Internet faxes

Not only can this machine send Internet faxes, it can also receive Internet faxes. The methods for receiving Internet faxes are described below.

# **Settings for Internet faxing**

Specify the following settings in advance. If the settings are not specified correctly, communication malfunctions may occur and Internet faxes may not be properly received.

- IP address of this machine
- POP3 server address
- POP3 user name
- POP3 password

# Receiving Internet faxes automatically

Internet faxes are sent and received by an e-mail server. If the abovementioned settings are correctly specified, the arrival of Internet faxes to the specified POP3 server is periodically checked and faxes are received (printed).

However, if "Auto-RX Check" in the POP3 Settings screen (displayed from the Network Setting screen) is set to "Check OFF", the data is stored in the POP3 server and not printed. In this case, perform reception manually. For details, refer to "Receiving Internet faxes manually" on page 7-32.

In addition, you can specify whether to print the received document or save it in a box. For details, refer to "Specifying the processing method for received documents (Document Management)" on page 10-22.

#### Data the can be received

Data of the following formats can be received.

- Text format
- TIFF-F image
- Text and TIFF-F image combination
- DSN and MDN

The following formats may not be received.

• The file format of an original application




#### Detail

If the e-mail message is in a format that cannot be received, a result notification (MDN) is returned to the sender as described below.


- TIFF and PDF files sent using Scan to E-Mail
- Data forwarded to the Internet fax address

# Receiving Internet faxes manually


1 Press the [Utility/Counter] key.

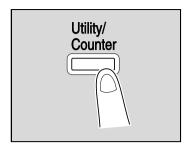

2 Touch [User Management].

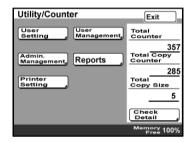

3 Touch [POP3 RX].
When an Internet fax has been received by the POP3 server, it is received and printed.

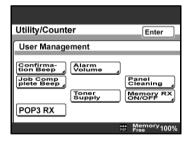

4 A mark is displayed at the bottom of the screen during reception.



When reception is complete, touch [Enter] until the initial screen appears.

7-32



# 7.7 Registering destinations

# Programming a one-touch dial button

By registering a destination with a one-touch dial button, transmissions can be performed easily and accurately.

You can register two types of destinations with a one-touch dial button: a main destination and a secondary destination, where the data is sent if transmission to the main destination fails.



#### Note

A secondary recipient can be specified if the optional scanner unit or fax kit is installed.

If the "Restrict One-Touch Editing" parameter on the Administrator Set screen (displayed from the Administrator Management screen) is set to "ON", [E-Mail Input] is added to the Administrator Management 1 screen and can be used to register, change and delete one-touch dial buttons. For details on the Administrator Set screen, refer to the User manual [Facsimile Operations].

If the optional fax kit has been installed, the [E-Mail Input] changes to the [FAX].



#### Detail

The following communication modes can be specified for the secondary destination.

- PC (E-Mail)
- PC (Scanner)
- InternetFAX (Internet FAX)
- InternetFAX (IP Address Fax)\*
- InternetFAX (IP Relay)
- FAX (G3)\*\*

<sup>\*</sup> The communication mode can be specified if the optional scanner unit or fax kit is installed.


The communication mode can be specified if the optional fax kit is installed.

# Settings can be specified for the following.


Item	Description
One-Touch Name	Type in the destination name that will appear on the one-touch dial button. Up to 12 characters can be entered.
Destination	Type in the destination e-mail address. Up to 64 characters can be entered.
TX Size (Max.)	Specify the maximum document size that can be transmitted. Select "Letter", "Legal", or "11 × 17".
TX Quality (Max.)	Specify the maximum resolution that can be sent. Select "200 dpi", "400 dpi", or "600 dpi".
Coding method	Select the encoding method for data to be sent. Select "MH", "MR", or "MMR". The data capacity is lowest with "MMR" and highest with "MH".

# To program a one-touch dial button


1 Press the [Utility/Counter] key.

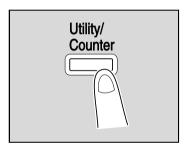


2 Touch [User Setting].

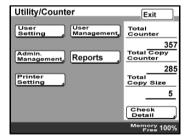


- 3 Touch [E-Mail Input].
  - If the optional fax kit has been installed, touch [FAX].

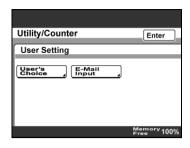

4 Touch [One-Touch].

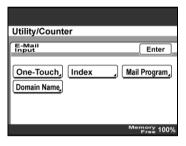


- 5 Touch the one-touch dial button to be programmed.
  - Touch an index tab or [Index List], then the desired one-touch dial button.
  - If the machine is set to allow LDAP searches, a screen appears, allowing you to permit or prohibit the address registered

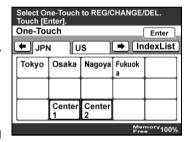


with the one-touch dial button to be found with an LDAP search. If LDAP searches are not to be allowed, select "No".

Type in the destination name that will appear on the one-touch dial button, and then touch [Next].

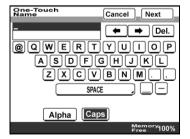


Next

- 7 Select the communication mode. Touch [InternetFAX], [Internet FAX], then [Next].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

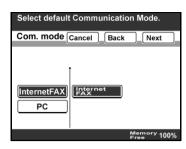

- 8 Enter the destination e-mail address, and then touch [Next].
  - If parts of frequently used addresses are registered, they can be quickly entered by touching [Domain]. For details, refer to "Registering a domain name" on page 3-52.

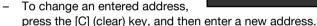





Cancel Back

E-Mail Address

9 To change "TX Size (Max.)", "TX Quality (Max.)", or "Coding Method", which have been specified in advance by the administrator, touch [E-Mail Mode], specify the settings, and then touch [Enter].

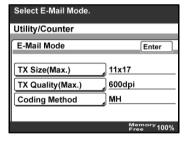


10 Check the information to be registered, and then touch [Enter].

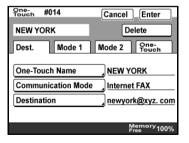

11 Touch [Enter] until the initial screen appears.

# Changing or deleting a one-touch dial button

- 1 Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- 2 Touch the one-touch dial button to be changed or deleted.
  - If the specified one-touch dial button is programmed as an administrator forwarding destination, the screen for entering the administrator number appears.

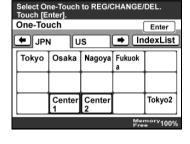

- Touch the button for the information to be changed, and then make the change.
  - To delete the information, touch [Delete].




- 4 Check the information to be registered, and then touch [Enter].
- 5 Touch [Enter] until the initial screen appears.


bizhub 362/282/222

# Copying a one-touch dial button

- Perform steps 1 through 4 of the procedure in "To program a one-touch dial button".
- 2 Touch the one-touch dial button to be copied.
- Touch [One-Touch], then [One-Touch Copy].

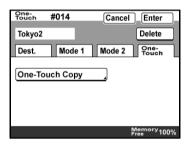


- 4 Touch the one-touch dial button where the information is copied to.
  - Select a one-touch dial button that has not yet been programmed.
  - To deselect the one-touch dial button where the information is to be copied to, touch the selected one-touch dial button again.

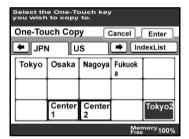


5 Touch [Enter] until the initial screen appears.

# Registering/deleting a secondary destination


- A secondary recipient can be specified if the optional scanner unit or fax kit is installed.
- Perform steps 1 through 9 of the procedure in "To program a one-touch dial button".
- 2 Touch the one-touch dial button where the secondary destination is to be registered.
- Touch [One-Touch], then [Sub Address Registration].

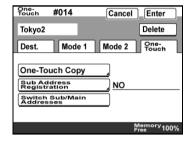

- 4 Select the communication mode for the secondary destination.
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

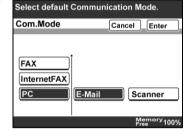

5 Enter the secondary destination information, and then touch [Enter].

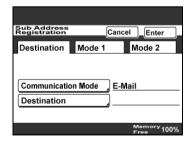

6 Touch [Enter] until the initial screen appears.

# 8 Using an LDAP server

# 8 Using an LDAP server

# 8.1 Searching the destination information from the server

You can search a destination from the LDAP server. To use the LDAP search function, set "LDAP Search" in the LDAP Setting screen (displayed from the Network Setting screen) to "Yes" in advance to enable LDAP searches, and register the information of the LDAP server to be connected. For details, refer to "Specifying the network settings" on page 3-4.

To register the LDAP server, refer to "LDAP Setting" on page 3-44.



#### Note

If "^" is included in the registered information, the destination may not be found correctly.

#### **Basic Search and Detail Search**

The LDAP server contains various types of destination information. With the LDAP search function of this machine, you can use a basic search method by specifying a keyword that meets the information contained in the address, or you can use an advanced search method by specifying detailed search items and conditions.

Item	Description
Basic Search	If a keyword is entered, the search can be performed based on the keyword. The keyword can contain up to 10 characters.
Detail Search	Searches the address by specifying a keyword for various search items and specifying conditions. Up to 10 characters can be entered. In addition, four conditions can be specified at a time.  The following search items can be selected: Full name, E-Mail, Last Name, First Name, Fax, City, Company, Department  The following conditions can be selected: Contains (keyword), AND, START, End, OFF




#### Note

If 11 or more characters are entered for the keyword, the tenth character is replaced with the last character entered, preventing the search from being performed correctly. Therefore, be sure to enter no more than 10 characters.

#### To search the destination information


1 Press the [Fax/Scan] key.

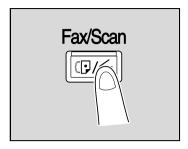


2 Touch [Search].




3 Touch [LDAP Search].

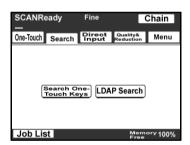


When multiple LDAP servers are registered, select the server to be searched, and then touch [Enter].

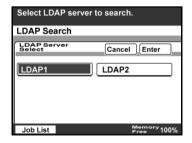

- 5 Touch [Name].
  - To specify detailed search conditions, touch [Detail Search].

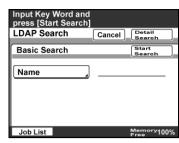


- Type in the keyword, and then touch [Enter].
- 7 Touch [Start Search].
- 8 Select the destination.
  - To check the search conditions, touch [Search Condition].

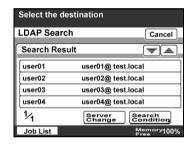

9 Enter the destination information, and then touch [Dest. Register].



10 Select the transmission method, and then touch [Enter].

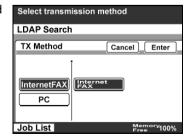

bizhub 362/282/222

# 8.2 Registering destination information to one-touch dial buttons


# To register destination information to a one-touch dial button

If bit 7 of mode 466 is set to "1" in the Soft SW Setting screen, you must log on with external server authentication before an LDAP search can be performed.


- 1 Press the [Utility/Counter] key.
- 2 Touch [User Setting].
- 3 Touch [E-Mail Input].
  - If the optional fax kit has been installed, touch [FAX].
- 4 Touch [One-Touch].
- 5 Select the one-touch dial button to be programmed.




6 On the LDAP Search screen, touch [ON], and then touch [Enter].

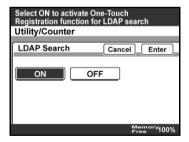


When multiple LDAP servers are registered, select the server to be searched, and then touch [Enter].

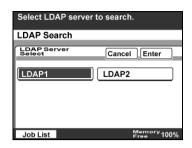


- 8 Touch [Name].
  - To specify detailed search conditions, touch [Detail Search].

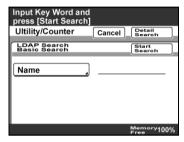

- 9 Type in the keyword, and then touch [Enter].
- 10 Touch [Start Search].

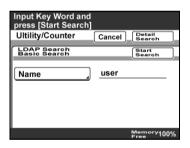


- 11 Select the destination.
  - To check the search conditions, touch [Search Condition].

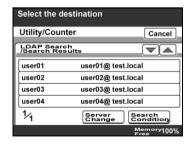


12 Enter the destination information, and then touch [Set].



13 Select the transmission method, and then touch [Enter].

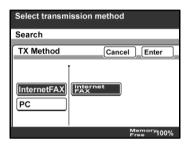

14 Check the information to be registered, and then touch [Enter].

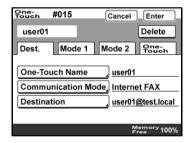

15 Touch [Enter] until the initial screen appears.



# Specifying settings using PageScope Web Connection

# 9 Specifying settings using PageScope Web Connection

# 9.1 Items that can be specified using PageScope Web Connection

PageScope Web Connection is a device management utility supported by the HTTP server built into the device. Using a Web browser on a computer connected to the network, machine settings can be specified from PageScope Web Connection.

When changing settings, operations such as typing text can be performed more easily from your computer.

Settings for the following network and scan functions can be specified.

PageScope Web Connection provides a User mode, which can be accessed by all users, and an Administrator mode, which can only be accessed with the required administrator password. Settings for the following can be specified in each mode.

## Scan tab (User mode)

Item	Description
One-Touch Key Registration	Register one-touch dial destinations for recipients of data sent using the Scan to E-Mail, Scan to FTP, Scan to SMB, or Internet fax operation. The registered data can also be changed or deleted. In addition, the index name can be changed.
FAX Program Registration	Register fax programs as one-touch dial destinations. Unlike the one-touch dial destination where only recipients can be registered, scan settings and multiple recipients can be registered. The registered data can also be changed or deleted.
Domain Name Registration	Register specific characters in advance for quick input such as when entering a domain name.



### Detail

When the "Restrict One-Touch Editing" parameter on the Administrator Set screen (displayed from the Administrator Management screen) is set to "ON", the Scan (2) tab is added to the Administrator mode page so that one-touch dial destinations can be registered, changed, or deleted. The Scan tab does not appear on the User mode page.

# Scan tab (Administrator mode)

Item		Description		
One-Touch Key Export Registration		Exports the one-touch dial button information registered on this machine and saves the data as a file.		
	Import	Imports the one-touch dial button information saved on a computer and writes the data to this machine.		
TSI Registration		Register the text, such as a name, fax number, or address, that is printed at the top of pages sent with the Internet fax operation.  Register the transmission source name that is added at the top of e-mail messages sent using the Scan to E-Mail operation.		
TX Settings	TX Settings	Specify the default transmission settings.		
	Com. Mode	Select whether or not each communication mode can bused.		
RX Settings		Specify the time and day of the week to print documents received with the Internet fax operation.		
Scan Setting		Specify the device name of this machine, which will be used in file names, and the transmission settings for scanned data.		
TX Document		When sending documents from this machine, the document can be forwarded simultaneously to the addresses specified by the administrator. Specify the address of the forwarding destination.		
RX Document Port  All Other Documents		Specify how documents received over a network are processed and forwarded.		
		Specify how documents not received over a network are processed and forwarded.		
Report Settings		Specify the output conditions of result reports and transmission reports.		



#### Note

If the optional fax kit has been installed, the Scan tab changes to the Fax/Scan tab.

9-4 bizhub 362/282/222

# Network tab (Administrator mode)

Item		Description		
Common Setting	TCP/IP	Specify the required settings for using this machine over a network.		
	IP Filtering	Select whether or not reception is possible within the range of specified IP addresses.		
	IPP	For details, refer to the User manual [Print Operations].		
	NetWare	For details, refer to the User manual [Print Operations].		
	NetWare Status	For details, refer to the User manual [Print Operations].		
	Windows	For details, refer to the User manual [Print Operations].		
	AppleTalk	For details, refer to the User manual [Print Operations].		
	LDAP	Specify whether to use the LDAP search function.		
	LDAP Server Setting	Register the LDAP server to be searched when using the LDAP search function.		
E-Mail/	POP3	Specify the POP3 server to be used with Internet faxing.		
Internet FAX	SMTP	Specify the SMTP server to be used with the Scan to E-Mail or Internet fax operation.		
	Subject/Text	Register the subject and text of e-mail messages sent with the Scan to E-Mail or Internet fax operation.		
	Other	Specify other e-mail transmission settings.		
FTP Configuration		Specify FTP server settings and FTP proxy server settings.		
SNMP		Select whether or not SNMP is used.		
SSL/TLS		When SSL/TLS is enabled, the communication between the machine and the client computer can be encrypted. Specify settings for creating, deleting, or encrypting certificates.		
User Authentication		Displays the authentication type when "External Server Authentication" is specified. Specify the server type and domain name to be used in authentication.		

# 9.2 Using PageScope Web Connection

# Operating environment

Item	Environment
Network	Ethernet (TCP/IP)
Computer applications	For Windows NT 4.0: Microsoft Internet Explorer 4 or later, or Netscape Navigator 4.73 or 7.0 For Windows 2000: Microsoft Internet Explorer 5 or later, or Netscape Navigator 7.0 For Windows XP/Server 2003: Microsoft Internet Explorer 6 or later, or Netscape Navigator 7.0 For Windows Vista/Server 2008: Microsoft Internet Explorer 7 or later, or Netscape Navigator 7.0 * With Microsoft Internet Explorer 5.5, the one-touch dial buttons may not exported correctly. Use Microsoft Internet Explorer 5.5 Service Pack 1 or later.



### Detail

PageScope Web Connection is a device management utility supported by the HTTP server built into the device. Using a Web browser on a computer connected to the network, machine settings can be specified from PageScope Web Connection.

9-6 bizhub 362/282/222



# **Accessing PageScope Web Connection**

PageScope Web Connection can be accessed directly from a Web browser. Do not use a proxy server when accessing from PageScope Web Connection.

- Start the Web browser.
- In the Address bar, type the IP address of this machine, and then press the [Enter] key.
  - http://<IP\_address\_of\_the\_machine>/
     Example: If the IP address of the machine is 192.168.1.20
     http://192.168.1.20/



#### Detail

When SSL/TLS is enabled, the URL becomes: https://<IP\_address\_of\_machine>/ Even if "http://" is entered, the URL at "https://" is automatically accessed.

## If user authentication settings have been applied

If user authentication or external server authentication settings have been applied, the following page appears.

Type in the user name and password, and then click [Log-in].




#### Note

For details on user authentication, refer to User manual [Copy Operations].

Contact the network administrator for a user name and password.

When logged on with user authentication, a timeout occurs and you will automatically be logged off from Administrator mode if no operation is performed for 10 minutes.

If user authentication is performed with an external server and a domain other than the default domain name is used as an Active Directory, type in the user name as "user name@domain name".

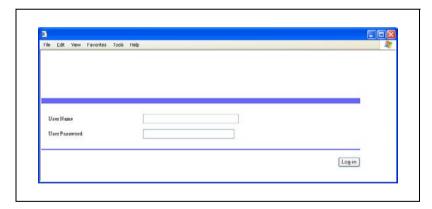

To log off, click [Log-out] in the upper-left corner of the page.

# If account track settings have been applied


If account track settings have been applied, the account number is not required in order to access PageScope Web Connection.

9-8 bizhub 362/282/222

# Page structure

The page that appears immediately after PageScope Web Connection is accessed is called the User mode page. All users can view this page.

The configuration of the PageScope Web Connection page is shown below.

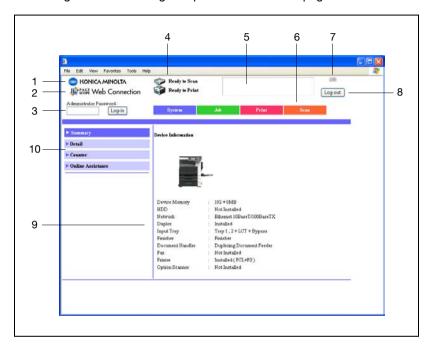



#### Note

To reset the status display and message display, click [Refresh] in the Web browser.

No.	Item	Description
1	KONICA MINOLTA logo	Click the logo to go to the Konica Minolta Web site at the following URL. http://konicaminolta.com/
2	PageScope Web Connection logo	Click the PageScope Web Connection logo to display the version information.
3	Administrator mode logon button	Click the button to log on to Administrator mode.
4	Status display	The statuses of this machine's printer section and scanner section are displayed using icons.

No.	Item	Description
5	Message display	If an error occurred in the machine, the status of the malfunction/error and other error information are displayed.
6	Tabs	Select the category of the page to be displayed. The following tabs are displayed in User mode.  • System  • Job  • Print  • Scan  Note  If the optional fax kit has been installed, the Scan tab changes to the Fax/Scan tab.
7	Device name	The name of the device being accessed is displayed.
8	[Log-out] button	This button appears after you have logged on when user authentication or external server authentication settings have been applied. Click this button to log off.
9	Information and settings	Details of the item selected from the menu are displayed.
10	Menu	Information and settings for the selected tab are listed. The menu that appears differs depending on the tab that is selected.


9-10 bizhub 362/282/222




# Logging on to Administrator mode

You can switch between User mode and Administrator mode. However, in order to specify system or network settings, you must be logged on to Administrator mode.

- When logged on to Administrator mode, the machine's control panel is locked and cannot be used.
- Depending on the status of the machine, you may not be able to log on to Administrator mode.
- When logged on to Administrator mode, if no operation is performed for 10 minutes, a timeout occurs and you will automatically be logged off from Administrator mode.
- 1 Type in the administrator password, and then click [Log-in].

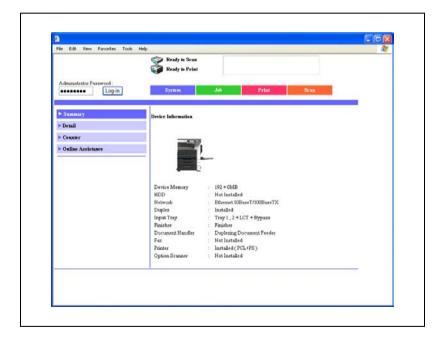

The Administrator mode page appears.

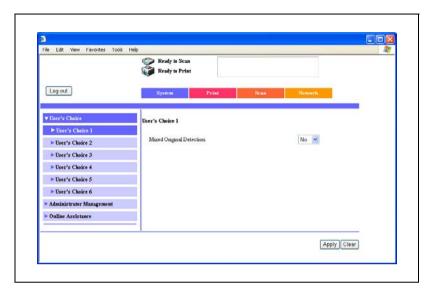

2 To return to User mode, click [Log-out].

#### Web browser cache

The newest information may not appear in the PageScope Web Connection pages because older versions of pages are saved in the cache for the Web browser. In addition, problems may occur when the cache is used.

When using PageScope Web Connection, disable the cache for the Web browser



#### Detail

If the utility is used with the cache enabled and Administrator mode was timed out, the timeout page may appear even after the utility is accessed again. In addition, since the machine's control panel remains locked and cannot be used, the machine must be restarted. In order to avoid this problem, disable the cache.



#### Note

The menus and commands may vary depending on the Web browser version. For details, refer to the Help for the Web browser.

### For Internet Explorer

- 1 On the "Tools" menu, click "Internet Options".
- 2 On the General tab, click [Settings] under "Temporary Internet files".
- 3 Select "Every visit to the page", and then click [OK].

### For Netscape

- 1 On the "Edit" menu, click "Preferences".
- 2 In the "Category" box, click "Advanced", then "Cache".
- 3 Under "Compare the page in the cache to the page on the network", select "Every time I view the page".

# 9.3 One-Touch Key Registration (User mode)

The recipients of scanned data can be registered with one-touch dial destinations. A secondary recipient can also be registered with the one-touch dial destination in case the transmission to the main recipient failed. In addition, the index name can be specified.



#### Note

The secondary recipient can be specified when the optional scanner unit is installed.

36 indexes can be registered on this machine, and up to 15 one-touch dial buttons and fax programs can be registered in each index.

The following destination types can be registered here.

Item	Description		
TX: PC (E-mail)	Register a recipient of a Scan to E-Mail operation.		
TX: PC (FTP Server)	Register a recipient of a Scan to FTP operation.		
TX: Internet FAX	Register a recipient of an Internet fax operation.		
TX: PC (SMB)	Register a recipient of a Scan to SMB operation.		

9-14 bizhub 362/282/222



The following parameters are available on the page for each communication mode.

When "TX: PC (E-mail)" is selected



Item	Description
One-Touch Name	Type in the name of the recipient that will appear as the name of the one-touch dial destination. Up to 12 characters can be entered.
Destination Address	Type in the e-mail address of the recipient.
File Type	Select the format ("TIFF" or "PDF") of the file that is to be sent.
Coding Method	Select the coding method ("MH" or "MMR") for the data to be sent. The data amount with the MMR coding method is less than with the MH method.


# When "TX: PC (FTP Server)" is selected



9-16 bizhub 362/282/222

Item	Description		
One-Touch Name	Type in the name of the recipient that will appear as the name of the one-touch dial destination. Up to 12 characters can be entered.		
FTP Server Address	Type in the IP address or host name of the server where the data is to be uploaded.		
	<b>0</b>		
	Note The host name can be entered if "DNS Setting" in the Network Setting screen is set to "YES".		
Use Proxy	Select whether to use a proxy server when uploading data.		
Port Number	Enter the server port number. Enter a numeric value within the range of 1 to 65535.		
Anonymous	Select whether to permit anonymous user access (access that does not require a login name or password).		
User Name	Enter the user name. Up to 32 characters can be entered.		
Password	Enter the login password for the server. Up to 32 characters can be entered.		
	♥		
	Note The password appears as "••••". To correct the entered password, clear "••••", and then type in the correct password.		
Retype Password	Reenter the login password.		
Directory	Specify the name of the directory where the data is to be uploaded. Up to 128 characters can be entered.		
Passive Mode	Select whether to enable or disable the passive mode.		
File Type	Select the format ("Multi Page TIFF", "Single Page TIFF" or "PDF") of the file that is to be sent.		
Coding Method	Select the coding method ("MH" or "MMR") for the data to be sent. The data amount with the MMR coding method is less than with the MH method.		

# When "TX: Internet FAX" is selected

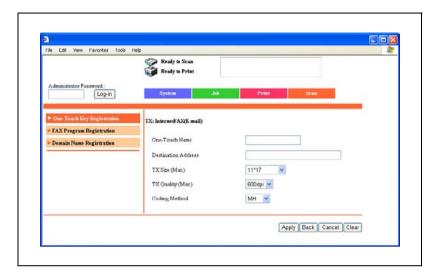


Item	Description
One-Touch Name	Type in the name of the recipient that will appear as the name of the one-touch dial destination. Up to 12 characters can be entered.
Destination Address	Type in the e-mail address of the recipient. Up to 64 characters can be entered.
TX Size (Max.)	Select the maximum document size ("Letter/Legal" or "11*17") for the data to be sent.
TX Quality (Max.)	Select the maximum resolution ("200 dpi", "400 dpi" or "600 dpi") for the data to be sent.
Coding Method	Select the coding method ("MH", "MR" or "MMR") for the data to be sent. The data amount for the coding methods increase as follows: MMR, MR, MH.

9-18 bizhub 362/282/222



# When "TX: PC (SMB)" is selected

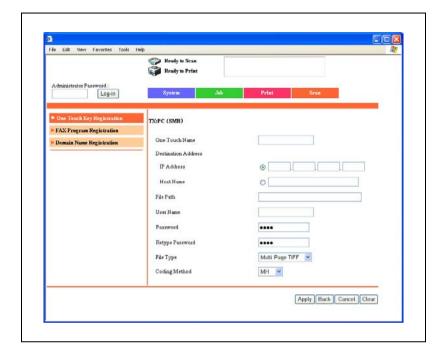


Item	Description				
One-Touch Name	Type in the name of the recipient that will appear as the name of the one-touch dial destination. Up to 12 characters can be entered.				
Destination Address	Type in the IP address or host name of the server where the data is to be uploaded.				
File Path	Type in the path to the destination folder. Up to 128 characters can be entered.  Note A shared folder created on the domain controller of Windows Server 2003 and Windows Server 2008 cannot be specified.				
User Name	Enter the user name. Up to 32 characters can be entered.				
Password	Type in the login password for the computer where the data is to be sent. Up to 14 characters can be entered.  Note  The password appears as "••••". To correct the entered password, clear "••••", and then type in the correct password.				
Retype Password	Reenter the login password.				
File Type	Select the format ("Multi Page TIFF", "Single Page TIFF" or "PDF") of the file that is to be sent.				
Coding Method	Select the coding method ("MH" or "MMR") for the data to be sent. The data amount with the MMR coding method is less than with the MH method.				

9-20 bizhub 362/282/222


# Naming an index

- Click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [One-Touch Key Registration].
- From the "Index" list (center table), click the index that is to be named. The one-touch dial destinations that are saved in the selected index appear in the lower half of the page.

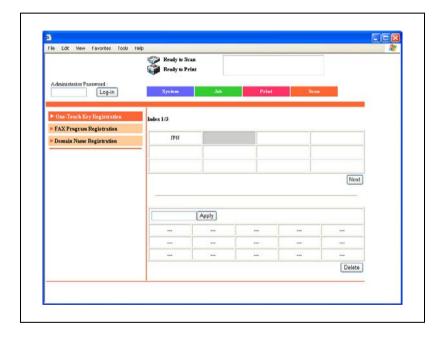

- 4 Enter the index name, and then click [Apply].
  - Up to 8 characters can be entered.

The index name appears in the index list in the upper half of the page.

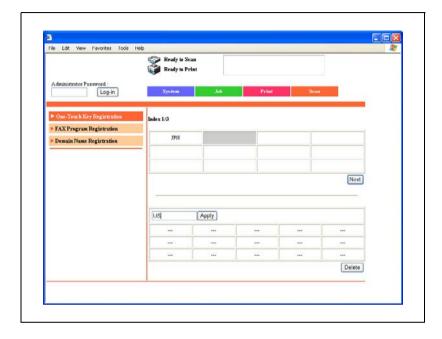


9-22 bizhub 362/282/222

# Registering a one-touch dial destination

- 1 Click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [One-Touch Key Registration].
- 3 From the "Index" list, click the index where the one-touch dial destination is to be saved.

The one-touch dial destinations saved in the selected index appear in the lower half of the page.

- 4 Click a box where a one-touch dial destination has not yet been registered.
  - Which are the boxes where a one-touch dial destination has not yet been registered?
  - → The boxes where a one-touch dial destination has not yet been registered contain "---".

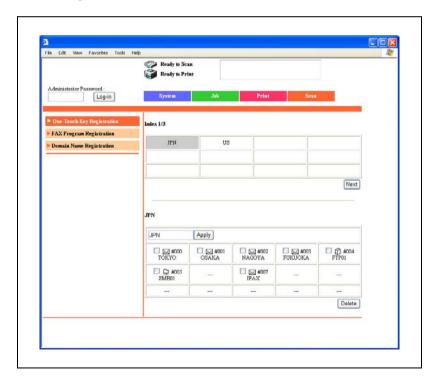

- 5 Select the communication mode, and then click [Next].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.



- Specify settings for the parameters in the page for the selected communication mode.
  - To also register the secondary recipient, specify settings for the parameters, and then click [Sub Address Registration].
  - For details on the parameters, refer to "One-Touch Key Registration (User mode)" on page 9-14.
- 7 Click [Apply].

The one-touch dial destination is registered.

# Registering a secondary recipient


A secondary recipient can be specified in case the transmission to the recipient of the one-touch dial destination failed. The communication modes in which a secondary recipients can be specified are "TX: PC (E-mail)" and "TX: Internet FAX".

- A secondary recipient can be specified if the optional scanner unit or fax kit is installed.
- ✓ Any of the following communication modes can be specified for the secondary recipient.
  - TX: PC (E-mail)
  - TX: PC (Scanner)\*
  - TX: InternetFAX (E-mail)\*
  - TX: InternetFAX (IP-TX)\*
  - TX: InternetFAX (IP-Relay)\*
  - FAX (G3)\*\*
  - TX: SIP-FAX\*\*

\* The communication mode can be specified if the optional scanner unit or fax kit is installed.

\*\* The communication mode can be specified if the optional fax kit is installed.

- Click the box for the one-touch dial destination to be programmed with a secondary recipient.
- 2 Click [Next].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

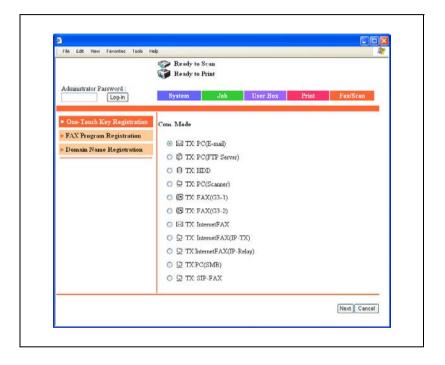


9-26 bizhub 362/282/222

3 Click [Sub Address Registration].



- 4 Select the communication mode for the secondary recipient, and then click [Next].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

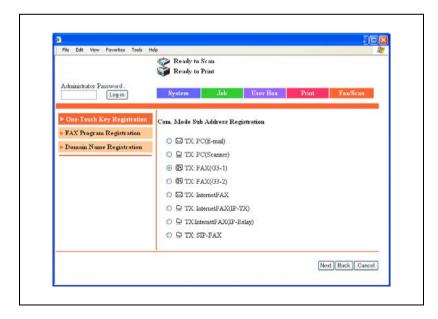

- 5 Specify the various settings, and then click [Apply].
  - For details on the parameters, refer to "One-Touch Key Registration (User mode)" on page 9-14.





#### Note

The name that appears beside "One-Touch Name" is the same as that specified for the main recipient. Settings for all other parameters can be specified.

To delete the registered secondary recipient, click [Sub Address Delete].


9-28 bizhub 362/282/222

# 9

# Changing the settings for a one-touch dial destination


- 1 Click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [One-Touch Key Registration].
- 3 From the "Index" list, click the index that contains the one-touch dial destination that is to be changed.

The one-touch dial destinations saved in the selected index appear in the lower half of the page.

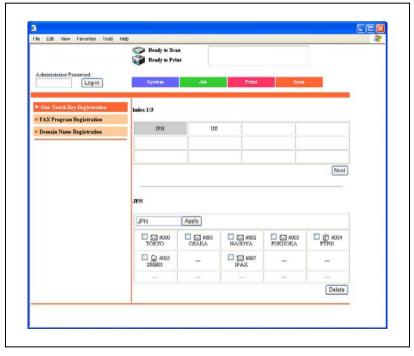

- 4 Click the one-touch dial destination whose settings are to be changed.
  - A one-touch dial button programmed as an administrator forwarding destination cannot be selected.
  - ? Are there one-touch dial destinations that cannot be selected even if they are clicked?
  - → A fax program cannot be selected, even if it is clicked.

5 To change the communication mode, select the communication mode, and then click [Next].

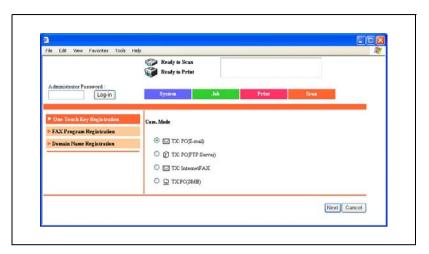

- 6 Specify settings for the parameters in the page for the selected communication mode.
  - For details on the parameters, refer to "One-Touch Key Registration (User mode)" on page 9-14.


9-30 bizhub 362/282/222




# Deleting a one-touch dial destination

- 1 Click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [One-Touch Key Registration].
- From the "Index" list, click the index that contains the one-touch dial destination that is to be deleted.

The one-touch dial destinations saved in the selected index appear at the bottom of the page.

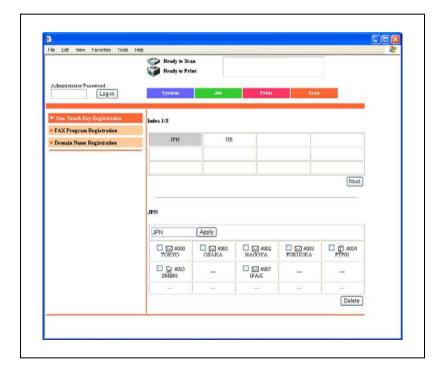

- 4 Select the check box of the one-touch dial destination that is to be deleted.
  - A one-touch dial button programmed as an administrator forwarding destination cannot be selected.

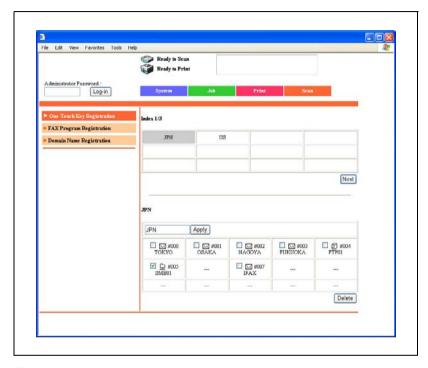

5 Click [Delete].

9-32 bizhub 362/282/222

# 9.4 FAX Program Registration (User mode)

Fax programs can be registered as one-touch dial destinations. Unlike the one-touch dial destination where only recipients can be registered, scan settings and multiple recipients can be registered. The registered data can also be changed or deleted.



#### Note

Up to 30 fax programs can be registered. However, the total number of one-touch dial destinations and fax programs must not exceed 540.

Some functions or parameters registered with a fax program have no effect depending on the operation performed, as shown in the following table. For details on each function and parameter, refer to the appropriate page.

(): Has an effect

▲ : Has an effect under certain conditions

-: Does not have an effect

Operation Function/ Parameter	Scan to E-Mail	Scan to FTP	Scan to SMB	Scan to HDD	Internet fax
Original Type	0	0	0	0	0
Density	0	0	0	0	0
Reduction	-	-	-	_	-
Scan Area	0	0	0	0	0
TSI	_	-	=	-	0
Dest. Insert	-	-	-	-	0
TX Report	0	0	0	0	0
2in1	0	0	0	0	0
2-Sided TX	0	0	0	0	0
Rotation TX	_	_	=	-	<b>A</b>
Priority TX	0	0	0	0	0
Timer	0	0	0	0	0
Stamp	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>	<b>A</b>
Subject Selection	0	_	-	-	•
Set Reply E-Mail Address	0	-	-	-	<b>A</b>
E-Mail Notifica- tion Destination	_	0	0	0	_
Set File Name	0	0	0	0	<b>A</b>

When registering a fax program, specify settings for the following functions/parameters.

Item	Description
Program Name	Type in the name of the program that will appear as the name of the one-touch dial destination. Up to 12 characters can be entered.
Mode	Select "TX".
Destination	Specify the program destination. Click [Select Destination], select the check box of a registered one-touch dial destination, and then click [Apply].
Original Type	
Original Type	Select the scan resolution.
Density	Select the scan density.
Reduction	This is a fax setting. For details, refer to the User manual [Facsimile Operations].
Scan Area	Specify the document size for scanning.
Menu 1	
TSI	Select transmission source information to print the registered text, such as the name, fax number, or address, at the edge of pages sent with the Internet fax operation.  For details on registering transmission source information, refer to "TSI Registration" on page 9-48.
Dest. Insert	Select whether to print the destination name registered with the one-touch dial button together with other transmission source information when TSI1 through TSI8 is selected.
TX Report	Select the conditions for outputting the transmission results report. Default: Select this setting to output the report according to the setting specified from the Administrator Management screen. Output On: Select this setting to output the report, regardless of the transmission result.  If TX Fail: Select this setting to output the report only if the transmission failed.  Output Off: Select this setting to not output the report, regardless of the transmission result.
2in1	Select whether to send an Internet fax using the 2in1 function (printing two pages on one page).
2-Sided TX	Select whether or not a double-sided transmission is performed with the Internet fax operation.  On: Select this setting to perform a double-sided transmission. When set to "On", specify the binding margin and page orientation. Off: Select this setting to not perform a double-sided transmission.
Rotation TX	Select whether or not to rotate the scan image according to the paper orientation of the receiving machine when sending an Internet fax.  The resolution can be set to 200 dpi or less when sending an A4-size document.
Priority TX	Select whether or not the data is sent with priority over other jobs.

Item	Description
Timer	Select whether or not the transmission time is to be set. Specify the transmission time when "On" is selected.
Stamp	Specify whether the scanned document is stamped to indicate that it has been scanned. In addition, load the document into the ADF.
	♥
	Note
	To use the Stamp function, optional stamp unit must
	be installed.
Menu 2	
Subject Selection	Select the subject of the e-mail message from the text that has been registered in advance. For details on registering subject text, refer to "E-Mail/Internet FAX (Administrator mode)" on page 9-76.
Set Reply E-Mail Address	The e-mail address of this machine is displayed as the e-mail reply destination. To select an e-mail address other than that of this machine, click [Select Reply E-Mail Address], and select an e-mail address from those registered with one-touch dial destinations.
E-Mail Notification Destination	Specify the e-mail address where notification of the URL of the data location is sent when performing the Scan to FTP, Scan to SMB or Scan to HDD operation. Click [Select E-Mail Notification Destination], and then select an e-mail address from those registered with one-touch dial destinations.
Set File Name	Type in a file name to specify the name of the file being saved. Up to 16 characters can be entered.




### Detail

For procedures on specifying settings for the various operations, refer to the following pages.

- Scan to E-Mail (p. 4-11, p. 4-14)
- Scan to FTP (p. 5-9, p. 5-13)
- Scan to SMB (p. 6-9, p. 6-13)
- Scan to E-HDD (User manual [Box Operations])
- Internet fax (p. 7-10, p. 7-12)


### Registering fax programs

- To specify the recipient of a fax program, register the recipient with a one-touch dial destination in advance.
- Click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [FAX Program Registration].
- From the "Index" list, click the index where the fax program is to be registered. The one-touch dial destinations saved in the selected index appear in the lower half of the page.
- 4 Click a box where a one-touch dial destination has not yet been registered.
  - Which are the boxes where a one-touch dial destination has not yet been registered?
  - → The boxes where a one-touch dial destination has not yet been registered contain "---".

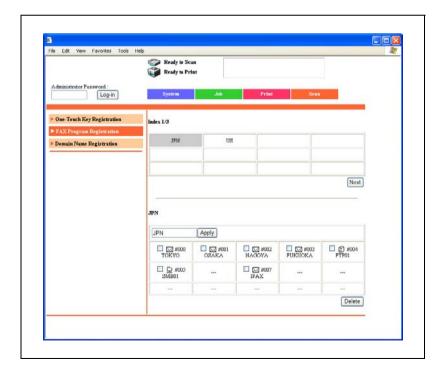

9-36 bizhub 362/282/222

5 Specify settings for the various parameters.

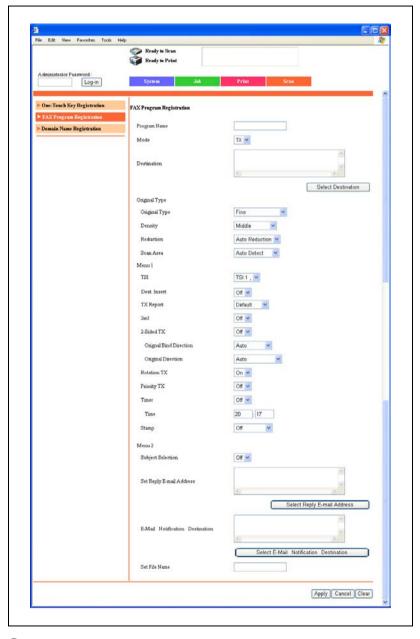


6 Click [Apply].

# Changing the settings of the fax program

- Click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [FAX Program Registration].
- From the "Index" list, click the index that contains the fax program that is to be changed.

The one-touch dial destinations saved in the selected index appear in the lower half of the page.

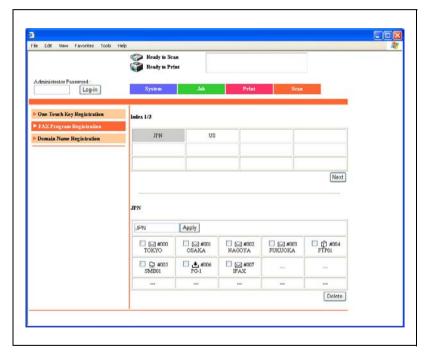


- 4 Click the fax program that is to be changed.
  - A one-touch dial destination other than a fax program cannot be selected, even if it is clicked.
- 5 Specify settings for the program parameters.
  - For details on the parameters, refer to "FAX Program Registration (User mode)" on page 9-33.
- 6 Click [Apply].

9-38 bizhub 362/282/222


### Deleting a fax program

- 1 Click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [FAX Program Registration].
- 3 From the "Index" list, click the index that contains the fax program that is to be deleted.

The one-touch dial destinations saved in the selected index appear at the bottom of the page.

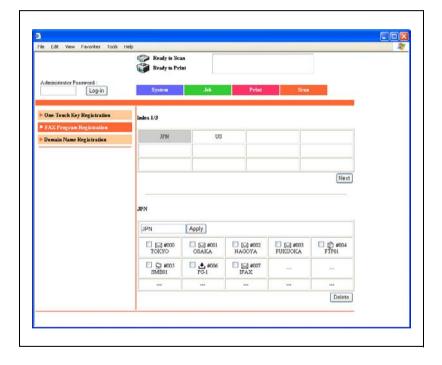

4 Select the check box of the fax program to be deleted.

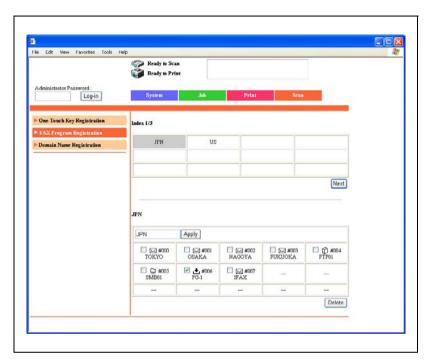

5 Click [Delete].

9-40

## 9.5 Domain Name Registration (User mode)


When entering an e-mail address from this machine's control panel, the destination address can be entered quickly if domain names that are often entered have been registered in advance.

On this machine's control panel, a registered domain name can be selected after touching [Domain] in the displayed screen.

Up to 6 domain names can be registered.

### To register domain names

- Click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [Domain Name Registration].
- 3 Enter the domain name, and then click [Apply]. Up to 64 characters can be entered.

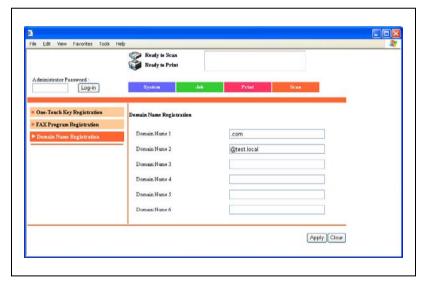

4 Click [OK].

## 9.6 Export/Import (Administrator mode)

The data that was registered with one-touch dial button on this machine can be exported as a file.

Files can be exported with the following four modes.

Item	Description
Mode 1	Select this setting to export the data in its complete format, including the mail program data (fax program data if the optional fax kit has been installed). The data can be edited and imported again. In addition, the data can be imported onto a different machine of the same model.
	<b>0</b>
	Note Before importing the data onto a different machine, erase all of the data first.
	Since all of the data is exported, it can also be used as a backup of the data.
Mode 2	Select this setting to export the data in its simple format, which does not include the mail program data (fax program data if the optional fax kit has been installed). The data can be edited and imported only onto the machine from where it was exported.
Mode 3	In addition to the conditions described for Mode 1, the password is encrypted. The password cannot be edited.
Mode 4	In addition to the conditions described for Mode 2, the password is encrypted. The password cannot be edited.



### **Detail**

The exported data is written in the UTF-8 character code. Edit the data with the UTF-8 character code.



#### Note

Do not edit data exported with "Mode 3" or "Mode 4" selected, otherwise the data may not be imported correctly.


9-42 bizhub 362/282/222

### Exporting data as files


- 1 In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- Click [One-Touch Key Registration], then [Export].
- 3 Select the export format, and then click [Execute].



4 Click [Save].

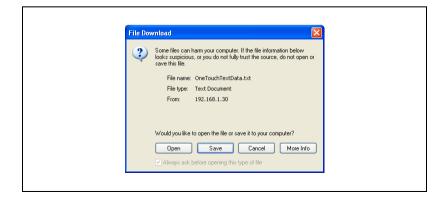

5 Specify the directory where the data is to be saved. The file name can also be changed.

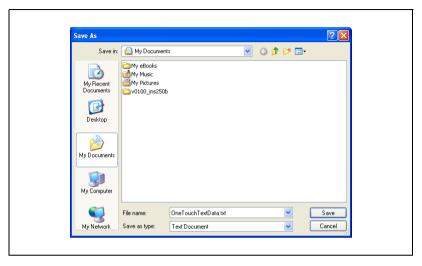


6 Click [Save].

The exported data is saved in the specified directory.


### Importing files

The one-touch dial button data that was saved on a computer can be imported and written to this machine.

- 1 In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [One-Touch Key Registration], then [Import].
- 3 Click [Browse].

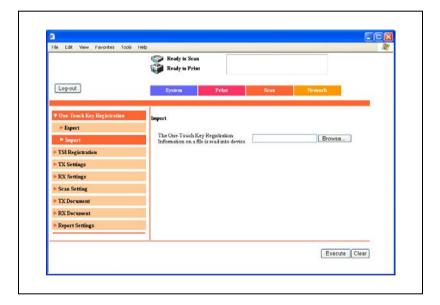

4 Select the file to be imported, and then click [Open].

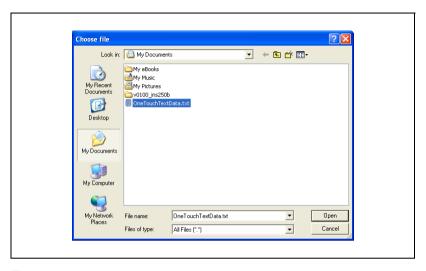

5 Click [Execute].

The registered one-touch dial button data is imported.



9-46 bizhub 362/282/222





### Note

Check in advance for information regarding the models that can use the exported data.


### 9.7 TSI Registration

Text, such as a name, fax number, or address, can be registered so that it can be printed at the top of pages sent with the Internet fax operation.

Transmission source names can be registered. Since multiple transmission source names can be registered, a different transmission source name can be used for different recipients or for different accounts. The registered transmission source name can be changed by following the same procedure used to register it.

### To register transmission sources

- 1 In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- Click [TSI Registration].
- 3 Enter the transmission source name, and then click [Apply].
  - Up to 8 transmission source names can be registered.
  - Up to 40 characters can be entered.

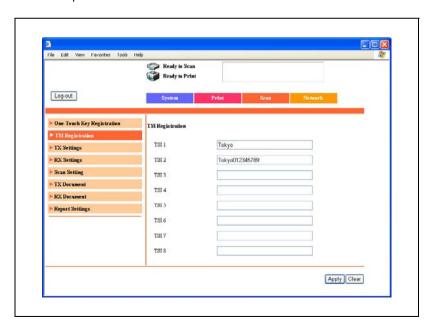

4 Click [OK].

9-48

# 9.8 TX Settings (Administrator mode)


Default transmission settings can be specified.

Settings can be specified for the following.

Item	Description		
Quality/Mode	Quality/Mode		
Default Quality	Select the default quality setting that is specified after an operation is complete.		
Default Density	Select the default density setting that is specified after an operation is complete.		
Com. Mode	Select the default communication mode that is specified after an operation is complete. Select "TX: PC (E-mail)" or "TX: Internet FAX".		
FAX Menu	FAX Menu		
TSI	Select how the transmission source name is attached and the type of transmission source information from 1 through 8.  Off: Select this setting to not attach the transmission source name.  Inside Body Text: Select this setting to print the transmission source name on the original document.  Outside Body Text: Select this setting to not print the transmission source name on the original document.		
Rotation TX	Specify whether to reset the rotation transmission after the operation is complete.		
2-Sided TX	Specify whether to reset the double-sided transmission after the operation is complete.		
Original Bind Direction	If "2-Sided TX" was set to "On", select from "Left Binding", "Top Binding" or "Auto" for the binding position of the document.		

### Specifying the transmission settings

- In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [TX Settings].
- 3 Specify settings for each parameter, and then click [Apply].

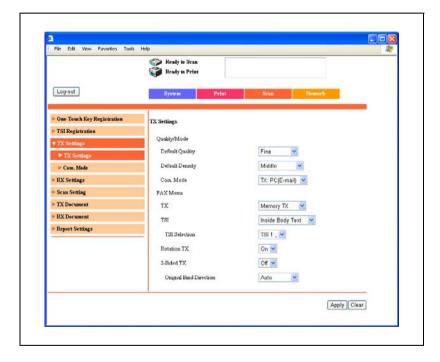


9-50 bizhub 362/282/222

### Com. Mode

Select whether or not each communication mode can be used.

- 1 In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [TX Settings].
- 3 Click [Com. Mode].
- 4 Specify a setting for each parameter, and then click [Apply].
  - If mode 476 of the software switch settings was changed, only communication modes that can be selected appear. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

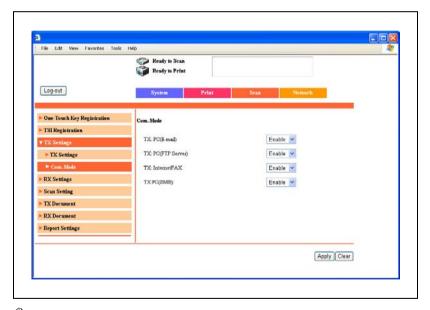



#### Note

The communication modes that can be set differ depending on the options that are installed.

## 9.9 RX Settings (Administrator mode)

Specify the time and day for printing an Internet fax that is received while the machine is in the off mode (mode where printing is not immediate, even when a fax is received).

By regulating the time when printing is performed, Internet faxes transmitted late at night can be safely received.

Settings can be specified for the following.

Item	Description
Timer	Specify whether or not received Internet faxes are printed at a specified time instead of being printed immediately.  On: Select this setting to collect all received Internet faxes during the specified time period on the specified days, and print them together. Specify the days, starting time and ending time.  Off: Select this setting to immediately print an Internet fax that is received.
Stop Time	Type in the ending time for printing received Internet faxes.
Start Time	Type in the starting time for printing received Internet faxes.
Day Of The Week	Select the day of the week to print at the specified time.
Memory Lock Password	Specify the four-digit password used to print Internet faxes received outside of the specified time period. To change the password, click [Change Password], and then specify a new password.
	Note The password appears as "••••". To correct the entered password, clear "••••", and then type in the correct password.




### Note

For details on entering a password to print received Internet faxes, refer to "To print manually" on page 10-16.

9-52 bizhub 362/282/222

### Specifying the reception settings

- 1 In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [RX Settings].
- Specify a setting for each parameter, and then click [Apply].

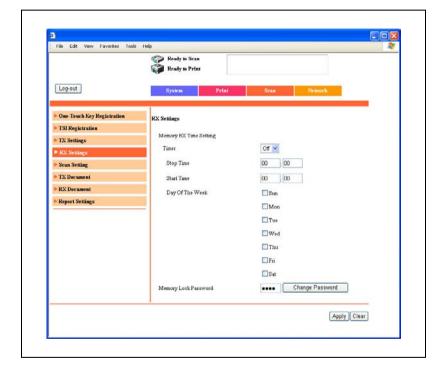

# 9.10 Scan Setting (Administrator mode)

The device name of this machine used in the file name and the transmission of the scanned data can be specified.

Settings can be specified for the following.

Item	Description
Machine Name	Enter the device name of this machine that is used for the file name. Up to 16 characters can be entered.
Division by Page	Applied when performing the Scan to E-Mail or Internet fax operation. Select whether the data is divided by page when scanned data is sent.
Division by Size	Applied when performing the Scan to E-Mail operation. Select whether the data is divided by a fixed size when scanned data is sent.  Note Depending on the e-mail software used by the recipient, the binary division ("Division by Size") may not be available.
Size of Division	When "Division by Size" is set to "On", type in the size of the data sections (between 16 and 2000 KB)
Interval of Division Transmission	When "Division by Size" is set to "On", type in the number of seconds (between 1 and 255) for the interval when the divided data is sent.

E-mail Mode	
TX Quality (Max.)	Select the maximum resolution ("200 dpi", "400 dpi" or "600 dpi") for the data to be sent as an Internet fax.
TX Size (Max.)	Select the maximum document size ("Letter", "Legal" or "11*17") for the data to be sent as an Internet fax.
Coding Method	Select the coding method ("MH", "MR" or "MMR") for the data to be sent as an Internet fax. The data amount for the coding methods increase as follows: MMR, MR, MH.

Scan Mode	
B/W: File Type	Select the format ("TIFF" or "PDF") of the data that is to be saved when performing the Scan to E-Mail, Scan to FTP, Scan to SMB, or Scan to HDD operation.  If "TIFF" was selected, the setting changes to "Multi Page TIFF" with the Scan to FTP, Scan to SMB or Scan to HDD operation.
B/W: Coding Method	Select the coding method ("MH" or "MMR") for the data to be sent when performing the Scan to E-Mail, Scan to FTP, Scan to SMB, or Scan to HDD operation. The data amount with the MMR coding method is less than with the MH method.

9-54 bizhub 362/282/222

### Specifying the scan settings

- 1 In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [Scan Setting].
- Specify a setting for each parameter, and then click [Apply].



## 9.11 TX Document (Administrator mode)

When sending documents from this machine, the document can be forwarded simultaneously to the addresses specified by the administrator. Specify the address of the forwarding destination.



### Note

Select the forwarding recipient from a one-touch dial destination. Be sure to register the address of the forwarding recipient as a one-touch dial destination in advance.

A document that was sent and forwarded cannot be forwarded to the administrator.

9-56 bizhub 362/282/222

### Specifying the address of the forwarding destination

- 1 In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [TX Document].
- Select the address of the forwarding destination. Click [Select Forwarding Destination].
  The list of one-touch dial destinations appears.



- 4 Select the address of the forwarding destination, and then click [Apply].
  - Only one address can be selected.
- 5 Click [Apply].

## 9.12 RX Document (Administrator mode)

The method for processing a received document can be specified. This can be specified only for documents received over a network.

The following processing methods are available.

- Processing documents received on each line (Port): Specify the operation
  performed, such as printing or forwarding the received document, for
  each line where a document is received.
- Processing all other received documents (All Other Documents): Specify the processing method of documents received on lines other than ports.

If "Port" is clicked, settings can be specified for the following.

Item	Description
Distribution Conditions	Select whether or not an operation is performed when a document is received on the selected line.  Auto: Select this setting to not process the received document Specifies: Select this setting to specify where the received document is saved or forwarded.
RX Doc. Settings	When "Distribution Conditions" is set to "Specified", select the processing method for the received document.  Forward: Select this setting to forward the data to the specified destination. Print: Select this setting to print the document.  Print & Forward: Select this setting to print the document and forward the data to the specified destination.
Forwarding Destination	Specify a forwarding destination when "RX Doc. Settings" is set to "Forward". Click [Select Forwarding Destination], select the forwarding destination address, and then click [Apply].

If "All Other Documents" is clicked, settings can be specified for the following.

Item	Description
RX Doc. Settings	Select how the received document is processed.  Memory RX: Select this setting to save the document in the memory.  Forward: Select this setting to forward the data to the specified destination.  Print: Select this setting to print the document.  Print & Forward: Select this setting to print the document and forward the data to the specified destination.
Forwarding Destination	Specify a forwarding destination when "RX Doc. Settings" is set to "Forward". Click [Select Forwarding Destination], select the forwarding destination address, and then click [Apply].




#### Note

If bit 7 of mode 306 is set to "1" in the Soft SW Setting screen, only "Port" is available. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.


9-58 bizhub 362/282/222

### Specifying the processing of received documents at each line

- In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- Click [RX Document], then [Port].
- 3 Click [Network].

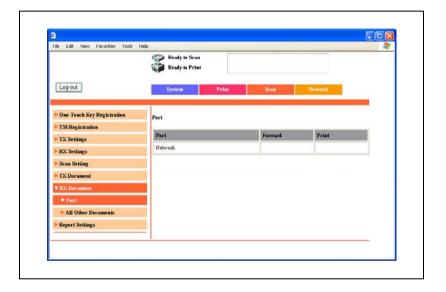


4 Specify a setting for each parameter, and then click [Apply].

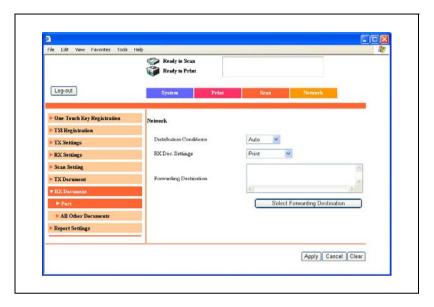

### Specifying the processing of other received documents

- In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- Click [RX Document], then [All Other Documents].
- Specify a setting for each parameter, and then click [Apply].

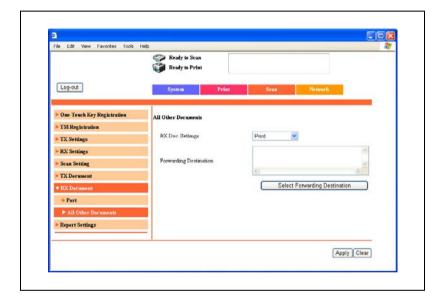

# 9.13 Report Settings (Administrator mode)

The conditions for outputting the transmission results report and activity report can be specified.


Settings can be specified for the following.

Item	Description
TX Report (Single destination)	Select the conditions for outputting the results report for a transmission to a single destination.  Output On: Select this setting to output the report, regardless of the transmission result.  If TX Fail: Select this setting to output the report only if the transmission failed.  Output Off: Select this setting to not output the report, regardless of the transmission result.
TX Report (Multiple desti- nations)	Select the conditions for outputting the results report for a transmission to multiple destinations.  Output On: Select this setting to output the report, regardless of the transmission result.  If TX Fail: Select this setting to output the report only if the transmission failed. Output Off: Select this setting to not output the report, regardless of the transmission result.
Activity Report	Select whether or not the activity report is outputted with every 50 transmissions.

9-62 bizhub 362/282/222

### Specifying the report output settings

- In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [Report Settings].
- Specify a setting for each parameter, and then click [Apply].

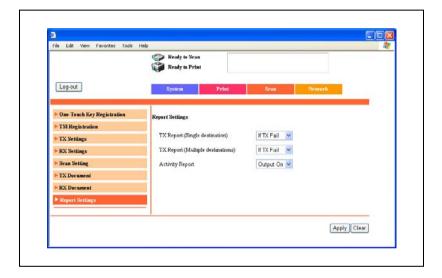

# 9.14 TCP/IP (Administrator mode)

Specify the required settings for using this machine over a network.

If "TCP/IP" is clicked, settings can be specified for the following.

Item	Description
TCP/IP [*]	Select whether to enable or disable TCP/IP.
DHCP Configuration [*]	Select whether the DHCP server is enabled (the IP address is acquired automatically) or disabled (a fixed IP address is specified).
IP Address [*]	Specify the IP address of this machine. Specify a setting when "DHCP Configuration" is set to "Disable".
Subnet Mask [*]	Type in the subnet mask of the network to be connected. Specify a setting when "DHCP Configuration" is set to "Disable".
Gateway Ad- dress [*]	Type in the default gateway of the network to be connected. Specify a setting when "DHCP Configuration" is set to "Disable".
RAW Port [*]	Select whether or not a port number is used with RAW printing.
RAW Port Number	Specify the RAW port number. Enter the port number within the range of 1 to 65535.
Self-Domain Name [*]	Specify the domain name of this machine.  Note  "Self-Domain Name" and "Port Number" appear if the optional scanner unit or fax kit has been installed.
Port Number[*]	Type in a port number between 1 and 65535 for this machine's domain.
DNS Configuration	Select "Yes" or "No" for the DNS (Domain Name System). When using a DNS server within a network, select "Yes". When not using a DNS server within a network, select "No". When using an external server such as an Internet provider, select "No" if the IP address of the mail server is public. If the DNS name of the mail server is public and the IP address is not public, select "Yes". For details on the network environment, contact the network administrator.
Host Name	Specify the host name of this machine. For details on the settings to be specified, contact the network administrator. Specify a setting when "DNS Configuration" is set to "No".
Domain Name	Specify the domain name of the DNS server. For details on the settings to be specified, contact the network administrator. Specify a setting when "DNS Configuration" is set to "No".
DNS Server Address 1 to 3	Specify the IP addresses of the DNS server. For details on the settings to be specified, contact the network administrator. Specify a setting when "DNS Configuration" is set to "No".
DNS Query Timeout	Select the time when a query to the DNS server is timed out. Select 20, 40, 80, 160, 320, or 640 seconds.
SLP [*]	Select whether to enable or disable SLP (Service Location Protocol).
LPD [*]	Select whether to enable or disable LPD (Line Printer Daemon).

<sup>\*</sup> If the setting of a parameter marked with [\*] is changed, turn this machine off, then on again.

9-64




### Note

When specifying an IP address or DNS server address, the IP address cannot be specified to begin with "0.", "127.", or a number greater than 224.

### Specifying the TCP/IP settings

- 1 In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- Click [Common Setting], then [TCP/IP].
- 3 Specify a setting for each parameter, and then click [Apply].

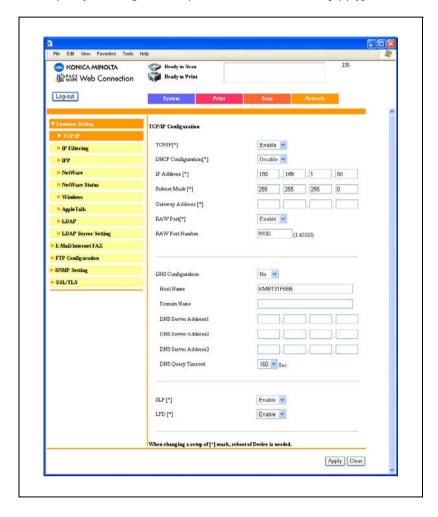

9-66 bizhub 362/282/222

4

If the setting of a parameter marked with [\*] is changed, turn this machine off, then on again.



### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off. The machine may not operate correctly if it is turned on immediately after being turned off.

# 9.15 IP Filtering

Select whether or not reception is possible within the range of specified IP addresses.

Settings can be specified for the following.

Item	Description
Accept IP Range	Reception of only the IP addresses in the specified range is permitted.
Reject IP Range	IP addresses in the specified range are blocked.



### Note

0.0.0.0 cannot be included in a specified range. For example, to specify the range of addresses before 192.168.1.20, specify the range from 0.0.0.1 to 192.168.1.20.

9-68 bizhub 362/282/222

### To specify IP filtering settings

- 1 In the Administrator mode, click the Scan tab.
  - If the optional fax kit has been installed, click the Fax/Scan tab.
- 2 Click [IP Filtering].
- 3 Specify a setting for each parameter, and then click [Apply].



## 9.16 LDAP (Administrator mode)

The settings used by the LDAP (Lightweight Directory Access Protocol) server in a network can be specified.

Settings can be specified for the following.

Item	Description
LDAP	Select whether to enable or disable address searches where the LDAP server is used. If "Enable" is selected, the LDAP server can be specified.
Search Default Setting	Select which of the registered LDAP servers is to be accessed. This parameter appears if an LDAP server has been registered.

### Specifying the LDAP settings

- 1 In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [Common Setting], then [LDAP].
- 3 Select whether to enable or disable LDAP searches, and then click [Apply].



9-70

# 9.17 LDAP Server Setting (Administrator mode)

If LDAP searches are enabled, the LDAP server to be accessed can be registered. Up to 5 LDAP servers can be registered in this machine.

For details on the LDAP search methods, refer to "Searching the destination information from the server" on page 8-3.



### Reminder

If "LDAP" is not set to "Enable", the LDAP server information cannot be registered. To register the LDAP server information, be sure to set "LDAP" to "Enable".

If "LDAP Server Setting" is clicked, settings can be specified for the following.

Item	Description
LDAP Server Name	Enter the LDAP server name. Up to 16 characters can be entered.
LDAP Server Address: IP Ad- dress	Specify the IP address of the LDAP server.
LDAP Server Address: Host Name	Enter the LDAP server host name. Up to 64 characters can be entered.
SSL/TLS	Select whether to perform SSL/TLS encryption of the sent data.
Port Number	Type in the port number (between 1 and 65535) used to communicate with the LDAP server.
Search Base	Specify the location on the LDAP server where searches are to be started. Up to 255 characters can be entered.
Connection timeout	Type in the time (between 5 and 300 seconds) when a search is timed out.
Maximum number of Search	Type in the maximum number of hits (between 5 and 100) to be received as LDAP search results.
Authentication Setting	Select the LDAP authentication method.
Domain Name	Specify a setting when "Authentication Setting" is set to "Active Directory". Up to 64 characters can be entered.
Login Name	Specify a setting when "Authentication Setting" is not set to "Anonymous". Up to 64 alphanumeric characters and symbols can be entered, excluding ^.
Password	Specify a setting when "Authentication Setting" is not set to "Anonymous". Up to 32 alphanumeric characters and symbols can be entered, excluding ^.
[Check con- nection]	Click to use the entered settings and check the connection to the LDAP server.



### Note

If bit 7 of mode 466 is set to "1" in the Soft SW Setting screen, select "GSS-SPNEGO" beside "Authentication Setting". For details on the software switch settings, refer to "Specifying software switch settings (machine functions)" on page 10-28.

If bit 7 of mode 466 is set to "1" in the Soft SW Setting screen, the information entered beside "Login Name" and "Password" is used when checking the connection. For details on the software switch settings, refer to "Specifying software switch settings (machine functions)" on page 10-28.


9-72 bizhub 362/282/222

### Registering an LDAP server

- 1 In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [Common Setting], then [LDAP Server Setting].
- 3 Click a box containing "---" for the LDAP server to be registered.




4 Specify a setting for each parameter.

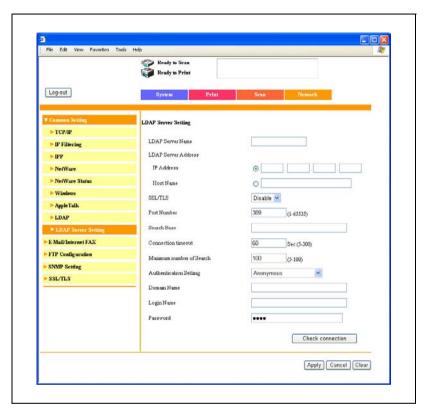

- 5 Click [Apply].
- 6 Click [OK].

#### **Deleting an LDAP server**

- 1 In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [Common Setting], then [LDAP Server Setting].
- 3 Select the check box of the LDAP server to be deleted.

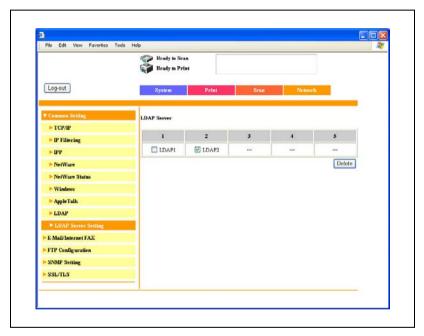

4 Click [Delete].

#### 9.18 E-Mail/Internet FAX (Administrator mode)

Transmission settings for the Scan to E-Mail and Internet fax operations can be specified.

Settings can be specified for the following.

Item	Description
POP3	Specify the POP3 server for sending Internet faxes.
SMTP	Specify the SMTP server for sending data with the Scan to E-Mail operation.
Subject/Text	Specify the subject and any text to be used when sending data with the Scan to E-Mail or Internet fax operation.
Other	Specify all other related send and receive settings.

Specify settings for the following.

#### POP3

Item	Description		
POP3 Server Address	Specify the settings required to receive Internet faxes.  Type in the IP address or host name (up to 64 characters).  For details on the settings to be specified, contact the network administrator.		
POP3 User Name	Specify the POP3 user name (up to 64 characters) of this machine. For details on the settings to be specified, contact the network administrator.		
POP3 Pass- word	Specify the POP3 password (up to 32 characters) of this machine. For details on the settings to be specified, contact the network administrator.		
	♥		
	Note The entered password appears as "••••". To correct the entered password, clear "••••", and then type in the correct password.		
Auto-RX Check	Select whether to automatically check for received e-mail messages (Internet fax) when connected to the POP3 server.		
Auto-RX Check Interval	If "Auto-RX Check" is set to "Yes", type in the time interval (between 1 and 99) at which the check is performed.		
Port Number	Type in the number (between 1 and 65535) of the port where the POP3 server is connected.		
POP3 Timeout [*]	Select the time until the connection with the POP3 server is timed out. Select from 30, 60, 90, 120, 150, 180, 210, 240, 270, and 300 seconds.		
APOP [*]	Select whether or not APOP authentication is enabled.		

<sup>\*</sup> If the setting of a parameter marked with [\*] is changed, turn this machine off, then on again.

9-76 bizhub 362/282/222

#### **SMTP**

Item	Description		
SMTP Server Address	Specify a setting for sending data with the Scan to E-mail or Internet fax operation. In addition, specify a setting when using the E-Mail Notification function with the Scan to FTP, Scan to SMB or Scan to HDD operation. Type in the IP address or host name (up to 64 characters). For details on the settings to be specified, contact the network administrator.		
Port Number [*]	Type in the number (between 1 and 65535) of the port where the SMTP server is connected.		
SMTP TX Time- out [*]	Select the time until the connection with the SMTP server is timed out. Select from 30, 60, 90, 120, 150, 180, 210, 240, 270, and 300 seconds.		
SMTP RX Timeout [*]	Select the time until the connection with the SMTP server is timed out. Select from 30, 60, 90, 120, 150, 180, 210, 240, 270, and 300 seconds.		
E-Mail Address	Specify the e-mail address (up to 64 characters) of this machine. This address appears as the From address when sending data with the Scan to E-Mail or Internet fax operation.  For details on the settings to be specified, contact the network administrator.		
SMTP Authen- tication User Name	Specify the user name for using e-mail transmission authentication (SMTP authentication). For details on the settings to be specified, contact the network administrator.  It is not necessary to specify a setting when the SMTP authentication user name and the POP3 user name are the same.		
SMTP Authentication User Password	Specify the password for using e-mail transmission authentication (SMTP authentication). For details on the settings to be specified, contact the network administrator.  It is not necessary to specify a setting when the SMTP authentication password and the POP3 password are the same.		
	Note The entered password appears as "••••". To correct the entered password, clear "••••", and then type in the correct password.		

<sup>\*</sup> If the setting of a parameter marked with [\*] is changed, turn this machine off, then on again.



#### Note

The following parameters appear when bits 6 and 2 of mode 380 are set to "1" in the Software Switch Setting screen. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

- SMTP Authentication User Name
- SMTP Authentication User Password

If bit 4 of mode 371 is set to "1" in the Software Switch Setting screen, two SMTP servers can be registered. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

#### Subject/Text

Item	Description
Subject 1 to 4	The subject can be specified for sending data with the Scan to E-Mail or Internet fax operation.  Up to 4 subjects can be registered, therefore, subjects can be used depending on the contents of the transmission.  Up to 40 characters can be entered.
Text	Type in the text attached to data sent with the Scan to E-Mail or Internet fax operation. Text that has been specified in advance is "fixed text", and text that can be specified freely is "custom text". The text entered here is registered as "custom text".  Up to 256 characters can be entered.

#### Other

Item	Description
Activity Report	Specify whether to notify the destination of the results when an Internet fax is received.
RX Doc. Head- er Print	Select whether to print the e-mail header on the first page of the received document when an Internet fax is printed.
TX Doc. Text Insert	Text can be inserted into the text of data sent with the Scan to E-Mail or Internet fax operation.  No: Select this setting to not insert text. For the Scan to E-Mail operation, fixed text is inserted even if "No" is selected.  Default: Select this setting to insert the fixed text that has been saved in advance on this machine.  Custom: Select this setting to insert text that can be set freely.
Gateway TX	Select "Restict" for this machine.

9-78 bizhub 362/282/222

#### Specifying the POP3 settings

- In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [E-Mail/Internet FAX], then [POP3].
- Specify a setting for each parameter, and then click [Apply].



- 4 Click [OK].
- 5 If the setting of a parameter marked with [\*] is changed, turn this machine off, then on again.




#### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off. The machine may not operate correctly if it is turned on immediately after being turned off.

9-80 bizhub 362/282/222

#### Specifying the SMTP settings

- In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- Click [E-Mail/Internet FAX], then [SMTP].
- 3 Specify a setting for each parameter, and then click [Apply].

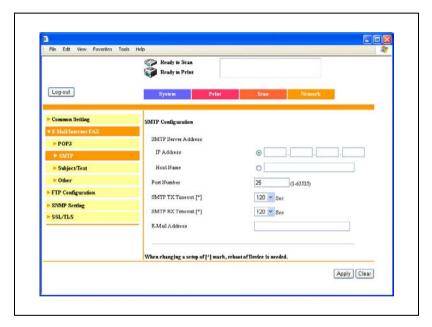

- 4 Click [OK].
- If the setting of a parameter marked with [\*] is changed, turn this machine off, then on again.




#### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off.

The machine may not operate correctly if it is turned on immediately after being turned off.

#### Specifying the subject or text settings

- In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [E-Mail/Internet FAX], then [Subject/Text].
- 3 Specify a setting for each parameter, and then click [Apply].

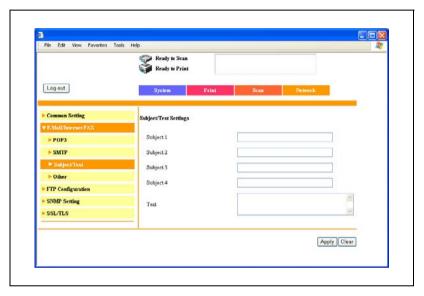


4 Click [OK].

9-82

#### Specifying other settings

- In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [E-Mail/Internet FAX], then [Other].
- 3 Specify a setting for each parameter, and then click [Apply].

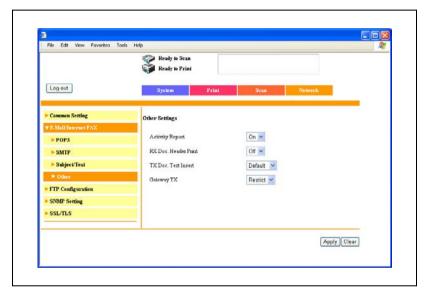

4 Click [OK].

#### 9.19 FTP Configuration (Administrator mode)

Detailed FTP proxy server and FTP server settings can be specified.

Settings can be specified for the following.


Item	Description		
Proxy IP Ad- dress	Type in the IP address or host name (up to 64 characters) for the proxy serve For details on the settings to be specified, contact the network administrator		
Port Number	Type in the number (between 1 and 65535) of the port where the FTP server is connected.		
FTP Server [*]	Select whether or not the FTP server is used.		
FTP Connection Timeout	Select the time until the connection with the FTP server is timed out. Select from 30, 60, 90, 120, 150, 180, 210, 240, 270 and 300 seconds.		

<sup>\*</sup> If the setting of a parameter marked with [\*] is changed, turn this machine off, then on again.

9-84 bizhub 362/282/222

#### Specifying the FTP settings

- In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [FTP Configuration].
- 3 Specify a setting for each parameter, and then click [Apply].

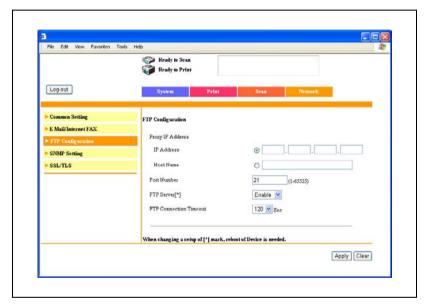

- 4 Click [OK].
- If the setting of a parameter marked with [\*] is changed, turn this machine off, then on again.



#### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off.

The machine may not operate correctly if it is turned on immediately after being turned off.

#### 9.20 SNMP

Select whether or not SNMP is used.

#### Specifying the SNMP setting

- In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [SNMP].
- 3 Specify a setting for each parameter, and then click [Apply].



4 After changing the settings, turn the machine off, then on again.



#### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off.

The machine may not operate correctly if it is turned on immediately after being turned off.

9-86 bizhub 362/282/222

#### 9.21 SSL/TLS (Administrator mode)

The SSL/TLS settings can be specified. When SSL/TLS is enabled, the communication between the machine and the client PC is encrypted to prevent information, such as passwords, from being leaked.

Certificates can be created and deleted, and the SSL/TLS status can be specified.

If "Create a Self-Signed Certificate" is clicked, settings can be specified for the following.


Item	Description		
Common Name	The machine's IP address is displayed. When DHCP is enabled, the host name is displayed.		
Organization	Enter the organization name or group name. (Up to 63 ASCII characters)		
Organization Unit	Enter the department name. (Up to 63 ASCII characters)		
Locality	Enter the locality name. (Up to 127 ASCII characters)		
State/Province	Enter the state or province name. (Up to 127 ASCII characters)		
Country	Type in the two-character country code defined by ISO03166.2. United States: US United Kingdom: GB Italy: IT Australia: AU Netherlands: NL Canada: CA Spain: ES Czech Republic: CZ China: CN Denmark: DK Germany: DE Japan: JP France: FR Belgium: BE Russia: RU		
Validity Start Date	The valid start date (date and time when this screen is displayed) is displayed.		
Validity Period (day)	Enter the number of days that the certificate is valid from the valid start date. The input range is 1 to 3650.		
Encryption Strength	Specify the SSL/TLS encryption type.		

Specify settings for the following in order to specify the SSL/TLS settings.

Item	Description
SSL/TLS	Select whether SSL/TLS is enabled or disabled.
Encryption Strength	Select the encryption type.

#### When a certificate is created

When a certificate is created with SSL/TLS enabled, the settings appear, as shown in the following page.

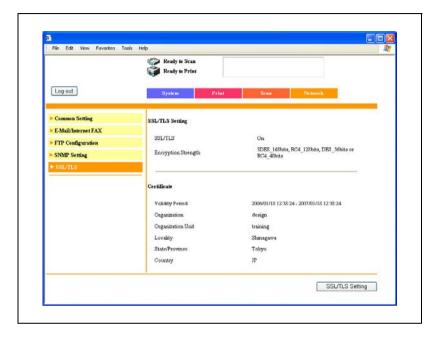


9-88 bizhub 362/282/222

#### **Creating certificates**

- 1 In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [SSL/TLS].
- 3 Select "Create a Self-Signed Certificate", and then click [Next].



4 Specify a setting for each parameter.

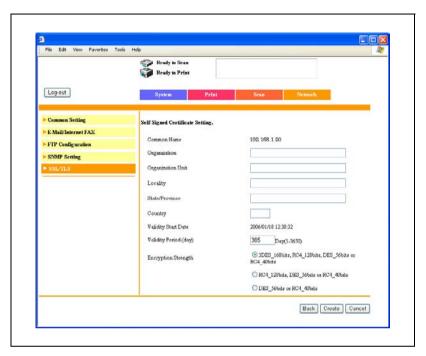

5 Click [Create].

The certificate is created.

9-90


6 When creation of the certificate is complete, click [OK].



Log off from Administrator mode.

#### **Deleting certificates**

- 1 In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [SSL/TLS].
- 3 Click [SSL/TLS Setting].

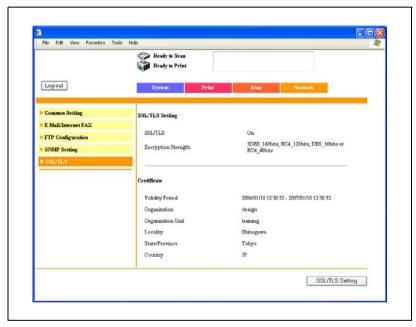

If "Enhance Security" is set to "ON", certificates cannot be deleted.

9-92 bizhub 362/282/222

4 Select "Delete Certificate", and then click [Next].




5 Check the message, and then click [OK].
The certificate is deleted.



6 Click [OK].Log off from Administrator mode.

#### Specifying the SSL/TLS settings

- 1 In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [SSL/TLS].
- 3 Click [SSL/TLS Setting].

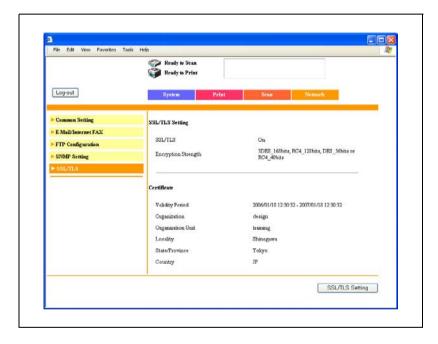


9-94 bizhub 362/282/222

4 Select "Set Encryption Strength and Enable/Disable of SSL/TLS.", and then click [Next].



- 5 Specify a setting for each parameter.
  - If "Enhance Security" is set to "ON", "SSL/TLS" cannot be set to "Off".

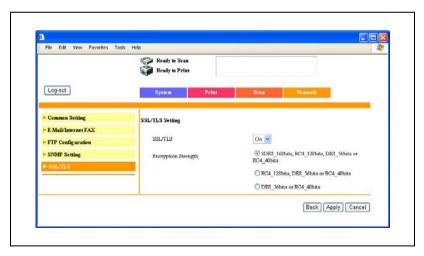

- 6 Click [Apply].
- 7 Click [OK].

#### 9.22 User Authentication (Administrator mode)

This page appears when "External Server" is specified as the authentication method. The user authentication server type and domain name can be specified.

If "User Authentication" is clicked, settings can be specified for the following.

Item	Description
Active Directo- ry	Type in a domain name of up to 64 characters for the Active Directory. Ten domain names can be registered. Specify the default domain name in the "Default Domain Setting" box.
NTLM	Type in the domain name for the NT server. Up to 15 characters can be entered.
NDS: Tree Name	Type in the NDS tree name. Up to 63 characters can be entered.
NDS: Context Name	Type in the NDS context name. Up to 127 characters can be entered.



#### Note

If user authentication is performed and a domain other than the default domain name is used as an Active Directory, type in the user name as "user name@domain name".


For "user\_name@domain\_name", specify a domain name of up to 64 characters.

If bit 7 of mode 466 is set to "1" in the Soft SW Setting screen, select "Active Directory". For details on the software switch settings, refer to "Specifying software switch settings (machine functions)" on page 10-28.

9-96 bizhub 362/282/222

#### Specifying user authentication settings

- 1 In the Administrator mode, click the Network tab.
  - For the procedure to log on to Administrator mode, refer to "Logging on to Administrator mode" on page 9-11.
- 2 Click [User Authentication].
- 3 Select the server type used for authentication, and specify a setting for each parameter.

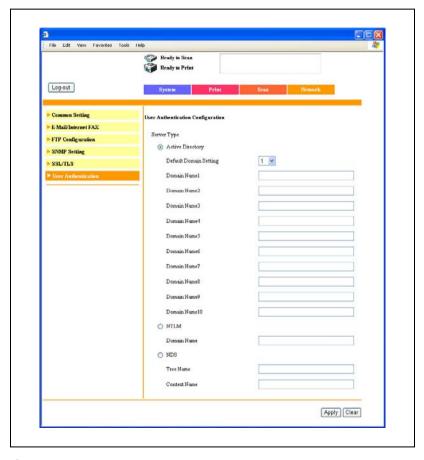

4 Click [Apply].

# 10 Specifying management

# settings

### 10 Specifying management settings

#### 10.1 Available parameters

The following Administrator Management parameters are related to the information in this manual.

#### **Administrator Management 1**

Item			Description
Initial Setting		TSI Registration	Prints the entered text such as the name, fax number, and address at the top of the output page when sending an Internet fax. Registers this transmission source name.
TX Settings	TX Settings		Specifies the default settings for transmission.
RX Settings			Specifies the time and day of the week to print when receiving an Internet fax.
Report Settings			Specifies the output conditions of the result reports and communication control reports.
Document Management	TX Document		When sending documents from this machine, they can simultaneously be forwarded to the addresses specified by the administrator. Specifies the forwarding addresses.
	RX Document	Port	Specifies the processing and forwarding of documents received over a network.
		All Other Documents	Specifies the processing and forwarding of documents received in other ways than over a network.

#### **Administrator Management 2**

Item	Description
Network Settings	Specifies the required settings for using this machine over a network. For details, refer to Chapter 2, "Setup" on page 3-3.
Software SW	Specifies function status settings.
Ping	Checks whether this machine is connected to a network. For details, refer to Chapter 2, "Setup" on page 3-3.
SSL/TLS	When SSL/TLS is enabled, the communication between the machine and the client computer can be encrypted. Specifies the creation, deletion, or encryption of certificates.



#### Reminder

If the [Utility/Counter] key was pressed to register items and specify settings, be sure to press the [Reset] key in the control panel after returning to the initial screen.

10-4 bizhub 362/282/222

#### 10.2 Registering transmission source names

When sending Internet faxes, the text of the transmission source entered can be printed. You can register the transmission source name.

The transmission source name can be used with the following operations.

Item	Description
Internet fax	Prints the name of the transmission source at the top of the page.




#### Note

Up to 8 transmission source names can be registered. Since multiple transmission sources can be registered, the names for each destination and track can be used separately.


Transmission source names of up to 40 characters can be registered.

#### To register a transmission source name


- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [Initial Setting].

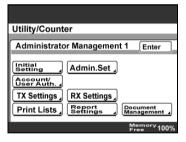


3 Touch [TSI Registration].

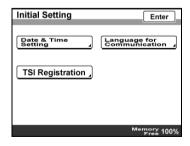

4 Select the number of the transmission source to be registered.

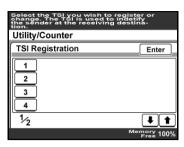

5 Type in the transmission source name, and then touch [Enter].

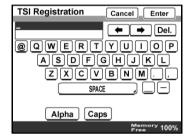

- 6 Check the information to be registered, and then touch [Enter].
- 7 Touch [Enter] until the initial screen appears.

#### 10.3 Specifying transmission report settings (TX Settings)


You can specify the default settings for transmission.

Settings can be specified for the following.


Item	Description
Quality/Mode	
Default Quality	Specify the quality default value that is reset after an operation is completed.
Default Density	Specify the density default value that is reset after an operation is completed.
Communication Mode	Specify the communication mode default value that is reset after an operation is completed. Select from PC (e-mail) or Internet FAX (Internet FAX).
Comm. Menu	
TSI	Select the transmission source name.  OFF: Does not attach the transmission source name.  Inside Body Text: Prints the transmission source name on the original document.  Outside Body Text: Does not print the transmission source name on the original document.
Rotation TX	Specify whether to reset the rotation transmission after an operation is completed.
2-Sided TX	Specify whether to reset the duplex transmission after an operation is completed.

#### Specifying the Quality/Mode settings


- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [TX Settings].

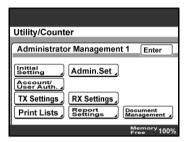


3 Touch [Quality/Mode].

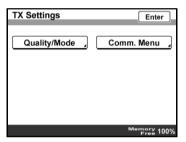


- 4 Select a setting, and then touch [Enter].
  - In the Default Quality screen, select the desired quality.

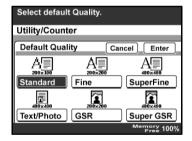


 In the Default Density screen, select the desired density by touching [Light] or [Dark].

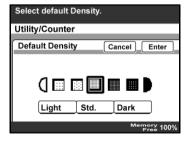

 In the Com.Mode screen, select the desired communication mode.

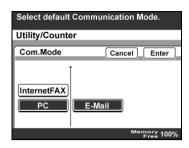


5 Touch [Enter].

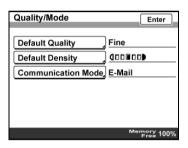


6 Touch [Enter] until the initial screen appears.

#### Specifying Comm. Menu settings


- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [TX Settings].

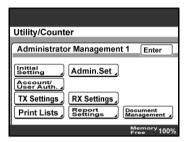


3 Touch [Comm. Menu].

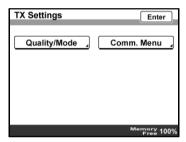


- 4 Select a setting, and then touch [Enter].
  - In the TX Time Information screen, select the print position of the transmission source.

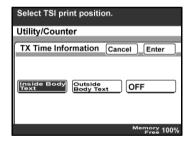

 In the TSI Selection screen, select the transmission source name to be printed.

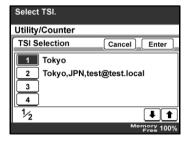


 In the Rotation TX screen, select whether to enable rotation transmission.

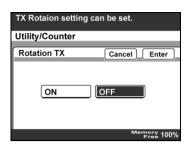

 In the 2-Sided TX screen, select whether to enable duplex transmission. If "ON" is selected, specify the binding position.



5 Touch [Enter].

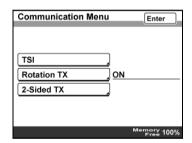

6 Touch [Enter] until the initial screen appears.

## 10.4 Specifying the print timing for received documents (RX Settings)

The time and day of the week to print an Internet fax that was received can be specified when the Off mode has been specified (setting that does not print right after the fax is received).

By regulating the time when printing is performed, Internet faxes transmitted late at night can be safely received.

Settings can be specified for the following.

Item	Description
Memory Lock Time	Specify whether or not received Internet faxes are printed at a specified time instead of being printed immediately.  Specify whether to collect all received Internet faxes during the specified time period on the specified days, and print them together. Specify the days, starting time and ending time.
Memory Lock Password	Specify the four-digit password used to print Internet faxes received outside of the specified time period.




#### Detail


For details on entering a password to print received Internet faxes, refer to "To print manually" on page 10-16.

#### **Memory Lock Time**


- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [RX Settings].

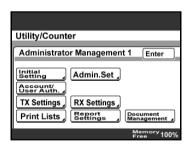


3 Touch [Memory RX Time Setting].

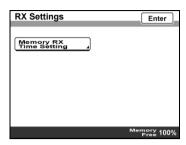

4 Touch [Memory Lock Time].

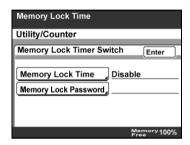


- 5 Specify the settings, and then touch [Enter].
  - If no settings are to be specified, touch [OFF].

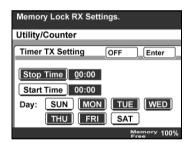


6 Touch [Enter] until the initial screen appears.

### To specify the Memory Lock Password setting


- Log on to the administrator mode, and then touch [Admin. 1].
- 2 Touch [RX Settings].

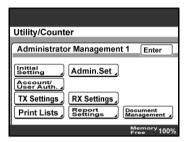


3 Touch [Memory RX Time Setting].

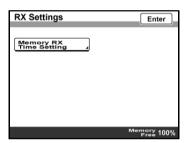


4 Touch [Memory Lock Password].

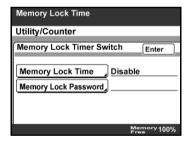

- 5 Touch [New Password], type in the password, and then touch [Enter].
  - Type in a four-digit password using the keypad.
  - To erase the entered text, press the [C] (clear) key.

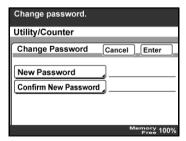

Touch [Confirm New Password], type in the password again, and then touch [Enter].

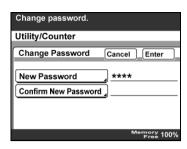


7 Touch [Enter] until the initial screen appears.


### To print manually

Use the following procedure to print outside of the specified time.


- 1 Press the [Utility/Counter] key.
- 2 Touch [User Management].
- 3 Touch [Memory RX ON/OFF].

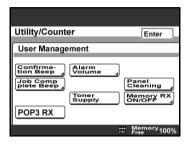

4 If the Memory Lock Password setting was specified, type in the password using the keypad, and then touch [Enter].

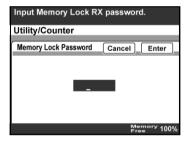

- 5 Select [Lock OFF], and then touch [Enter].
  - To stop printing in the middle of a print job, touch [Lock ON], and then touch [Enter].
  - To restart a stopped print job, touch [Temporarily Print].

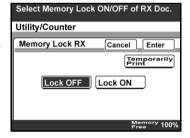

6 Touch [Enter] until the initial screen appears.

# 10.5 Specifying the transmission report printing conditions (Report Settings)

You can specify the printing conditions for the transmission results and activity reports.

Settings can be specified for the following.

Item	Description
TX Report	Select to print the transmission report sent to single destinations or broadcast.  ON: Prints regardless of the transmission results.  If TX Fails: Prints only when undeliverable.  OFF: Does not print regardless of the transmission results.
Activity Report	Select whether to print the activity report automatically every 50 transmissions.




#### Detail

If "Activity Report" is set to "ON", the activity report contents can be outputted as a CSV file and sent by e-mail to the administrator when the activity report is printed. To manage the contents of the activity report as data, specify the e-mail address of the administrator.


For details on the specifying the e-mail address of the administrator, refer to the User manual [Copy Operations].

### **Specifying TX Report settings**


- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [Report Settings].

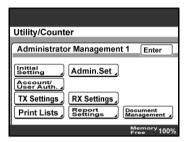

3 Touch [TX Report].

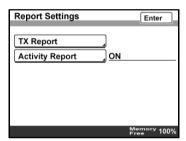


4 Specify the settings, and then touch [Enter].

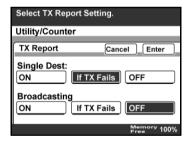


5 Touch [Enter] until the initial screen appears.

# **Specifying the Activity Report settings**


- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [Report Settings].

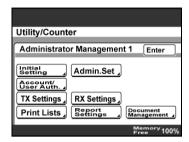

3 Touch [Activity Report].

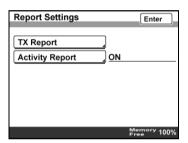

4 Specify the settings, and then touch [Enter].

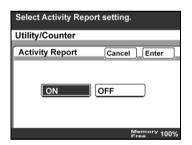

5 Touch [Enter] until the initial screen appears.

# 10.6 Forwarding a transmission document to a specified destination (TX Forwarding)

In order to control the documents sent from this machine, you can specify to have a sent document forwarded to a destination specified by the administrator




#### Detail

Select the forwarding destination with a one-touch dial button. Be sure to first register the forwarding destination with a one-touch dial button.


A document that was sent, then forwarded cannot be forwarded to the administrator

### Specifying the forwarding destination

- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [Document Management].

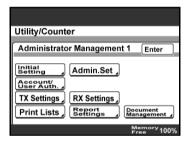


3 Touch [TX Document].

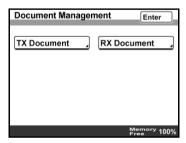

Enter

4 Touch [TX Forwarding].

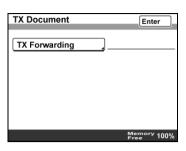

- 5 Specify the forwarding destination, and then touch [Enter].
  - To specify the forwarding destination with a one-touch dial button, touch [One-Touch], specify the destination, and then touch [Enter].
  - To search for a one-touch dial button, touch [Search], specify the destination, and then touch [Enter].



Search

One-Touch

Select the forwarding destination.

TX Forwarding

- You can select one address for the forwarding destination.
- 6 Touch [Enter] until the initial screen appears.

# 10.7 Specifying the processing method for received documents (Document Management)

You can specify the method for processing documents received over a network.

### Specifying the processing of documents received on a port

On this machine, you can specify the processing method, such as printing and forwarding, for documents received on a port.


Settings can be specified for the following.

Item	Description
Document management	Select whether to process the documents from a selected line. NO: Does not process the received documents. YES: Specifies the save destination and forwarding destination of the received documents.
RX Doc. Settings	When "YES" is selected in the Document Management screen, select the processing method for the received documents. Print: Prints the document.  Forward: Forwards the data to the specified destination. Print and Forward: Prints the document and at the same time forwards the data to the specified destination.
Forwarding Dest.	Specify when "Forward" is selected in the Setting of RX Doc. screen.


10-22 bizhub 362/282/222

# To specify the processing method for received documents


- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [Document Management].

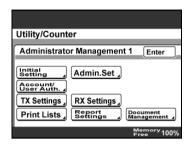


3 Touch [RX Document].

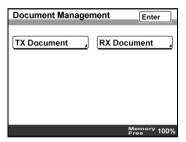


4 Touch [Port].

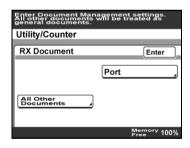


5 Touch [Network].

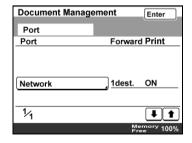

- Select whether to enable document management.
  - If "YES" is selected in the Document Management screen, specify the processing method for received documents.

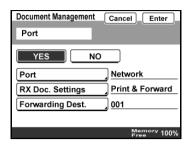

- 7 Specify the processing method for received documents.
  - Touch [RX Doc. Settings], select the processing method, and then touch [Enter].

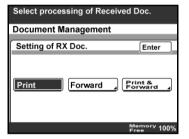

- Specify the forwarding destination if "Forward" is selected in the Setting of RX Doc. screen.
  - To add a new forwarding destination, touch [Next Destination].
  - To view the details of the forwarding destinations, touch [Forward], and then touch [Detail].



- To delete a forwarding destination, touch [Forward], and then touch [Delete].
- 9 Touch [Enter] until the initial screen appears.

### Specifying the processing of documents received on other lines

You can specify the processing method for documents received on lines other than a port.

The following settings can be specified.

Item	Description
RX Doc. Settings	When "Distribution Conditions" is set to "Specified", select the processing method for the received document. Print: Prints the document.  Forward: Forwards the data to the specified destination. Print and Forward: Prints the document and at the same time forwards the data to the specified destination. Memory RX: Receives the memory by force.
Forwarding Dest	Specify the forwarding destination if "Forward" is selected in the Setting of RX Doc. screen.  Touch [Next Destination], touch the button for the recipient's address, and then touch [Enter].




### Note


If bit 7 of mode 306 is set to "1" in the Soft SW Setting screen, only "Port" is available. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

### To specify the processing of received documents


- 1 Enter Administrator mode, and then touch [Admin. 1].
- 2 Touch [Document Management].

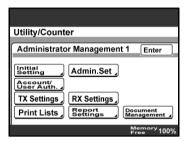

3 Touch [RX Document].

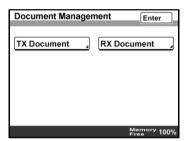

4 Touch [All Other Documents].

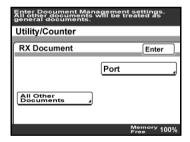

- 5 Specify the processing method for received documents.
  - Touch [RX Doc. Settings], select the processing method, and then touch [Enter].



- Specify when "Forward" is selected in the Setting of RX Doc. screen.
  - To add a new forwarding destination, touch [Next Destination].
  - To view the details of the forwarding destinations, touch [Forward], and then touch [Detail].



 To delete a forwarding destination, touch [Forward], and then touch [Delete].

Touch [Enter] until the initial screen appears.

# 10.8 Specifying software switch settings (machine functions)

By using the software switch settings, the mode, bit, and HEX values of each function of the machine can be changed from the factory settings to meet your specific needs.



### Reminder

Do not change any modes or bits other than those described in this manual.



### Note

When "Enhance Security" is set to "ON", the software switch settings cannot be changed.

### Software switch settings

Item	Description
Mode Selection	Parameters to be specified are represented by a three-digit number. Type in the value using the keypad.
Bit Selection	A mode status is expressed with an eight-digit number. By specifying a binary number (1 or 0) for each of the bits 0 through 7, a setting can be specified for each parameter.
HEX Selection	The settings of each mode are expressed using hexadecimal numbers (combinations of 0-9 and A-F). The bit selection "00110000" equals the HEX selection "30".  Specify mode settings either with bit or hexadecimal selections.


10-28 bizhub 362/282/222

Examples of settings in bit selection (binary numbers) and HEX selection (hexadecimal numbers) are shown below.


Decimal number	Bit Selection (binary number)	HEX Selection (hexadecimal number)	
0	0000 0000	00	
1	0000 0001	01	
2	0000 0010	02	
3	0000 0011	03	
4	0000 0100	04	
5	0000 0101	05	
6	0000 0110	06	
7	0000 0111	07	
8	0000 1000	08	
9	0000 1001	09	
10	0000 1010	0A	
11	0000 1011	0B	
12	0000 1100	0C	
13	0000 1101	0D	
14	0000 1110	0E	
15	0000 1111	0F	
16	0001 0000	10	
17	0001 0001	11	
18	0001 0010	12	
19	0001 0011	13	
20	0001 0100	14	
252	1111 1100	FC	
253	1111 1101	FD	
254	1111 1110	FE	
255	1111 1111	FF	

### To specify a software switch setting


- 1 Enter Administrator mode, and then touch [Admin. 2].
- 2 Touch [Software SW].

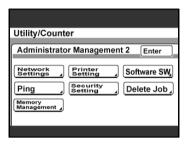


Touch [Mode Selection], and then type in the mode number using the keypad.

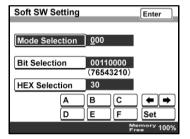

- Specify the mode setting using either bit selection or HEX selection.

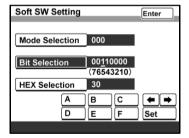

 To specify in hexadecimal values, touch [HEX Selection], specify the value by using the keypad and touching [A]—[F], and then touch [Enter].

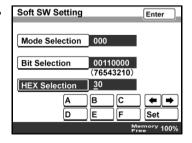

- 5 To change the settings for other modes, repeat steps 3 and 4.
- 6 Touch [Enter] until the initial screen appears.
- 7 Turn the machine off, then on again.



### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off. The machine may not operate correctly if it is turned on immediately after being turned off.

# Specifying whether or not the destination name is inserted (mode 001)

Select whether or not the destination name is inserted as transmission source information.

### Factory settings

Bit	7654 3210
Setting	0 0 0 1 0 1 0 0 (HEX: 14)

# Specifying settings

The shaded cells indicate the factory settings. The page numbers on the right side refer to the descriptions for the corresponding function.

Bit	Description	Setting	Description	Page Ref- erence
7, 6, 5, 4, 3, 2, 1		000101	*Do not change these bits when specifying settings for this function.	
0	Specifies whether or not the destination name is inserted.	0	The destination name is not inserted.	
		1	The destination name is inserted.	

10-32

# Specifying settings for address input and broadcast transmissions (mode 018)

Select whether or not recipients can be specified by directly entering their address, and select whether or not broadcast transmissions are permitted.

### Factory settings

Bit	7654 3210
Settings	0 0 0 0 0 0 0 1 (HEX: 01)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Reference
7, 6, 5, 4		0000	*Do not change these bits when specifying set- tings for this function.	
3	Specifies whether or not a	0	Permitted	
	destination can be speci- fied by directly entering its address.* 1	1	Prohibited	
2	Specifies whether or not	0	Permitted	
	broadcast transmissions are permitted.	1	Prohibited	
1, 0		01	*Do not change these bits when specifying set- tings for this function.	

<sup>&</sup>lt;sup>\*1</sup> Prohibited when bit 6 of software switch setting mode 477 is set so that the settings can only be specified in Administrator mode

# Specifying settings for the image in the results report (mode 023)

Specify whether or not an image of the transmitted document is added to the results report.

# Factory settings

Bit	7654 3210
Setting	1 1 1 1 1 0 0 0 (HEX: F8)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Reference
7, 6, 5, 4		1111	*Do not change these bits when specifying settings for this function.	
3	Specifies whether or	0	Is not added	
	not an image of the transmitted document is added to the results report.	1	Is added	
2, 1, 0		000	*Do not change these bits when specifying settings for this function.	

# Specifying administrator forwarding settings (mode 198)

You can specify whether a received document is forwarded to a destination specified by the administrator.

### Factory settings

Bit	7654 3210
Setting	1 1 0 1 0 0 0 0 (HEX: D0)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Ref- erence
7	Specifies whether a received	0	Not forwarded	page 10-2
	document is forwarded to a destination specified by the administrator.	1	Forwarded	0
6	Specifies whether to enable TX Forwarding when scanning.(*)	0	Not forwarded	
		1	Forwarded	
5, 4	Specifies the print conditions of transmission reports for TX Forwarding.(*)	00	Not output	
		01	Undeliverable	
		10	Always prints	
		11	*Do not specify these set- tings.	
3, 2, 1, 0		0000	*Do not change these bits when specifying settings for this function.	

<sup>(\*)</sup> Bit 7 of mode 198 is enabled only when "1 (transmit)" is specified.

### Blocking calls from callers that are not specified (mode 306)

This mode can be set if the optional fax kit is installed. Specify whether or not only faxes (G3) received from callers with a specified F-code (bulletin board/confidential/forwarding) can be received and all other faxes (G3) are blocked.

### Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

### Specifying settings

The shaded cells indicate the settings selected during production.

Bit	Description	Setting	Description	Page Refer- ence
7	Specifies whether or not to	0	Does not block	
	block calls from callers that are not specified.	1	Blocks	
6, 5, 4, 3, 2, 1, 0		0000000	*Do not change these bits when specifying settings for this function.	



#### Note

If bit 7 is set to "1", a setting for "All Other Documents" (displayed by touching [Admin. 1], then [RX Document]) cannot be specified.

10-36 bizhub 362/282/222

# Specifying Internet fax settings (mode 350)

You can specify the Internet fax capabilities of the destination machine and POP3 settings.

# Factory settings

Bit	7654 3210
Setting	1 0 1 0 1 0 0 0 (HEX: A8)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7		1	*Do not change this bit when specifying settings for this function.	
6	Specifies whether to enable	0	Arrival not confirmed	
	a confirmation (POP3) be- fore arriving to SMTP.	1	Arrival confirmed	
5, 4, 3, 2, 1, 0		101000	*Do not change these bits when specifying settings for this function.	

# Specifying whether to add the transmission source information when faxing or when forwarding received documents (mode 352)

You can specify how the transmission source information is added when faxing directly and when forwarding received documents.

### Factory settings

Bit	7654 3210
Setting	1 1 0 1 0 0 0 0 (HEX: D0)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Status	Description	Page Refer- ence
7, 6		11	*Do not change this bit when specifying settings for this function.	
5		0	Not added	page 10- 5
	sion source information is added when forwarding received documents.	1	Added	
4	Specifies how transmission	0	Outside body text	
	source information is added when forwarding received documents.	1	Inside body text	
3, 2, 1, 0		0000	*Do not change these bits when specifying settings for this function.	

10-38 bizhub 362/282/222

### Specifying SMTP transmission timeout settings (mode 356)

You can specify the time until a timeout of the SMTP server connection occurs when sending e-mail messages.

### Factory settings

Bit	7654 3210
Setting	0 1 0 0 0 0 0 0 (HEX: 40)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7, 6, 5, 4	Specifies the time until a	0001	30 seconds	
	timeout of the SMTP server connection occurs when	0010	60 seconds	
	sending e-mail messages.(*)	0011	90 seconds	
		0100	120 seconds	
		0101	150 seconds	
		0110	180 seconds	
		0111	210 seconds	
		1000	240 seconds	
		1001	270 seconds	-
		1010	300 seconds	
		Other	*Do not specify other settings than the above.	
3, 2, 1, 0		0000	*Do not change these bits when specifying settings for this function.	

<sup>(\*)</sup>After changing the settings, the machine must be turned off, then on again.



### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off.

The machine may not operate correctly if it is turned on immediately after being turned off.

### Specifying SMTP reception timeout settings (mode 357)

You can specify the time until a timeout of the SMTP server connection occurs when receiving e-mail messages.

### Factory settings

Bit	7654 3210
Setting	0 1 0 0 0 0 0 0 (HEX: 40)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7, 6, 5, 4	Specifies the time until a timeout of the SMTP server connection occurs when	0001	30 seconds	
		0010	60 seconds	
	sending e-mail messages.(*)	0011	90 seconds	
		0100	120 seconds	
		0101	150 seconds	
		0110	180 seconds	
		0111	210 seconds	
		1000	240 seconds	
		1001	270 seconds	1
		1010	300 seconds	
		Other	*Do not specify other settings than the above.	
3, 2, 1, 0		0000	*Do not change these bits when specifying settings for this function.	

<sup>(\*)</sup>After changing the settings, the machine must be turned off, then on again.



### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off.

The machine may not operate correctly if it is turned on immediately after being turned off.

10-40 bizhub 362/282/222

### Specifying POP3 reception timeout settings (mode 358)

You can specify the time until a timeout of the SMTP server connection occurs when receiving e-mail messages.

# Factory settings

Bit	7654 3210
Setting	0 0 1 0 0 0 0 0 (HEX: 20)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7, 6, 5, 4	6, 5, 4 Specifies the time until a timeout of the SMTP server connection occurs when	0001	30 seconds	
		0010	60 seconds	
	sending e-mail messages.(*)	0011	90 seconds	
		0100	120 seconds	
		0101	150 seconds	
		0110	180 seconds	
		0111	210 seconds	
		1000	240 seconds	
		1001	270 seconds	
		1010	300 seconds	
		Other	*Do not specify other settings than the above.	
3, 2, 1, 0		0000	*Do not change these bits when specifying settings for this function.	

<sup>(\*)</sup>After changing the settings, the machine must be turned off, then on again.



### Reminder

When turning the machine off, then on again with the main power switch, wait about 10 seconds to turn the machine on after turning it off.

The machine may not operate correctly if it is turned on immediately after being turned off.

# Specifying the default address input screen (mode 366)

Specify the settings concerning the default address input screen for the Scan to FTP and Scan to SMB operations.

Settings at time of purchase

Bit	7654 3210
Setting	0 0 0 0 1 0 0 0 (HEX: 08)

# Specifying settings

The shaded cells represent the factory settings.

Bit	Description	Setting	Description	Page Refer- ence
7		0	*Do not change this bit when specifying settings for this function.	
6	Specifies the default screen that is displayed when regis-	0	Gives priority to IP address input	
	tering a one-touch dial but- ton with the Scan to FTP and Scan to SMB operations.	1	Gives priority to host name input	
5, 4, 3, 2, 1, 0		001000	*Do not change these bits when specifying settings for this function.	

10-42

# Specifying DNS query timeout setting (mode 367)

You can specify the time until a timeout of the DNS server connection occurs.

### Factory settings

Bit	7654 3210
Setting	0 0 1 0 0 0 0 0 (HEX: 20)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7, 6, 5, 4,	Specifies the time until a	00001	20 seconds	
3	timeout of the DNS server connection occurs.	00010	40 seconds	
		00011	80 seconds	
		00100	160 seconds	
		10101	320 seconds	
		00110	640 seconds	
		Other	*Do not specify other settings than the above.	
2, 1, 0		000	*Do not change these bits when specifying settings for this function.	

# Including the scan transmission log in the activity report (mode 368)

Specify whether or not the transmission log is included in the activity report. Factory settings

Bit	7654 3210
Setting	1 1 0 0 0 0 1 0 (HEX: C2)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions for the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7, 6, 5, 4, 3, 2		110000	*Do not change these bits when specifying settings for this function.	
1	1 Specifies whether or not the		Not included	
	log is included in the activity report during scan transmissions.	1	Included	
0		0	*Do not change this bit when specifying settings for this function.	

# Specifying switching of the SMTP server (mode 371)

Two SMTP servers can be registered for Scan to E-Mail and Internet fax operations. The SMTP server will be switched when a transmission error occurs.

# Factory settings

Bit	7654 3210
Setting	0 1 0 0 0 0 0 0 (HEX: 40)

### Specifying settings

The shaded cells indicate the factory settings. The page numbers on the right side refer to the descriptions for the corresponding function.

Bit	Description	Setting	Description	Page Ref- erence
7, 6, 5		010	*Do not change these bits when specifying settings for this function.	
4	Specifies operation of the SMTP server.	0	The SMTP server is not switched when an error occurs.	page 3-19, page 9-76
		1	The SMTP server is switched when an error occurs.	
3, 2, 1, 0		0000	*Do not change these bits when specifying settings for this function.	

# Specifying the transmission interval when e-mail messages are separated (mode 372)

You can specify the transmission interval when e-mail messages are separated.

### Factory settings

Bit	7654 3210
Setting	0 0 0 0 1 1 1 1 (HEX: 0F)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Ref- erence
7, 6, 5, 4, 3, 2, 1, 0		00000101	5 seconds	page 3-35
		00001010	10 seconds	
		00001111	15 seconds	
		00011110	30 seconds	
		00111100	60 seconds	
		01011010	90 seconds	
		01111000	120 seconds	
		10010110	150 seconds	
		10110100	180 seconds	
		11010010	210 seconds	
		11110000	240 seconds	
		00000000	*Do not specify this status.	

<sup>(\*)</sup>Settings between "0000 0001 (HEX: 01) 1 second" and "1111 1111 (HEX: FF) 255 seconds" can be specified. When specifying the value, refer to the HEX selection table.

10-46 bizhub 362/282/222

# Specifying the Internet fax full mode function settings (mode 373)

You can specify the Internet fax full mode function settings.

# Factory settings

Bit	7654 3210
Setting	0 0 0 0 1 0 0 0 (HEX: 08)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7	Specifies whether to enable the full mode function.	0	No	page 2-7
		1	Yes	
6, 5, 4, 3, 2, 1, 0		0001000	*Do not change these bits when specifying settings for this function.	

# Specifying e-mail security functions (mode 380)

You can specify security functions when receiving and sending e-mail messages.

### Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

### Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Status	Description	Page Ref- erence
7	Specifies whether to enable the e-mail reception authentication (APOP authentication) function.	0	No	
		1	Yes	
6	Specifies whether to enable the e-mail transmission au- thentication (SMTP authenti- cation) function.(*1)	0	No	page 3-19 page 3-25
		1	Yes	
5	Specifies whether to prohibit the e-mail transmission au- thentication (CRAM-MD5 authentication) function.(*2)	0	Not prohibited	
		1	Prohibited	
4	Specifies whether to prohibit the e-mail transmission au- thentication (LOGIN authen- tication) function.(*2)	0	Not prohibited	page 3-19 page 3-25
		1	Prohibited	
3	Specifies whether to prohibit the e-mail transmission au- thentication (PLAIN authen- tication) function.(*2)	0	Not prohibited	
		1	Prohibited	
2	Specifies whether to enable sharing of the SMTP authentication ID & password with the POP3 user name & password.	0	ID and password shared	
		1	ID and password not shared	
1, 0		00	*Do not change these bits when specifying settings for this function.	

<sup>(\*1)</sup> The SMTP authentication function is enabled when all of the conditions described below have been met.

- Bit 6 of mode 380 is set to "1".
- The SMTP authentication user name & password and the POP3 user name & password are being shared, and bit 2 of mode 380 is set to "0".

- The SMTP authentication user name and & password and the POP3 user name & password are not being shared, bit 2 of mode 380 is set to "1", and "SMTP Authentication User Name" and "SMTP Authentication User Password" are specified in the Network Settings screen.
- Either bit 5, 4, or 3 of mode 380 is set to "0".

(\*2) When all of the authentication functions are enabled (bits 5, 4, and 3 are set to "0"), the priority is given in the order of "CRAM-MD5 authentication (bit 5)", "LOGIN authentication (bit 4)", and "PLAIN authentication (bit 3)".

# Specifying use of registered user authentication information to log on to the LDAP server (mode 466)

Specify whether or not user names and passwords registered with user authentication are used to log on to the LDAP server.

# Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

# Specifying settings

The shaded cells indicate the settings selected during production.

Bit	Description	Setting	Description	Page Refer- ence
7	Specifies whether or not the	0	Not used for logon	
	user name/password used for external server authentication is used to log on to the LDAP server.		Used for logon	
6, 5, 4, 3, 2, 1, 0		0000000	*Do not change these bits when specifying settings for this function.	



### Detail

The information for the LDAP server to be connected to must be registered in order to use the LDAP server. In addition, when LDAP and user authentication are synchronized, select "Active Directory" as the user authentication method. Select "GSS-SPNEGO" as the LDAP authentication method. For details on the user authentication method, refer to the User manual [Copy Operations]. For details on the LDAP authentication method, refer to "LDAP Setting" on page 3-44 or "LDAP (Administrator mode)" on page 9-70.

10-50 bizhub 362/282/222

# Specifying whether to enable access locks, and whether to enable the password rules (mode 469)

Specify whether to lock access if the password is entered incorrectly, and specify whether to apply the password rules.

# Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7	Specify whether to	0	Does not lock access	
	lock access when a password (account track and administra- tor passwords) is en- tered incorrectly three times.	1	Locks access	
6, 5		00	* Do not change these bits when specifying settings for this function.	
4	For security, specify whether to apply a	0	Do not apply a password rule	
þ	password rule.	1	Apply a password rule	
3, 2, 1, 0		0000	* Do not change these bits when specifying settings for this function.	



## Note

For the Access Lock function, refer to User manual [Copy Operations].

If applying a password rule, the conditions that are required in the password are described below.

8 alphanumeric characters (only 8 alphanumeric character for the administrator password, and 8 alphanumeric characters or more for the user authentication user password)

Only passwords with the same characters are not allowed.

Passwords that do not meet the password rule are not accepted. For the password rules, refer to User manual [Copy Operations].

# Specifying the export file format (mode 470)

You can specify the file format and default value when exporting registered information for one-touch dialing.

# Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Ref- erence
7	Export file format	0	TXT format	page 9-42
		1	CSV format	
6	Default value of export file	0	Mode 1	
	type	1	Mode 2	
5, 4, 3, 2, 1, 0		000000	*Do not change these bits when specifying settings for this function.	

10-52

# Specifying settings to limit the use of communication modes-1 (mode 475)

Specify whether to permit or prohibit the use of individual communication modes. Prohibited communication modes do not appear in their selection screens.



# Note

Programmed one-touch dial buttons can be used for transmission even if a prohibited communication mode has been specified.

If all communication modes are prohibited (modes 475 to 477), some screens, such as those for specifying transmission settings, may not normally be displayed.

# Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Reference
7	Specifies whether or not the use of TCP/IP is prohibit- ed.	0	Permitted	
		1	Prohibited	
6	Specifies whether or not the use of LPD is	0	Permitted	
	prohibited.	1	Prohibited	
5	Specifies whether or	0	Permitted	
	not the use of a RAW port is prohibited.	1	Prohibited	
4	Specifies whether or	0	Permitted	
	not the use of SLP is prohibited.	1	Prohibited	
3	Specifies whether or	0	Permitted	
	not the use of a Scan to FTP is pro- hibited.	1	Prohibited	
2	Specifies whether or	0	Permitted	
	not the use of an FTP server is pro- hibited.	1	Prohibited	
1	Specifies whether or	0	Permitted	
	not the use of SNMP is prohibited.	1	Prohibited	
0		0	*Do not change this bit when specifying settings for this function.	

# Specifying settings to limit the use of communication modes-2 (mode 476)

Specify whether to permit or prohibit the use of individual communication modes. Prohibited communication modes do not appear in their selection screens.



# Note

Programmed one-touch dial buttons can be used for transmission even if a prohibited communication mode has been specified.

If all communication modes are prohibited (modes 475 to 477), some screens, such as those for specifying transmission settings, may not normally be displayed.

# Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 (HEX: 00)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Reference
7	7 Specifies whether or not the use of the Scan to SMB operation is prohibited.	0	Permitted	
		1	Prohibited	
6	Specifies whether or	0	Permitted	
	not the use of SMB printing is prohibited.	1	Prohibited	
5	Specifies whether or	0	Permitted	
	not the use of G3 faxing is prohibited.	1	Prohibited	
4	Specifies whether or	0	Permitted	
	not the use of the Scan to HDD operation is prohibited.	1	Prohibited	
3	Specifies whether or	0	Permitted	
	not the use of the Scan to E-Mail operation is prohibited.	1	Prohibited	
2	Specifies whether or	0	Permitted	
	not the use of the Internet fax operation is prohibited.	1	Prohibited	
1	Specifies whether or	0	Permitted	
	not the use of IP re- lay is prohibited.	1	Prohibited	
0	Specifies whether or	0	Permitted	
	not the use of IP address fax operation is prohibited.	1	Prohibited	



### Note

Bits 7 and 0 cannot be changed on the model for Europe.

10-56

Specifying settings to limit the use of communication modes-3/ Specifying restrictions for registering fax addresses and printing reports and specifying how one-touch dial recipients are displayed (mode 477)

Specify whether to permit or prohibit the use of individual communication modes. Prohibited communication modes do not appear in their selection screens.

Specify whether or not fax addresses can be registered and reports can be printed by users, and specify whether or not one-touch dial information is displayed in screens and reports.



### Note

Programmed one-touch dial buttons can be used for transmission even if a prohibited communication mode has been specified.

If all communication modes are prohibited (modes 475 to 477), some screens, such as those for specifying transmission settings, may not normally be displayed.

# Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Reference
7	Specifies whether or	0	Permitted	
	not the use of the computer (scanner) is prohibited.	1	Prohibited	
6	Specifies whether settings for register-	0	Settings can also be specified by users.	page 10-17
	ing mail addresses or printing reports can be specified by only the administra- tor or also by the us- er.	1	Settings can only be specified in Administrator mode.	
5	Specifies whether or	0	Displayed	
	not only recipient names are displayed (and the fax number or address is not displayed) in reports and Job List screens and when a one- touch dial button is touched. *1, *2	1	Not displayed	
4		0	*Do not change this bit when specifying settings for this function.	
not the use	Specifies whether or	0	Permitted	
	not the use of TCP- Socket is prohibited.	1	Prohibited	
2, 1, 0		000	*Do not change these bits when specifying settings for this function.	

<sup>\*1</sup> If bit 6 is set to "1", the settings will not be applied if bit 5 is set to "1" (not displayed). If you do not wish to display the fax number or address of the recipient, bit 6 must also be set to "1" (settings can only be specified in Administrator mode).

10-58 bizhub 362/282/222

<sup>\*2</sup> If the recipient is directly specified from the Direct Input tab, the recipient is displayed, even if "1" (not displayed) is selected.

# Specifying the deleting method for [Del.] in input screens (mode 478)

Specify the deleting method for [Del.] in input screens.

Select whether the character at cursor's position or the character to the left of the cursor is deleted.

# Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

# Specifying settings

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Reference
7	Specify the deleting method for [Del.] in	0	Deletes the character at the cursor's position	page 13-5
input scr	input screens.	1	Deletes the character to the left of the cursor	
6, 5, 4, 3, 2, 1, 0		0000000	*Do not change these bits when specifying settings for this function.	



# Note

North American model default setting: 1

Other model default setting: 0

# Specifying settings for limiting user authentication to only Scan functions (mode 479)

Specify whether or not user authentication is performed only when the [Fax/Scan] or [Extra Scan] key is pressed.

Factory settings

Bit	7654 3210
Setting	0 0 0 0 0 0 0 0 (HEX: 00)

# Specifying the setting

The shaded cells represent the factory settings. The page numbers on the right refer to the descriptions of the corresponding functions.

Bit	Description	Setting	Description	Page Refer- ence
7, 6, 5		000	*Do not change these bits when specifying settings for this function.	
4, 3, 2, 1, 0		11001	Limited	
	not to limit authenti- cation on Fax and Scan functions.	00000	Not limited	



### Reminder

Do not specify settings for mode 479 other than those described in "Specifying the setting".



### Detail

If user authentication is limited to Scan functions, touch [Account/User Auth.] in the Administrator Management 1 screen, and then select "External Server" as the user authentication method. For details on the external server authentication settings, refer to the User manual [Copy Operations].

10-60 bizhub 362/282/222

# 10.9 Specifying SSL/TLS settings

The SSL/TLS settings should be specified. When SSL/TLS is enabled, the communication between the machine and the client PC is encrypted to prevent leakage of information such as passwords.


Acquire SSL/TLS certificates in PageScope Web Connection. For details, refer to "SSL/TLS (Administrator mode)" on page 9-87.

# To specify SSL/TLS settings


- 1 Enter Administrator mode, and then touch [Admin. 2].
- 2 Touch [Security Setting].



3 Touch [SSL/TLS].

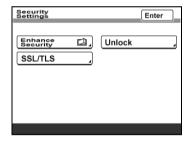

- 4 Specify whether to use SSL/TLS, and then touch [Enter].
  - If "Enhance Security" is set to "ON", "SSL/TLS" cannot be set to "OFF".

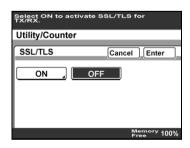

5 Touch [Enter] until the Initial screen appears.

# Reports and lists

# 11 Reports and lists

# 11.1 Checking the transmission conditions (TX Report)

The transmission report (TX Report) shows the document number, start date and time of the transmission, duration of the transmission, destination, mode, number of pages transmitted, transmission results, and transmission volume. According to the factory setting, the machine is set to automatically print a report after every 50 transmissions. The method for manually printing a report is described below.



# Detail

To change the report-related settings, refer to User manual [Copy Operations].




### Note


If bit 6 of mode 477 is set to "1" in the Software Switch Setting screen, reports can be printed with "Print Lists" in the Administrator Management 1 screen. For details, refer to "Specifying software switch settings (machine functions)" on page 10-28.

# To print a transmission report

1 Press the [Utility/Counter] key.

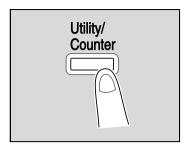


- 2 Touch [Reports].
- 3 Touch [TX Report].
  The transmission report is printed.

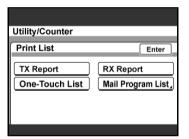

11-4

# Contents of the report

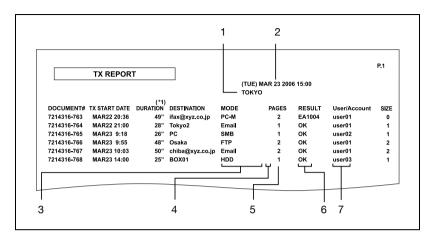

No.	Item	Description
1	Transmission source information (TSI)	Shows the name and number of the transmission source.
2	Report output date and time	Shows the date and time that the report was printed.
3	Mode	Shows the transmission mode used. The following may appear. PC e-mail: PC-M FTP: FTP SMB: SMB Internet fax: Email Scan to HDD: HDD IP-TX: IP address faxing PC(SCANNER): Scan to PC IP-RELAY: IP relay  Note "HDD" appears if the optional hard disk drive is installed.  "IP-TX", "PC(SCANNER)", and "IP-RE-LAY" appear if the optional scanner unit is
		installed.
4	Transmission function	Shows the symbol of the transmission function used. I: Individual login F: Forwarding S: Transmission to secondary address Blank: Other transmission
5	Pages	Shows the number of document pages that were transmitted.

No.	Item	Description	
6	Result	Shows the transmission result. Any of the following may appear.  OK: The transmission was completed successfully. INTERR: The transmission was interrupted.  F. MEM: The memory capacity was exceeded. NG: The transmission failed.  PT. DEL: The transmission to some destinations failed.  F.DATA: The size of the data exceeds the allowable limit.  IMG NG: The transmission resolution was incorrect so the transmission was ended.  Error code: For details, refer to "Network error list" on page 12-4.	
7	User/Account	Shows the user name or account name that was authenticated.	

<sup>\*1:</sup> When e-mail messages are transmitted separately by the separation setting, only the actual time of the e-mail message transmission is displayed in the "Duration" column. The control time for separating e-mail messages is not included.

When e-mail messages are separated, the duration between the beginning and end of the transmission and the duration time displayed in the report may vary.


11-6 bizhub 362/282/222

# 11.2 Checking the reception conditions (RX Report)


The reception activity report (RX Report) shows the document number, start date and time of the reception, duration of the reception, destination, mode, number of pages received, and the transmission results.

# Printing a reception activity report


1 Press the [Utility/Counter] key.

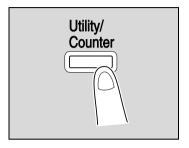

- 2 Touch [Reports].
- 3 Touch [RX Report].
  The reception activity report is printed.

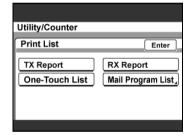

# Contents of the report

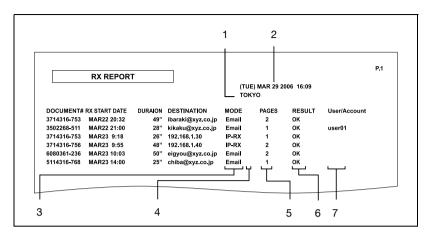

No.	Item	Description
1	TSI	Shows the name and address of the transmission source.
2	Report output date and time	Shows the date and time that the report was printed.
3	Mode	Shows the mode used for transmission. The following may appear. Internet fax: Email IP-RX: IP address faxing  Note "IP-RX" appears if the optional scanner unit is installed.
4	Reception functions	Shows the symbol of the transmission function used. I: Individual login F: Forwarding Blank: Other transmission
5	Pages	Shows the number of pages printed.
6	Result	Shows the transmission result. Any of the following may appear.  OK: The transmission was completed successfully. INTERR: The transmission was interrupted.  F. MEM: The memory capacity was exceeded. NG: The transmission failed.  IMG NG: The transmission resolution was incorrect so the transmission was ended.  B.PRT: The job is being printed.  Error code: For details, refer to "Network error list" on page 12-4.
7	User/Account	Shows the user name or account name that was authenticated.


11-8

# 11.3 Checking the destinations registered in one-touch dial buttons (One-Touch List)


You can print a list of the destinations registered with one-touch dial buttons.

# **Printing the One-Touch List**


1 Press the [Utility/Counter] key.

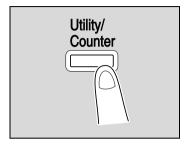

- 2 Touch [Reports].
- 3 Touch [One-Touch List].
  The one-touch list is printed.

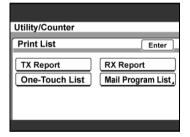

# Contents of the list

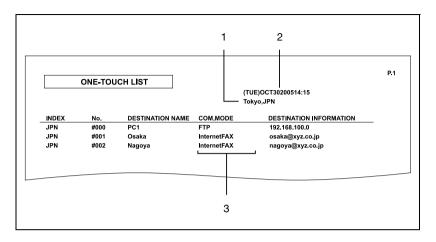

No.	Item	Description
1	Transmission source information (TSI)	Shows the name and number of the transmission source.
2	Report output date and time	Shows the date and time that the report was printed.
3	Communication mode	Shows the registered transmission mode. The following may appear. Internet fax: Internet FAX PC (e-mail): PC (E-MAIL) FTP: FTP SMB: SMB HDD: HDD IP-TX: IP address faxing PC(SCANNER): Scan to PC IP-RELAY: IP relay
		Note "HDD" appears if the optional hard disk drive is installed.  "IP-TX", "PC(SCANNER)", and "IP-RE-LAY" appear if the optional scanner unit is installed.


11-10 bizhub 362/282/222

# 11.4 Printing the mail program list

You can print the list of mail programs registered with one-touch dial buttons.


# To print the mail program list

Press the [Utility/Counter] key.

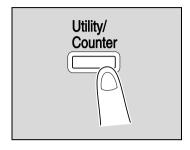


- 2 Touch [Reports].
- 3 Touch [Mail Program List].
  - If the optional fax kit has been installed, touch [Program List].

The mail program list is printed.

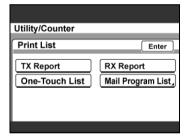

# Contents of the list

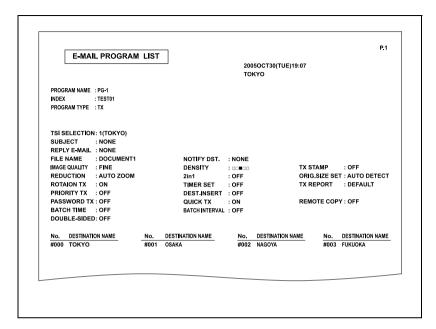


11-12 bizhub 362/282/222

# 11.5 Checking the function settings (Setting List)


You can print a list of all of the machine functions. Only the administrator can print the setting list.

# Printing the setting list

- 1 Press the [Utility/Counter] key, and then enter Administrator mode.
- 2 Touch [Admin. 1].
- 3 Touch [Print Lists].

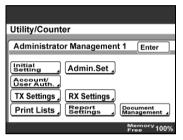


4 Touch [Setting List].
The setting list is printed.

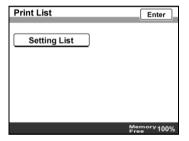

# Contents of the list

The POP 3 password and network administrator password appear as "\*\*\*\*\*".

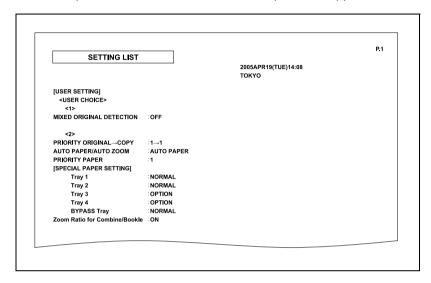

# 12 Scan function

# troubleshooting

# 12 Scan function troubleshooting

# 12.1 When the following are displayed

Screen	Cause	Action
-X- POP	POP3 reception fails.	Check that the POP3 user name and password are cor- rectly specified.
Registering in network.  Now registering the network settings. All operations cannot be done. Please walt a while.	The administrator is logged on from a computer on the network.	Wait until the administrator operation are completed and the administrator has logged out. If the administrator closes the Web browser without logging out, the administrator must log in again and log off correctly.

# 12.2 Network error list

When an error occurs such as during a scan transmission, error codes are displayed on the job list screen and in a report. When an error code is displayed, troubleshoot the problem as described below.

# Internet fax transmission/Scan to E-Mail

Error code	Cause	Action
E4DXXX	Since the SMTP server address is not specified, connection to the e-mail server is not possible.	Specify the SMTP server address. Refer to page 3-19.
E5AXXX	Since the DNS settings are incorrect, transmission is not possible.	Check the DNS settings. Refer to page 3-15.
E5DXXX	Since the e-mail address or the destination e-mail address is not specified or is incorrect, transmission is not possible.	Check the settings and the destination e-mail address. Refer to page 3-19.
E6FXXX	The data is too large to be sent.	Even when scanning is complete, transmission may not be possible depending on the original document. Change the quality to fine or standard, and then send the data again.
E7XXXX	SMTP authentication failed.	Check the SMTP authentication account and password.
EAXXXX	The LAN cable is not connected, communication to the SMTP server failed, or transmission was attempted to an incorrect destination address.	Check that the LAN cable is properly connected, that the SMTP server can communicate, that the network settings such as the subnet mask are correct, and that the destination e-mail address is correct. Refer to page 3-19.
EAX212	SMTP authentication is requested.	Enable the SMTP authentication settings. Refer to page 3-19.
EABXXX	POP3 before SMTP authentication failed.	Check the POP3 account and password. Refer to page 3-25.

12-4 bizhub 362/282/222

# Internet fax reception

Error code	Cause	Action
E40XXX	Since the POP3 server address is not specified, connection to the e-mail server is not possible, or connection to the server is not possible due to an error in the server.	Check the POP3 server address. Check that the POP3 server is operating properly. Refer to page 3-25.
E50XXX E51XXX E52XXX	Since the POP3 user name or password is not specified or is incorrect, reception is not possible.	Check the user name and password settings. Refer to page 3-25.
E60XXX E61XXX	Data incompatible with POP3 reception was received. An email with a file attachment of a format other than TIFF-F, or text that exceeds 1,000 characters per line, or large data, or an e-mail message containing no data was received.	Check with the sender.
E7XXXX	APOP authentication failed.	Check the POP3 account and password. Refer to page 3-25.
ECXXXX	The LAN cable is not connected, communication to the POP3 server failed, or the user name and password are not registered in the server and differ from the settings on this machine.	Check that the LAN cable is properly connected and that the POP3 server settings are correct. Refer to page 3-25.

# Scan to FTP

Error code	Cause	Action
ED09C6	The LAN cable is not connected, or the destination address is incorrect.	Check that the LAN cable is correctly connected. Also, check that the settings for the FTP server address, port number, and proxy server are correctly specified.
ED09C7	The user name or password is incorrect.	Check the user name and password.
ED09C8	The specified folder does not exist.	Check that the save destination folder exists and check the folder name.
ED09C9	The FTP server capacity is full.	Free up disk space on the FTP server.
ED09CA	An error occurred when data was being transferred.	Check that the FTP server is operating properly, or check that the LAN cable is not broken.
EF09CF	The protocol is incorrect.	Ask the administrator to deactivate the protocol usage restrictions, or look for other delivery methods.
ED09CC	The FTP server is malfunctioning if other than the above.	Check the status of the FTP server.
EF09CD	Available memory is not sufficient.	Expand the memory of this machine.
EF09D0	Characters that cannot be used have been entered.	Change the file name.

12-6 bizhub 362/282/222

# Scan to SMB

Error code	Cause	Action
ED09C6	The LAN cable is not connected, or the destination address is incorrect.	Check that the LAN cable is correctly connected. Also, check that the settings for the destination address and port number are correctly specified.
ED09C7	The user name or password is incorrect.	Check the user name and password.
ED09C8	The specified folder does not exist.	Check that the save destination folder exists and check the folder name.
ED09C9	The disk capacity is full.	Free up the disk space on the corresponding disk.
ED09CF	The protocol is incorrect.	Ask the administrator to deactivate the protocol usage restrictions, or look for other delivery methods, or look for other delivery methods.
ED09CC	SMB transmission malfunctions other than the above	Check the status of the destination device. A Scan to SMB transmission cannot be performed with a UNIX or LINUX system.
EF09CD	Available memory is not sufficient.	Expand the memory of this machine.
EF09D0	Characters that cannot be used have been entered.	Change the file name.

# 12.3 Troubleshooting

Perform the procedures described below to troubleshoot a malfunction.

# Internet fax transmission/Scan to E-Mail

Symptom	Cause	Action
Cannot send	The connection is incorrect.	Check the hub LED indicator and check the connection status.
	A user is logging on and sending e-mails when a user e-mail address is not registered.	Register the e-mail address of the user who is logging on.
	Required settings for this machine have not been registered.	Specify the required network settings. Refer to page 3-4.
	The LAN cable is broken.	Replace the LAN cable.
	Other causes	Check the communication malfunction under "Type" in the job list, and refer to the error code. Refer to page 12-4.
Transmission is possible, but the image cannot be output on the destination terminal and computer.	The destination terminal does not have the ability to process the transmitted image.	Specify the settings such as the size, quality, and encoding method supported by the destination terminal, and then send the data again. Refer to page 3-35.
	No text was inserted into the transmitted document.	Depending on the e-mail software, attachments cannot be viewed when only the attachment is sent without text. Specify the settings to insert text into the document being sent, and then send the document again. Refer to page 3-35.
The transmission cancellation has been specified, but it is not canceled.	Time may be required to cancel an Internet fax.	Wait until the job is canceled.

12-8 bizhub 362/282/222

# Internet fax reception

Symptom	Cause	Action
Cannot receive	The connection is incorrect.	Check the hub LED indicator and check the connection status.
	The Auto Receive Check setting is not specified.	Specify the time interval to check reception automatically. Refer to page 3-29.
	Required settings for this ma- chine have not been regis- tered.	Specify the required network settings. Refer to page 3-4.
	The same POP3 user name is being used by another e-mail software and user.	Do not use the same POP3 user name with other e-mail software.
	The LAN cable is broken.	Replace the LAN cable.
Can be received but cannot be printed.	Data in a format that is not supported is attached, or an email with no data is received.	Ask the sender to send a TIFF-F file or text.
	The received document has not been specified to be printed.	To print the received document, specify the received document to be printed. Refer to page 10-12, page 10-22.
	Memory exceeded	Print the saved documents, decrease the memory usage of this machine, and then ask the sender to send the data again.
	Other causes	Check the communication malfunction under "Type" in the job list, and refer to the error code. Refer to page 12-4
Binary code data is received (printed).	Data is attached in a format other than MIME, or the e-mail is received via a server that does not support MIME.	When data is attached in a format other than MIME, the binary code is printed as text. (This is not a machine malfunction.) Ask the sender to send the data in the MIME format.
The same document is received many times.	Since the size of the e-mail is too large, a connection time- out with the server occurs while the data is being re- ceived.	From a computer, receive the data as proxy and delete the corresponding email from the server. Ask the sender to decrease the size of the e-mail and to send it again.
The reception can- cellation has been specified, but it is not canceled.	Time may be required to cancel an Internet fax reception.	Wait until the job is canceled.
The POP3 reception malfunction icon does not disappear.	Since the time of the Auto-RX has not elapsed since the previous time a POP3 reception failed, POP3 reception is not performed.	Once the POP3 reception malfunction icon is displayed, it does not disappear until reception is successful. Specify the setting to shorten time of the Auto-RX, and check that POP3 reception is possible.

# Other

Symptom	Cause	Action
An attempt to de- liver an e-mail mes- sage has been made, but trans- mission fails.	The e-mail address of the specified user to which the email message is to be delivered is not registered.	When sending an e-mail message, the e-mail address must be specified. Register the email address of the specified user to which the e-mail message is to be delivered.
The e-mail mes- sage is delivered	The forwarding destination address is incorrect.	Check the one-touch e-mail address specified for the forwarding destination.
from this machine, but it is not deliv- ered to the for- warding destination.	Other causes	The user e-mail address of the specified e-mail delivery may have returned an error e-mail message. Check the contents of the email message.
"Network Set- tings" does not ap- pear on the Administrator Man- agement screen.	Machine malfunction	Contact your technical representative.

12-10

# 13 Appendix

# 13 Appendix

# 13.1 Product specifications

# Internet fax specifications

Item	Specifications
Transmission protocol	E-mail send: SMTP (IETF RFC 2821 and RFC 2822), TCP/IP E-mail receive: POP3 (IETF RFC 1725 and RFC 1939), TCP/IP
Original document sizes transmitted	Letter □/☐, Legal □, 11 × 17 □, A4 □/☐, B4 □, A3 □
Resolution	200 × 100 dpi, 200 × 200 dpi, 400 × 400 dpi, 600 × 600 dpi
Data format	E-mail format: MIME Attachment format: TIFF-F
Encoding method	MH, MR, MMR
Compatible cable	Ethernet LAN (100Base-TX, 10BASE-T connection)

# Scan to E-Mail specifications

Item	Specifications
Transmission protocol	E-mail send: SMTP (IETF RFC 2821 and RFC 2822), TCP/IP
Original document sizes transmitted	Letter - /-, Legal -, 11 × 17 -, A4 -/-, B4 -, A3 -
Resolution	200 × 100 dpi, 200 × 200 dpi, 400 × 400 dpi, 600 × 600 dpi
Data format	E-mail format: MIME Attachment format: TIFF-F, PDF
Encoding method	MH, MMR
Compatible cable	Ethernet LAN (100Base-TX, 10BASE-T connection)
Destination registration	Computer e-mail address registration: Up to 540

# Scan to FTP specifications

Item	Specifications
Transmission protocol	TCP/IP
Original document sizes transmitted	Letter □/□, Legal □, 11 × 17 □, A4 □/□, B4 □, A3 □ (Depending on the setting, other sizes can be sent.)
Resolution	200 × 100 dpi, 200 × 200 dpi, 400 × 400 dpi, 600 × 600 dpi
Data format	Single-page TIFF, multipage TIFF, PDF
Encoding method	MH, MMR
Destination registration	FTP Server address or host name registration: Up to 540

# Scan to SMB specifications

Item	Specifications
Transmission protocol	TCP/IP
Original document sizes transmitted	Letter □/□, Legal □, 11 × 17 □, A4 □/□, B4 □, A3 □ (Depending on the setting, other sizes can be sent.)
Resolution	200 × 100 dpi, 200 × 200 dpi, 400 × 400 dpi, 600 × 600 dpi
Data format	Single-page TIFF, multipage TIFF, PDF
Encoding method	MH, MMR
Destination registration	Destination computer IP address or host name registration: Up to 540


# 13.2 Entering text

This section contains details on using the keyboard that appears in the touch panel for typing in passwords and text to register one-touch recipients. The keypad can also be used to type in numbers.

The following procedure describes how to enter characters in the User Name screen when registering users for user authentication.

### To type text

- In the keyboard that appeared, touch the button for the desired character.
  - Numbers can also be typed in with the keypad.
  - To type in uppercase letters, touch [Caps].
  - To cancel Caps mode, touch [Caps] again.

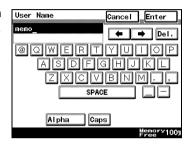



### Note

To cancel the entered text, touch [Cancel].

To clear all entered text, press the [C] (clear) key.



### Detail

To switch between entering letters or symbols, touch the button for switching the input mode.

To change a character in the entered text, touch and to move the cursor to the character to be changed, touch [Del.], and then type in the desired letter or number.

The software switch settings can be used to change how characters are deleted. For details on the software switch settings, refer to "Specifying software switch settings (machine functions)" on page 10-28.

If the number of characters exceeds the limit allowed, the last character is replaced with the last character entered.

# List of available characters

Туре	Characters
Alphanumeric characters / symbols	ABCDEFGHUKLMNOPQRSTUVWXYZabcdefghijklmnopqrstuvwxyz []'Gpace]!"#\$%&'()+,-,'::<=>?@[]_( )`*~0123456789

# 13.3 Glossary

Term	Definition
10Base-T/100Base- TX/1000Base-T	A standard for Ethernet, which is connected through a cable consisting of twisted copper wire pairs. The transmission speed of 10Base-T is 10 Mbps, of 100Base-TX is 100 Mbps, and of 1000Base-T is 1,000 Mbps.
Active Directory	A service that manages all information such as hardware resources for servers, clients, and printers on a network supported by Microsoft and the attributes and access permissions of the users
anonymous FTP	While normal FTP sites are protected by an account name and password, this type of FTP site can be used by anyone without a password by simply entering "anonymous" as the account name.
APOP	Abbreviation for Authenticated Post Office Protocol. An authentication method with encrypted passwords, which results in increased safety, as compared to the usual unencrypted passwords used by POP to retrieve e-mail messages
AppleTalk	A generic name for the protocol suite developed by Apple Computer for computer networking
Auto IP	A function for automatically acquiring the IP address. If acquisition of the IP address failed with DHCP, an IP address is acquired from the address space of 169.254.0.0.
bit	Abbreviation for Binary Digit. The smallest unit of information (data quantity) on a computer or printer. Displays data using 0 or 1.
ВМР	Abbreviation for Bitmap. A file format for saving image data, which uses the .bmp extension. Commonly used on Windows platforms. You can specify the color depth from monochrome (2 values) to full color (16,777,216 colors). Images are not usually compressed when saved.
Byte	Unit of information (data quantity) on a computer or printer. Configured as 1 byte equals 8 bits.
Client	A computer that uses the services provided by a server through a network
Contrast	The difference in intensity between the light and dark parts of the image (light/dark variation). An image with little light/dark variation is said to have a low contrast, and an image with large light/dark variation is said to have a high contrast.
CSV	Abbreviation for Comma-Separated Values. One of the formats for saving database or spreadsheet data as a text file. (The file extension is ".csv".) The data, which is separated by commas (as the delimiter), can be shared by different applications.
Default	The initial settings. The settings first selected when the machine is turned on, or the settings first specified when the function is selected.
Default Gateway	A device, such as a computer or router, used as a "gateway" to access computers not on the same LAN
Density	An indication of the amount of darkness in the image

D.C. W.
Definition
Abbreviation for Dynamic Host Configuration Protocol. A protocol in which a client computer on a TCP/IP network automatically specifies the network settings from the server. With collective management of the IP address for DHCP clients on the DHCP server, you can avoid duplication of an address and you can build a network easily.
Abbreviation for Domain Name System. A system that acquires the supported IP addresses from host names in a network environment. DNS allows the user to access other computers over a network by specifying host names, instead of difficult to memorize and understand IP addresses.
Abbreviation for Dots Per Inch. A resolution unit used by printers and scanners. Indicates how many dots per inch are represented in an image. The higher the value, the higher the resolution.
Software that works as a bridge between a computer and a peripheral device.
LAN transmission line standard
The characters added to the file name in order to differentiate file formats. The file extension is added after a period, for example, ".bmp" or ".jpg".
Abbreviation for File Transfer Protocol. A protocol for transferring files over the Internet or an intranet on the TCP/IP network.
Hardware and software used as the point where a network is connected to a network. A gateway also changes data formats, addresses, and protocols according to the connected network.
The light and dark levels of an image. As the number increases, smoother brightness variations can be reproduced.
Monochrome image expressive form using the gradation information from black to white
Authentication methods for logging on to the LDAP server. The authentication method (GSS-SPENGO, SIMPLE or Digest MD5) for the LDAP server differs depending on the server being used and the server settings.
The method of producing the light and dark parts of an image through varying sizes of black and white dots
Large capacity storage device for storing data. The data can be stored even if the power is turned off.
Displayed name of a device over a network
Abbreviation for HyperText Transfer Protocol. A protocol used to send and receive data between a Web server and a client (Web browser). Documents containing images, recordings, and video clips can be exchanged with the expressive form information.
Abbreviation for Image Color Management. The color management system used by Windows. Color differences of input/output devices, such as monitors, scanners and printers, are adjusted to reproduce colors so that they are nearly the same on any device.
Abbreviation for Internet Message Access Protocol. The protocol for retrieving e-mail messages with the function for managing mailboxes on the server. Currently, IMAP4 (the fourth version of IMAP) is most often used.

Term	Definition
Install	To install hardware, operating systems, applications, printer drivers on to a computer
IPP	Abbreviation for Internet Printing Protocol. A protocol that sends and receives print data and controls printers over the Internet on a TCP/IP network. Data can also be sent to printers in remote areas to print over the Internet.
IP Address	A code (address) that is used to identify individual network devices over the Internet. A maximum of three digits for four numbers are displayed such as 192.168.1.10. IP addresses are assigned to devices, including computers, which are connected to the Internet.
J2RE	Abbreviation for Java 2 Runtime Environment. One type of JavaVirtual Machine (Java VM) in a program operating environment written in the object-oriented language Java, developed by Sun Microsystems. This is required to run applications that were created with Java.
Java	A programming language developed by Sun Microsystems, which runs on most computers, regardless of the installed hardware and operating system. However, in order to run Java applications, an operating environment called "Java Virtual Machine (Java VM)" is required.
JPEG	Abbreviation for Joint Photographic Experts Group. One of the file formats for saving image data. (The file extension is ".jpg".) The compression ratio is roughly 1/10 to 1/100. This format uses an effective method in the compression of continuous-tone images, such as photographs.
Kerberos	A type of network authentication system used by Windows 2000 or later. Used in Active Directory authentication. Users can be safely and efficiently authenticated with a two-phase authentication (user logon and network resource usage) on a dependable site set up on the network.
LAN	Abbreviation for Local Area Network. A network which connects computers on the same floor, in the same building, or in neighboring buildings.
LDAP	Abbreviation for Lightweight Directory Access Protocol. On a TCP/IP network, such as the Internet or an intranet, this protocol is used to access a database for managing environment information and the email addresses of network users.
LPR/LPD	Abbreviation for Line Printer Request/Line Printer Daemon. A printing method over a network in a Windows NT system or UNIX system. Using TCP/IP, you can output print data from Windows or Unix to a printer over a network.
MAC Address	Abbreviation for Media Access Control address. With a special ID number for each Ethernet card, data can be sent and received between the cards. A number consists of 48 bits. The first 24 bits consist of a special number for each manufacturer controlling and assigning IEEE. The last 24 bits consist of a number that the manufacturer assigns uniquely to the card.
Memory	Storage device for storing data temporally. When the power is turned off the data may or may not be erased.
NetBEUI	Abbreviation for NetBIOS Extended User Interface. A network protocol developed by IBM. By simply specifying the computer name, you can build a small-scale network.

Term	Definition
NetWare	Network operating system developed by Novell. NetWare IPX/SPX is used as the communication protocol.
МН	Abbreviation for Modified Huffman. A data compression encoding method for fax transmissions. Documents containing mostly text are compressed to about 1/10 their original size.
MIB	Abbreviation for Management Information Base. In a TCP/IP transmission, this uses SNMP to define the management information format for a group of network devices. There are two formats: the manufacturer-specific private MIB and the standardized MIB.
MMR	Abbreviation for Modified Modified Read. A data compression encoding method for fax transmissions. Documents containing mostly text are compressed to about 1/20 their original size.
NTLM	Abbreviation for NT LAN Manager. User authentication method used by Windows NT or later. With the MD4 and MD5 encoding methods, passwords are encoded.
NTP	Abbreviation for Network Time Protocol. The protocol for correctly adjusting the computer's internal clock over the network. In a hierarchical method, the time is adjusted with the server at the highest level using GPS to acquire the correct time, which is then referenced by each lower level host.
OCR	Abbreviation for Optical Character Reader. A device or software that converts handwritten or printed documents to text data by optically scanning it and, through comparison with a previously stored pattern, specifies the characters.
OS	Abbreviation for Operating System. Basic software for controlling the system of a computer.
PASV	Abbreviation for PASsiVe. A mode for connecting to an FTP server from within a firewall. If this mode is not specified, the firewall will be considered inaccessible and the connection will be terminated, preventing the file from being sent.
Peer-to-peer	A network format that allows connected devices to communicate without using a dedicated server
PDF	Abbreviation for Portable Document Format. An electronically formatted document which uses the .pdf extension. Based on the Post-Script format, you can use the free Adobe Acrobat Reader software to view documents.
Pixel	An image pixel. The smallest unit of an image.
POP	Abbreviation for Post Office Protocol. A protocol for retrieving e-mail messages from a mail server. Currently, POP3 (the third version of POP) is most often used.
Port Number	The number that identifies the transmission port for each process running on a computer on the network. The same port cannot be used by multiple processes
Proxy Server	A server that is installed to act as an intermediary connection be- tween each client and different servers to effectively ensure security over the entire system for Internet connections

Term	Definition
RAW port number	The TCP port number used when the RAW protocol is selected for Windows TCP printing. Usually set to 9100.
Resolution	Displays the ability to reproduce the details of images and print matter correctly
Preview	A function that allows you to view an image before processing a print or scan job
Property	Attribute information When using a printer driver, various functions can be specified in the file properties. In the file properties, you can check the attribute information of the file.
Protocol	The rules that allow computers to communicate with other computers or peripheral devices
Scanning	With the scanning operation of the scanner, an image is read while the row of image sensors is gradually moved. The direction that the image sensors are moved is called the main scanning direction, and the direction in which the image sensors are arranged is called the sub-scanning direction.
Screen Frequency	Indicates the density of dots used to create the image
Single-Page TIFF	A single TIFF file that contains only a single page
SMB	Abbreviation for Server Message Block. A protocol that shares files and printers over a network and which is mainly used by Microsoft Windows.
SMTP	Abbreviation for Simple Mail Transfer Protocol. A protocol for sending and forwarding e-mail.
SNMP	Abbreviation for Simple Network Management Protocol. A management protocol in a network environment using TCP/IP.
SSL/TLS	Abbreviation for Secure Socket Layer/Transport Layer Security. The encoding method for safely transmitting data between the Web server and browser.
Subnet Mask	The unit used to divide a TCP/IP network into small networks (subnetworks). It is used to identify the bits in a network address that are higher than the IP address.
TCP/IP	Abbreviation for Transmission Control Protocol/Internet Protocol. The defacto standard protocol used by the Internet that uses IP addresses to identify each network device.
TIFF	Abbreviation for Tagged Image File Format. One of the file formats for saving image data. (The file extension is ".tif".) Depending on the tag indicating the data type, information for various image formats can be saved in a single image data.
Thumbnail	A small image that shows the contents of the image or document file (the image displayed when the file was opened)
USB	Abbreviation for Universal Serial Bus. A general interface standard for connecting a mouse, printer, and other devices to a computer.
Uninstall	To delete software installed on a computer
Web Browser	Software such as Internet Explorer and Netscape Navigator for viewing Web pages

Term	Definition
Zone	A name given in an AppleTalk network. This is used to group multiple devices on an AppleTalk network.

### 13.4 Index

### Numerics

2in1 4-18, 4-21, 5-13, 5-15, 6-13, 6-15, 7-16, 7-20, 9-34 2-sided TX 4-18, 4-22, 5-13, 6-13, 7-16, 9-34, 9-49, 10-7

### Α

Accessing PageScope Web Connection 9-7
Account track 3-56, 9-8
Activity Report 3-35, 9-62, 9-78, 10-17, 10-19
Activity report 3-37

Administrator forwarding *10-20*, *10-35*, *10-36* 

Administrator mode *9-11*Anonymous *5-24*, *9-17*AppleTalk *9-5* 

Authentication settings 3-45, 9-71
Auto-RX check 3-25, 3-29, 9-76
Auto-RX check interval 9-76

### R

B/W: coding method *9-54*B/W: file type *9-54*Basic search *8-3*Basic settings *3-9*Binary division *3-36*, *3-42*Binary division size *3-36*, *3-42* 

## C

Cache 9-13
Certificate 9-88, 9-89, 9-92
Chain dialing function 4-10, 7-9
Coding Method 3-30, 3-33, 3-34, 4-33, 9-15, 9-17, 9-18, 9-20, 9-54
Com. mode 9-49, 10-7

Comm. menu settings 10-10

Common settings *9-5*Connection check *3-45*, *9-71*Connection timeout *3-45*, *9-71*Custom Text *3-35* 

### D

Day of the week settings 9-52
Default density 10-7
Default gateway 9-64
Default quality 10-7
Density 4-16, 5-11, 6-11, 7-14, 9-34
Destination 9-34

Destination address 4-33, 7-34, 9-15, 9-18, 9-20

Destination name 4-33, 5-24, 6-25, 7-34, 9-15, 9-17, 9-18, 9-20

Destination registration *4-32*, *5-24*, *6-25*, *7-33* 

Detail search 8-3

Device domain name *9-64*DHCP configuration *9-64* 

DHCP settings 3-9

Directory name *5-24*, *9-17*Distribution conditions *9-58* 

Divide settings *3-35*Division by page *9-54* 

Division by size *9-54* 

DNS configuration 9-64

DNS query timeout *9-64*, *10-43* DNS server address *3-15*, *3-17*, *9-64* 

DNS settings 3-15

Document management 10-22 Domain name 3-15, 3-17, 3-52, 9-64, 9-71

Domain name registration 9-3, 9-41

E	I
E-mail address 3-19, 3-22	Import 9-4, 9-42, 9-45
E-mail divided transmission time	Initialize setting 3-45
interval 10-46	Internet fax 2-7, 7-3, 10-37
E-mail header text 3-35, 3-39	Interval of Division Transmission
E-mail mode 7-11, 9-54	9-54
E-mail notification destination <i>5-20</i> , <i>6-21</i> , <i>9-35</i>	IP address setting <i>3-9</i> , <i>3-11</i> , <i>9-64</i> IPP <i>9-5</i>
E-mail program 4-41	_
E-mail program list 11-11	L
E-mail server settings 3-51	LAN Connection 3-3
Entering an address 4-11, 7-10	LDAP search 3-44, 9-70
Export 9-4, 9-42, 10-52	LDAP server address 9-71
F	LDAP server name 3-45, 9-71
F	LDAP server setting <i>3-44</i> , <i>3-45</i> , <i>9-5</i>
FAX program registration 9-3, 9-33	LDAP setting 3-44, 9-5, 9-70
File name 4-18, 5-13, 5-21, 6-13,	Login name 9-71
6-22	
6-22 File path <i>6-25</i> , <i>9-20</i>	M
	M Machine name <i>3-18</i> , <i>9-54</i>
File path <i>6-25</i> , <i>9-20</i> File type <i>3-34</i> , <i>4-33</i> , <i>9-15</i> , <i>9-17</i> , <i>9-20</i>	
File path <i>6-25</i> , <i>9-20</i> File type <i>3-34</i> , <i>4-33</i> , <i>9-15</i> , <i>9-17</i> ,	Machine name <i>3-18</i> , <i>9-54</i>
File path <i>6-25</i> , <i>9-20</i> File type <i>3-34</i> , <i>4-33</i> , <i>9-15</i> , <i>9-17</i> , <i>9-20</i>	Machine name 3-18, 9-54 Mail/Internet FAX 9-5, 9-76
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58,	Machine name <i>3-18</i> , <i>9-54</i> Mail/Internet FAX <i>9-5</i> , <i>9-76</i> Memory lock password <i>9-52</i> ,
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25	Machine name 3-18, 9-54 Mail/Internet FAX 9-5, 9-76 Memory lock password 9-52, 10-12, 10-14
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84	Machine name 3-18, 9-54  Mail/Internet FAX 9-5, 9-76  Memory lock password 9-52, 10-12, 10-14  Memory lock time 10-12
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84 FTP connection timeout 9-84	Machine name 3-18, 9-54  Mail/Internet FAX 9-5, 9-76  Memory lock password 9-52, 10-12, 10-14  Memory lock time 10-12  Memory RX on/off 10-16  Mode 9-34
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84 FTP connection timeout 9-84 FTP port number 5-24	Machine name 3-18, 9-54 Mail/Internet FAX 9-5, 9-76 Memory lock password 9-52, 10-12, 10-14 Memory lock time 10-12 Memory RX on/off 10-16 Mode 9-34 N
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84 FTP connection timeout 9-84 FTP port number 5-24 FTP server address 5-24, 9-17	Machine name 3-18, 9-54  Mail/Internet FAX 9-5, 9-76  Memory lock password 9-52, 10-12, 10-14  Memory lock time 10-12  Memory RX on/off 10-16  Mode 9-34  N  NetWare 9-5
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84 FTP connection timeout 9-84 FTP port number 5-24	Machine name 3-18, 9-54 Mail/Internet FAX 9-5, 9-76 Memory lock password 9-52, 10-12, 10-14 Memory lock time 10-12 Memory RX on/off 10-16 Mode 9-34  N NetWare 9-5 NetWare status 9-5
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84 FTP connection timeout 9-84 FTP port number 5-24 FTP server address 5-24, 9-17	Machine name 3-18, 9-54 Mail/Internet FAX 9-5, 9-76 Memory lock password 9-52, 10-12, 10-14 Memory lock time 10-12 Memory RX on/off 10-16 Mode 9-34  N NetWare 9-5 NetWare status 9-5 Network board setting 3-9, 3-14
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84 FTP connection timeout 9-84 FTP port number 5-24 FTP server address 5-24, 9-17 Full mode function 10-47 G	Machine name 3-18, 9-54  Mail/Internet FAX 9-5, 9-76  Memory lock password 9-52, 10-12, 10-14  Memory lock time 10-12  Memory RX on/off 10-16  Mode 9-34  N  NetWare 9-5  NetWare status 9-5  Network board setting 3-9, 3-14  Network error list 12-4
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84 FTP connection timeout 9-84 FTP port number 5-24 FTP server address 5-24, 9-17 Full mode function 10-47  G Gateway 3-9, 3-13	Machine name 3-18, 9-54 Mail/Internet FAX 9-5, 9-76 Memory lock password 9-52, 10-12, 10-14 Memory lock time 10-12 Memory RX on/off 10-16 Mode 9-34  N NetWare 9-5 NetWare status 9-5 Network board setting 3-9, 3-14
File path 6-25, 9-20 File type 3-34, 4-33, 9-15, 9-17, 9-20 File type/coding method 5-24, 6-25 Fixed text 3-35 Forwarding destination 9-58, 10-22, 10-25 FTP configuration 9-5, 9-84 FTP connection timeout 9-84 FTP port number 5-24 FTP server address 5-24, 9-17 Full mode function 10-47 G	Machine name 3-18, 9-54  Mail/Internet FAX 9-5, 9-76  Memory lock password 9-52, 10-12, 10-14  Memory lock time 10-12  Memory RX on/off 10-16  Mode 9-34  N  NetWare 9-5  NetWare status 9-5  Network board setting 3-9, 3-14  Network error list 12-4

Host address 6-25

Host name 3-15, 3-16, 9-64

### Reply address 4-18, 4-27, 7-17, $\cap$ 7-27 One-touch 4-3, 5-3, 6-3, 7-3 Reply address selection 9-35 One-touch key registration 5-24, Report output settings 9-4, 9-62, 9-3, 9-4, 9-14 10-3, 10-17 One-touch number 5-5, 6-5 Resending 4-31, 5-23, 6-24, 7-30 Operating environment 9-6 Retype password 9-17, 9-20 Other settings *9-5*. *9-76*. *9-78* Rotation TX 7-16, 9-34, 9-49, 10-7 P RX Doc. header 3-35, 3-38, 9-78 Page division *3-36*, *3-42* RX Doc. settings 9-58, 10-22, 10-25 PageScope Web Connection 2-8, 9-3 RX document 9-4, 9-58, 10-3 Passive mode setting 9-17 RX report 11-7 Password 6-25, 9-17, 9-20, 9-71 RX settings 9-4, 9-52, 10-3, 10-12 Ping 3-55, 10-4 S POP3 password 3-25, 3-28, 9-76 Scan area 9-34 POP3 server address 3-25, 9-76 Scan mode 9-54 POP3 Settings 3-25, 9-5, 9-76 Scan registration 9-3, 9-4 POP3 Timeout 9-76 Scan to e-mail 2-3, 4-3 POP3 user name 3-25, 3-27, 9-76 Scan to FTP 2-4, 5-3 Port 9-4 Scan to HDD 2-6 Port number 3-45, 9-17, 9-71, Scan to SMB 2-5, 6-3 9-76, 9-77, 9-84 Scanner settings *3-35*, *9-4*, *9-54* Priority density 9-49 Search base 3-45 Priority quality 9-49 Search default setting 3-44, 9-70 Priority TX 4-18, 4-24, 5-13, 6-13, 7-16, 9-34 Search number (max.) 3-45, 9-71 Search root 9-71 Program name 9-34 Security function 10-48 Proxy IP address 9-84 Proxy server 5-24, 9-17 Self-domain name 3-9 Server address 3-45 O Setting list 11-13 Quality 4-14, 5-9, 6-9, 7-12, 9-34 SMTP authentication password Quality/mode 10-8 3-19, 3-24, 9-77 SMTP authentication user name R *3-19*, *3-23*, *9-77* RAW port number 9-64 SMTP reception timeout 9-77, Receiving Internet faxes 7-31 10-40

bizhub 362/282/222 13-15

SMTP server address 3-19, 9-77

Reduction 9-34

SMTP settings 3-19, 9-5, 9-76, 9-77 SMTP transmission timeout 9-77. 10-39 Software switches 10-4, 10-28 SSL/TLS settings 3-45, 9-5, 9-71, 9-87, 10-4, 10-61 Stamp settings 4-18, 4-25, 5-13, 5-19, 6-13, 6-20, 7-16, 7-25, 9-35 Start time 9-52 Stop time 9-52 Subject 4-26, 9-78 Subject Registration 3-35, 3-41 Subject selection 4-18, 7-17, 9-35 Subject/Text 9-5, 9-76, 9-78 Subnet mask 3-9, 3-12, 9-64

Т

TCP/IP 9-5, 9-64 Text 9-78 TIFF (multiple), (single) 6-25 Timer RX setting 9-52, 10-12 Timer TX setting 4-18, 4-24, 5-13, 6-13, 7-16, 9-35 To search for a one-touch key 4-8, *5-7*, *6-7*, *7-7* Transmission Report 9-62 Transmission source 7-18, 9-48 TSI 9-34, 9-49, 10-7 TSI registration 9-4, 10-3 TX Doc. text insert 9-78 TX forwarding 10-20, 10-35 TX quality (max.) 3-30, 3-32, 9-18, 9-54 TX report 4-18, 4-30, 5-13, 5-22,

TX report 4-18, 4-30, 5-13, 5-22, 6-13, 6-23, 7-16, 9-34, 9-62, 10-17, 10-18, 11-3
TX settings 9-49, 10-3, 10-7

TX size (max.) *3-30*, *3-31*, *9-18*, *9-54* 

TX: Internet fax 9-14, 9-18

TX: PC (e-mail) 9-14, 9-15

TX: PC (FTP server) 9-14, 9-16

TX: PC (SMB) 9-14, 9-19

U

User authentication *3-56*, *9-5*, *9-96* User name *6-25*, *9-17*, *9-20* 

W

Windows 9-5

13-16