# **Quick Reference**

# Copying

### Making copies

1 Load an original document into the ADF tray or on the scanner alass.

Note: To avoid a cropped image, make sure that the original document and output have the same paper size.

2 From the home screen, touch Copy, and then specify the number of copies.

If necessary, adjust the copy settings.

**3** Copy the document.

**Note:** To make a quick copy, from the control panel, press



# Copying on both sides of the paper (two-sided)

- 1 Load an original document into the ADF tray or on the scanner
- 2 From the home screen, touch Copy > Settings > Paper Setup.
- 3 Adjust the settings.
- **4** Copy the document.

# Copying multiple pages onto a single sheet

- 1 Load an original document into the ADF tray or on the scanner glass.
- 2 From the home screen, touch Copy > Pages per Side.
- **3** Adjust the settings.
- 4 Copy the document.

# **Faxing**

### Sending a fax

### Using the control panel

- 1 Load the original document into the ADF tray or on the scanner glass.
- 2 From the home screen, touch Fax, and then enter the needed information.
- **3** If necessary, configure other fax settings.
- 4 Send the fax job.

### Using the computer

#### For Windows users

- 1 With a document open, click File > Print.
- 2 Select the printer, and then click **Properties**, **Preferences**, Options, or Setup.
- 3 Click Fax > Enable fax, and then enter the recipient number.
- 4 If necessary, configure other fax settings.
- **5** Send the fax job.

#### For Macintosh users

- 1 With a document open, choose File > Print.
- **2** Select the printer and enter the recipient number.
- **3** If necessary, configure other fax settings.
- 4 Send the fax job.

# E-mailing

### Sending an e-mail

### Using the control panel

1 Load an original document into the ADF tray or on the scanner glass.

2 From the home screen, touch **E-mail**, and then enter the needed information.

**Note:** You can also enter the recipient using the address book or shortcut number.

- **3** If necessary, configure the output file type settings.
- 4 Send the e-mail.

### Using the shortcut number

- **1** From the control panel, press #, and then enter the shortcut number using the keypad.
- 2 Send the e-mail.

# **Loading paper**

### **Loading trays**




CAUTION—TIPPING HAZARD: To reduce the risk of equipment instability, load each tray separately. Keep all other trays closed until needed.

1 Remove the tray.


Note: To avoid paper jams, do not remove trays while the printer is busy.




2 Adjust the paper guides to match the size of the paper that you are loading.

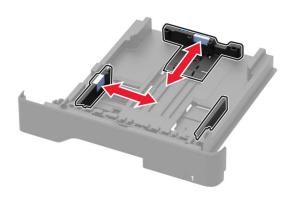

3 Flex, fan, and align the paper edges before loading.

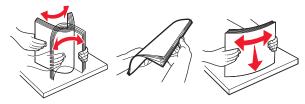

4 Load the paper stack with the printable side facedown, and then make sure that the side guides fit snugly against the paper.

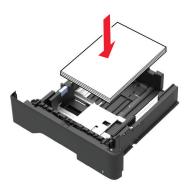

#### Notes:


 Load letterhead facedown with the top edge of the sheet toward the front of the tray for one-sided printing.

- Load letterhead faceup with the bottom edge of the sheet toward the front of the tray for two-sided printing.
- Do not slide paper into the tray.
- To avoid paper jams, make sure that the stack height is below the maximum paper fill indicator.
- **5** Insert the tray.

If necessary, set the paper size and paper type from the control panel to match the paper loaded.

# Loading the multipurpose feeder

1 Open the multipurpose feeder.

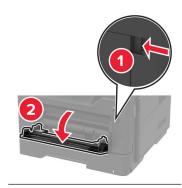



**2** Adjust the guide to match the size of the paper that you are loading.



3 Flex, fan, and align the paper edges before loading.



**4** Load paper with the printable side faceup.

#### Notes:

- Load letterhead faceup with the top edge of the sheet toward the front of the tray for one-sided printing.
- Load letterhead facedown with the bottom edge of the sheet toward the front of the tray for two-sided printing.
- Load envelopes with the flap facedown on the left side.
- Load European envelopes with the flap facedown and entering the printer first.

**Warning—Potential Damage:** Do not use envelopes with stamps, clasps, snaps, windows, coated linings, or self-stick adhesives.

**5** From the control panel, set the paper size and paper type to match the paper loaded.

# Setting the size and type of the specialty media

The trays automatically detect the size of plain paper. For specialty media like labels, card stock, or envelopes, do the following:

- **1** From the home screen, navigate to:
  - **Settings** > **Paper** > **Tray Configuration** > **Paper Size/Type** > select a paper source
- 2 Set the size and type of the specialty media.

# **Printing**

# Printing from a computer

**Note:** For labels, card stock, and envelopes, set the paper size and paper type in the printer before printing the document.


- **1** From the document that you are trying to print, open the Print dialog.
- 2 If necessary, adjust the settings.
- 3 Print the document.

**Note:** For details of the function of the printer driver, refer to the Help of the printer driver.


# **Maintaining the printer**

### Replacing the toner cartridge


**1** Open the front door.

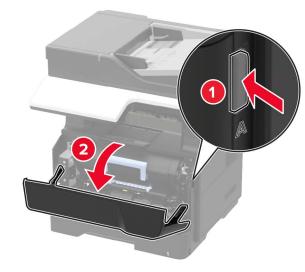

2 Remove the used toner cartridge.

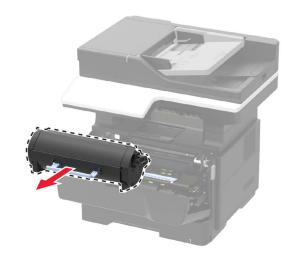

**3** Unpack the new toner cartridge, and then shake it three times to redistribute the toner.

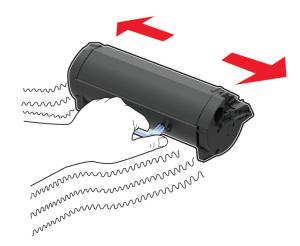

4 Insert the new toner cartridge.

**Note:** Use the arrows inside the printer as guides.



**5** Close the front door.


**Note:** Dispose of the empty toner cartridge according to your local regulations. Do not burn the cartridge.




**CAUTION—POTENTIAL INJURY:** If you get toner in your eyes, wash it out immediately with cool water and consult a doctor.

# Replacing the imaging unit


**1** Open the front door.

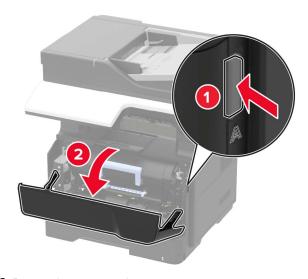


**2** Remove the toner cartridge.

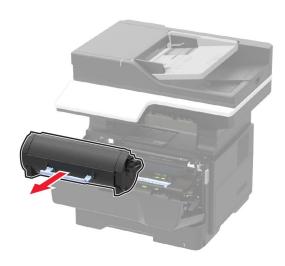

**3** Remove the used imaging unit.

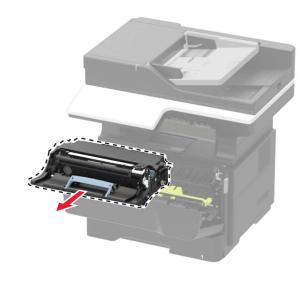

4 Unpack the new imaging unit, and then shake it three times to redistribute the toner.

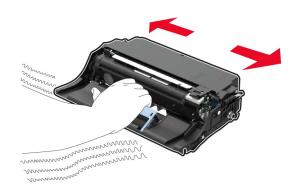

Warning—Potential Damage: Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.

Warning—Potential Damage: Do not touch the photoconductor drum. Doing so may affect the quality of future print jobs.



**5** Insert the new imaging unit.

**Note:** Use the arrows inside the printer as guides.



**6** Insert the toner cartridge.

**Note:** Use the arrows inside the printer as guides.



7 Close the front door.


**Note:** Dispose of the used imaging unit according to your local regulations. Do not burn the imaging unit.

# **Clearing jams**

# **Avoiding jams**

### Load paper properly

• Make sure that the paper lies flat in the tray.

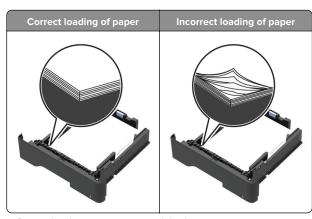

- Do not load or remove a tray while the printer is printing.
- Do not load too much paper. Make sure that the stack height is below the maximum paper fill indicator.
- Do not slide paper into the tray. Load paper as shown in the illustration.



- Make sure that the paper guides are positioned correctly and are not pressing tightly against the paper or envelopes.
- Push the tray firmly into the printer after loading paper.

### Use recommended paper

- Use only recommended paper or specialty media.
- Do not load paper that is wrinkled, creased, damp, bent, or curled.
- Flex, fan, and align the paper edges before loading.



- Do not use paper that has been cut or trimmed by hand.
- Do not mix paper sizes, weights, or types in the same tray.
- Make sure that the paper size and type are set correctly on the computer or printer control panel.
- Store paper according to manufacturer recommendations.

# Identifying jam locations

#### Notes:

- When Jam Assist is set to On, the printer automatically flushes blank pages or partially printed pages with after a jammed page is cleared. Check your printed output for blank pages.
- When Jam Recovery is set to On or Auto, the printer reprints jammed pages.



	Jam location
1	Automatic document feeder
2	Standard bin

	Jam location
3	Rear door
4	Duplex unit
5	Tray
6	Multipurpose feeder
7	Front door

# Paper jam in the front door


1 Remove the tray.



2 Open the front door.



**3** Remove the toner cartridge.

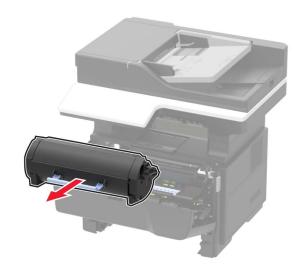

4 Remove the imaging unit.



**Warning—Potential Damage:** Do not expose the imaging unit to direct light for more than 10 minutes. Extended exposure to light may cause print quality problems.


**Warning—Potential Damage:** Do not touch the photoconductor drum. Doing so may affect the quality of future print jobs.



**5** Remove the jammed paper.

**Note:** Make sure that all paper fragments are removed.



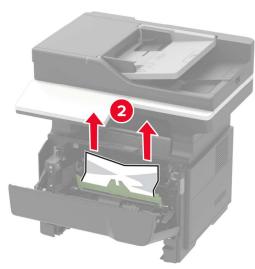

6 Insert the imaging unit.

**Note:** Use the arrows inside the printer as guides.



7 Insert the toner cartridge.

**Note:** Use the arrows inside the printer as guides.




- 8 Close the front door.
- 9 Insert the tray.

# Paper jam in the rear door

**1** Open the rear door.




**CAUTION—HOT SURFACE:** The inside of the printer might be hot. To reduce the risk of injury from a hot component, allow the surface to cool before touching if

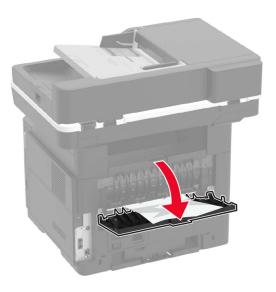

2 Remove the jammed paper.

**Note:** Make sure that all paper fragments are removed.

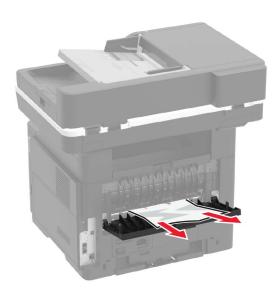


**3** Close the rear door.

# Paper jam in the standard bin

Remove the jammed paper.

**Note:** Make sure that all paper fragments are removed.

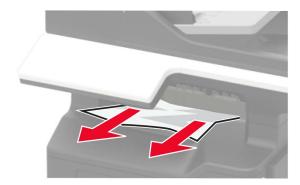


# Paper jam in the duplex unit

1 Remove the tray.



2 Remove the jammed paper.

**Note:** Make sure that all paper fragments are removed.

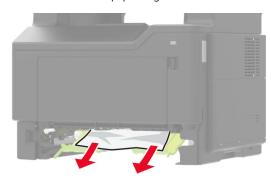

3 Insert the tray.


# Paper jam in trays

1 Remove the tray.



2 Remove the jammed paper.

Note: Make sure that all paper fragments are removed.

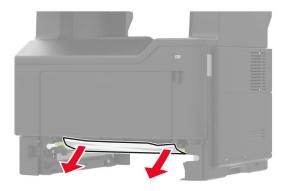

3 Insert the tray.

# Paper jam in the multipurpose feeder

- 1 Remove paper from the multipurpose feeder.
- 2 Remove the jammed paper.

**Note:** Make sure that all paper fragments are removed.



**3** Flex, fan, and align the paper edges before loading.



4 Reload paper, and then adjust the paper guide.



# Paper jam in the automatic document feeder

1 Remove all original documents from the ADF tray.

2 Open the ADF cover.



3 Remove the jammed paper.

Note: Make sure that all paper fragments are removed.



4 Close the ADF cover.