 



# QUICK REFERENCE



## How to use the system - Panel

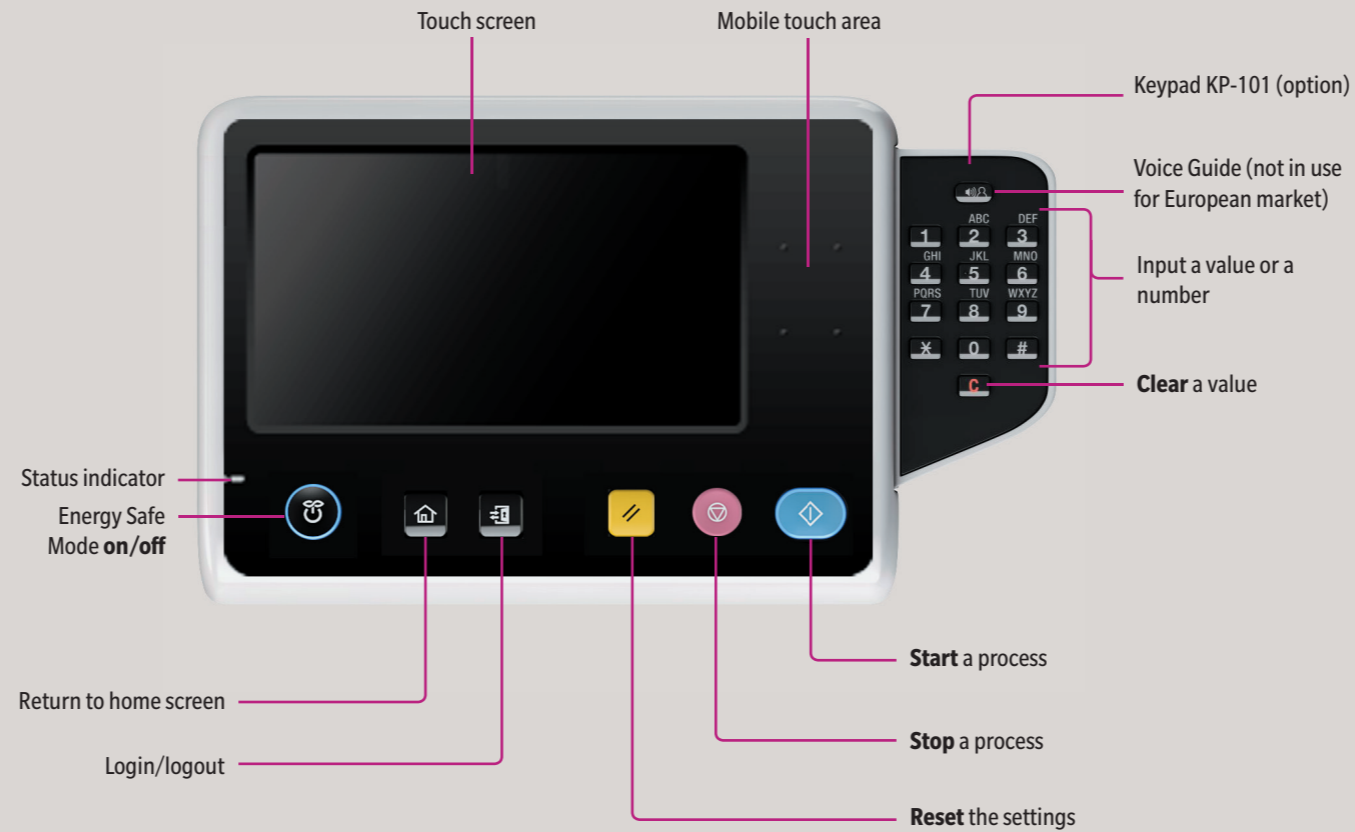
 
## Touch screen - Home

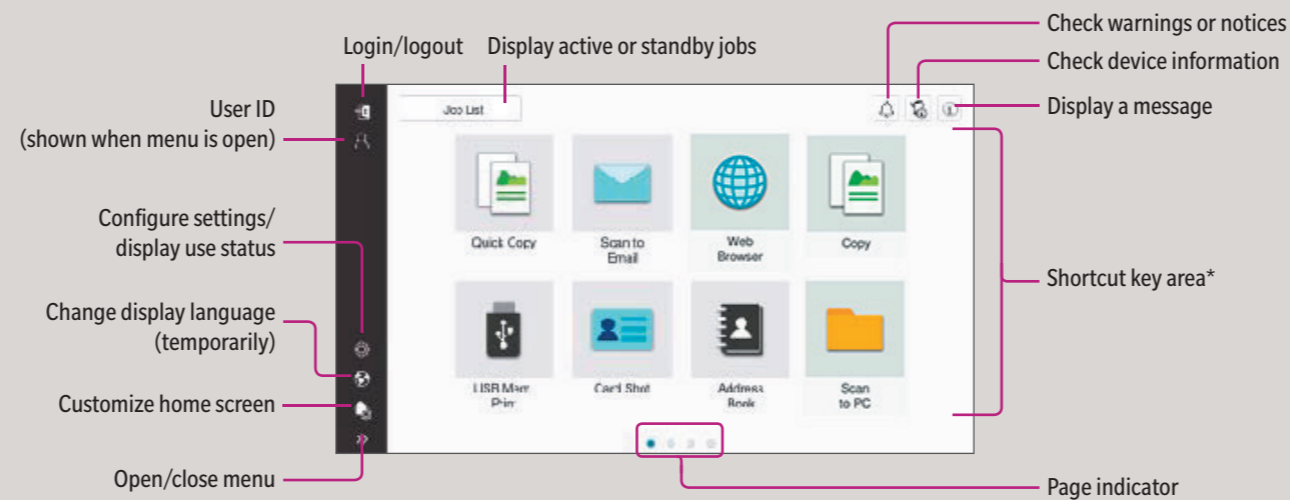

\* Available shortcut keys depend on machine configuration.

## Operating the touch screen\*

### Screen gestures

 
1. **Tap** to select or determine a menu.




2. **Flick** to scroll a list or a page.



3. **Drag** to move a scroll bar or document.

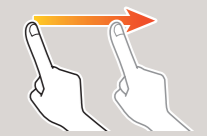

 
4. **Pan** to move a displayed image.

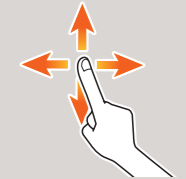

5. **Long-tap** to display the icon related to the document.




 6. **Drag & Drop** to move a document to the intended place

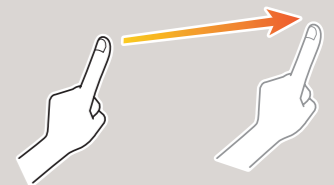


### Displaying the keypad

 Tap the numerals or the input area to display the keypad. (If the system is equipped with the optional hardware keypad KP-101, it can be used instead.)

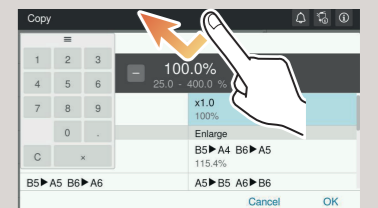

### Moving the keypad

 Touch the upper side of the keypad and drag it to another display position.

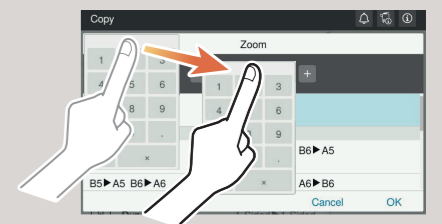


\* Available touch functions vary depending on displayed screen.




Basic copy functions - Make a copy



 
1. Position the original(s).

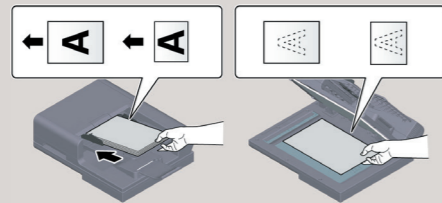

 2. Tap **Copy** or **Quick Copy** on the home screen.

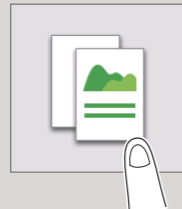

 
3. Set copy options as needed.

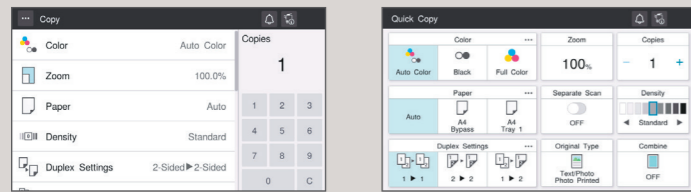

4. Press the **Start** key.



 Copy operations - Basic Copy Screen\*

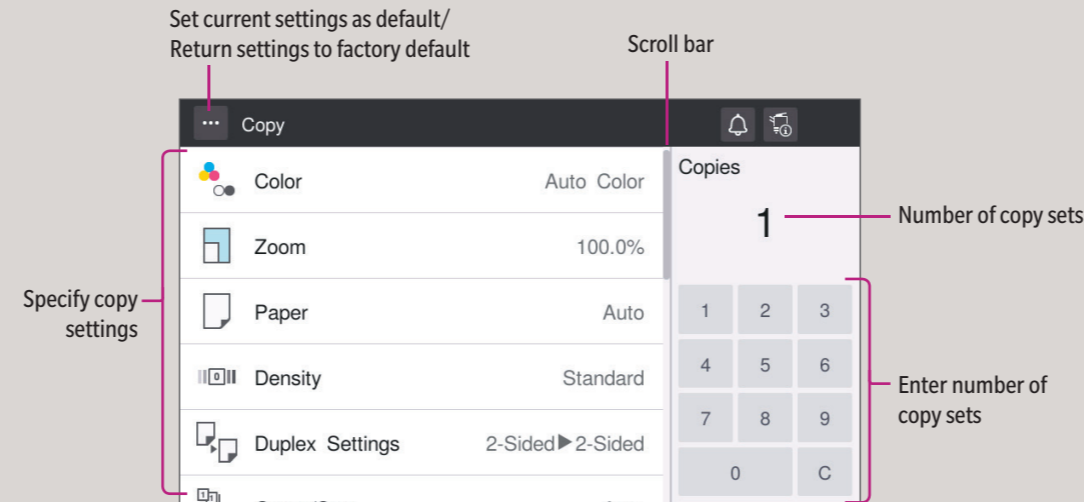

Setting*	Description
<b>Color</b>	Select the copy color mode (e.g. Full Color, Black & White)
<b>Density</b>	Adjust the brightness of the copy
<b>Original Type</b>	Select the image quality level of the original
<b>Paper</b>	Select paper size and type of the original/change size and type of the paper loaded in paper trays
<b>Zoom</b>	Specify enlargement or reduction ratio
<b>Duplex Settings</b>	Specify 1-sided or 2-sided scanning/copying
<b>Staple</b>	Staple the copied sheets/Select the binding position and the orientation of the original
<b>Punch</b>	Punch the copied sheets/Select the punching position and the orientation of the original
<b>Group/Sort</b>	Feed out copy sets separately by set or page
<b>Combine</b>	Copy multiple pages on a single sheet
<b>Mixed Original</b>	Scan originals of different sizes
<b>Z-Folded Original</b>	Adapt the size detection of folded originals in the ADF
<b>Blank Page Removal</b>	Skip blank pages
<b>Original Size</b>	Specify the size of the original when it is not detected correctly
<b>Original Direction</b>	Select orientation of the original loaded into ADF or placed on the original glass
<b>Separate Scan</b>	Scan a large number of originals in several batches / scan originals using both ADF and original glass
<b>Automatic Image Rotation</b>	Rotate the original image according to paper direction (switched on as default)

\*Available settings depend on system configuration.

Print from USB memory



 
1. Position the original(s).
2. Plug the USB memory device into the USB port.
3. Tap **USB Mem. Print** on the home screen.
4. Select the desired file.
5. Specify settings as needed.
6. Press the **Start** key.  
The file is printed.



Zoom




1. Position the original(s).
2. Tap **Copy** on the home screen.
3. Tap **Zoom**.
4. Tap **Other paper sizes**.
5. Make the desired settings.
6. Tap **OK**.
7. Press the **Start** key.

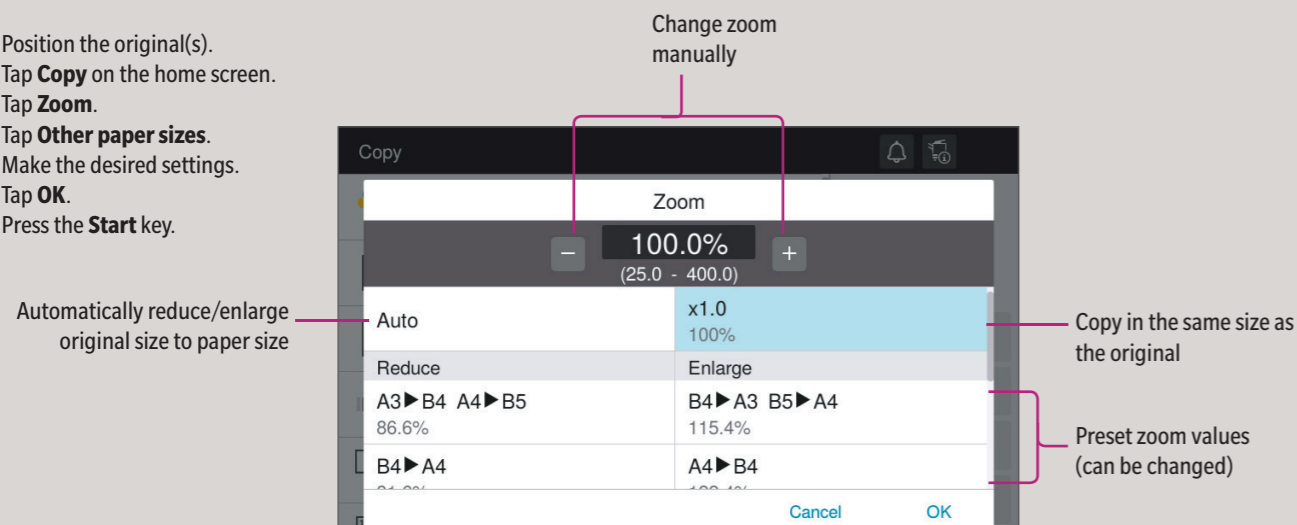

Duplex Settings



 
1. Position the original(s).
2. Tap **Copy** on the home screen.
3. Tap **Duplex Settings**.
4. Tap **Settings**.
5. Make the desired settings.
6. Tap **OK**.
7. Press the **Start** key.

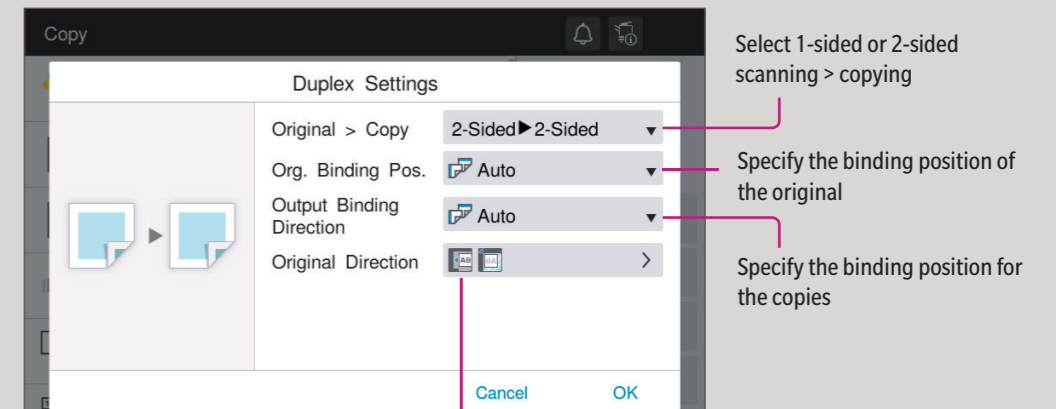



Scan operations - Settings\*

 View scan destinations as buttons or as list



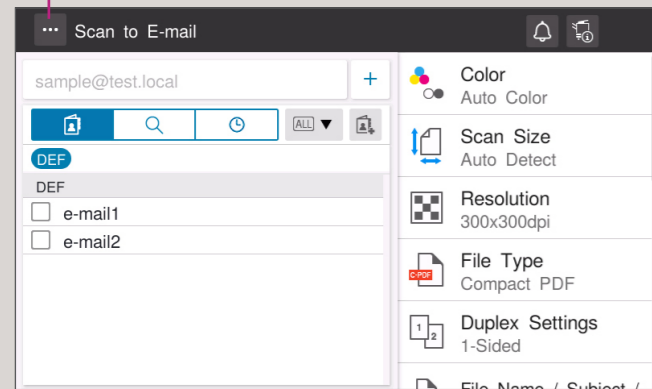


Setting*	Description
<b>Color</b>	Select the scan color mode (Full Color, Black&White)
<b>Scan Size</b>	Specify the original size
<b>Resolution</b>	Specify the scan resolution
<b>File Type</b>	Specify the file type for saving
<b>Duplex Settings</b>	Specify 1-sided or 2-sided scanning
<b>File Name/ Subject/Other</b>	Change the file name, E-mail subject, or message text
<b>Separate Scan</b>	Scan a large number of originals in several batches /scan originals using both ADF and original glass
<b>Mixed Original</b>	Scan originals of different sizes
<b>Z-Folded Original</b>	Adapt the size detection of folded originals in the ADF
<b>Blank Page Removal</b>	Skip blank pages
<b>Original Direction</b>	Select orientation of the original loaded into ADF or placed on the original glass
<b>Original Type</b>	Select the image quality level of the original
<b>Density</b>	Adjust the scan brightness
<b>Background Removal</b>	Adjust the the background brightness (e.g. for originals with colored background)

\*Available settings depend on system configuration.

Scan to e-mail (Direct input)

   1. Position the original(s).
2. Tap **Scan to E-mail** on the home screen.
3. Tap +.

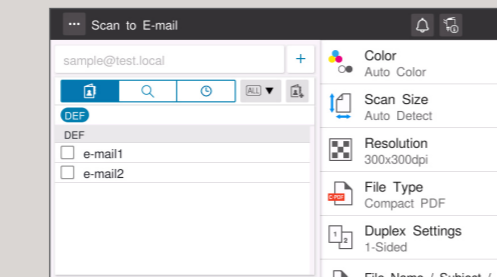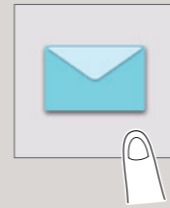


4. Enter the destination address.
5. Tap **OK**.
6. Specify settings as needed.

7. Press the **Start** key  
The file is sent.

Search for a destination (address book)


 
1. Position the original(s).
2. Tap **Scan to E-mail, Scan to Box** or **Scan to PC**.
3. Select the search tab:
4. Select **Name Search, Address Search** or **Search Box No.**

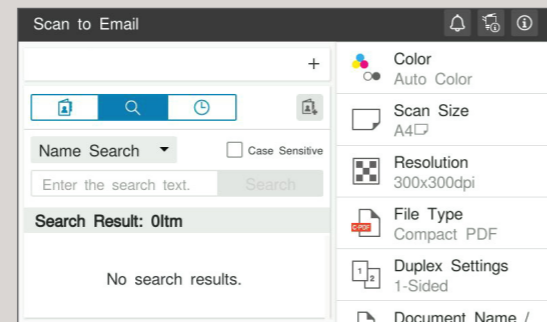

5. Enter the search text and tap **Search**.
6. Specify the target destination from the search result.
7. Press the **Start** key.  
The file is sent.


Save file on a PC

  1. Position the original(s).
2. Tap **Scan to PC** on the home screen.
3. Select the desired destination.
4. Specify settings as needed.
5. Press the **Start** key.  
The file is saved.

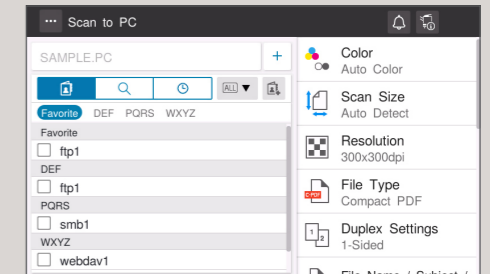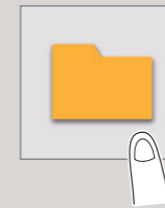

Register a destination (address book)

 
1. Tap **Utility** on the home screen.
2. Tap **Utility > Store Address > Address Book**.
3. Tap **New Registration**
4. Select the type of destination you want to register.

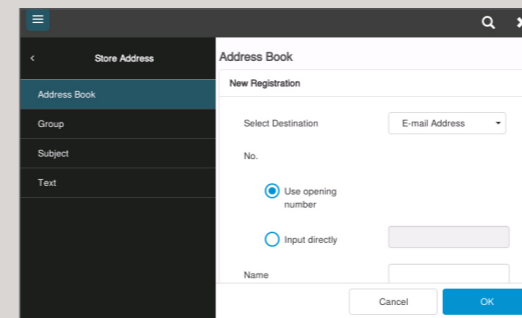

5. Enter the destination information and tap **OK**.

Fax operations - Send a fax (direct input)\*

 1. Position the original(s).
2. Tap **Fax** on the home screen.
3. Tap the direct input tab:
4. Enter the fax number.
5. Specify settings as needed.
6. Press the **Start** key.  
The file is sent.

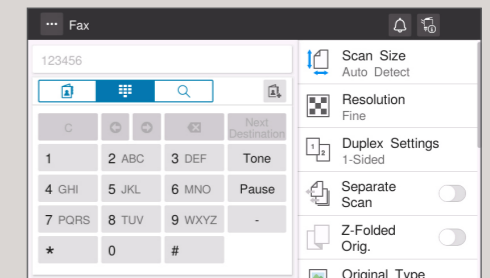

\* only with fax option

Sending data to multiple destinations/using the address book

1. Position the original(s).
2. Tap **Scan to E-mail, Scan to Box** or **Scan to PC**.
3. Select the destination tab:
4. Specify two or more destinations.  
or  
Specify a group.
5. Tap **OK**.
6. Press the **Start** key.  
The file is sent.

