



KONICA MINOLTA

Giving Shape to Ideas



bizhub c754/C654

User's Guide
Control Panel

Table of contents

1 Names and Functions of Control Panel Keys

2 Operations of Touch Panel and Explanation of Major Screens

2.1	Touch Panel	2-3
2.1.1	Operating the Touch Panel	2-3
	Tap	2-3
	Flick.....	2-3
	Double-tap	2-4
	Drag	2-4
2.1.2	Precautions for using the Touch Panel	2-4
2.2	Main Menu	2-5
	Displaying Main Menu.....	2-5
	Selecting functions to be arranged on the main menu (for the administrator)	2-6
	Changing the theme of the main menu (for the administrator)	2-7
2.3	Main Screen in each Mode	2-8
2.3.1	Screen Layout	2-8
2.3.2	Customizing a function key displayed in each mode (for the administrator)	2-9
	Selecting a function key display pattern	2-9
	Selecting function keys to be displayed in the main screen.....	2-10
2.3.3	Viewing the current settings.....	2-12
	Viewing the settings in the copy mode	2-12
	Viewing the settings in the scan/fax mode	2-12
	Viewing the settings in the User Box mode	2-13
2.4	Types of icons	2-14
	Icons indicating the status of this machine	2-14
	Icons to change to entry or selection screen.....	2-14
2.5	Viewing Current Job or Job History	2-15
	Displaying the Job screen.....	2-15
	Viewing Current Jobs.....	2-15
	Viewing the job history	2-17
	Printing a communication report	2-18
2.6	Configuring settings of this machine	2-19
	Displaying [Utility].....	2-19
	Displaying administrator settings.....	2-20

3 Displaying Help on the Touch Panel

Using the guidance function	3-3
Using the animation guidance	3-5

4 Changing a Function to be Assigned to a Register Key

5 Managing the Power Supply of this Machine

5.1	How to Use the Power Key	5-3
	When using this machine in factory default status	5-3
	When using the Power key as a power save key.....	5-3
5.2	Configuring the Power key and power save operations (for the administrator)	5-5
5.3	Switching to Power Save mode at the specified time (for the administrator)	5-7
	Using Weekly Timer	5-7
	Using this machine while the weekly timer is active.....	5-8



6 Login Screen

Logging in to this machine.....	6-3
Performing user authentication (MFP authentication).....	6-3
Performing user authentication (External server authentication)	6-5
Performing account track	6-7

 
7 Entering Characters



Names and Functions of Control Panel Keys

1 Names and Functions of Control Panel Keys

This machine provides a sliding **Control Panel**.

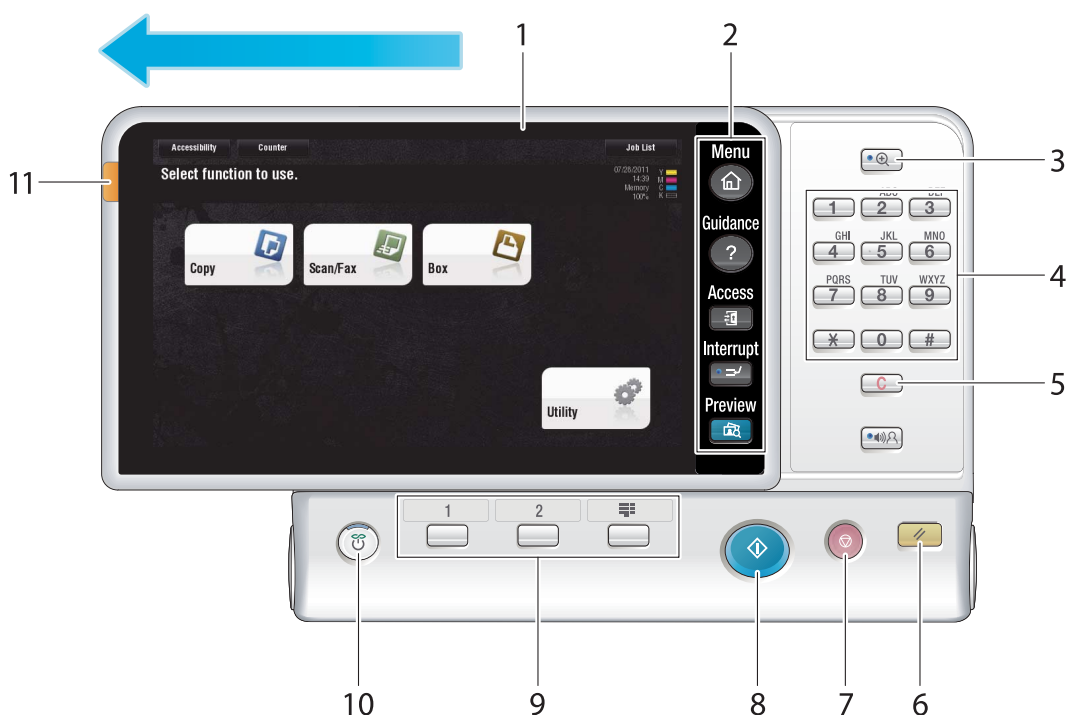

No.	Name	Description
1	Touch Panel	Displays setting screens and messages. Directly press this panel to carry out operations.
2	Menu	Press this key to display the Main Menu. The Main Menu displays shortcut keys assigned to selected functions, enabling you to quickly access a desired function. • For details, refer to page 2-5.
	Guidance	Press this key to display the Help Menu. This function displays the explanation and operation procedure of a function on the Touch Panel , enabling you to view them. • For details, refer to page 3-3.
	Access	Press this key to perform authentication in the Login screen if user authentication or account track is installed on this machine. Pressing the Access key while logged in will log you out of this machine. • For details, refer to page 6-3.
	Interrupt	Press this key to interrupt active jobs on this machine and deal with a quick copy job. In interrupt mode, the Interrupt indicator lamp lights up green, and the message [Interrupt Mode in effect.] appears on the Touch Panel . • For details, refer to [User's Guide: Copy Operations].
	Preview	Press this key to display a finishing image with the current settings on the Touch Panel , so that you can view it. This function prints only one copy before processing multiple copies, and enables you to check the proof copy. This is useful for preventing misprinting from occurring.
3	Enlarge Display	Press this key to change the display of the Touch Panel to Enlarge Display mode. • For details on Enlarge Display, refer to [User's Guide: Accessibility].

No.	Name	Description
4	Keypad	Use this keypad to enter numeric values such as the number of copies or zoom ratio. This keypad is also used to select a numbered setting key.
5	C (Clear)	Press this key to clear all numeric values, for example, the number of copies, zoom ratio, and size that you entered using the Keypad .
6	Reset	Press this key to reset the settings you entered or changed on the Control Panel .
7	Stop	Press this key to temporarily stop an active copy, scan, or print job. <ul style="list-style-type: none"> To restart, press the Start key. To delete, select a target job in the currently stopped screen, then press [Delete].
8	Start	Press this key to start an operation such as copying, scanning, faxing, or printing. <ul style="list-style-type: none"> Lights up blue: This machine is ready to start operating. Lights up orange: This machine is not ready to start operating. If this indicator lamp lights up orange, check whether any warning or message is displayed on the Touch Panel.
9	Register Key 1 to Register Key 3	Press each key to switch the display of the Touch Panel to a function assigned to a Register key. <ul style="list-style-type: none"> By default, the Register keys are assigned as follows. Register Key 1: [Scan/Fax], Register Key 2: [Copy], Register Key 3: [10 Keypad] A function to be assigned to a Register key can be changed to suit your environment. For details, refer to page 4-3.
10	Power key	Press this key to switch this machine to Power Save mode. <ul style="list-style-type: none"> If the Power key is pressed while this machine is active, the sub power is turned off to reduce power consumption. While the sub power is turned off, this machine can receive data or faxes, however, it cannot scan or print an original. If the Power key is held down while this machine is operating, Power Save mode shifts to the ErP Auto Power Off mode (close to Main Power Off mode), which offers a higher power saving effect than Sub Power Off mode. In ErP Auto Power Off mode, this machine cannot receive data or faxes, and also it cannot scan or print an original. The Power key can also be used as a power save key to switch to Power Save mode. For details on how to use the Power key, refer to page 5-3.
11	Status Indicator	Indicates the status of this machine by the lamp color, flashing, or a lamp lighting up. <ul style="list-style-type: none"> Flash in orange: Warning Lights up orange: The machine has stopped.



Reference

If necessary, you can adjust the angle of the **Control Panel** to make it easier use. For details on the adjustment, refer to [User's Guide: Accessibility].



Operations of Touch Panel and Explanation of Major Screens

2 Operations of Touch Panel and Explanation of Major Screens

 
2.1 Touch Panel

2.1.1 Operating the Touch Panel

Tap

Lightly touch the screen with your finger, then remove your finger from the screen immediately.

This action is available when selecting or determining a menu.

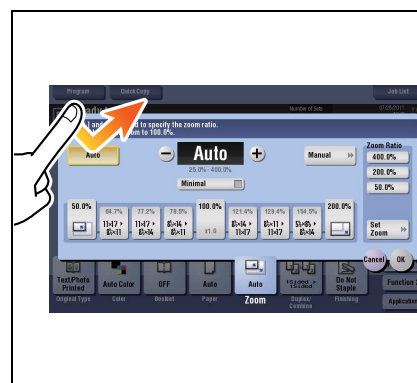

Flick

Make a slight flip while sliding your finger on the screen.

This is used to scroll an address or job list or to feed thumbnail-view or preview screens.



Double-tap

Lightly touch the screen with your finger twice in succession.

 
This is used to retrieve detailed information, to enlarge a thumbnail or preview image, and to open a User Box.



Drag

Slide your finger on the screen while pressing it.

This is use to move a display position on an application or preview screen.

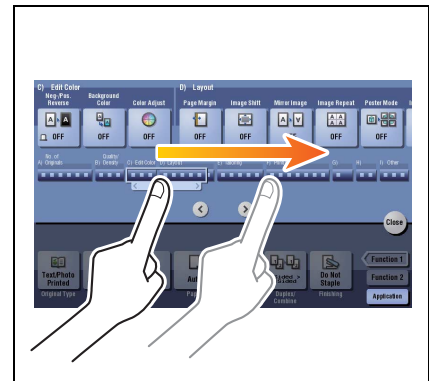

2.1.2 Precautions for using the Touch Panel

This machine features a capacitance-base touch panel. Note the following points when operating the **Touch Panel**.

- Use your finger or the **Stylus Pen** supplied with this machine. Note that the **Touch Panel** will not respond appropriately if you operate it using your nail or a pen tip instead of your finger or the **Stylus Pen**.
- Applying a strong force to the **Touch Panel** will damages the **Touch Panel**, and potentially cause a breakage.
- When operating the **Touch Panel**, do not press on it using excessive force or with a pointed object such as a mechanical pencil.

2.2 Main Menu

 
Displaying Main Menu

Press the **Menu** key on the **Control Panel** to display the main menu. You can customize the keys to be displayed on the main menu freely to suit your requirements.

The main menu can be extended to two screens as necessary. It can show 12 shortcut keys in each screen, and up to 24 shortcut keys in two screens. Any function can be assigned to 23 shortcut keys, excluding the fixed function, [Utility].

If shortcut keys of frequently-used functions are arranged on the main menu, it helps you quickly access a target function.


Furthermore, the background of the main menu can be changed according to your preference.

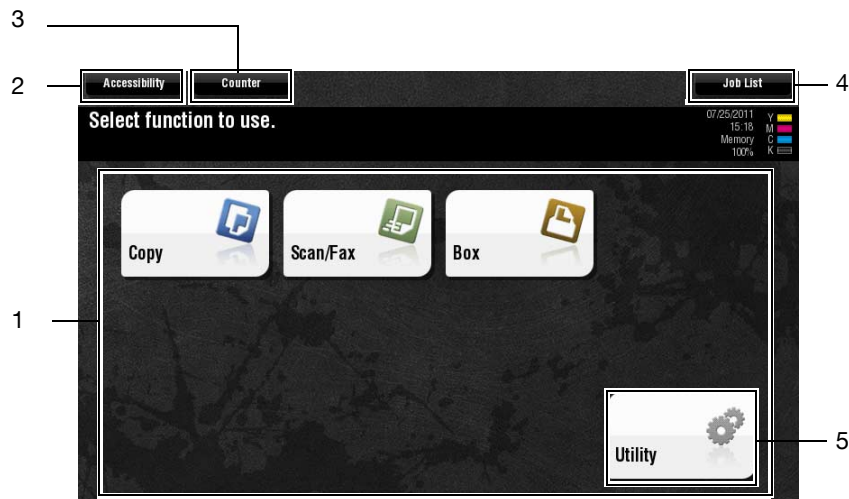


No.	Name	Description
1	Main menu keys	Display shortcut keys assigned to any function. Shortcut keys can be customized freely to suit your requirements. By default, [Copy], [Scan/Fax], [Box], and [Utility] are arranged on the main menu. ([Utility] is fixed.)
2	[Accessibility]	Press this button to adjust a Touch Panel pressing position, change keying sounds, and configure the operating environment of the Control Panel . <ul style="list-style-type: none"> For details, refer to [User's Guide: Accessibility].
3	[Counter]	Press this button to display the total number of pages printed on this machine on a function or color basis. <ul style="list-style-type: none"> For details, refer to [User's Guide: Maintenance].
4	[Job List]	Press this button to display current or standby jobs. If necessary, you can view job logs or print a communication report. <ul style="list-style-type: none"> For details, refer to page 2-15.
5	[Utility]	Press this button to configure settings of this machine or view the use status of this machine. <ul style="list-style-type: none"> For details, refer to page 2-19.

Selecting functions to be arranged on the main menu (for the administrator)

 
- 1 Tap [Utility] - [Administrator Settings] - [System Settings] - [Custom Display Settings] - [Main Menu Default Settings].
- 2 Select a main menu key number to be assigned to a shortcut key.
 - [Main Menu Key 1] to [Main Menu Key 11] are assigned to the first screen of the main menu. It is useful that these keys are assigned to commonly-used functions.

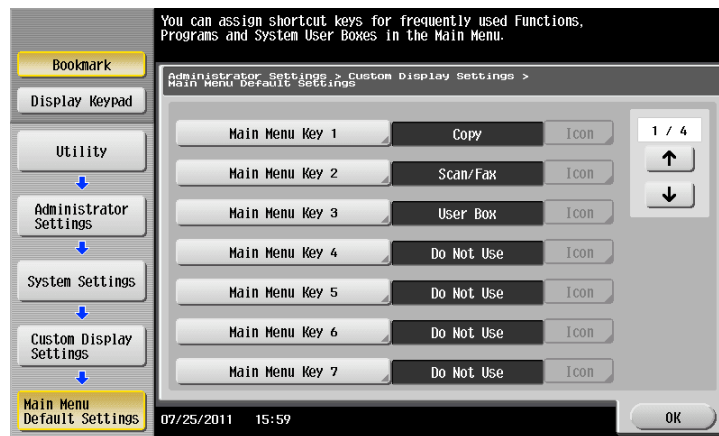

 - 3 Tap [ON], select a function to be assigned to a shortcut key, then tap [OK].
 - Tap [Copy Program] or [Fax/Scan Program], and select Programs; you can arrange the programs registered on this machine on the main menu.
 - If Programs is selected, tap [Icon] in the screen shown in step 2, and select an icon to be displayed on the main menu.

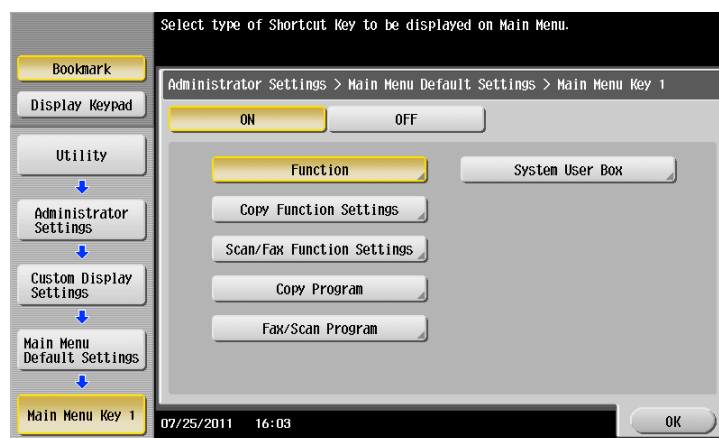


 The shortcut keys of the selected functions are arranged in the main menu.

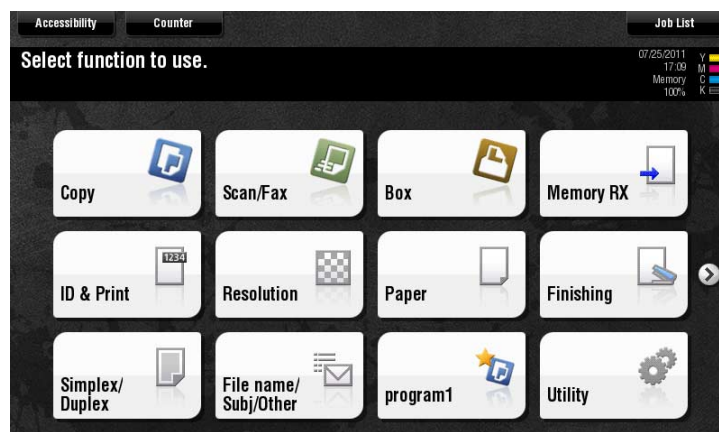


Changing the theme of the main menu (for the administrator)

 - 1 Tap [Utility] - [Administrator Settings] - [System Settings] - [Custom Display Settings] - [Main Menu Display Settings].
- 2 Select a desired theme, then tap [OK].

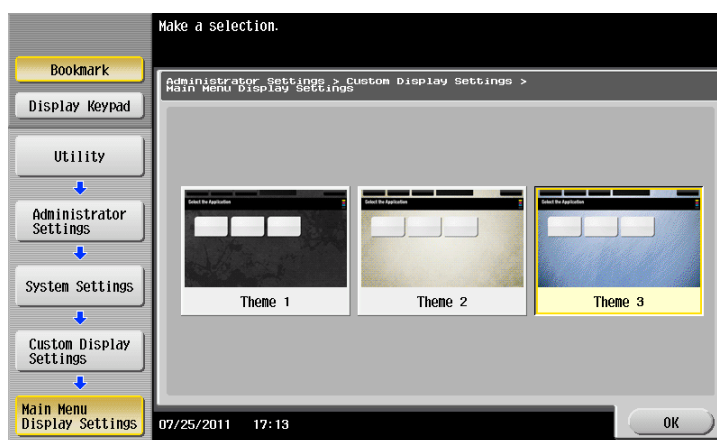

 
This changes the theme of the main menu to the selected one.

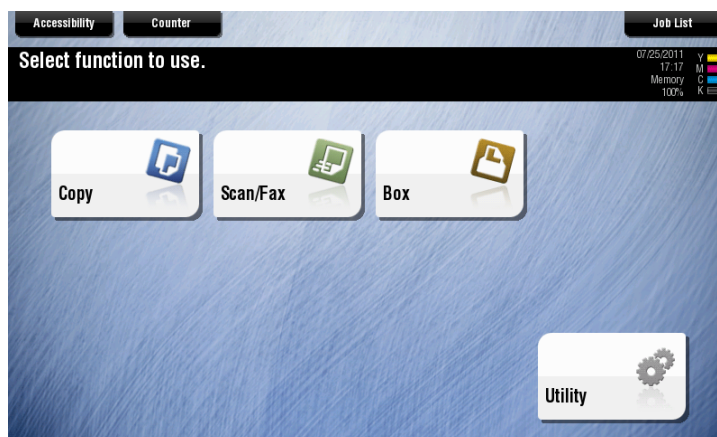

2.3 Main Screen in each Mode

2.3.1 Screen Layout

 This example shows the screen layout for the main screen of the copy mode.

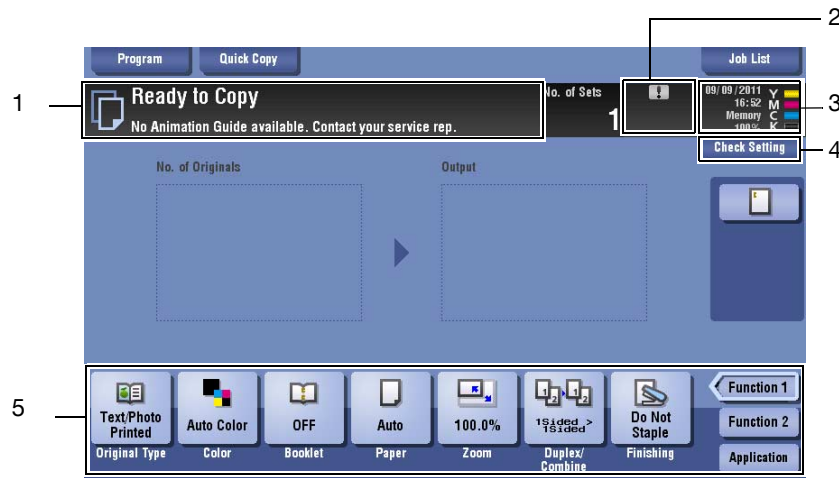

No.	Name	Description
1	Message display area	Displays a message to show the status of this machine and operation procedures.
2	Icon display area	Displays an icon that indicates information such as the job status, warning, or USB memory connection status. Tapping the icon allows you to view the details. <ul style="list-style-type: none"> For details on the icons that indicate the status of this machine, refer to page 2-14.
3	Date/Time, Memory, or Toner Level display area	Displays the current date and time, free space in memory, and toner level for each color.
4	[Check Setting]	Press this button to view the function specified currently in each mode.
5	Functions/settings display area	Configure optional settings in each mode, for example, scan setting or original setting. <ul style="list-style-type: none"> You can customize a function key displayed in the functions/settings display area. For details, refer to page 2-9.

2.3.2 Customizing a function key displayed in each mode (for the administrator)

 
Selecting a function key display pattern

This machine provides three display patterns to display or hide function keys in each mode.


The three display patterns are [Full Functions] to display all function keys, [Standard Functions] to display the frequently used function keys, and [Basic Functions] to display more basic function keys than [Standard Functions].

[Full] is specified by default. The display pattern can be changed to any of the above three types depending on function key usage conditions.

- 1 Tap [Utility] - [Administrator Settings] - [System Settings] - [Custom Display Settings] - [Custom Pattern Function], and select [Copy/Print] or [Send/Save].
 - If [Copy/Print] is selected, you can change a display pattern of function keys to be displayed in the print settings screen in copy or User Box mode.
 - If [Send/Save] is selected, you can change a display pattern of function keys to be displayed in the send or save settings screen in scan/fax or User Box mode.
- 2 Select a function key display pattern, then tap [OK].
 - To view the function displayed in each pattern, tap [Details].

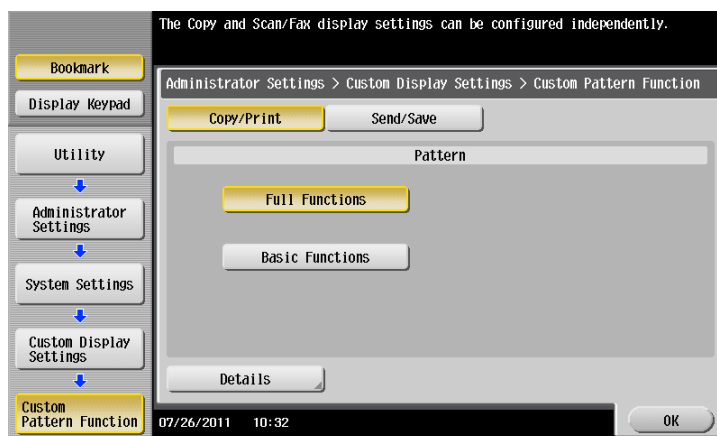

 This changes the display pattern of the function keys as specified.

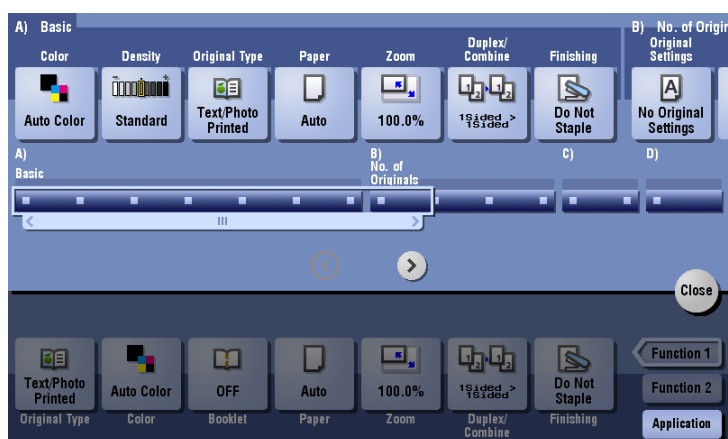

Tips

- [Standard Functions] is not displayed in some areas.
- A function key display pattern can be added to suit your requirements. For details, contact your service representative.

Related setting (for the administrator)

 
- If user authentication or account track is employed, you can select whether to restrict a change of a display pattern for each user or account track (default: [Restrict]). For details, refer to [User's Guide: Copy Operations].
To configure settings, select [Utility] - [Administrator Settings] - [System Settings] - [Custom Display Settings] - [User/Admin Function Permissions].
- To change a function key display pattern for each user or account track, edit user or account track information, and individually select the desired function key display pattern.
- To configure settings for each user: [Utility] - [Administrator Settings] - [User Authentication/Account Track] - [User Authentication Settings] - [User Registration] - [Edit] - [Custom Pattern Function]
- To configure settings for each account track: [Utility] - [Administrator Settings] - [User Authentication/Account Track] - [Account Track Settings] - [Account Track Registration] - [Edit] - [Custom Pattern Function]

Selecting function keys to be displayed in the main screen


You can change the type or layout of function keys to be displayed in the main screen in each mode.

You can arrange the frequently used function keys in the main screen or hide unused function keys depending on function key usage conditions.

- ✓ To change a function key to be displayed in the main screen, permit a change of a function key in advance (default: [Restrict]). For details, refer to [User's Guide: Copy Operations].
To configure settings, select [Utility] - [Administrator Settings] - [System Settings] - [Custom Display Settings] - [Function Display Key Permission Setting].
- 1 Tap [Utility] - [User Settings] - [Custom Display Settings], and select [Function Display Key(Copy/Print)] or [Function Display Key(Send/Save)].
 - If [Function Display Key(Copy/Print)] is selected, you can change a key to be displayed in the main screen of copy mode and the print setting screen of User Box mode.
 - If [Function Display Key(Send/Save)] is selected, you can change a function key to be displayed in the main screen of scan/fax mode and in the send settings screen or save settings screen of User Box mode.
 - 2 Select a function key number to be reconfigured.
 - If [Function Display Key(Copy/Print)] is selected, [Function Key 1] to [Function Key 7] are assigned to [Function 1], and [Function Key 8] to [Function Key 14] are assigned to [Function 2]. It is convenient that commonly-used functions are to be assigned to [Function Key 1] to [Function Key 7].

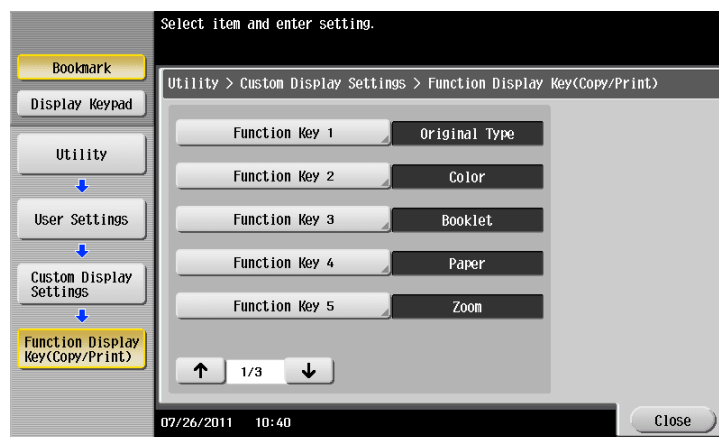

 - 3 Tap [ON], select a function to be assigned to a function key, then tap [OK].

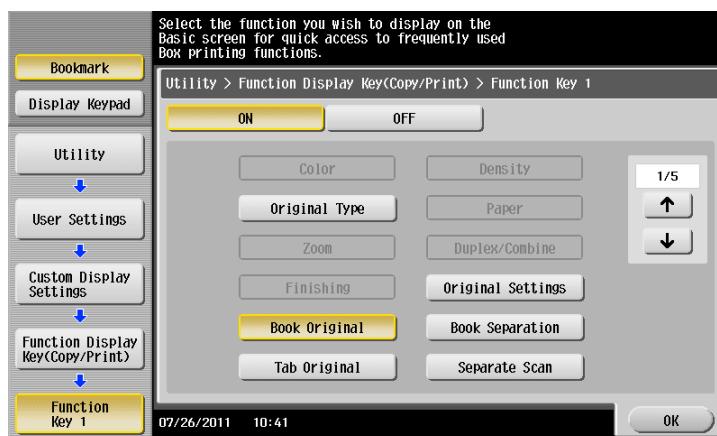

This changes the function keys displayed in the main screen.



 
Tips

- If function key settings are changed by selecting [Function Display Key(Copy/Print)], the functions that are not assigned to [Function Key 1] to [Function Key 14] are displayed in [Application].
- If function key settings are changed by selecting [Function Display Key(Send/Save)], the functions that are not assigned to [Function Key 1] to [Function Key 7] are displayed in [Application].

2.3.3 Viewing the current settings


Viewing the settings in the copy mode

Tap [Check Setting] in the main screen of the copy mode to view the current settings.

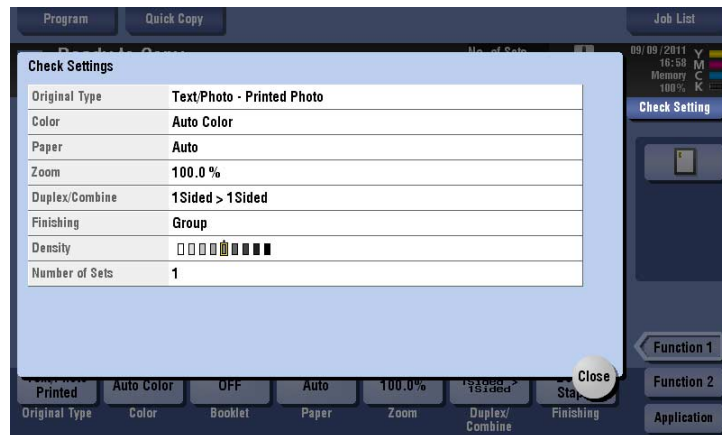

Viewing the settings in the scan/fax mode

 Tap [Check Setting] on the main screen of the scan/fax mode to view the specified addresses or current settings.

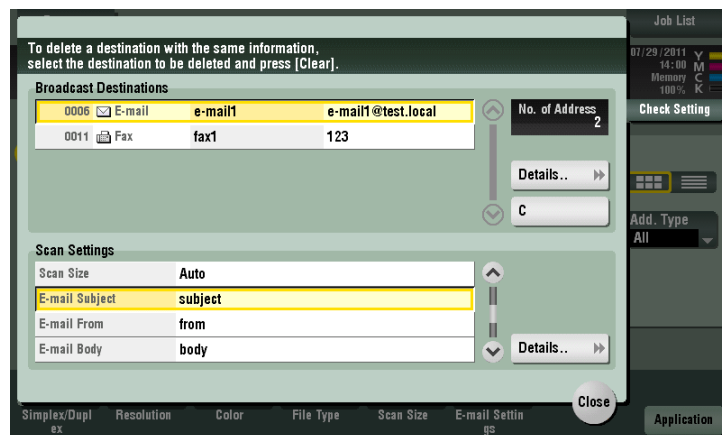


Item	Description
[Broadcast Destinations]	<p>Allows you to view the specified destination.</p> <ul style="list-style-type: none"> Select a destination, and tap [Details.] to display detailed information of the selected destination. Select a destination, then tap [C] to cancel the selected destination.
[Scan Settings]	<p>Allows you to view the current settings.</p> <p>Select E-mail Subject, From, Text, or Document Name, then tap [Details..] to display settings.</p>


Viewing the settings in the User Box mode

Tap [Check Setting] in each User Box mode screen to view the current settings.

 
When saving the original in a User Box, you can view the save settings.

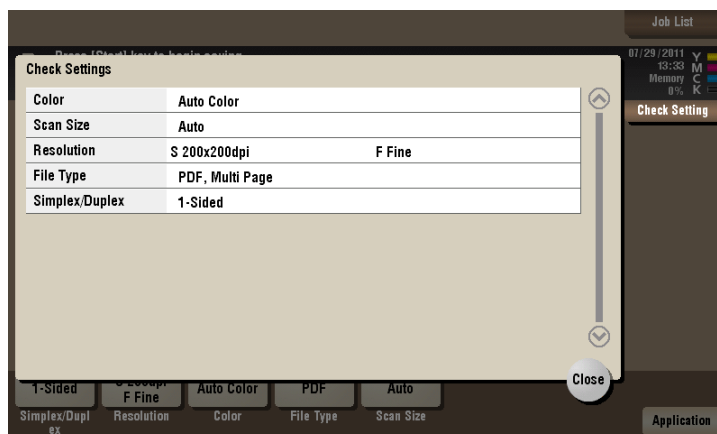

  When printing a file from a User Box, you can view the print settings. If necessary, you can view a list of selected files.

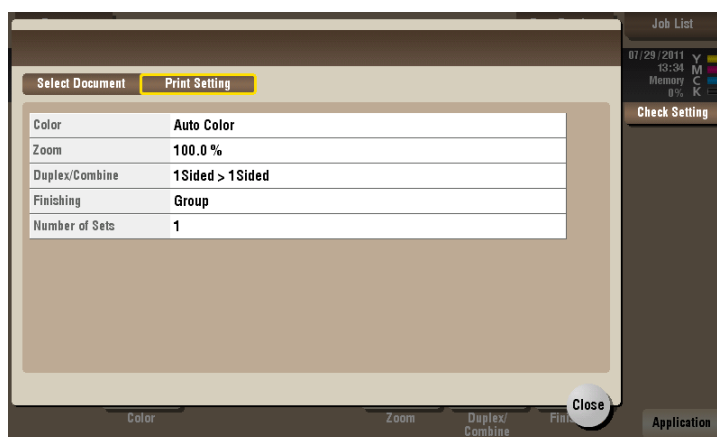



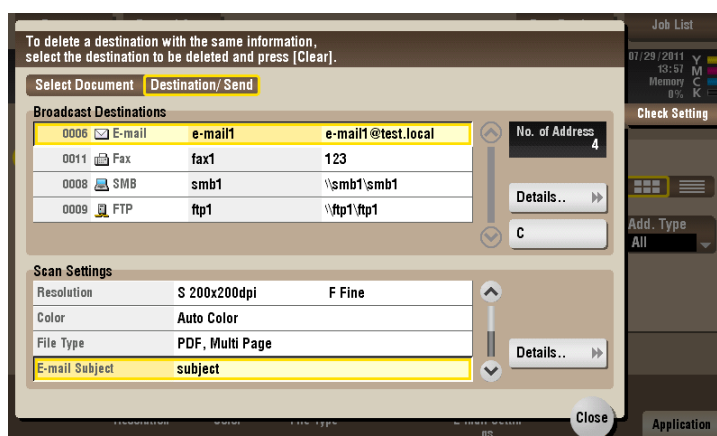






When sending a file from a User Box, you can view the specified address or send settings. If necessary, you can view a list of selected files.



2.4 Types of icons





Icons indicating the status of this machine

Icons indicating the status of this machine may appear in the icon display area. The types of icons to be displayed are as follows.

Icon	Description
	Indicates that a USB memory device is connected to this machine. Tapping this icon displays the screen to select a function (print, save, or scan) supported by the USB memory.
	Indicates that a USB connection is disabled because a nonstandard USB memory device is connected to this machine.
	Indicates that there are messages related to the consumables replacement or device maintenance. Tap this icon to check the message and perform the relevant replacement or maintenance procedure.
	Indicates that an error occurred during an image stabilization operation, a print operation or a scan operation. Tap this icon to change to a screen that shows a warning code.
	Indicates that the machine is waiting for the fax redial.
	Indicates that the machine is receiving data, regardless of the current mode.
	Indicates that data is being sent from the machine, regardless of the current mode.
	Indicates that an error has occurred in a connection to the E-mail server (POP).
	Indicates that enhanced security mode is enabled.

Icons to change to entry or selection screen

When you enter text or select a registered item while operating this machine, the following icons may be displayed. Tap a target icon to change to the screen on which you want to enter text or select a registered item.


Icon	Description
	Displays the text entry (keyboard) screen. This icon is referred to as a "keyboard icon" in the manual.
	Displays a screen through which a program address can be directly entered. This icon is referred to as an "entry icon" in the manual.
	Displays a list of registered items. This icon is referred to as a "list icon" in the manual.
	Displays a screen to configure detailed settings. This icon is referred to as a "detail icon" in the manual.

2.5 Viewing Current Job or Job History

Displaying the Job screen


A job refers to an individual operation unit such as printing, sending, receiving, or saving.

 Tap [Job List] on the main menu or on the main screen of each mode to view current job or job history, or to print a sending-receiving result report.

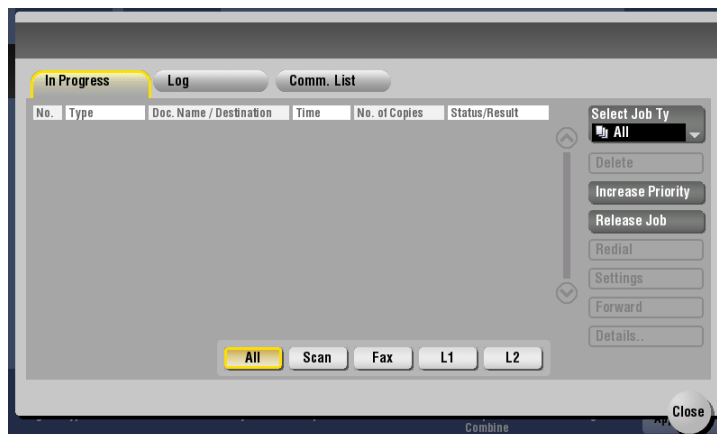

Viewing Current Jobs

 Tap the [In Progress] button to display current or standby jobs on this machine. As necessary, you can reorder print jobs or delete a standby job.

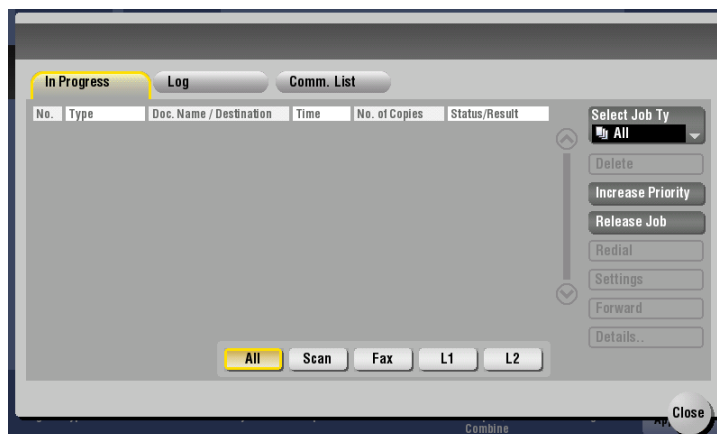

Item	Description
[Select Job Ty]	Used to filter jobs to be displayed in the list based on the job type such as a print job or send job.
[Delete]	Press this button to delete a job selected in the list.
[Increase Priority] (Print Job)	<p>Press this button to change the printing priority when print jobs are queued. Select a job to be printed first in the list of queued print jobs, then tap [Start].</p> <ul style="list-style-type: none"> The interrupted print job is automatically restarted when the preferential print job is completed. If the currently processed print job cannot be interrupted due to Fold or Staple, the preferential print job is executed after the currently processed print job has been completed.


Item	Description
[Release Job] (Print Job)	Press this button to configure the proof print function and display a list of executed print jobs using the printer driver. When printing, select a desired print job, then tap [Start]. If necessary, you can change print settings or delete a job. <ul style="list-style-type: none"> For details on the proof print function, refer to [User's Guide: Print Operations].
[Redial]	Press this button to manually send a redial waiting fax you select from the list. A redial waiting fax is sent automatically by the auto redial function after the specified time lapsed; however, you can manually start sending without waiting for automatic sending.
[Settings]	Press this button to view the setting of a job selected in the list.
[Forward]	Press this button to forward a fax received by the in-memory proxy reception function to another destination. Select a destination in the address book or directly enter it, then tap [Start]. <ul style="list-style-type: none"> For details on the in-memory proxy reception function, refer to [User's Guide: Fax Operations].
[Details..]	Press this button to view detailed information of a job selected in the list.

Related setting (for the administrator)

- Select whether to hide personal information such as an address or file name in the [Job List] screen (default: [No]). For details, refer to [User's Guide: Copy Operations].
To configure settings, select [Utility] - [Administrator Settings] - [Security Settings] - [Security Details] - [Personal Data Security Settings].
- Select whether to permit a deletion of other user's job (default: [Restrict]). For details, refer to [User's Guide: Copy Operations].
For settings: [Utility] - [Administrator Settings] - [System Settings] - [Restrict User Access] - [Restrict Access to Job Settings] - [Delete Other User Jobs]
- Select whether to permit a change on the priority of a print job specified in [Increase Priority] (default: [Allow]). For details, refer to [User's Guide: Copy Operations].
To configure settings, select [Utility] - [Administrator Settings] - [System Settings] - [Restrict User Access] - [Restrict Access to Job Settings] - [Changing Job Priority].

Viewing the job history

 Tap [Log] to display a list of jobs processed on this machine up till then. You can check a job that could not be ended due to an error.

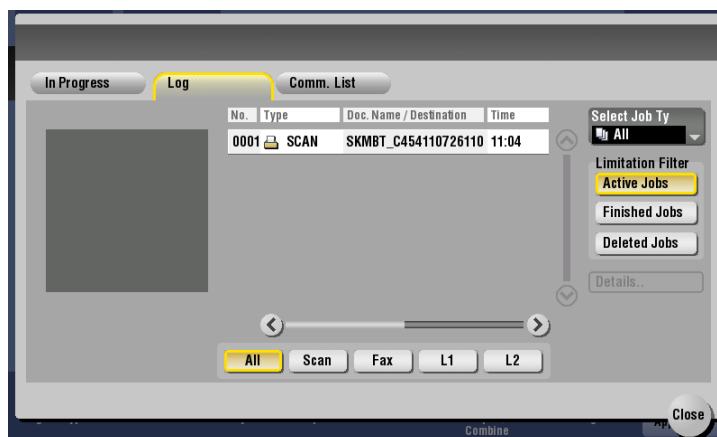

Item	Description
[Select Job Ty]	Used to filter jobs to be displayed in the list based on the job type such as a print job or send job. Jobs can be further filtered in combination with [Limitation Filter].
[Limitation Filter]	Used to filter jobs to be displayed in the list based on the selected conditions. <ul style="list-style-type: none"> • [All Jobs]: Displays all jobs. • [Finished Jobs]: Displays the jobs that have been ended normally. • [Deleted Jobs]: Displays the jobs that were deleted before they are ended.
[Details..]	Press this button to view detailed information of a job selected in the list.

Tips

- If user authentication is installed on this machine, change the authentication method and clear all management data; the job history is deleted.

 
Related setting (for the administrator)

- Select whether to hide personal information such as an address or file name in the [Job List] screen (default: [No]). For details, refer to [User's Guide: Copy Operations]. To configure settings, select [Utility] - [Administrator Settings] - [Security Settings] - [Security Details] - [Personal Data Security Settings].
- Select whether to display job thumbnail images (first page) in the job history (default: [OFF]). For details, refer to [User's Guide: Copy Operations]. To configure settings, select [Utility] - [Administrator Settings] - [Security Settings] - [Security Details] - [Job History Thumbnail Display].
- The job history can be initialized if necessary. For details, refer to [User's Guide: Copy Operations]. To configure settings, select [Utility] - [Administrator Settings] - [Security Settings] - [Security Details] - [Initialize].

Printing a communication report

Tap [Comm. List] to print a fax report that contains the results of Scan, Fax TX, Fax RX, and fax communication (TX/RX) jobs. For a fax report, you can specify the number of destinations.

To print a fax report, select a target for [Report Type], then press the **Start** key.

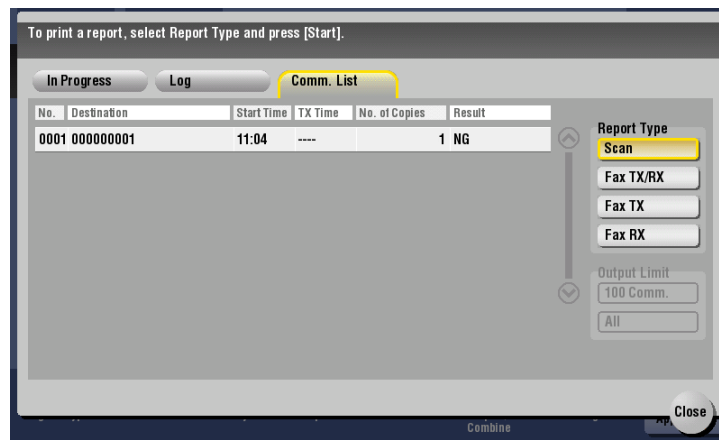

2.6 Configuring settings of this machine

Displaying [Utility]

Tap [Utility] on the main menu to view the settings or use status of this machine.



Settings	Description
[One-Touch/User Box Registration]	Register destinations or User Boxes.
[User Settings]	Press this button to enable users to change settings. You can change the defaults or screen displays of the copy, scan/fax, or print function in a user-friendly manner to suit your requirements.
[Administrator Settings]	This button displays items that can be changed only by the administrator. To configure settings, you need to enter the administrator password for this machine. You can specify the initial operations of the copy, print, fax, or User Box function, power saving function, and network function to suit your requirements. Also, you can manage the use status of this machine or inhibit an information leakage by specifying the authentication or security function.
[Check Consumable Life]	Press this button to check the status of consumables (consumption level) on this machine. When necessary, print the status of consumables in list form.
[Banner Printing]	Press this button to select whether to permit banner printing of the print function.
[Device Information]	Press this button to display the function version or IP address (IPv4/IPv6) of this machine.

The following items are displayed in the left panel.

Item	Description
[Bookmark]	Press this button to view a position of the currently displayed setting screen.
[Display Keypad]	The Keypad is displayed in the left-hand pane. This enables you to enter numeric values without sliding the Control Panel .

Displaying administrator settings

To display administrator settings, you need to enter the administrator password for this machine.

- 1 Tap [Administrator Settings].



- 2 Enter the administrator password for this machine.

→ For details on the administrator password, refer to the booklet manual [Quick Assist Guide].

The [Administrator Settings] screen appears. The available setting items are as follows.

Settings	Description
[System Settings]	Configure the operating environment of this machine such as the date and time of this machine, power saving function, functional operations, and screen displays.
[Administrator/Machine Settings]	Register information on the administrator and this machine.
[One-Touch/User Box Registration]	Register destinations or User Boxes. Also, print an address list, or specify the maximum number of User Boxes that can be created.
[User Authentication/Account Track]	Configure user authentication and account track. This function allows you to restrict users who can use this machine or manage the use status of this machine. Specify the authentication method, or register user information or account track information.
[Network Settings]	Configure the network function such as TCP/IP settings or Scan-to-send function operating environment.
[Copier Settings]	Configure each function used in copy mode.
[Printer Settings]	Specify the time-out time to limit a communication between this machine and a computer, or configure settings of a communication with the printer driver.
[Fax Settings]	Configure the settings to use the fax or network fax function.
[System Connection]	Configure settings to establish the association of this machine and other system.
[Security Settings]	Configure the security function of this machine such as password setting or data management method.
[License Settings]	Issue a request code required to use an advanced function, or enable an advanced function.
[OpenAPI Certification Management Setting]	Specify a restriction code to prevent an OpenAPI connection application from being registered on this machine.
[Remote Access Setting]	Specify whether to remotely rewrite (import or export) user data such as address information using the remote diagnosis system.



 
Displaying Help on the Touch Panel

3 Displaying Help on the Touch Panel

Using the guidance function


To check an overview or operation procedure of a specific function while operating this machine, press **Guidance** to view the explanation corresponding to the currently displayed screen on the **Touch Panel**.

For example, by pressing **Guidance** while [Finishing] is displayed, you can view a description of the finishing function.

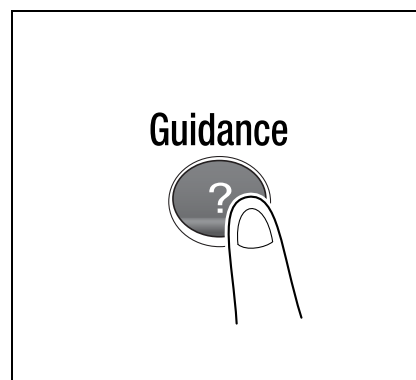

When Help Menu (main menu of Help) is displayed, you can search for a target based on an objective or function.

 The Help Menu consists of the following items. View and check an overview or operation procedure of a specific function.

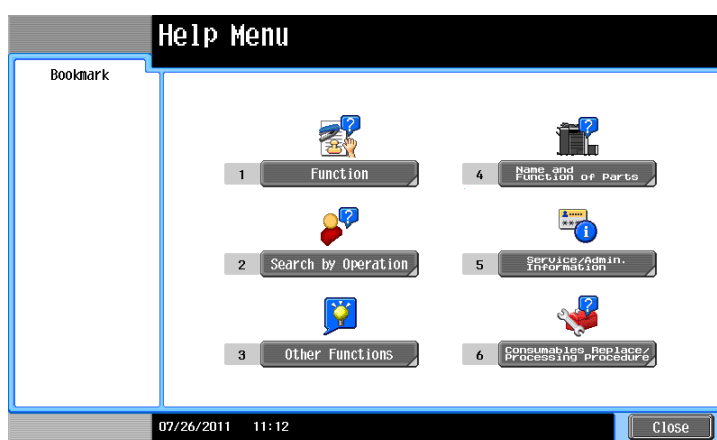

Item	Description
[Function]	Press this button to display the guidance menu that has been sorted according to the function names to be displayed in the screen. This menu is useful to learn an overview of a specific function.
[Search by Operation]	Press this button to display operation examples and explanations of this machine sorted by function. Tapping [Go to function] jumps to the screen to configure the displayed function. <ul style="list-style-type: none"> Select [Copying] and tap [Copying Special Documents]; instructions and guidance using moving images are displayed to show the procedure for placing an original.
[Other Functions]	Press this button to display the guidance menu of the functions and settings that make it easier to use this machine. Tapping [Go to function] jumps to the screen to configure the displayed function.

Item	Description
[Name and Function of Parts]	Press this button to display the keys of the Control Panel or the keys of the optional units installed on this machine, and view their functions.
[Service/Admin. Information]	Press this button to display the name, extension number, and E-mail address for the administrator of this machine.
[Consumables Replace/Processing Procedure]	Press this button to view moving images on how to replace consumables or punch scrapping. Tapping [Start Guidance] starts an explanation with moving images.

Tips

- By using Bookmark in the left panel, you can view a position of the currently displayed Guidance screen.
- Tap [Close] on the Guidance screen to move up one level in the menu structure. Tap [Exit] to exit Guidance mode and return to the screen that was displayed before the **Guidance** key was pressed.
- Tap [To Menu] on the Guidance screen or [Help Menu] on Bookmark to display the Help Menu.
- The Guidance screens cannot be displayed when the following operations are being performed: Scanning, printing a proof copy, preview of a finished copy, operating in Enlarge Display mode, or operating in Accessibility mode
- While the Guidance screen is displayed, the following keys on the **Control Panel** are disabled: **Start**, **C** (Clear), **Interrupt**, **Preview**, **Access**, and **Enlarge Display**

Using the animation guidance

The animation guidance demonstrate the procedure, using moving images, on how to deal with a paper or staple jam and how to replace consumables such as **Toner Cartridges**. While checking a procedure on the **Touch Panel**, you can carry out the removal procedure or replace consumables.

 
If a warning screen appears, for example, when a paper or staple jam occurs or consumables are to be replaced, tap [Start Guidance] on that screen; an explanation with moving images will start.




When you want to confirm a jam removal or replacement procedure while no warning screen is displayed, follow the procedure below to view the animation guidance.

This example shows you how to replace a **Toner Cartridge**.

- 1 Press the **Guidance** key.

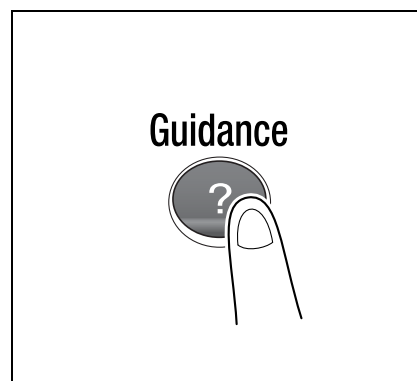

 - 2 Tap [Consumables Replace/Processing Procedure] - [Replace Toner Cartridge] - [Start Guidance].

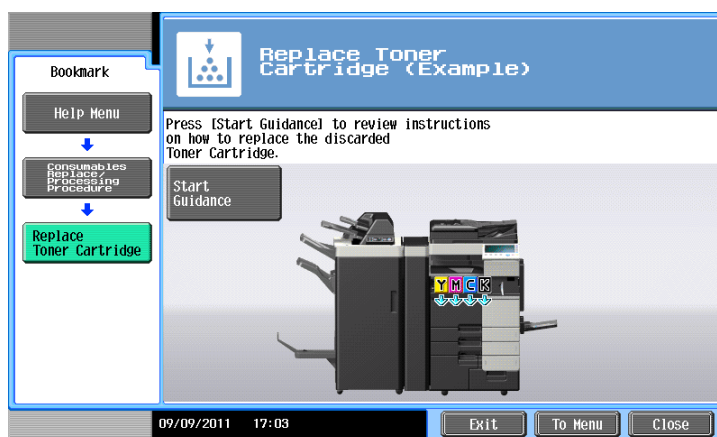

The animation guidance starts.

Tips

- You can also press **Guidance** and tap [Search by Operation] - [Replace consumables.] to view a jam removal or replacement procedure.

4

Changing a Function to be Assigned to a Register Key

4 Changing a Function to be Assigned to a Register Key

Select a function to be assigned to a **Register** key on the **Control Panel** to suit your requirements. It will be useful to assign frequently-used functions to Register keys.

 


This example explains how to change a function to be assigned to **Register Key 1**.

- 1 Tap [Utility] - [Administrator Settings] - [System Settings] - [Registered Key Settings] - [Register Key 1].



- 2 Select a function to be assigned to **Register Key 1**, then tap [OK].
- You cannot select a function assigned to other **Register** keys.

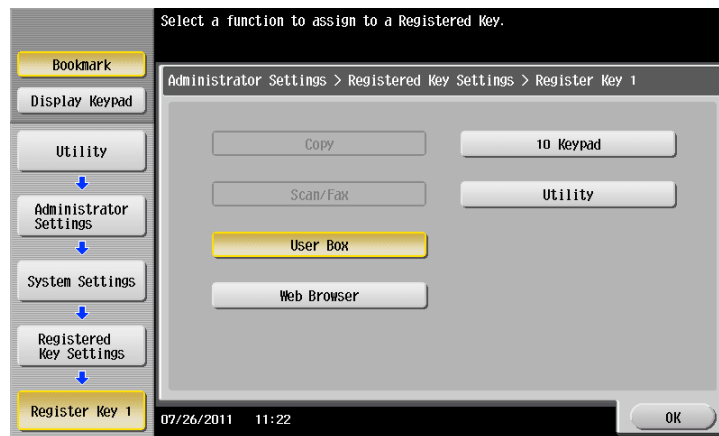

Settings	Description
[Copy]	Press this button to display the main screen in the copy mode.
[Scan/Fax]	Press this button to display the main screen in the scan/fax mode.
[User Box]	Press this button to display the main screen in the User Box mode.
[10 Keypad]	Press this button to display the Keypad on the Touch Panel when entering numeric values such as the number of copies or zoom ratio. Using this function saves a step to slide the Control Panel when entering numeric values using the Keypad .
[Utility]	Press this button to display the [Utility] screen.



Tips

- If the Web browser, one of the extension functions, is enabled, you can assign the [Web Browser] to a **Register** key.



Managing the Power Supply of this Machine

5 Managing the Power Supply of this Machine

5.1 How to Use the Power Key

When using this machine in factory default status

 
For details on how to use the **Power** key in factory default status, refer to [User's Guide Preface (Trademark Licenses)].

When using the Power key as a power save key

The **Power** key can be used as a power save key to manually switch to Power Save mode. Power Save mode is classified into two modes: Low Power mode and Sleep mode.

- To use the **Power** key as a power save key, change the **Power** key setting (default: [Sub Power OFF]). For details, refer to page 5-5([Power Key Settings]).
- Press the **Power** key to select whether to switch to Low Power or Sleep mode (default: [Low Power]). For details, refer to page 5-5([Power Save Settings]).

When the **Power** key is pressed, the status of this machine changes as shown below. The way status changes varies depending on how the **Power** key is pressed.

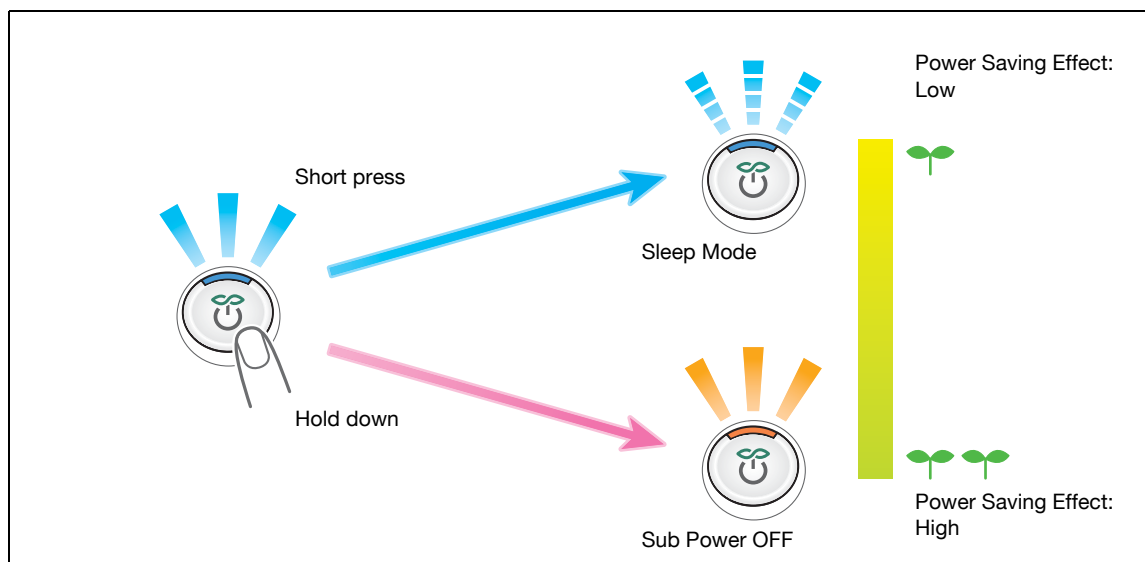

Power key	Status of this machine	Status of LED	Description
Short press	Low Power mode (Default value)	Flash: Blue	Turns off the display of the Touch Panel to reduce power use. This machine returns to the normal mode when it receives data or faxes or when the user operates the Touch Panel .
	Sleep mode	Flash: Blue	Provides power-saving effect higher than Low Power mode. A time required to return to the normal mode is longer than Low Power mode. This machine returns to the normal mode when it receives data or faxes or when the user operates the Touch Panel .

Power key	Status of this machine	Status of LED	Description
Hold down	Sub Power OFF	Light up: Orange	Provides power-saving effect higher than Sleep mode. While the sub power is turned off, this machine can receive data or faxes, however, it cannot scan or print an original. To turn it on, press the Power key again. If data or faxes are received while the sub power is turned off, they are printed when the sub power is turned on.

Related setting (for the administrator)

- Specify whether to return to normal mode when you press the **Touch Panel** in Power Save mode (default: [ON]). For details, refer to page 5-5([Awake from Power Save Mode by Touching Control Panel]).

5.2 Configuring the Power key and power save operations (for the administrator)

Configure the settings on how to use the **Power** key and the machine action in Power Save mode.

Press [Utility] - [Administrator Settings] - [System Settings] - [Power supply/power save settings], and configure the following settings.

Settings	Description
[Low Power Mode Settings]	Change the time required to automatically change to Low Power mode after you have not operated this machine for a fixed period of time. In Low Power mode, the display of the Touch Panel is turned off to reduce power consumption. [15] minute is specified by default (allowable range: [10] to [240] min.).
[Sleep Mode Settings]	Change the time required before the machine automatically enter Sleep mode if you have not operated this machine. Sleep mode provides a greater power saving effect than Low Power mode. However, the time required to return to the normal mode is longer than the time required to recover from Low Power mode. [30] minute is specified by default (allowable range: [15] to [240] min.).
[Power Key Setting]	Select whether to use the Power key on the Control Panel as a sub power OFF key or as a power save key. <ul style="list-style-type: none"> [Sub Power OFF]: Press the Power key to turn the sub power off. If the Power key is held down, Power Save mode shifts to ErP Auto Power Off mode (close to Main Power Off mode), which offers a higher power saving effect than Sub Power Off mode. [Power Save]: Press the Power key to shift to Power Save mode (Low Power or Sleep mode). Hold down the Power key to shift to sub power off mode. [Sub Power OFF] is specified by default.
[Power Save Settings]	If [Power Save] is selected for [Power Key Setting], select the type of Power Save mode you want to switch when pressing the Power key on the Control Panel . <ul style="list-style-type: none"> [Low Power]: Switches to Low Power mode. Turns off the display of the Touch Panel to reduce power consumption. [Sleep]: Switches to the Sleep mode. Sleep mode provides a greater power saving effect than Low Power mode. However, the time required to return to the normal mode is longer than the time required to recover from Low Power mode. [Low Power] is specified by default.
[Enter Power Save Mode]	Select the timing for the machine to return to the Power Save mode after printing a job it has received in the Power Save mode from a fax machine or computer. <ul style="list-style-type: none"> [Normal]: Switches to Power Save mode based on the time specified in [Low Power Mode Settings] or [Sleep Mode Settings]. [Immediately]: Switches to Power Save mode immediately after a print job has ended. [Immediately] is specified by default.
[Power Consumption in Sleep Mode]	Select whether to reduce power consumption in the Sleep mode. <ul style="list-style-type: none"> [Enabled]: Further reduces power consumption in Sleep mode. Usually, select [Enabled]. [Disabled]: Select this option when a smooth network communication is not established while [Enabled] is enabled. [Enabled] is specified by default.
[Power Saving Fax/Scan]	Select whether to give priority to the power saving when the machine returns from Sleep or sub power off mode to a mode other than copy mode. When returning to a mode that does not involve printing, such as scan/fax mode, power consumption can be reduced by not adjusting the temperature of the Fusing Unit on this machine. You can set this option when you have selected an option other than [Copy] in [Priority Mode] that is selected by [Administrator Settings] - [System Settings] - [Reset Settings] - [System Auto Reset]. <ul style="list-style-type: none"> [Power Save]: The temperature of Fusing Unit is not adjusted when the machine returns to the normal mode. [Standard]: The temperature of Fusing Unit is adjusted when the machine returns to the normal mode. [Standard] is specified by default.


Settings	Description
[Awake from Power Save Mode by Touching Control Panel]	Select whether to return to normal mode when you press the Touch Panel in Power Save mode. If you select [OFF], the machine returns to normal mode only via the Power key. [ON] is selected by default.

5.3 Switching to Power Save mode at the specified time (for the administrator)

Using Weekly Timer

The weekly timer is a function that automatically switches this machine to normal mode or Power Save mode (Sleep mode or ErP Auto Power OFF mode) at the pre-specified time. This machine supports the tracking function to automatically set a schedule for switching to the normal or Power Save mode to suit the office use status.

 Employing the weekly timer enables you to establish an efficient power saving scheme by taking advantage of certain periods of office use, such as lunch breaks, night time hours and holidays.

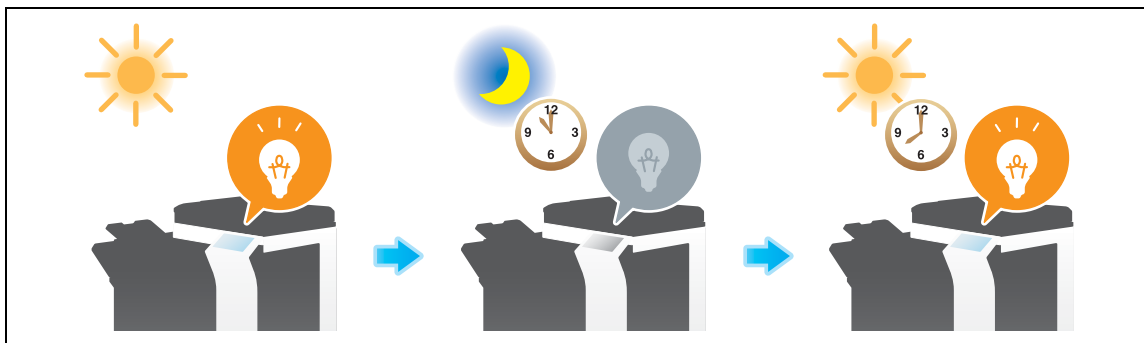

Reference

 
For details on how to set the weekly timer, refer to [User's Guide: Copy Operations].

To configure settings, select [Utility] - [Administrator Settings] - [System Settings] - [Weekly Timer Settings].


Using this machine while the weekly timer is active

Using the weekly timer restricts the use of this machine in the Power Save mode with a password. This example shows you how to temporarily enable this machine when the use of this machine is restricted with a password.

- 1 Press the **Power** key.

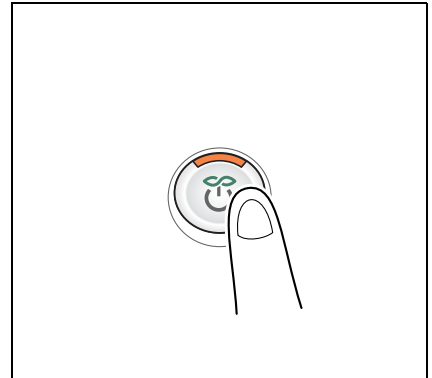

- 2 Enter the password, then tap [OK].

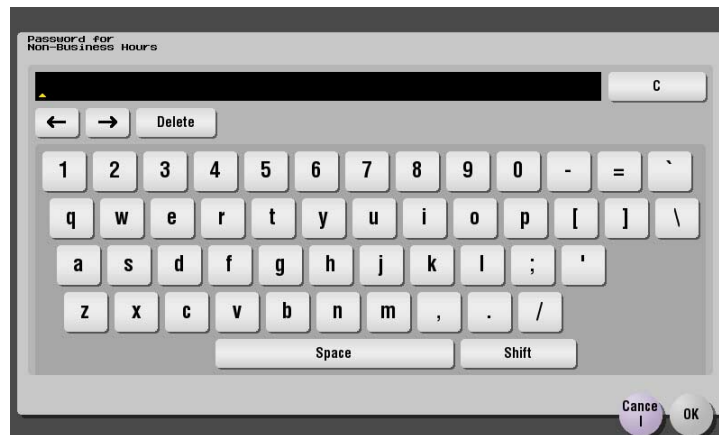 

- 3 Use the **Keypad** to enter the time period before the machine switches to Power Save mode, then tap [OK].



The main menu appears.



 
Login Screen

6 Login Screen

Logging in to this machine

If user authentication or account track is installed on this machine, the Login screen appears on the **Touch Panel**.


Enter the user or account track name and the password on the Login screen, then tap [Login] or press the **Access** key to perform authentication. After a target operation is completed, press the **Access** key to log out.

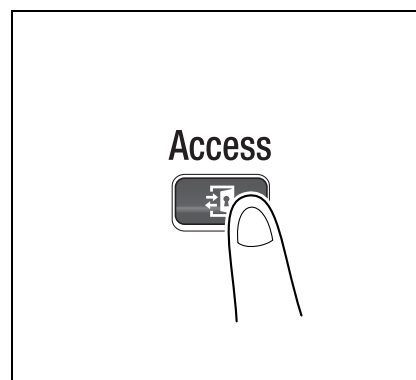

Performing user authentication (MFP authentication)

Enter the user name and the password, and perform user authentication. The contents of the Login screen may vary depending on the authentication setting of this machine.

- 1 Tap the keyboard icon of [User Name].
 - If Public User Access (unregistered users) is enabled, tap [Public User Access] to log in to this machine.

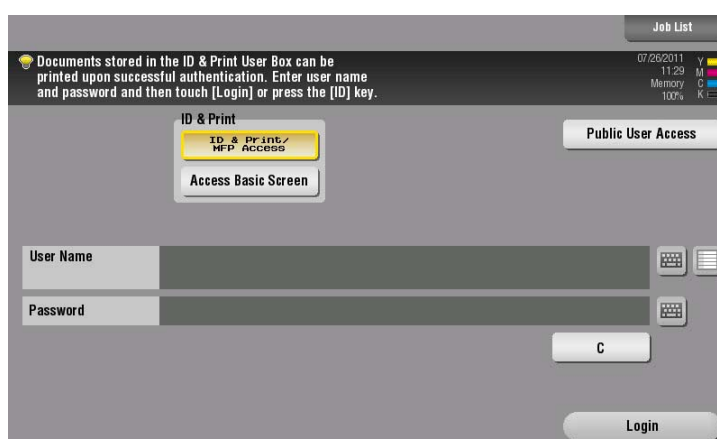 


- Select whether to display the list icon that recalls the user name list in the login screen (default: [OFF]). For details, refer to [User's Guide: Copy Operations]. To configure settings, select [Utility] - [Administrator Settings] - [User Authentication/Account Track] - [User Authentication Settings] - [Administrative Settings] - [User Name List].
- Tapping the list icon that recalls the user name list displays a list of user names and enables you to select a login user.

- 2 Enter the user name and the password, then tap [OK].



 - 3 Tap [Login] or press the **Access** key to log in to this machine.
- If user authentication and account track are installed without being synchronized, account track is required after this. For details, refer to page 6-7.
 - If user authentication and account track are synchronized, account track is not required.
- If authentication succeeds, you can log in to this machine.
- 4 After a target operation is completed, press the **Access** key to log out.
- If you do not operate this machine for a certain period of time during login (default: one min.), you will be automatically logged out.
- 5 Tap [Yes].

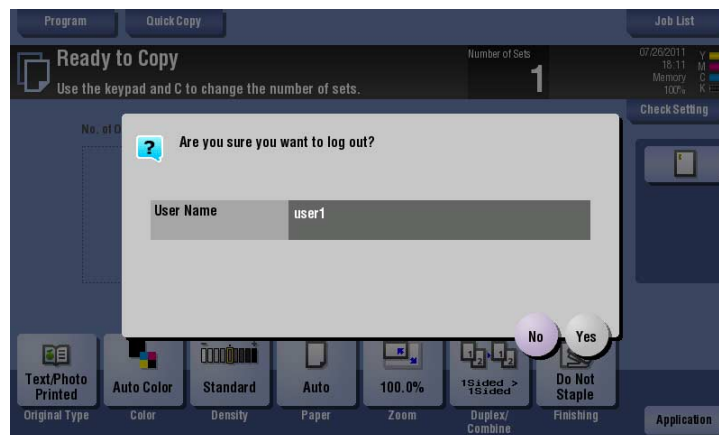


- Select whether to display the logout confirmation screen (default: [ON]). For details, refer to [User's Guide: Copy Operations].
- To configure settings, select [Utility] - [Administrator Settings] - [User Authentication/Account Track] - [User/Account Common Setting] - [Logout Confirmation Screen Display Setting].

Performing user authentication (External server authentication)

Enter the user name and the password, and select a server to be authenticated. The contents of the Login screen may vary depending on the authentication setting of this machine.

- 1 Tap the keyboard icon of [User Name].
 - If Public User Access (unregistered users) is enabled, tap [Public User Access] to log in to this machine.

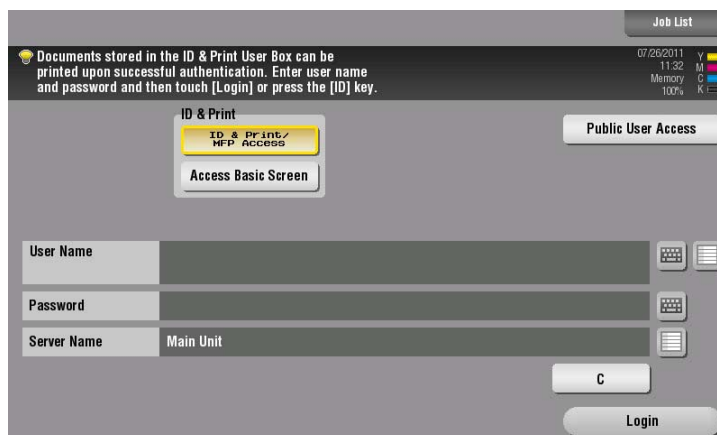 


- Select whether to display the list icon that recalls the user name list in the login screen (default: [OFF]). For details, refer to [User's Guide: Copy Operations]. To configure settings, select [Utility] - [Administrator Settings] - [User Authentication/Account Track] - [User Authentication Settings] - [Administrative Settings] - [User Name List].
- Tapping the list icon that recalls the user name list displays a list of user names and enables you to select a login user.


- 2 Enter the user name and the password, then tap [OK].



 - 3 When using multiple authentication servers, tap the list icon for [Server Name], and select a server to be authenticated.
- By default, the default authentication server is selected.

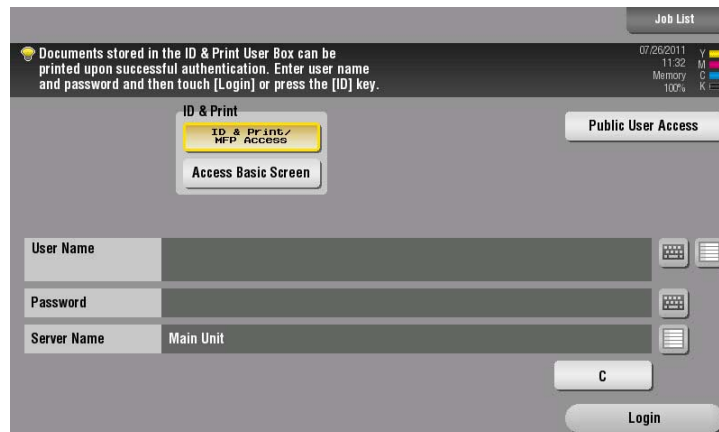

- 4 Tap [Login] or press the **Access** key to log in to this machine.
- If user authentication and account track are installed without being synchronized, account track is required after this. For details, refer to page 6-7.
- If user authentication and account track are synchronized, account track is not required.
- If authentication succeeds, you can log in to this machine.
- 5 After a target operation is completed, press the **Access** key to log out.
- If you do not operate this machine for a certain period of time during login (default: one min.), you will be automatically logged out.
- 6 Tap [Yes].

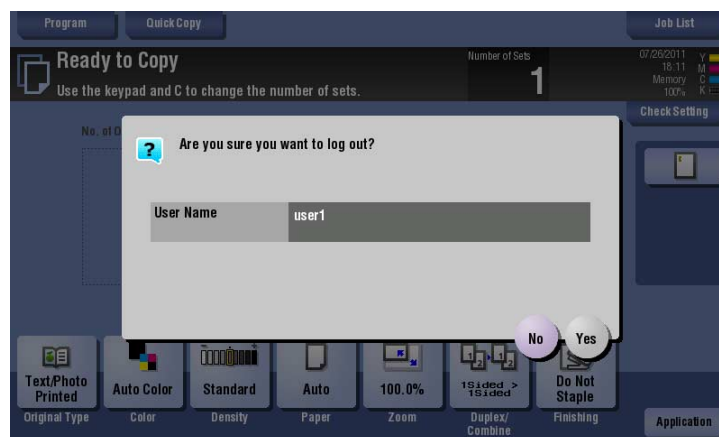 


- Select whether to display the logout confirmation screen (default: [ON]). For details, refer to [User's Guide: Copy Operations].
- To configure settings, select [Utility] - [Administrator Settings] - [User Authentication/Account Track] - [User/Account Common Setting] - [Logout Confirmation Screen Display Setting].

Performing account track

Enter the account name and the password to perform account track. The contents of the Login screen may vary depending on the authentication setting of this machine.

- ✓ If user authentication and account track are installed without being synchronized, perform user authentication first. For details, refer to page 6-3 (Performing user authentication (MFP authentication)) or page 6-5 (Performing user authentication (External server authentication)).
- ✓ If user authentication and account track are synchronized, account track is not required.

- 1 Tap the keyboard icon of [Account Name].
 - When performing account track only using the password, tap the keyboard icon of [Password], and enter the password.
 - If the password consists only of numbers, it can be entered directly using the **Keypad** without displaying the keyboard.

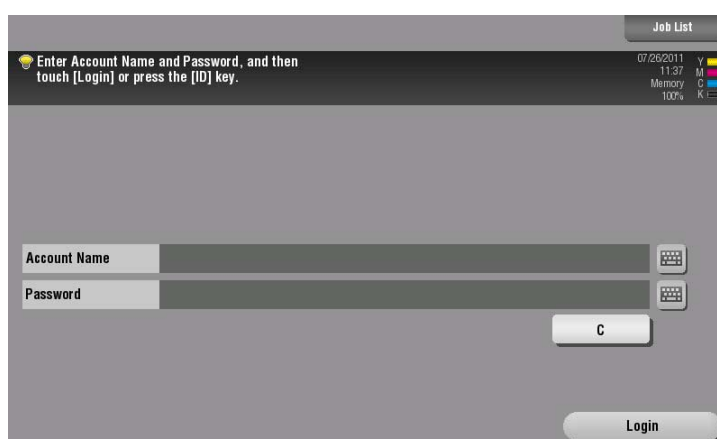 


- 2 Enter the account name and the password, then tap [OK].



- 3 Tap [Login] or press the **Access** key to log in to this machine.
If authentication succeeds, you can log in to this machine.
- 4 After a target operation is completed, press the **Access** key to log out.
 - If you do not operate this machine for a certain period of time during login (default: one min.), you will be automatically logged out.

 5 Tap [Yes].

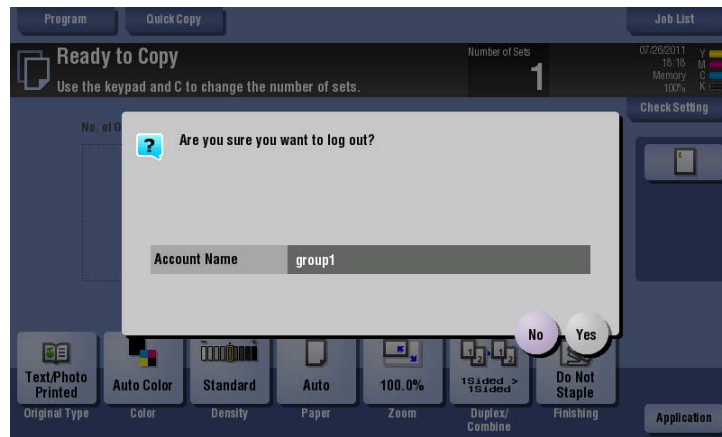


- Select whether to display the logout confirmation screen (default: [ON]). For details, refer to [User's Guide: Copy Operations].
To configure settings, select [Utility] - [Administrator Settings] - [User Authentication/Account Track] - [User/Account Common Setting] - [Logout Confirmation Screen Display Setting].



Entering Characters

7 Entering Characters

 When entering characters to register an address or program, use the keyboard screen displayed on the **Touch Panel**. When entering numbers, you can also use the **Keypad**.

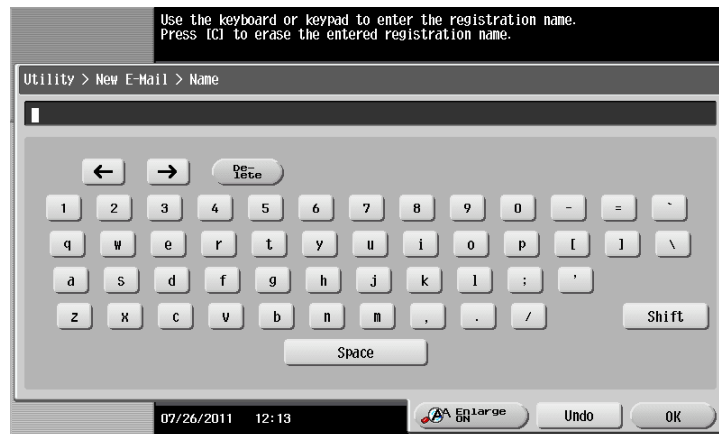

Item	Description
Keyboard	Tap the keys of characters you want to enter.
[←]/[→]	Press this key to move the cursor.
[Delete]	Press this key to delete characters you entered one by one.
[Shift]	Tap this key to enter uppercase letters or symbols.
[Enlarge ON]	Press this key to enlarge the keyboard. <ul style="list-style-type: none"> To release the enlargement, tap [Enlarge OFF].
[Undo]	Press this key to delete all characters you entered. <ul style="list-style-type: none"> You can also delete all characters you entered when C (Clear) is pressed.
[OK]	Press this key to apply the character you entered.



