



KONICA MINOLTA

The essentials of imaging

bizhub C35

Reference Guide



Copyright Notice

The digitally encoded software and publication included with your printer are Copyrighted © 2009 by KONICA MINOLTA BUSINESS TECHNOLOGIES, INC., Marunouchi Center Building, 1-6-1 Marunouchi, Chiyoda-ku, Tokyo, 100-0005, Japan. All Rights Reserved.

This software may not be reproduced, modified, displayed, transferred, or copied in any form or in any manner or on any media, in whole or in part, without the express written permission of KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of KONICA MINOLTA. The information contained in this guide is intended for use with the KONICA MINOLTA bizhub C35 printers only.

About the GPL (General Public License)

This driver is written for Linux, which is written and distributed under the GNU GPL. The printing system CUPS adopted to run on the Linux is published by ESP (Easy Software Products) under the GPL. All source codes that we write must be available to the general public.

Trademarks

KONICA MINOLTA and the KONICA MINOLTA logo are trademarks or registered trademarks of KONICA MINOLTA HOLDINGS, INC.

bizhub and PageScope are trademarks or registered trademarks of KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

Acrobat and the Acrobat logo are registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Adobe, the Adobe logo, Photoshop, and AdobeRGB1998 are registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

Apache and the Apache feather logo are registered trademarks or trademarks of The Apache Software Foundation.

Apple, the Apple logo, Macintosh, Mac, Mac OS, AppleRGB, APPLETALK and BONJOUR are registered trademarks or trademarks of Apple, Inc. in the United States and/or other countries.

DIC and the DIC logo are registered trademarks or trademarks of DIC Corporation in the United States and/or other countries.

XEROX, the XEROX logo and Ethernet are registered trademarks or trademarks of Xerox Corporation in the United States and/or other countries.

Fedora is a registered trademark or trademark of Red Hat, Inc. in the United States and/or other countries.

FeliCa is a registered trademark or trademark of Sony Corporation in the United States and/or other countries.

FCF is a registered trademark of FCF Forum.

SSFC is a registered trademark of Dai Nippon Printing Co., Ltd.

HID and iCLASS are registered trademarks or trademarks of HID Global Corporation in the United States and/or other countries.

HP, the HP logo and Web Jetadmin are registered trademarks or trademarks of Hewlett-Packard Company in the United States and/or other countries.

IEEE and the IEEE logo are registered trademarks or trademarks of The Institute of Electrical and Electronics Engineers, Inc. in the United States and/or other countries.

Legic is a registered trademark or trademark of LEGIC Identsystems AG in the United States and/or other countries.

MIFARE is a registered trademark of Philips Semiconductors Gratkorn GmbH in the United States.

NETWARE and NDS are registered trademarks or trademarks of Novell, Inc. in the United States and/or other countries.

Pentium is registered trademark or trademark of Intel Corporation in the United States and/or other countries.

SCANSOFT and OmniPage are registered trademarks or trademarks of NUANCE COMMUNICATIONS, INC in the United States and/or other countries.

TOYO is a registered trademark of TOYO INK MFG. CO., LTD. in the United States and/or other countries.

Microsoft, Windows, Windows XP, Windows NT, Windows Server, Windows Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

X-rite is a registered trademark or trademark of X-Rite, Incorporated in the United States and/or other countries.

Compact flash is a registered trademark or trademark of SanDisk Corporation in the United States and/or other countries.

All other trademarks and registered trademarks are the property of their respective owners.

Notice

KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. reserves the right to make changes to this guide and to the equipment described herein without notice. Considerable effort has been made to ensure that this manual is free of inaccuracies and omissions. However, KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. makes no warranty of any kind including, but not limited to, any implied warranties of merchantability and fitness for a particular purpose with regard to this manual.

KONICA MINOLTA BUSINESS TECHNOLOGIES, INC. assumes no responsibility for, or liability for, errors contained in this manual or for incidental, special, or consequential damages arising out of the furnishing of this manual, or the use of this manual in operating the equipment, or in connection with the performance of the equipment when so operated.

SOFTWARE LICENSE AGREEMENT

This package contains the following materials provided by Konica Minolta Business Technologies, Inc. (KMBT): software included as part of the printing system, the digitally-encoded machine-readable outline data encoded in the special format and in the encrypted form ("Font Programs"), other software which runs on a computer system for use in conjunction with the Printing Software ("Host Software"), and related explanatory written materials ("Documentation"). The term "Software" shall be used to describe Printing Software, Font Programs and/or Host Software and also include any upgrades, modified versions, additions, and copies of the Software.

The Software is being licensed to you under the terms of this Agreement.

KMBT grants to you a non-exclusive sublicense to use the Software and Documentation, provided that you agree to the following:

1. You may use the Printing Software and accompanying Font Programs for imaging to the licensed output device(s), solely for your own internal business purposes.
2. In addition to the license for Font Programs set forth in Section 1 ("Printing Software") above, you may use Roman Font Programs to reproduce weights, styles, and versions of letters, numerals, characters and symbols ("Typefaces") on the display or monitor for your own internal business purposes.
3. You may make one backup copy of the Host Software, provided your backup copy is not installed or used on any computer. Notwithstanding the above restrictions, you may install the Host Software on any number of computers solely for use with one or more printing systems running the Printing Software.
4. You may assign its rights under this Agreement to an assignee of all of Licensee's right and interest to such Software and Documentation ("Assignee") provided you transfer to Assignee all copies of such Software and Documentation Assignee agrees to be bound by all of the terms and conditions of this Agreement.
5. You agree not to modify, adapt or translate the Software and Documentation.
6. You agree that you will not attempt to alter, disassemble, decrypt, reverse engineer or decompile the Software.
7. Title to and ownership of the Software and Documentation and any reproductions thereof shall remain with KMBT.
8. Trademarks shall be used in accordance with accepted trademark practice, including identification of the trademark owner's name. Trademarks can only be used to identify printed output produced by the Software. Such use of any trademark does not give you any rights of ownership in that trademark.
9. You may not rent, lease, sublicense, lend or transfer versions or copies of the Software that the Licensee does not use, or Software contained on any unused media, except as part of the permanent transfer of all Software and Documentation as described above.
10. In no event will KMBT or its licensor be liable to you for any consequential, incidental INDIRECT, PUNITIVE or special damages, including any lost profits or lost saving, even if KMBT has been advised of the possibility of such damages, or for any claim by any third party. KMBT or its licensor disclaims all warranties with regard to the software, express or implied, including, without limitation implied warranties of merchantability, fitness for a particular purpose, title and non-infringement of third party rights. Some states or jurisdictions do not allow the exclusion or limitation of incidental, consequential or special damages, so the above limitations may not apply to you.

11. Notice to Government End Users: The Software is a “commercial item,” as that term is defined at 48 C.F.R.2.101, consisting of “commercial computer software” and “commercial computer software documentation,” as such terms are used in 48 C.F.R. 12.212. Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227.7202-1 through 227.7202-4, all U.S. Government End Users acquire the Software with only those rights set forth herein.
12. You agree that you will not export the Software in any form in violation of any applicable laws and regulations regarding export control of any countries.

About Adobe Color Profile

ADOBE SYSTEMS INCORPORATED COLOR PROFILE LICENSE AGREEMENT

NOTICE TO USER: PLEASE READ THIS CONTRACT CAREFULLY. BY USING ALL OR ANY PORTION OF THE SOFTWARE YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS SOFTWARE YOU ACCEPT ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT. IF YOU DO NOT AGREE WITH THE TERMS OF THIS AGREEMENT, DO NOT USE THE SOFTWARE.

1. **DEFINITIONS** In this Agreement, “Adobe” means Adobe Systems Incorporated, a Delaware corporation, located at 345 Park Avenue, San Jose, California 95110. “Software” means the software and related items with which this Agreement is provided.
2. **LICENSE** Subject to the terms of this Agreement, Adobe hereby grants you the worldwide, non-exclusive, nontransferable, royalty-free license to use, reproduce and publicly display the Software. Adobe also grants you the rights to distribute the Software only (a) as embedded within digital image files and (b) on a standalone basis. No other distribution of the Software is allowed; including, without limitation, distribution of the Software when incorporated into or bundled with any application software. All individual profiles must be referenced by their ICC Profile description string. You may not modify the Software. Adobe is under no obligation to provide any support under this Agreement, including upgrades or future versions of the Software or other items. No title to the intellectual property in the Software is transferred to you under the terms of this Agreement. You do not acquire any rights to the Software except as expressly set forth in this Agreement.
3. **DISTRIBUTION** If you choose to distribute the Software, you do so with the understanding that you agree to defend, indemnify and hold harmless Adobe against any losses, damages or costs arising from any claims, lawsuits or other legal actions arising out of such distribution, including without limitation, your failure to comply with this Section 3. If you distribute the Software on a standalone basis, you will do so under the terms of this Agreement or your own license agreement which (a) complies with the terms and conditions of this Agreement; (b) effectively disclaims all warranties and conditions, express or implied, on behalf of Adobe; (c) effectively excludes all liability for damages on behalf of Adobe; (d) states that any provisions that differ from this Agreement are offered by you alone and not Adobe and (e) states that the Software is available from you or Adobe and informs licensees how to obtain it in a reasonable manner on or through a medium customarily used for software exchange. Any distributed Software will include the Adobe copyright notices as included in the Software provided to you by Adobe.

4. **DISCLAIMER OF WARRANTY** Adobe licenses the Software to you on an “AS IS” basis. Adobe makes no representation as to the adequacy of the Software for any particular purpose or to produce any particular result. Adobe shall not be liable for loss or damage arising out of this Agreement or from the distribution or use of the Software or any other materials. ADOBE AND ITS SUPPLIERS DO NOT AND CANNOT WARRANT THE PERFORMANCE OR RESULTS YOU MAY OBTAIN BY USING THE SOFTWARE, EXCEPT FOR ANY WARRANTY, CONDITION, REPRESENTATION OR TERM TO THE EXTENT TO WHICH THE SAME CANNOT OR MAY NOT BE EXCLUDED OR LIMITED BY LAW APPLICABLE TO YOU IN YOUR JURISDICTION, ADOBE AND ITS SUPPLIERS MAKE NO WARRANTIES, CONDITIONS, REPRESENTATIONS OR TERMS, EXPRESS OR IMPLIED, WHETHER BY STATUTE, COMMON LAW, CUSTOM, USAGE OR OTHERWISE AS TO ANY OTHER MATTERS, INCLUDING BUT NOT LIMITED TO NON-INFRINGEMENT OF THIRD PARTY RIGHTS, INTEGRATION, SATISFACTORY QUALITY OR FITNESS FOR ANY PARTICULAR PURPOSE. YOU MAY HAVE ADDITIONAL RIGHTS WHICH VARY FROM JURISDICTION TO JURISDICTION. The provisions of Sections 4, 5 and 6 shall survive the termination of this Agreement, howsoever caused, but this shall not imply or create any continued right to use the Software after termination of this Agreement.
5. **LIMITATION OF LIABILITY** IN NO EVENT WILL ADOBE OR ITS SUPPLIERS BE LIABLE TO YOU FOR ANY DAMAGES, CLAIMS OR COSTS WHATSOEVER OR ANY CONSEQUENTIAL, INDIRECT, INCIDENTAL DAMAGES, OR ANY LOST PROFITS OR LOST SAVINGS, EVEN IF AN ADOBE REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSS, DAMAGES, CLAIMS OR COSTS OR FOR ANY CLAIM BY ANY THIRD PARTY. THE FOREGOING LIMITATIONS AND EXCLUSIONS APPLY TO THE EXTENT PERMITTED BY APPLICABLE LAW IN YOUR JURISDICTION. ADOBE'S AGGREGATE LIABILITY AND THAT OF ITS SUPPLIERS UNDER OR IN CONNECTION WITH THIS AGREEMENT SHALL BE LIMITED TO THE AMOUNT PAID FOR THE SOFTWARE. Nothing contained in this Agreement limits Adobe's liability to you in the event of death or personal injury resulting from Adobe's negligence or for the tort of deceit (fraud). Adobe is acting on behalf of its suppliers for the purpose of disclaiming, excluding and/or limiting obligations, warranties and liability as provided in this Agreement, but in no other respects and for no other purpose.
6. **TRADEMARKS** Adobe and the Adobe logo are the registered trademarks or trademarks of Adobe in the United States and other countries. With the exception of referential use, you will not use such trademarks or any other Adobe trademark or logo without separate prior written permission granted by Adobe.
7. **TERM** This Agreement is effective until terminated. Adobe has the right to terminate this Agreement immediately if you fail to comply with any term hereof. Upon any such termination, you must return to Adobe all full and partial copies of the Software in your possession or control.
8. **GOVERNMENT REGULATIONS** If any part of the Software is identified as an export controlled item under the United States Export Administration Act or any other export law, restriction or regulation (the “Export Laws”), you represent and warrant that you are not a citizen, or otherwise located within, an embargoed nation (including without limitation Iran, Iraq, Syria, Sudan, Libya, Cuba, North Korea, and Serbia) and that you are not otherwise prohibited under the Export Laws from receiving the Software. All rights to use the Software are granted on condition that such rights are forfeited if you fail to comply with the terms of this Agreement.

9. **GOVERNING LAW** This Agreement will be governed by and construed in accordance with the substantive laws in force in the State of California as such laws are applied to agreements entered into and to be performed entirely within California between California residents. This Agreement will not be governed by the conflict of law rules of any jurisdiction or the United Nations Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. All disputes arising out of, under or related to this Agreement will be brought exclusively in the state Santa Clara County, California, USA.
10. **GENERAL** You may not assign your rights or obligations granted under this Agreement without the prior written consent of Adobe. None of the provisions of this Agreement shall be deemed to have been waived by any act or acquiescence on the part of Adobe, its agents, or employees, but only by an instrument in writing signed by an authorized signatory of Adobe. When conflicting language exists between this Agreement and any other agreement included in the Software, the terms of such included agreement shall apply. If either you or Adobe employs attorneys to enforce any rights arising out of or relating to this Agreement, the prevailing party shall be entitled to recover reasonable attorneys' fees. You acknowledge that you have read this Agreement, understand it, and that it is the complete and exclusive statement of your agreement with Adobe which supersedes any prior agreement, oral or written, between Adobe and you with respect to the licensing to you of the Software. No variation of the terms of this Agreement will be enforceable against Adobe unless Adobe gives its express consent, in writing, signed by an authorized signatory of Adobe.

ICC Profile for TOYO INK Standard Color on Coated paper (TOYO Offset Coated 2.1)

This ICC Profile (TOYO Offset Coated 2.1) characterizes Japanese offset press on Coated paper and is fully compatible with ICC profile format.

About "TOYO INK Standard Color on Coated paper"

This is the standard for color reproduction of sheet-fed offset press on Coated paper made by TOYO INK MFG.CO., LTD. ("TOYO INK").

This standard is made from printing test with using TOYO INK's sheet-fed offset printing inks and TOYO INK's own printing conditions.

"TOYO INK Standard Color on Coated paper" is compatible with "JAPAN COLOR".

Agreement

1. The reproduction of images on a printer or a monitor using this ICC Profile do not completely match the TOYO INK Standard Color on Coated paper.
2. Any and all copyrights of this ICC Profile shall remain in TOYO INK; therefore you shall not transfer, provide, rent, distribute, disclose, or grant any rights in this ICC Profile to any third party without the prior written consent of TOYO INK.
3. In no event will TOYO INK its directors, officers, employees or agents be liable to you for any consequential or incidental, either direct or indirect, damages (including damages for loss of business profits, business interruption, loss of business information, and the like) arising out of the use or inability to use this ICC Profile.
4. TOYO INK shall not be responsible for answering any question related to this ICC Profile.

5. All company names and product names used in this document is the trademarks or registered trademarks of their respective holder.

This ICC Profile made by GretagMacbeth ProfileMaker and granted TOYO INK certain license to distribute by GretagMacbeth AG.

TOYO Offset Coated 2.1 © TOYO INK MFG. CO., LTD. 2004

DIC STANDARD COLOR PROFILE LICENSE AGREEMENT

IMPORTANT: PLEASE READ THIS STANDARD COLOR PROFILE LICENSE AGREEMENT ("LICENSE AGREEMENT") CAREFULLY BEFORE USING THE DIC STANDARD COLOR PROFILE, INCLUDING THE DIC STANDARD SFC_AM2.0, DIC STANDARD SFM_AM2.0, DIC STANDARD SFU_AM2.0, DIC STANDARD SFC_FM2.0, DIC WAKIMIZU SFC_AM2.0, DIC WAKIMIZU SFC_FM2.0, DIC ABILIO SFC_AM1.0, DIC HY-BRYTE SFC_AM1.0, DIC STANDARD WEBC_AM2.1, DIC STANDARD WEBC_FM2.1, DIC NEWSCOLOR_AM1.0, DIC NEWSCOLOR_FM1.0, PROVIDED BY DIC HERewith, AND ANY CORRESPONDING ONLINE OR ELECTRONIC DOCUMENTATION AND ALL UPDATES OR UPGRADES OF THE ABOVE THAT ARE PROVIDED TO YOU (COLLECTIVELY, THE "PROFILE").

THIS LICENSE AGREEMENT IS A LEGAL AGREEMENT BETWEEN YOU (EITHER AN INDIVIDUAL OR, IF ACQUIRED BY OR FOR AN ENTITY, AN ENTITY) AND DIC CORPORATION, A JAPANESE COMPANY ("DIC"). THIS LICENSE AGREEMENT PROVIDES A LICENSE TO USE THE PROFILE AND CONTAINS WARRANTY INFORMATION AND LIABILITY DISCLAIMERS. IF YOU DO NOT AGREE TO BE BOUND BY ALL OF THESE TERMS, YOU MAY NOT USE THE PROFILE.

1. License Grant

DIC grants you a gratis non-exclusive and non-transferable license to use the Profile and to allow your employees and authorized agents, if any, to use the Profile, solely in connection with their work for you, subject to all of the limitations and restrictions in this License Agreement.

2. Ownership

The foregoing license gives you limited license to use the Profile. You will own the rights in the media containing the recorded Profile, but DIC retains all right, title and interest, including all copyright and intellectual property rights, in and to, the Profile and all copies thereof. All rights not specifically granted in this License Agreement, including all copyrights, are reserved by DIC.

3. Term

- a. This License Agreement is effective until terminated.
- b. You may terminate this License Agreement by notifying DIC in writing of your intention to terminate this License Agreement and by destroying, all copies of the Profile in your possession or control.
- c. DIC may terminate this License Agreement without prior notice to you if you fail to comply with any of the terms and conditions of this License Agreement (either directly or through your employees or agents), retroactive to the time of such failure to comply. In such event, you must immediately stop using the Profile and destroy all copies of the Profile in your possession or control.
- d. All provisions in this License Agreement relating to warranty disclaimers (Section 5) and the limitation of liability (Section 6) shall survive any termination of this License Agreement.

4. License Method and Restrictions
 - a. You may install and use the Profile on a single desktop computer; provided, however, that, notwithstanding anything contrary contained herein, you may not use the Profile on any network system or share, install or use the Profile concurrently on different computers, or electronically transfer the Profile from one computer to another or over a network.
 - b. You may not make or distribute copies, fix, alter, merge, modify, adapt, sublicense, transfer, sell, rent, lease, gift or distribute all or a portion of the Profile, or modify the Profile or create derivative works based upon the Profile.
 - c. You acknowledge that the Profile is not intended for any usage which may cause death or physical injury or environmental damage and agree not to use the Profile for such usage.
 - d. You shall not use the Profile to develop any software or other technology having the same primary function as the Profile, including but not limited to using the Profile in any development or test procedure that seeks to develop like software or other technology, or to determine if such software or other technology performs in a similar manner as the Profile.
 - e. DIC and other trademarks contained in the Profile are trademarks or registered trademarks of DIC in Japan and/or other countries. You may not remove or alter any trademark, trade names, product names, logo, copyright or other proprietary notices, legends, symbols or labels in the Profile. This License Agreement does not authorize you to use DIC's or its licensors' names or any of their respective trademarks.
5. WARRANTY DISCLAIMER
 - a. THE PROFILE IS PROVIDED TO YOU FREE OF CHARGE, AND ON AN "AS-IS" BASIS, IN ACCORDANCE WITH THE TERMS AND COONDITIONS OF THIS LICENSE AGREEMENT. DIC PROVIDES NO TECHNICAL SUPPORT, WARRANTIES OR REMEDIES FOR THE PROFILE.
 - b. DIC DISCLAIMS ALL WARRANTIES AND REPRESENTATIONS, WHETHER EXPRESS, IMPLIED, OR OTHERWISE, INCLUDING BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, NON-INFRINGEMENT, TITLE AND QUIET ENJOYMENT. YOU SHALL ASSUME AND BE FULLY LIABLE AND RESPONSIBLE FOR ALL RISKS IN CONNECTION WITH YOUR USE OF THE PROFILE. DIC DOES NOT WARRANT THAT THE PROFILE IS FREE OF DEFECTS OR FLAWS OR WILL OPERATE WITHOUT INTERRUPTION, AND IS NOT RESPONSIBLE FOR CORRECTING OR REPAIRING ANY DEFECTS OR FLAWS, FOR FEE OR GRATIS. NO RIGHTS OR REMEDIES WILL BE CONFERRED ON YOU UNLESS EXPRESSLY GRANTED HEREIN.
6. LIMITATION OF LIABILITY

DIC SHALL NOT BE LIABLE TO YOU OR ANY THIRD PARTY FOR ANY DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, COVER OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR THE INABILITY TO USE EQUIPMENT OR ACCESS DATA, LOSS OF BUSINESS, LOSS OF PROFITS, BUSINESS INTERRUPTION OR THE LIKE), ARISING OUT OF THE USE OF, OR INABILITY TO USE, THE PROFILE AND BASED ON ANY THEORY OF LIABILITY INCLUDING BREACH OF CONTRACT, BREACH OF WARRANTY, TORT (INCLUDING NEGLIGENCE), PRODUCT LIABILITY OR OTHERWISE, EVEN IF DIC OR ITS REPRESENTATIVES HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE FOREGOING LIMITATIONS ON LIABILITY SHALL APPLY TO ALL ASPECTS OF THIS LICENSE AGREEMENT.

7. General

- a. This License Agreement shall be governed and construed in accordance with the laws of Japan, without giving effect to principles of conflict of laws. If any provision of this License Agreement shall be held by a court of competent jurisdiction to be contrary to law, that provision will be enforced to the maximum extent permissible, and the remaining provisions of this License Agreement will remain in full force and effect. You hereby consent to the exclusive jurisdiction and venue of Tokyo District Court to resolve any disputes arising under this License Agreement.
- b. This License Agreement contains the complete agreement between the parties with respect to the subject matter hereof, and supersedes all prior or contemporaneous agreements or understandings, whether oral or written. You agree that any varying or additional terms contained in any written notification or document issued by you in relation to the Pro file licensed hereunder shall be of no effect.
- c. The failure or delay of DIC to exercise any of its rights under this License Agreement or upon any breach of this License Agreement shall not be deemed a waiver of those rights or of the breach.

OpenSSL Statement

LICENSE ISSUES

The OpenSSL toolkit stays under a dual license, i.e. both the conditions of the OpenSSL License and the original SSLeay license apply to the toolkit. See below for the actual license texts. Actually both licenses are BSD-style Open Source licenses. In case of any license issues related to OpenSSL please contact openssl-core@openssl.org.

OpenSSL License

Copyright (c) 1998-2007 The OpenSSL Project. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgment:
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit. (<http://www.openssl.org/>)"
4. The names "OpenSSL Toolkit" and "OpenSSL Project" must not be used to endorse or promote products derived from this software without prior written permission. For written permission, please contact* openssl-core@openssl.org.
5. Products derived from this software may not be called "OpenSSL" nor may "OpenSSL" appear in their names without prior written permission of the OpenSSL Project.
6. Redistributions of any form whatsoever must retain the following acknowledgment:
"This product includes software developed by the OpenSSL Project for use in the OpenSSL Toolkit (<http://www.openssl.org/>)"

THIS SOFTWARE IS PROVIDED BY THE OpenSSL PROJECT "AS IS" AND ANY EXPRESSED OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE OpenSSL PROJECT OR ITS CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

This product includes cryptographic software written by Eric Young (eay@cryptsoft.com). This product includes software written by Tim Hudson (tjh@cryptsoft.com).

Original SSLeay License

Copyright (C) 1995-1998 Eric Young (eay@cryptsoft.com) All rights reserved.

This package is an SSL implementation written by Eric Young (eay@cryptsoft.com). The implementation was written so as to conform with Netscapes SSL.

This library is free for commercial and non-commercial use as long as the following conditions are aheared to. The following conditions apply to all code found in this distribution, be it the RC4, RSA, lhash, DES, etc., code; not just the SSL code. The SSL documentation included with this distribution is covered by the same copyright terms except that the holder is Tim Hudson (tjh@cryptsoft.com).

Copyright remains Eric Young's, and as such any Copyright notices in the code are not to be removed.

If this package is used in a product, Eric Young should be given attribution as the author of the parts of the library used.

This can be in the form of a textual message at program startup or in documentation (online or textual) provided with the package.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. All advertising materials mentioning features or use of this software must display the following acknowledgement:
"This product includes cryptographic software written by Eric Young (eay@cryptsoft.com)"
The word 'cryptographic' can be left out if the rouines from the library being used are not cryptographic related :-).

4. If you include any Windows specific code (or a derivative thereof) from the apps directory (application code) you must include an acknowledgement:

"This product includes software written by Tim Hudson (tjh@cryptsoft.com)"

THIS SOFTWARE IS PROVIDED BY ERIC YOUNG "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

The licence and distribution terms for any publically available version or derivative of this code cannot be changed. i.e. this code cannot simply be copied and put under another distribution licence [including the GNU Public Licence.]

NetSNMP License

Part 1: CMU/UCD copyright notice: (BSD like)

Copyright 1989, 1991, 1992 by Carnegie Mellon University Derivative Work - 1996, 1998-2000
Copyright 1996, 1998-2000 The Regents of the University of California All Rights Reserved
Permission to use, copy, modify and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appears in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of CMU and The Regents of the University of California not be used in advertising or publicity pertaining to distribution of the software without specific written permission.

CMU AND THE REGENTS OF THE UNIVERSITY OF CALIFORNIA DISCLAIM ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS. IN NO EVENT SHALL CMU OR THE REGENTS OF THE UNIVERSITY OF CALIFORNIA BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM THE LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTIOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Part 2: Networks Associates Technology, Inc copyright notice (BSD)

Copyright © 2001-2003, Networks Associates Technology, Inc All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Networks Associates Technology, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Part 3: Cambridge Broadband Ltd. copyright notice (BSD)

Portions of this code are copyright © 2001-2003, Cambridge Broadband Ltd.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- The name of Cambridge Broadband Ltd. may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDER "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Part 4: Sun Microsystems, Inc. copyright notice (BSD)

Copyright © 2003 Sun Microsystems, Inc., 4150 Network Circle, Santa Clara, California 95054, U.S.A. All rights reserved.

Use is subject to license terms below.

This distribution may include materials developed by third parties.

Sun, Sun Microsystems, the Sun logo and Solaris are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Sun Microsystems, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS;

OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Part 5: Sparta, Inc copyright notice (BSD)

Copyright © 2003-2004, Sparta, Inc All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of Sparta, Inc nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Part 6: Cisco/BUPTNIC copyright notice (BSD)

Copyright © 2004, Cisco, Inc and Information Network Center of Beijing University of Posts and Telecommunications. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of Cisco, Inc, Beijing University of Posts and Telecommunications, nor the names of their contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Kerberos

Copyright © 1985-2007 by the Massachusetts Institute of Technology.
All rights reserved.

Export of this software from the United States of America may require a specific license from the United States Government. It is the responsibility of any person or organization contemplating export to obtain such a license before exporting.

WITHIN THAT CONSTRAINT, permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of M.I.T. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. Furthermore if you modify this software you must label your software as modified software and not distribute it in such a fashion that it might be confused with the original MIT software. M.I.T. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

Individual source code files are copyright MIT, Cygnus Support, Novell, OpenVision Technologies, Oracle, Red Hat, Sun Microsystems, FundsXpress, and others.

Project Athena, Athena, Athena MUSE, Discuss, Hesiod, Kerberos, Moira, and Zephyr are trademarks of the Massachusetts Institute of Technology (MIT). No commercial use of these trademarks may be made without prior written permission of MIT.

"Commercial use" means use of a name in a product or other for-profit manner. It does NOT prevent a commercial firm from referring to the MIT trademarks in order to convey information (although in doing so, recognition of their trademark status should be given).

Portions of src/lib/crypto have the following copyright:

Copyright © 1998 by the FundsXpress, INC.

All rights reserved.

Export of this software from the United States of America may require a specific license from the United States Government. It is the responsibility of any person or organization contemplating export to obtain such a license before exporting.

WITHIN THAT CONSTRAINT, permission to use, copy, modify, and distribute this software and its documentation for any purpose and without fee is hereby granted, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of FundsXpress. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. FundsXpress makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

THIS SOFTWARE IS PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The implementation of the Yarrow pseudo-random number generator in `src/lib/crypto/yarrow` has the following copyright:

Copyright 2000 by Zero-Knowledge Systems, Inc.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that the above copyright notice appear in all copies and that both that copyright notice and this permission notice appear in supporting documentation, and that the name of Zero-Knowledge Systems, Inc. not be used in advertising or publicity pertaining to distribution of the software without specific, written prior permission. Zero-Knowledge Systems, Inc. makes no representations about the suitability of this software for any purpose. It is provided "as is" without express or implied warranty.

ZERO-KNOWLEDGE SYSTEMS, INC. DISCLAIMS ALL WARRANTIES WITH REGARD TO THIS SOFTWARE, INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS, IN NO EVENT SHALL ZERO-KNOWLEDGE SYSTEMS, INC. BE LIABLE FOR ANY SPECIAL, INDIRECT OR CONSEQUENTIAL DAMAGES OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER IN AN ACTION OF CONTRACT, NEGLIGENCE OR OTHER TORTUOUS ACTION, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

The implementation of the AES encryption algorithm in `src/lib/crypto/aes` has the following copyright:

Copyright © 2001, Dr Brian Gladman <brg@gladman.uk.net>, Worcester, UK.

All rights reserved.

LICENSE TERMS

The free distribution and use of this software in both source and binary form is allowed (with or without changes) provided that:

1. distributions of this source code include the above copyright notice, this list of conditions and the following disclaimer;
2. distributions in binary form include the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other associated materials;
3. the copyright holder's name is not used to endorse products built using this software without specific written permission.

DISCLAIMER

This software is provided 'as is' with no explicit or implied warranties in respect of any properties, including, but not limited to, correctness and fitness for purpose.

Portions contributed by Red Hat, including the pre-authentication plug-ins framework, contain the following copyright:

Copyright © 2006 Red Hat, Inc.

Portions copyright © 2006 Massachusetts Institute of Technology

All Rights Reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- * Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.

- * Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.

- * Neither the name of Red Hat, Inc., nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Portions funded by Sandia National Laboratory and developed by the University of Michigan's Center for Information Technology Integration, including the PKINIT implementation, are subject to the following license:

COPYRIGHT © 2006-2007

THE REGENTS OF THE UNIVERSITY OF MICHIGAN

ALL RIGHTS RESERVED

Permission is granted to use, copy, create derivative works and redistribute this software and such derivative works for any purpose, so long as the name of The University of Michigan is not used in any advertising or publicity pertaining to the use of distribution of this software without specific, written prior authorization. If the above copyright notice or any other identification of the University of Michigan is included in any copy of any portion of this software, then the disclaimer below must also be included.

THIS SOFTWARE IS PROVIDED AS IS, WITHOUT REPRESENTATION FROM THE UNIVERSITY OF MICHIGAN AS TO ITS FITNESS FOR ANY PURPOSE, AND WITHOUT WARRANTY BY THE UNIVERSITY OF MICHIGAN OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE REGENTS OF THE UNIVERSITY OF MICHIGAN SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WITH RESPECT TO ANY CLAIM ARISING OUT OF OR IN CONNECTION WITH THE USE OF THE SOFTWARE, EVEN IF IT HAS BEEN OR IS HEREAFTER ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

The pkcs11.h file included in the PKINIT code has the following license:

Copyright 2006 g10 Code GmbH

Copyright 2006 Andreas Jellinghaus

This file is free software; as a special exception the author gives unlimited permission to copy and/or distribute it, with or without modifications, as long as this notice is preserved.

This file is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY, to the extent permitted by law; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

WPA Supplicant

Copyright © 2003-2005, Jouni Malinen <jkmaline@cc.hut.fi> and contributors
All Rights Reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name(s) of the above-listed copyright holder(s) nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Contents

1	Operation on Mac OS X	1-1
	System Requirements for the Printer Driver	1-2
	Installing the Printer Driver	1-3
	Installing the Printer Driver.....	1-3
	Uninstalling the printer driver	1-8
	For Mac OS X 10.2	1-8
	For Mac OS X 10.3/10.4	1-8
	For Mac OS X 10.5/10.6	1-9
	Print Center Settings (Mac OS X 10.2.8)	1-10
	When Using a USB Connection	1-10
	When Using a Network Connection	1-12
	AppleTalk Setting.....	1-12
	Rendezvous Setting.....	1-14
	IP Printing Setting	1-17
	IPP Setting	1-20
	Specifying Port 9100.....	1-23
	Printer Setup Utility Settings (Mac OS X 10.3)	1-26
	When Using a USB Connection	1-26
	When Using a Network Connection	1-28
	AppleTalk Setting.....	1-28

Rendezvous Setting	1-30
IP Printing Setting	1-31
Printer Setup Utility Settings (Mac OS X 10.4)	1-35
When Using a USB Connection	1-35
When Using a Network Connection	1-37
Bonjour Setting	1-37
AppleTalk Setting	1-39
IP Printing Setting	1-42
Printer Settings (Mac OS X 10.5/10.6)	1-46
When Using a USB Connection	1-46
When Using a Network Connection	1-50
Bonjour Setting	1-50
AppleTalk Setting (for Mac OS X 10.5)	1-53
IP Printing Setting	1-56
Selecting Print Options	1-60
For Mac OS X 10.2/10.3/10.4	1-60
For Mac OS X 10.5/10.6	1-62
Specifying Page Setup Settings (Mac OS X 10.2/10.3/10.4/10.5/10.6)	1-64
Page Attributes Options	1-65
Specifying Custom Paper Size	1-66
Specifying Print Settings (Mac OS X 10.4)	1-68
Print Dialog Box	1-68
Common buttons	1-69
[Copies & Pages]	1-70
[Layout]	1-71
[Scheduler]	1-72
[Paper Handling]	1-73
[ColorSync]	1-74
[Cover Page]	1-74
[Error Handling]	1-75
[Paper Feed]	1-76
[Color Options]	1-77
[Advanced Color Options]/[Image]	1-78
[Advanced Color Options]/[Text]	1-79
[Advanced Color Options]/[Graphics]	1-81
[Advanced Color Options]/[Simulation]	1-82
[Printer Features]	1-83
[Supply Levels]	1-84
[Summary]	1-85
Specifying Print Settings (Mac OS X 10.5/10.6)	1-86
Print Dialog Box	1-86
Common buttons	1-87
[Layout]	1-88
[Color Matching]	1-89
[Paper Handling]	1-90
[Paper Feed]	1-91

[Cover Page]	1-92
[Scheduler]	1-93
[Color Options]	1-94
[Advanced Color Options]/[Image]	1-95
[Advanced Color Options]/[Text]	1-96
[Advanced Color Options]/[Graphics]	1-98
[Advanced Color Options]/[Simulation]	1-99
[Printer Features]	1-100
[Supply Levels]	1-101
[Summary]	1-102
Specifying the Color Profile	1-103
Preparation	1-103
Downloading Color Profiles	1-103
Specifying Printer Driver Settings	1-105
System Requirements for the Scanner Driver	1-110
Installing the Scanner Driver	1-111
Installing the Scanner Driver	1-111
Uninstalling the Scanner Driver	1-115
Scanning From a Computer Application	1-117
Basic Scanning Operation	1-117
Troubleshooting	1-119
 2 Operation on Linux	 2-1
System Requirements for the Printer Driver	2-2
Installing PPD File From the Command Line	2-2
Adding the Printer Using Printer configuration	2-3
Adding the Printer on the CUPS Administration Web page	2-8
Specifying Printer Driver Settings	2-11
Displaying the Settings Page	2-11
Printer Driver Settings	2-12
Options Installed	2-12
General	2-12
Image Options	2-14
Text Options	2-15
Graphics Options	2-15
Simulation	2-16
Banners	2-16
Printing a Document	2-17
Example Using OpenOffice	2-17
Checking Print Jobs	2-19
Troubleshooting	2-20
 3 Operation on NetWare	 3-1
Printing With NetWare	3-2
Network Printing in a NetWare Environment	3-2
For Remote Printer Mode With NetWare 4.x Bindery Emulation	3-2

For Print Server Mode With NetWare 4.x Bindery Emulation	3-4
For NetWare 4.x Remote Printer Mode (NDS).....	3-5
For NetWare 4.x/5.x/6 Print Server Mode (NDS)	3-7
For NetWare 5.x/6 Novell Distributed Print Service (NDPS).....	3-8
Setting Up a Client (Windows) Settings When Using the NetWare Server.....	3-9
4 Printer Utilities	4-1
Installing Printer Utilities on Windows	4-2
5 Understanding the Ethernet Configuration Menus	5-1
Location within the Utility Settings screens	5-2
Displaying the [Ethernet] screen	5-3
[Ethernet] (Admin Settings)	5-4
6 User authentication and account track	6-1
Limiting users of this machine (device authentication)	6-2
Authentication methods.....	6-3
Registering users	6-5
Registering accounts.....	6-8
Limiting users of this machine (Active Directory authentication)	6-10
TCP/IP settings	6-10
Authentication method	6-11
[External Server List].....	6-13
[Default Function Permission]	6-14
Date/time settings	6-15
Limiting users of this machine (Windows domain or workgroup authentication)	6-16
TCP/IP settings	6-18
Authentication method	6-18
[External Server List].....	6-20
[Default Function Permission]	6-21
[WINS Settings].....	6-21
[Direct Hosting Settings].....	6-21
Limiting users of this machine (NDS over IPX/SPX authentication)	6-22
Authentication method	6-23
[External Server List].....	6-24
[Default Function Permission]	6-25
[NetWare Settings].....	6-26
Limiting users of this machine (NDS over TCP/IP authentication)	6-27
TCP/IP settings	6-27
Authentication method	6-28
[External Server List].....	6-29
[Default Function Permission]	6-30
Limiting users of this machine (LDAP authentication)	6-31
TCP/IP settings	6-32

Authentication method	6-32
[External Server List]	6-34
[Default Function Permission]	6-35
LDAP over SSL	6-36
[External Server List]	6-36
LDAP settings	6-36
[Validate Certificate]	6-38
7 Network Printing	7-1
Network Connection	7-2
Theory	7-2
Making the Connection	7-3
Ethernet Interface	7-3
Using DHCP	7-3
Setting the Address Manually	7-4
Network Printing	7-6
AppleTalk	7-6
Bonjour	7-6
BOOTP	7-7
DDNS (Dynamic DNS)	7-7
DHCP	7-7
FTP	7-7
HTTP	7-7
IEEE802.1X	7-8
IPP	7-8
IPsec	7-8
IPv6	7-8
IPX/SPX	7-8
LLMNR	7-8
LLTD	7-9
LPD/LPR	7-9
SLP	7-9
SMTP	7-10
SNMP	7-10
Port 9100	7-10
Web Service Print	7-10
Printing via IPP (Internet Printing Protocol)	7-11
With Windows Server 2008/Server 2008 R2	7-11
Adding an IPP Port using the Drivers CD/DVD	7-11
Adding an IPP Port using Add Printer Wizard –	
Windows Server 2003/XP/2000	7-13
Adding an IPP Port using Add Printer Wizard –	
Windows Vista/7/Server 2008/Server 2008 R2	7-18
Printing via Web Service Print Function	7-22
With Windows Server 2008/Server 2008 R2	7-22
Making the printer driver known from the Network window	7-23

Adding a printer from the Network window	7-24
Adding a printer using Add Printer Wizard	7-28
Updating the driver after connecting this machine	7-33
If the bit number differs between the server operating system and client operating system	7-35
Installing the Additional Driver	7-35
Troubleshooting	7-39
8 Using PageScope Web Connection	8-1
About PageScope Web Connection	8-2
Display Language	8-2
Requirements	8-2
Setting Up the Printer Web Page	8-4
Determining the Printer Name	8-4
Setting Up Your Browser Software	8-4
Internet Explorer (version 6.0 for Windows)	8-5
Mozilla Firefox (version 2.0 for Mac OS X 10.5)	8-6
Understanding the PageScope Web Connection Window	8-7
Navigation	8-8
Current Status	8-8
Logging on to PageScope Web Connection	8-9
Login Page	8-9
Language Setting	8-10
Public User Mode	8-10
Registered User Mode	8-10
User Authentication Mode	8-10
Account Track Mode	8-11
Administrator Mode	8-12
Configuring the Printer	8-13
[System] tab	8-13
[Device Information]	8-14
[Counter]	8-22
[Online Assistance]	8-24
[Import/Export]	8-26
[Date/Time Settings]	8-29
[Machine Settings]	8-33
[ROM Version]	8-35
[Maintenance]	8-36
[Notification Settings]	8-38
[Security] tab	8-43
[Authentication]	8-43
[ID & Print Settings]	8-56
[Authentication Device Settings]	8-57
[PKI Settings]	8-62
[IPsec]	8-83
[IP Address Filtering]	8-88

[IEEE802.1X]	8-91
[Limiting Access to Destination]	8-94
[Auto Logout]	8-95
[Administrator Password]	8-96
[Job] tab	8-97
[Current Jobs]	8-97
[Job History]	8-101
[Communication List]	8-106
[Print] tab	8-110
[Default Settings]	8-110
[Font/Form]	8-136
[Download Font/Form]	8-140
[Report Types]	8-144
[Direct Print]	8-145
[Storage] tab	8-146
[Scan to HDD]	8-146
[PC-Fax]	8-149
[Address] tab	8-151
[Address Book]	8-151
[Group]	8-162
[Program]	8-166
[Subject]	8-178
[Text]	8-180
[Network] tab	8-182
[General Settings]	8-182
[TCP/IP Settings]	8-184
[E-mail Settings]	8-193
[LDAP Settings]	8-200
[HTTP Settings]	8-205
[IPP Settings]	8-206
[FTP Settings]	8-210
[SNMP Settings]	8-212
[SMB Settings]	8-217
[Web Service Settings]	8-221
[Bonjour Settings]	8-225
[NetWare Settings]	8-226
[AppleTalk Settings]	8-229
[Network Fax Settings]	8-230
[WebDAV Settings]	8-231
[OpenAPI Settings]	8-232
[TCP Socket Settings]	8-234
[LLTD Settings]	8-235

A AppendixA-1

***Operation on
Mac OS X***

1

System Requirements for the Printer Driver

Before installing the printer driver, make sure that your system meets the following system requirements.

Computer	Apple Macintosh computer installed with the following processor: <ul style="list-style-type: none">- PowerPC G3 or later processor (PowerPC G4 or later is recommended)- Intel processor
Connecting the computer and printer	USB connection (USB 2.0 (High Speed)), Network connection (10Base-T/100Base-TX/1000Base-T)
Operating system	Mac OS X (10.2.8/10.3/10.4/10.5/10.6; We recommend installing the most recent patch.)
RAM	128 MB or more
Available disk space	256 MB or more (for storing images)
Supported languages	English, French, German, Italian, Spanish, Portuguese, Czech, Korean, Simplified Chinese, Traditional Chinese, Dutch

Installing the Printer Driver



You must have administrator privileges in order to install the printer driver.



Before proceeding with the installation, be sure to exit all running applications.

Installing the Printer Driver



The procedure for installing the printer driver on Mac OS X 10.5 is described below. The following procedure or some steps may be different depending on the version of the operating system being used. Complete the installation according to the instructions in the dialog boxes that appear.

- 1** Insert the Drivers CD/DVD in the CD/DVD drive of your Macintosh.
- 2** Double-click the CD/DVD icon on the desktop, [Drivers] folder, [Mac] folder, [Printer] folder, [105] folder, and then double-click the [bizhub_C35_105.pkg].

The installer for the printer driver starts up.



For OS X 10.5/10.6, the driver folder varies depending on the paper size. Select the appropriate driver folder for your environment.

- To use inch-based paper size (8 1/2 x 11 in letter size): Select [english] folder.
- To use metric-based paper size (A4 and the like): Select a file in [other] folder.




Double-click the package file appropriate for the application and version of operating system being used.

- [bizhub_C35_102.pkg] (for Mac OS X 10.2)
- [bizhub_C35_103104.pkg] (for Mac OS X 10.3/10.4)
- [bizhub_C35_106.pkg] (for Mac OS X 10.6)


3 Click [Continue].




4 Click [Continue].

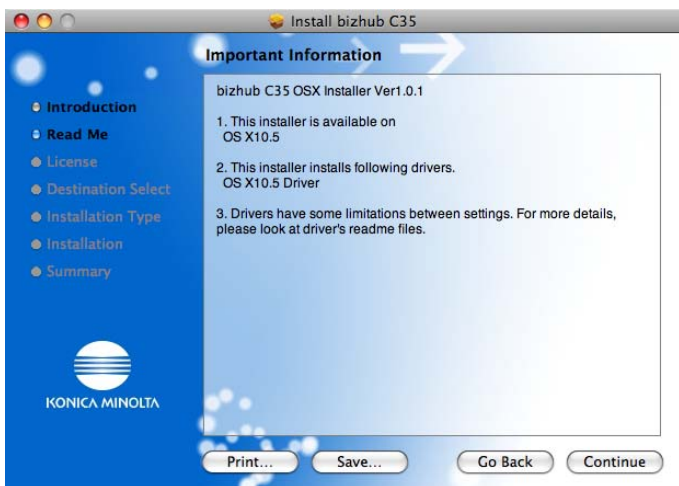


5 Click [Continue].

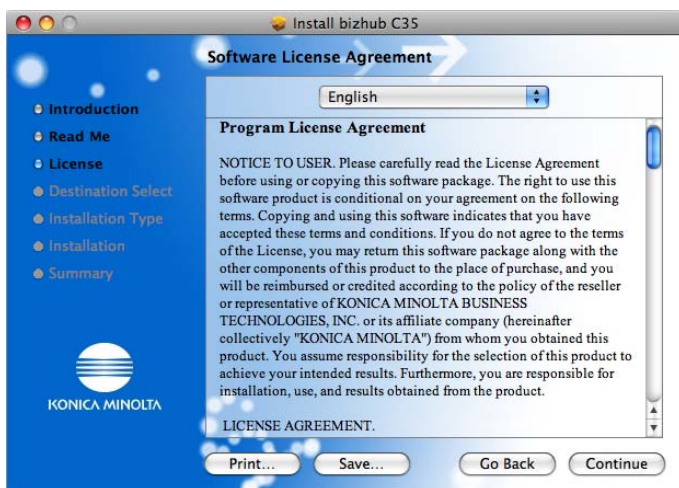

6 Click [Agree] in the confirmation dialog box if you agree to the terms of the license.

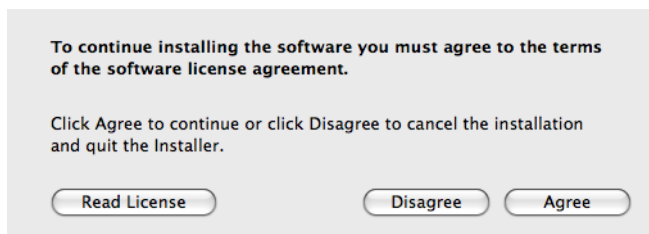

- 7 Click [Install] in the [Standard Install] page.

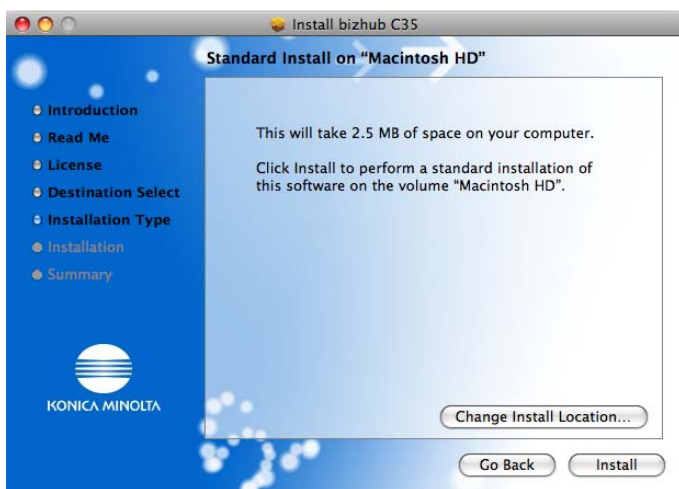


- 8 Enter the administrator user name and password in the Authenticate dialog box, and then click [OK].



Installation starts.

- 9 After the installation has been completed, click [Close].

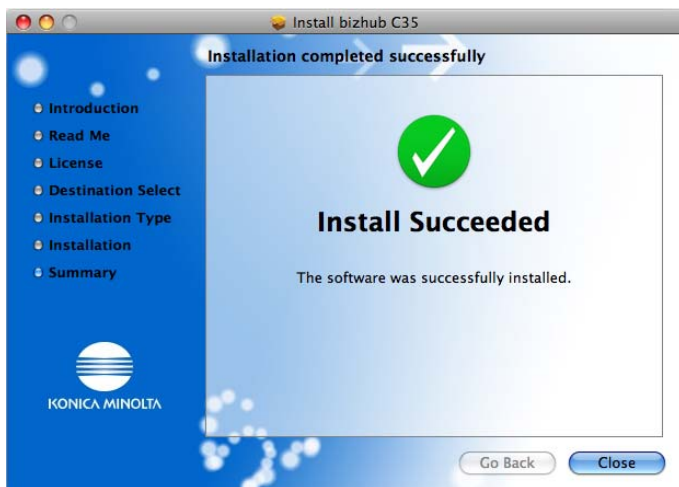

This completes the installation of the printer driver.

Uninstalling the printer driver

If it becomes necessary to delete the printer driver, for example, when you want to reinstall it, delete the driver according to the following procedure.

For Mac OS X 10.2

- 1 Open [Print Center], which is located in [Applications] - [Utilities] on the hard disk.
- 2 Select the name of the printer to be deleted, and then click [Delete].
The selected printer is deleted.
- 3 Close the [Printer List].
- 4 Drag the following file, which is located in [Library] - [Printers] - [PPDs] - [Contents] - [Resources] - [en.lproj] on the hard disk, to the [Trash] icon.
 - [KONICA MINOLTA bizhub C35.gz]
- 5 Delete the unnecessary files from [Library] - [Printers].
 - Drag the [KONICA MINOLTA bizhub C35 Color.plugin] file, which is located in [Library] - [Printers] - [PPD Plugins], to the [Trash] icon.
 - Drag the [pstobzC35PS] file, which is located in [Library] - [Printers] - [KONICAMINOLTA] - [filter], to the [Trash] icon.
 - Drag the [fileExistbzC35.icns] file, which is located in [Library] - [Printers] - [KONICAMINOLTA] - [Icons], to the [Trash] icon.
 - Drag the [bzC35ps.icc] file, which is located in [Library] - [Printers] - [KONICAMINOLTA] - [Profiles], to the [Trash] icon.
- 6 Drag the [bizhub_C35_102.pkg] file, which is located in the [Library] - [Receipts], to the [Trash] icon.
- 7 Restart the computer.

This completes uninstallation of the printer driver.

For Mac OS X 10.3/10.4

- 1 Open [Printer Setup Utility], which is located in [Applications] - [Utilities] on the hard disk.
- 2 Select the name of the printer to be deleted, and then click [Delete].
The selected printer is deleted.
- 3 Close the [Printer List].
- 4 Drag the following file, which is located in [Library] - [Printers] - [PPDs] - [Contents] - [Resources] - [en.lproj] on the hard disk, to the [Trash] icon.
 - [KONICA MINOLTA bizhub C35.gz]

- 5 Delete the unnecessary files from [Library] - [Printers].
 - Drag the [KONICA MINOLTA bizhub C35 Color.plugin] file, which is located in [Library] - [Printers] - [KONICAMINOLTA] - [PDEs], to the [Trash] icon.
 - Drag the [pstobzC35PS] file, which is located in [Library] - [Printers] - [KONICAMINOLTA] - [filter], to the [Trash] icon.
 - Drag the [fileExistbzC35.icns] and [KONICA MINOLTA bizhub C35.icns] file, which is located in [Library] - [Printers] - [KONICAMINOLTA] - [Icons], to the [Trash] icon.
 - Drag the [bzC35ps.icc] file, which is located in [Library] - [Printers] - [KONICAMINOLTA] - [Profiles], to the [Trash] icon.
- 6 Drag the [bizhub_C35_103104.pkg] file, which is located in the [Library] - [Receipts], to the [Trash] icon.
- 7 Restart the computer.

This completes uninstallation of the printer driver.

For Mac OS X 10.5/10.6

- 1 On the [Apple] menu, select [System Preferences].
- 2 Click [Print & Fax].
- 3 Select the name of the printer to be deleted, and then click the delete button ([-]) on the left below the list.
- 4 When the confirmation message appears, click the following buttons.
 - [OK] (for Mac OS X 10.5)
 - [Delete Printer] (for Mac OS X 10.6)

The selected printer is deleted.

- 5 Click the close button ([x]) in the upper-left corner of [Print & Fax].
 - The following procedure is not necessary; it is only for users who would like to delete unnecessary files.
- 6 Drag the [KONICA MINOLTA bizhub C35.gz] file, which is located in [Library] - [Printers] - [PPDs] - [Contents] - [Resources] on the hard disk, to the [Trash] icon.
- 7 Drag the [C35] folder, which is located in [Library] - [Printers] - [KONICAMINOLTA], to the [Trash] icon.
- 8 Drag the following files, which is located in the [Library] - [Receipts], to the [Trash] icon.
 - [bizhub_C35_105.pkg] (for Mac OS X 10.5)
 - [bizhub_C35_106.pkg] (for Mac OS X 10.6)


9 Restart the computer.

This completes uninstallation of the printer driver.


Print Center Settings (Mac OS X 10.2.8)

When Using a USB Connection


- 1 Use a USB cable to connect the printer to your computer.
- 2 Check that the printer is turned on, and then restart the computer.
- 3 Open [Print Center], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 4 In the [Printer List], click [Add].

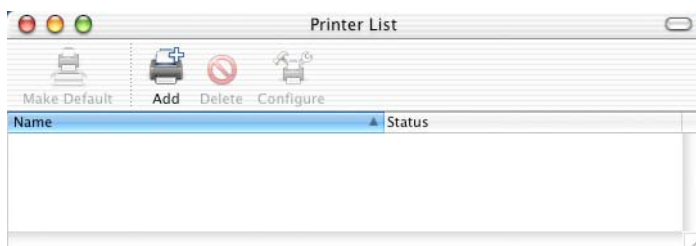

- 5 Select [USB] from the pop-up menu.

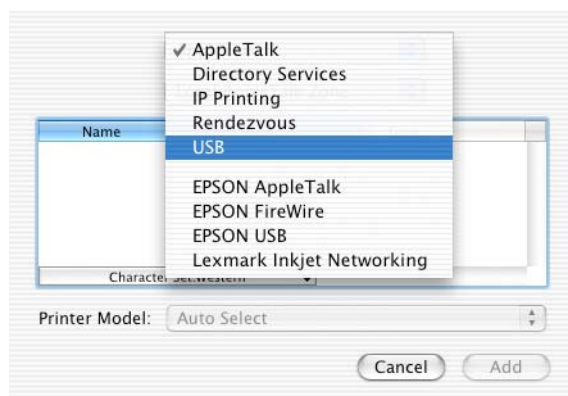


- 6 Select [bizhub C35] in the [Product] list.

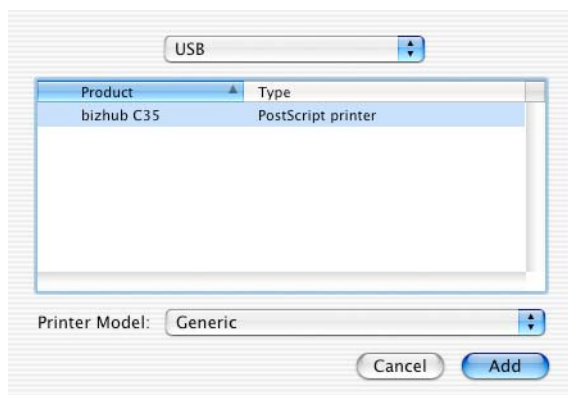


If [bizhub C35] does not appear, check that the printer is turned on and the USB cable is connected, and then restart the computer.

- 7 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.
- 8 Select [KONICA MINOLTA bizhub C35 PPD] in the [Model Name] list.

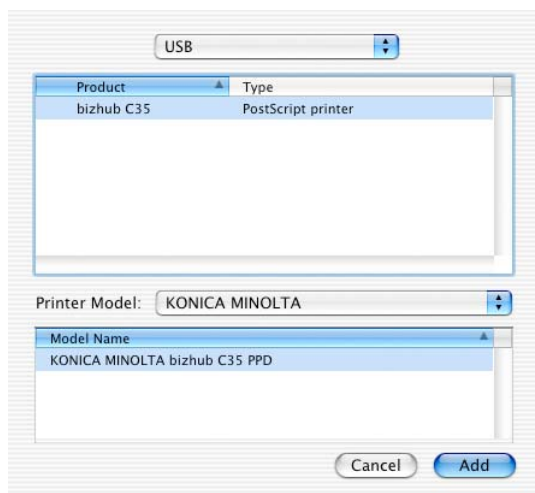

- 9 Click [Add].

The new printer appears in the [Printer List] screen.

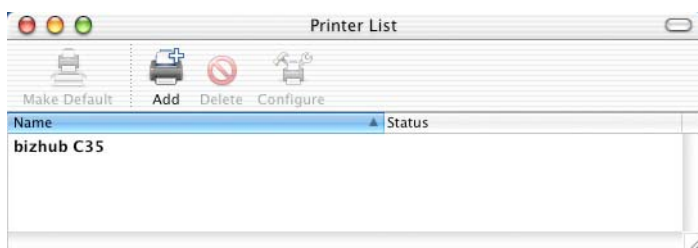


If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.

When Using a Network Connection


The network connection settings can be specified in one of five ways: AppleTalk setting, Rendezvous setting, IP printing setting, IPP setting and Specifying Port 9100.

AppleTalk Setting


- 1 Connect the printer to an Ethernet network.
- 2 Open [Print Center], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 Click [Add] in the [Printer List].

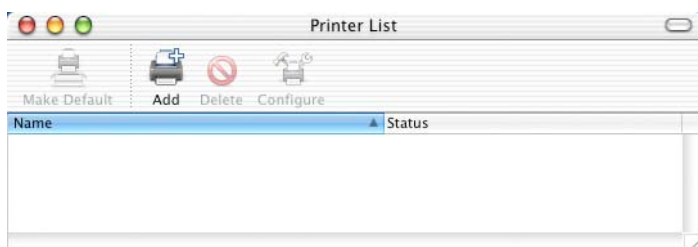

- 4 Select [AppleTalk] from the pop-up menu.

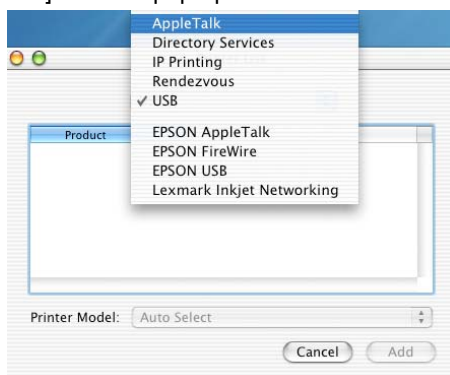


- 5 Select [BHC35-xxxxxx].

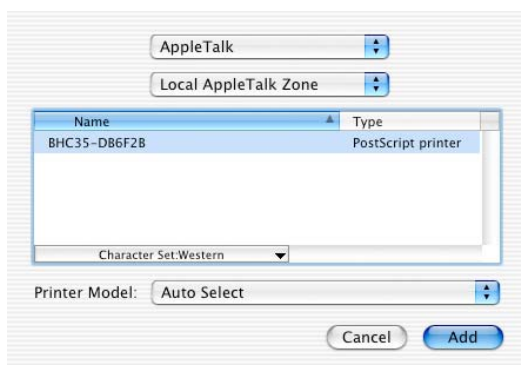

"XXXXXXX" refers to the last six digits of the MAC address (in hexadecimal).


- 6 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.

- 7 Select [KONICA MINOLTA bizhub C35 PPD] in the [Model Name] list.

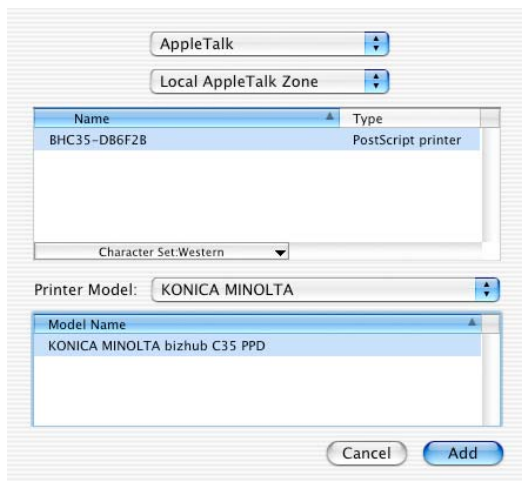

- 8 Click [Add].

The new printer appears in the [Printer List] screen.

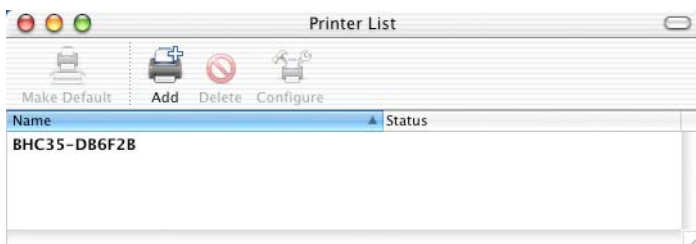


If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.


Rendezvous Setting

- 1 Connect the printer to an Ethernet network.
- 2 Open [Print Center], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].


- 3 Click [Add] in the [Printer List].

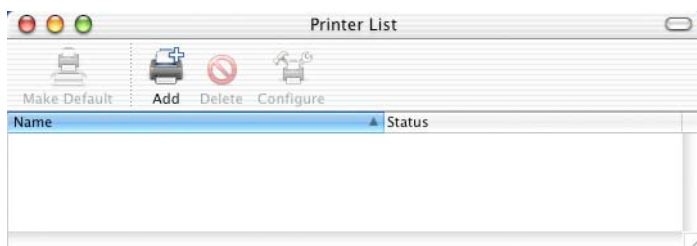

- 4 Select [Rendezvous] from the pop-up menu.

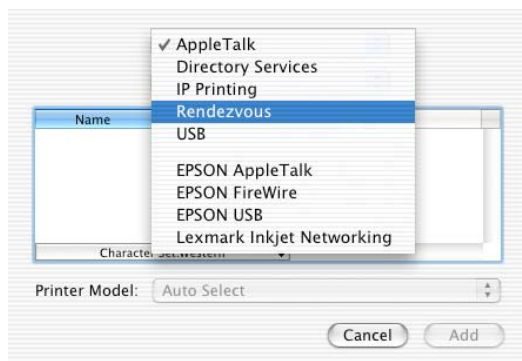


- 5 Select [KONICA MINOLTA bizhub C35(xx:xx:xx)].

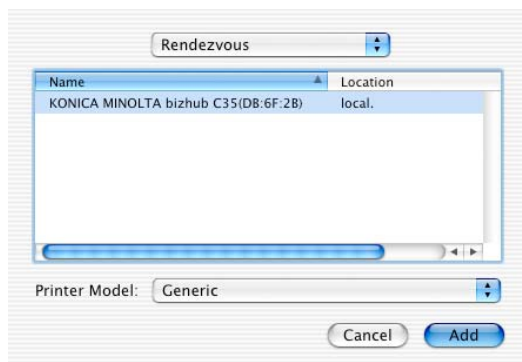

"xx:xx:xx" refers to the last six digits of the MAC address (in hexadecimal).


- 6 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.

- 7 Select [KONICA MINOLTA bizhub C35 PPD] in the [Model Name] list.

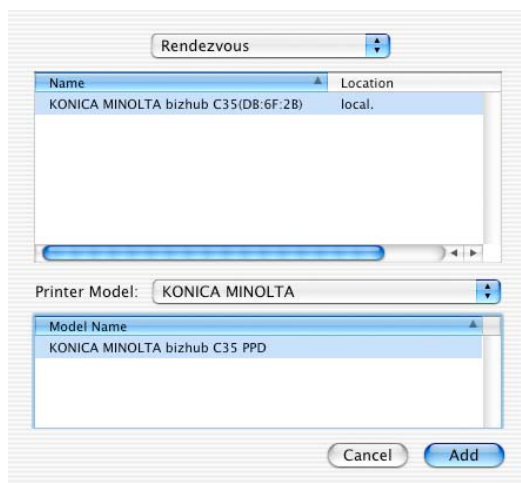

- 8 Click [Add].


The new printer appears in the [Printer List] screen.

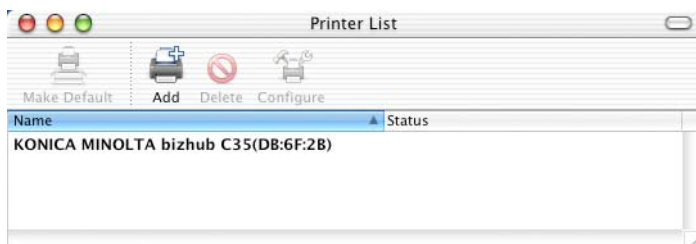


If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.

IP Printing Setting

- 1 Connect the printer to an Ethernet network.
- 2 Open [Print Center], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 Click [Add] in the [Printer List].

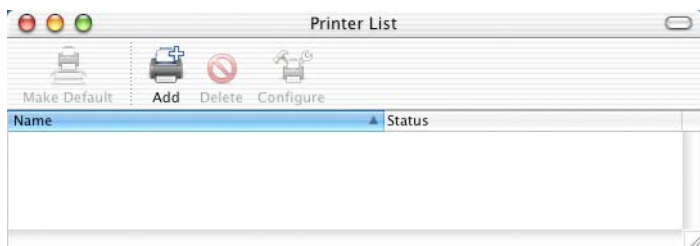

- 4 Select [IP Printing] from the pop-up menu.

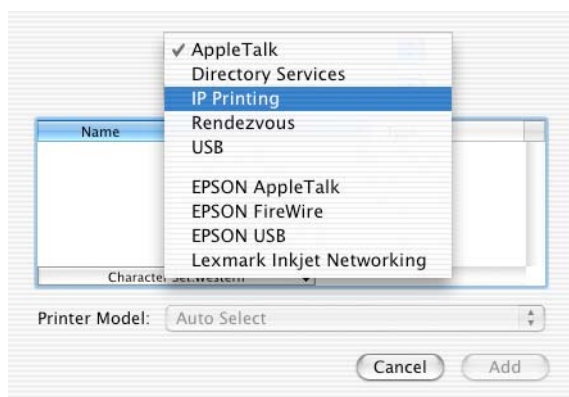

- 5 Enter the IP address for the printer in the [Printer's Address] text box.

IP Printing

Printer's Address: 192.168.1.2
Internet address or DNS name

Complete and valid address.

☒ Use default queue on server

Queue Name:

Printer Model: Generic

Cancel Add

- 6 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.
- 7 Select [KONICA MINOLTA bizhub C35 PPD] in the [Model Name] list.

IP Printing

Printer's Address: 192.168.1.2
Internet address or DNS name

Complete and valid address.

☒ Use default queue on server

Queue Name:


Printer Model: KONICA MINOLTA

Model Name
KONICA MINOLTA bizhub C35 PPD

Cancel Add

- 8 Click [Add].


The new printer appears in the [Printer List] screen.

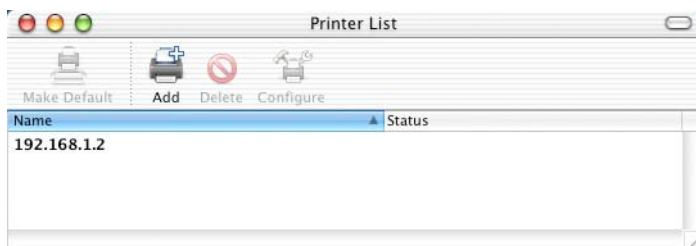


If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.

IPP Setting


- 1 Connect the printer to an Ethernet network.
- 2 Open [Print Center], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 In the [Printer List], click [Add] while pressing the Option key in the keyboard.

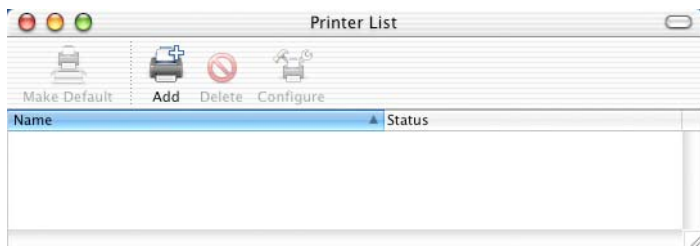

- 4 Select [Advanced] from the pop-up menu.

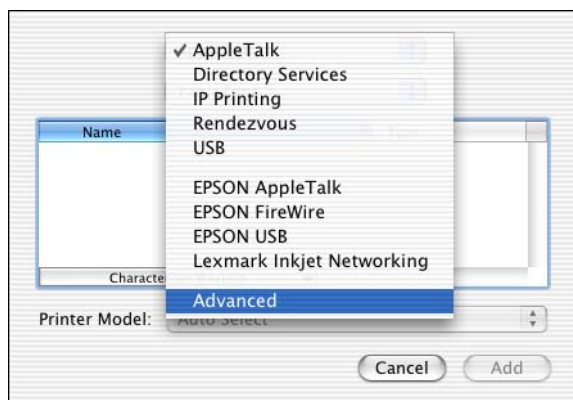


- 5 Select [Internet Printing Protocol (http)] from the [Device] pop-up menu.

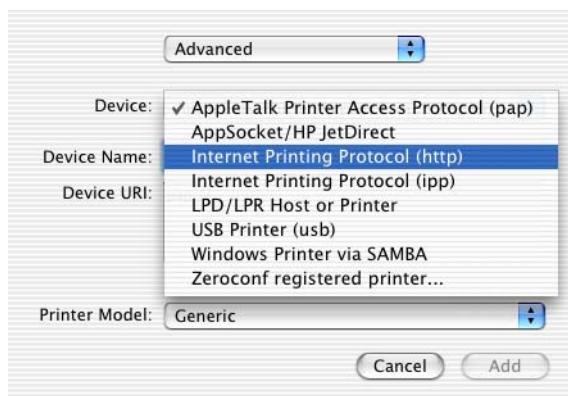


- 6 Enter the name for the printer in the [Device Name] text box.

- 7 In the [Device URI] text box, enter "http://<IP address>/ipp".

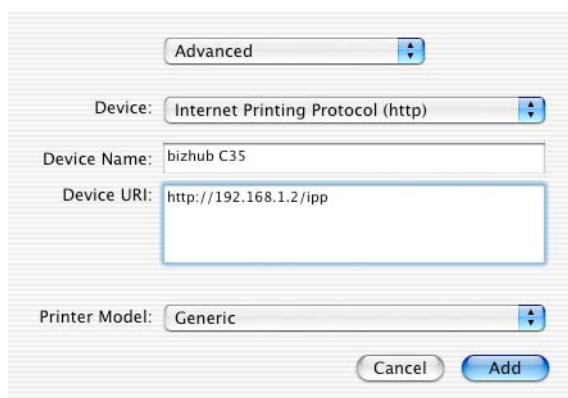


- 8 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.

- 9 Select [KONICA MINOLTA bizhub C35 PPD] in the [Name] list.

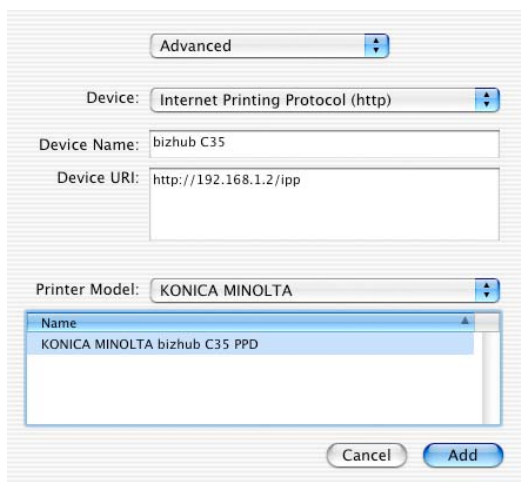

- 10 Click [Add].


The new printer appears in the [Printer List] screen.

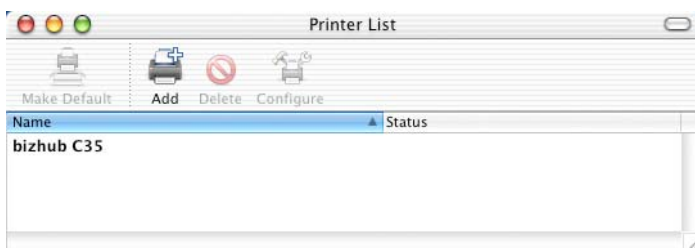


If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.

Specifying Port 9100

- 1 Connect the printer to an Ethernet network.
- 2 Open [Print Center], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 In the [Printer List], click [Add] while pressing the Option key in the keyboard.

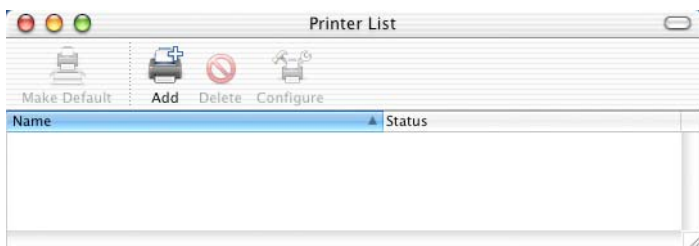

- 4 Select [Advanced] from the pop-up menu.

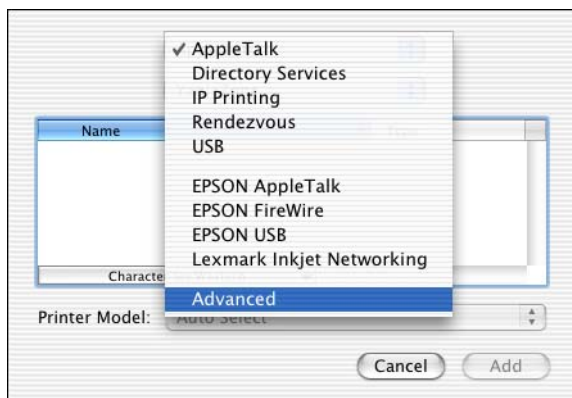


- 5 Select [AppSocket/HP JetDirect] from the [Device] pop-up menu.




- 6 Enter the name for the printer in the [Device Name] text box.

- 7 In the [Device URI] text box, enter "socket://<IP address>".

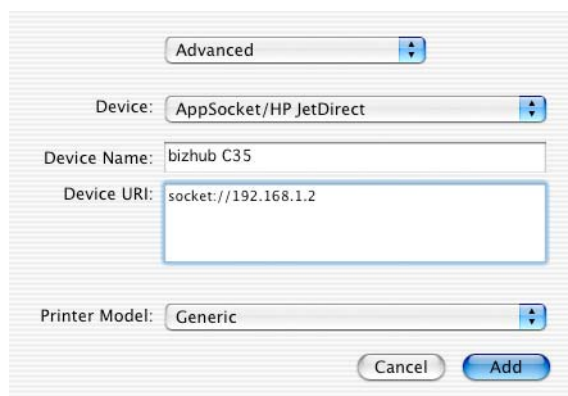


- 8 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.

- 9 Select [KONICA MINOLTA bizhub C35 PPD] in the [Name] list.

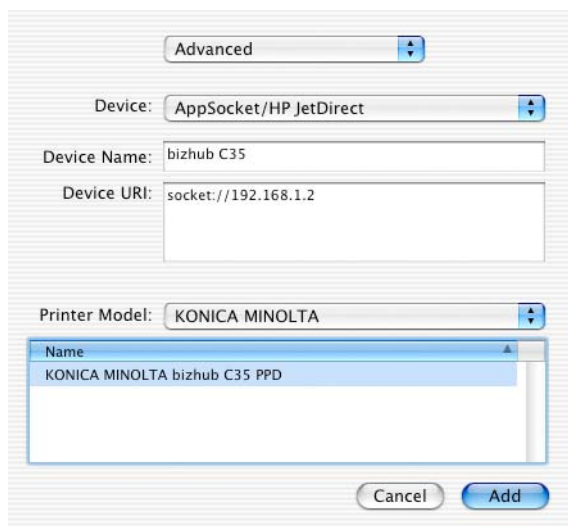

- 10 Click [Add].

The new printer appears in the [Printer List] screen.

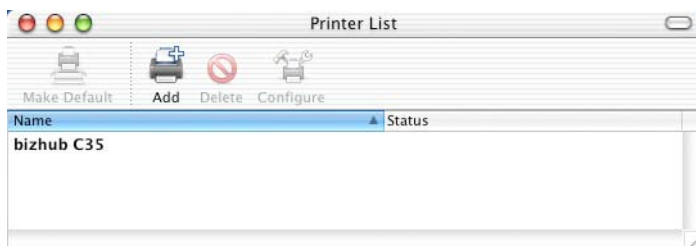


If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.


Printer Setup Utility Settings (Mac OS X 10.3)

When Using a USB Connection


- 1 Use a USB cable to connect the printer to your computer.
- 2 Check that the printer is turned on, and then restart the computer.
- 3 Open [Printer Setup Utility], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 4 In the [Printer List], click [Add].

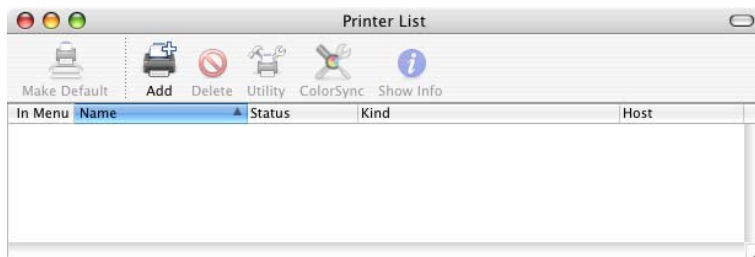

- 5 Select [USB] from the pop-up menu.

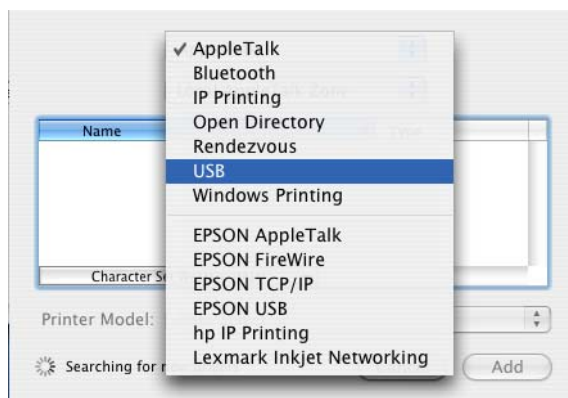

- 6 Select [bizhub C35] in the [Product] list.

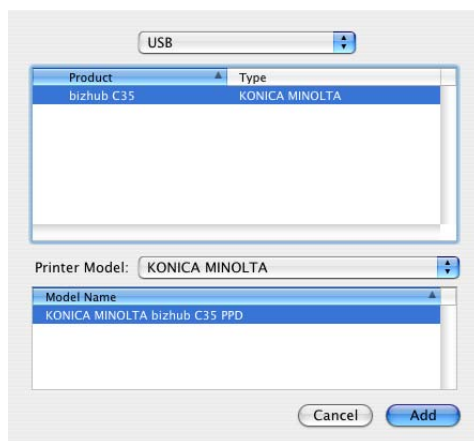

If [bizhub C35] does not appear, check that the printer is turned on and the USB cable is connected, and then restart the computer.

- 7 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Printer Model] list.

- 8 Click [Add].

The new printer appears in the [Printer List] screen.



If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.

When Using a Network Connection


The network connection settings can be specified in one of three ways: AppleTalk Setting, Rendezvous Setting and IP printing Setting (IPP, LPD or Socket).

AppleTalk Setting


- 1 Connect the printer to an Ethernet network.
- 2 Open [Printer Setup Utility], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 Click [Add] in the [Printer List].



- 4 Select [AppleTalk] from the pop-up menu.

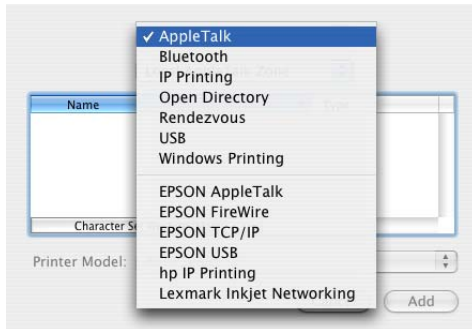


- 5 Select [BHC35-xxxxxx] in the [Name] list.

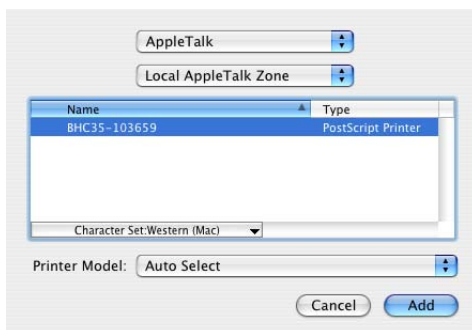

"xxxxxxx" refers to the last six digits of the MAC address (in hexadecimal).


- 6 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.

- 7 Select [KONICA MINOLTA bizhub C35 PPD] in the [Model Name] list.

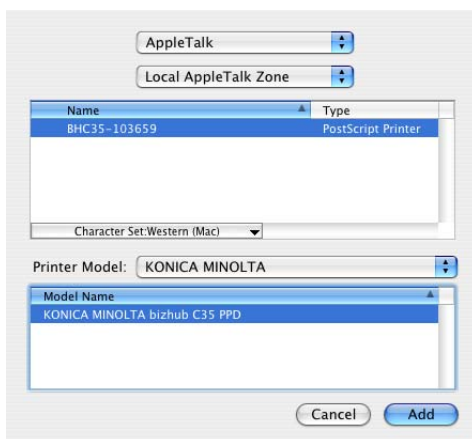

- 8 Click [Add].


The new printer appears in the [Printer List] screen.

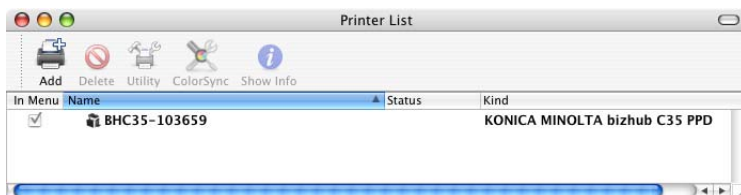


If any options are installed, select them. For details, refer to "Selecting Print Options" on page 1-60.

Rendezvous Setting


- 1 Connect the printer to an Ethernet network.
- 2 Open [Printer Setup Utility], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 Click [Add] in the [Printer List].

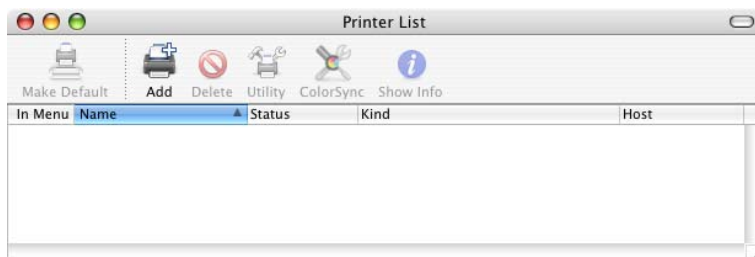

- 4 Select [Rendezvous] from the pop-up menu.

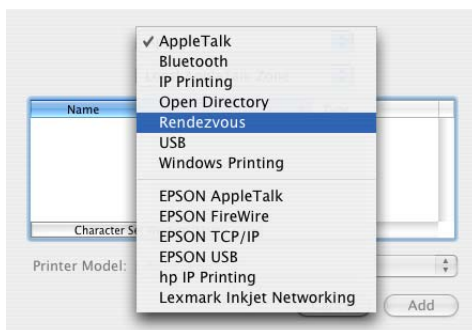


- 5 Select [KONICA MINOLTA bizhub C35(xx:xx:xx)] in the [Name] list.

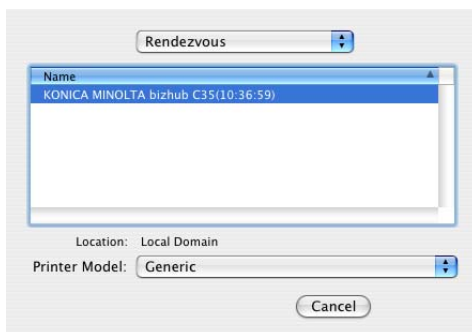


"xx:xx:xx" refers to the last six digits of the MAC address (in hexadecimal).

- 6 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.
- 7 Select [KONICA MINOLTA bizhub C35 PPD] in the [Model Name] list.

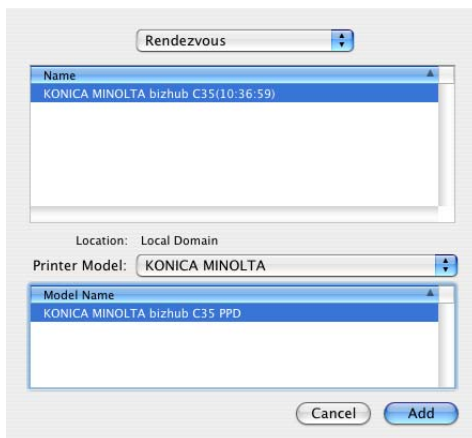

- 8 Click [Add].

The new printer appears in the [Printer List] screen.

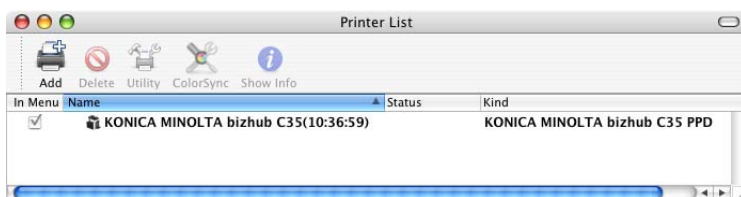


If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.


IP Printing Setting

- 1 Connect the machine to an Ethernet network.
- 2 Open [Printer Setup Utility], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].


3 Click [Add] in the [Printer List].

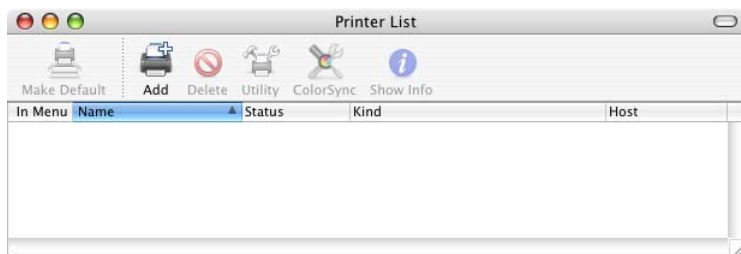

4 Select [IP Printing] from the pop-up menu.

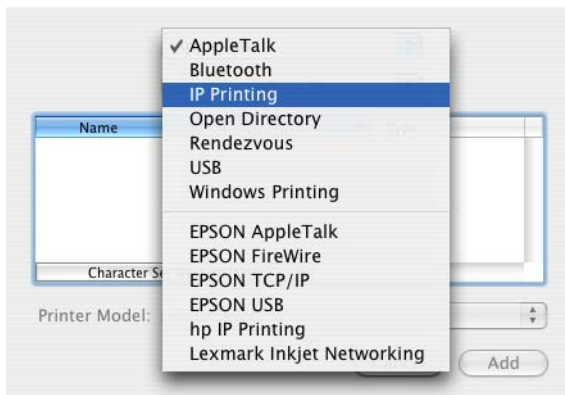

5 Select desired print protocol from the [Printer Type] pop-up menu.

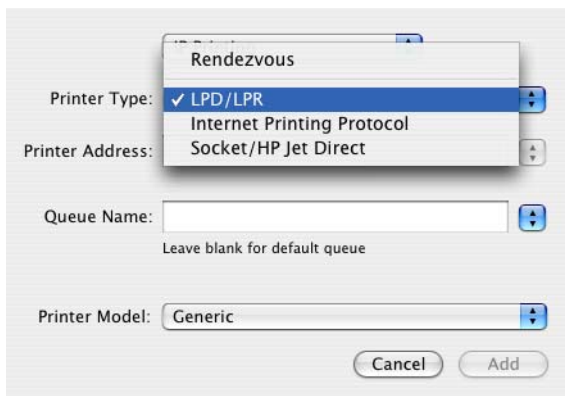

- For an LPD setup, select [LPD/LPR].
- For an IPP setup, select [Internet Printing Protocol].
- For a port 9100 setup, select [Socket/HP Jet Direct].

- 6 Enter the IP address for the machine in the [Printer Address] text box.

IP Printing

Printer Type: LPD/LPR

Printer Address: 192.168.1.2
Complete and valid address.

Queue Name:
Leave blank for default queue

Printer Model: Generic

Cancel Add

- 7 Select [KONICA MINOLTA] from the [Printer Model] pop-up menu.

- 8 Select [KONICA MINOLTA bizhub C35 PPD] in the [Model Name] list.

IP Printing

Printer Type: LPD/LPR

Printer Address: 192.168.1.2
Complete and valid address.

Queue Name:
Leave blank for default queue


Printer Model: KONICA MINOLTA

Model Name
KONICA MINOLTA bizhub C35 PPD

Cancel Add

- 9 Click [Add].

The new printer appears in the [Printer List] screen.

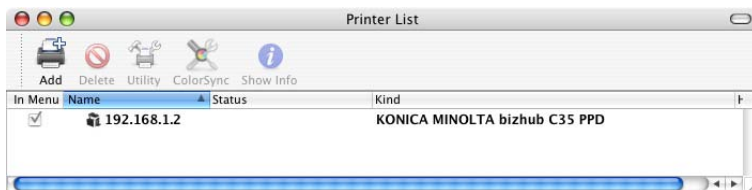


If any options are installed, select them. For details, refer to “Selecting Print Options” on page 1-60.


Printer Setup Utility Settings (Mac OS X 10.4)

When Using a USB Connection


- 1 Use a USB cable to connect the machine to your computer.
- 2 Open [Printer Setup Utility], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 In the [Printer List], click [Add].

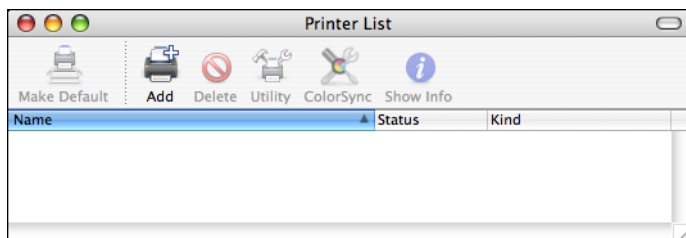

The detected printer appears in the [Printer Browser].

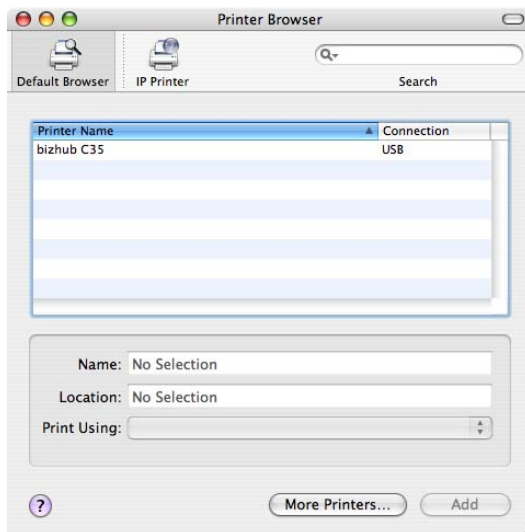


- 4 Select [bizhub C35] in the [Printer Name].

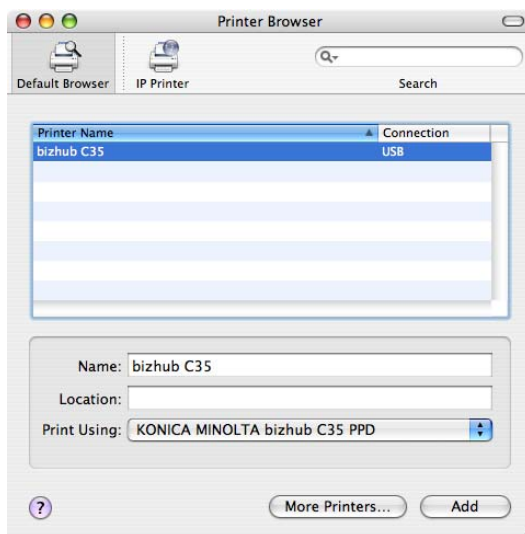

If [bizhub C35] does not appear, check that the machine is turned on and the USB cable is connected, and then restart the computer.

- 5 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Print Using] list.
- 6 Click [Add].

The new printer appears in the [Printer List] screen.

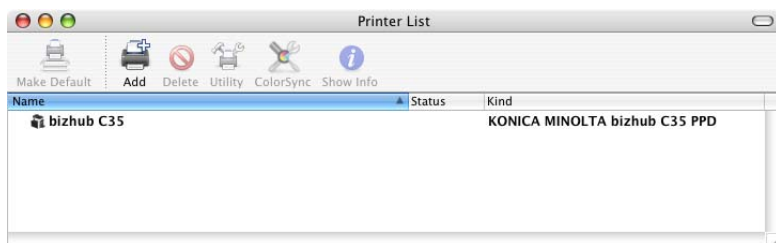


If any options are installed, select them. For details, refer to "Selecting Print Options" on page 1-60.

When Using a Network Connection


The network connection settings can be specified in one of three ways: Bonjour Setting, AppleTalk setting and IP printing Setting (IPP, LPD or Socket).

Bonjour Setting


- 1 Connect the machine to an Ethernet network.
- 2 Open [Printer Setup Utility], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 In the [Printer List], click [Add].

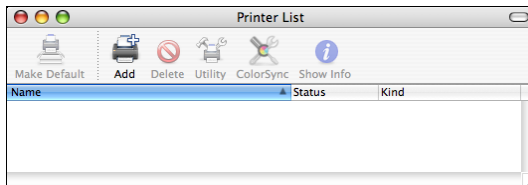

The detected printer appears in the [Printer Browser].

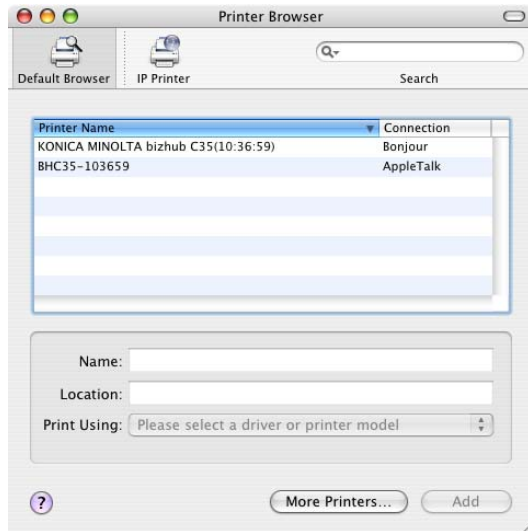


- 4 Select [KONICA MINOLTA bizhub C35(xx:xx:xx)] in the [Printer Browser].

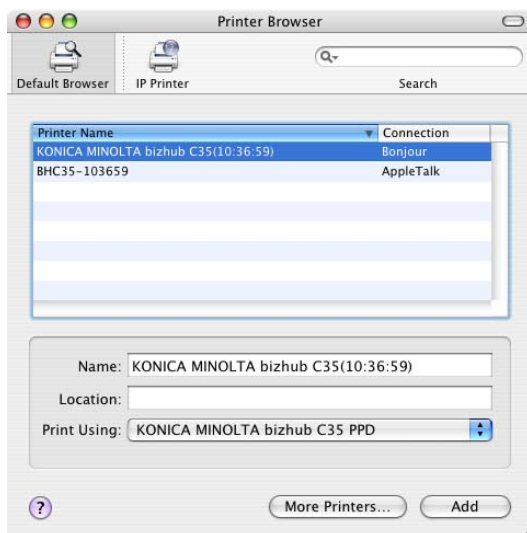

“xx:xx:xx” refers to the last six digits of the MAC address (in hexadecimal).


- 5 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Print Using] list.
- 6 Click [Add].

- 7 Select the appropriate settings in the [Hard Disk], [Paper Source Unit] according to your printer setup.

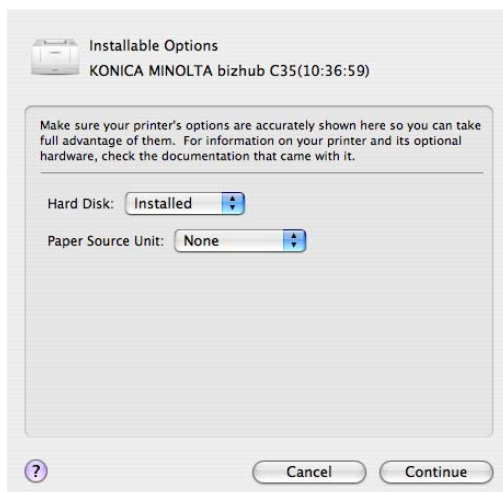

- 8 Click [Continue].


The new printer appears in the [Printer List] screen.

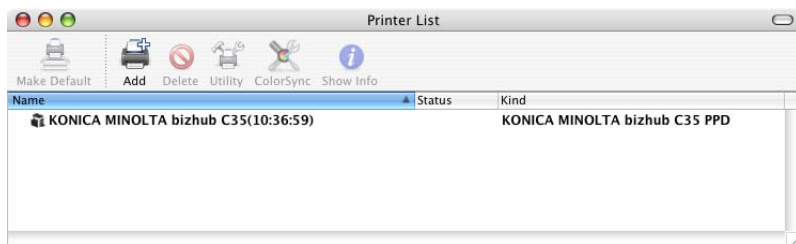


AppleTalk Setting

- 1 Connect the printer to an Ethernet network.
- 2 Open [Printer Setup Utility], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].


3 In the [Printer List], click [Add].

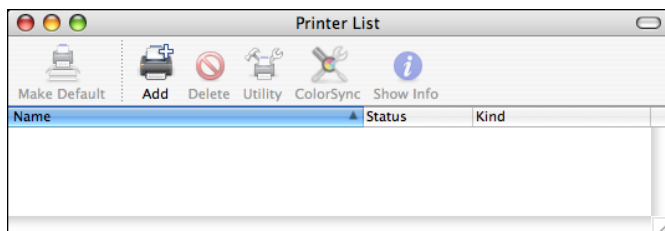

The detected printer appears in the [Printer Browser].

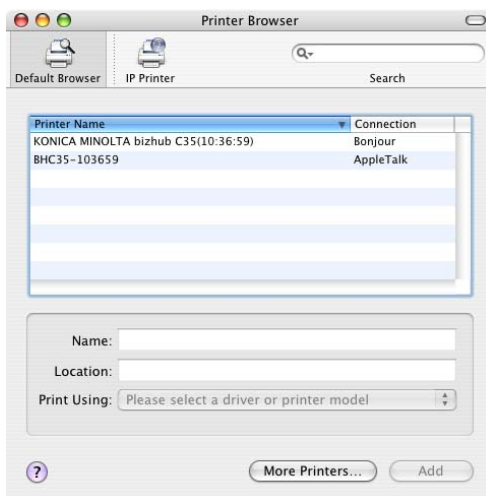

4 Select [BHC35-xxxxxx] in the [Printer Browser].

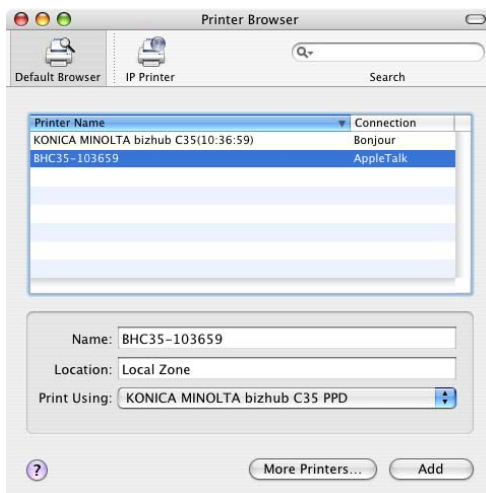



"XXXXXXX" refers to the last six digits of the MAC address (in hexadecimal).

5 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Print Using] list.


6 Click [Add].

The new printer appears in the [Printer List] screen.




IP Printing Setting

- 1 Connect the machine to an Ethernet network.
- 2 Open [Printer Setup Utility], which can be accessed by clicking Startup Disk, then [Applications], then [Utilities].
- 3 Click [Add] in the [Printer List].

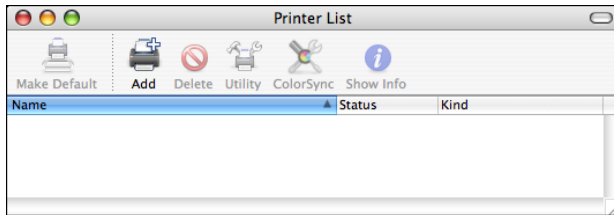

- 4 Click [IP Printer].

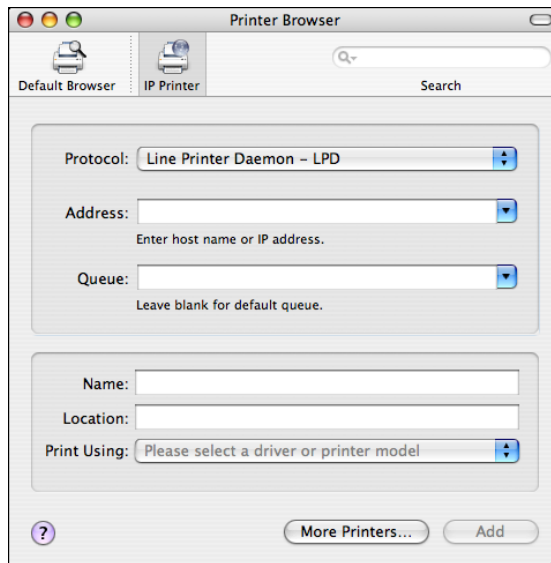


- 5 Select desired print protocol from the [Protocol] pop-up menu.



- For an IPP setup, select [Internet Printing Protocol - IPP].
- For an LPD setup, select [Line Printer Daemon - LPD].
- For a port 9100 setup, select [HP Jet Direct - Socket].


- 6 Enter the IP address for the machine in the [Address] text box.

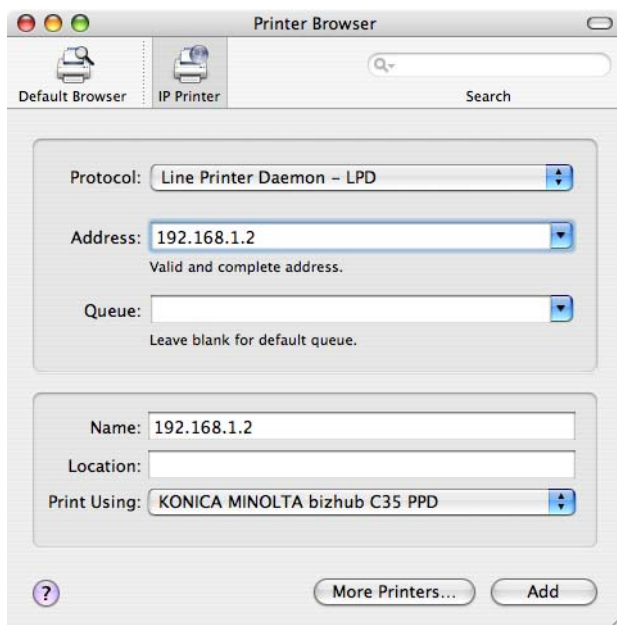


- For an IPP setup, "ipp" in the [Queue] text box.

- 7 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Print Using] list.
- 8 Click [Add].

- 9 Select the appropriate settings in the [Hard Disk], [Paper Source Unit] according to your printer setup.

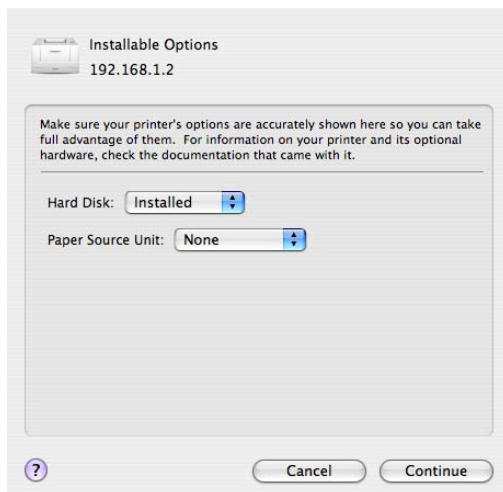


- 10 Click [Continue].
The new printer appears in the [Printer List] screen.

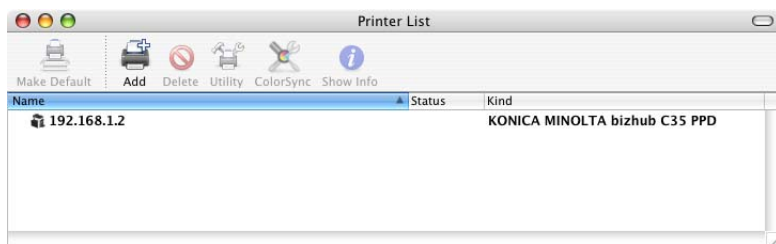


Printer Settings (Mac OS X 10.5/10.6)

When Using a USB Connection


- 1 Use a USB cable to connect the printer to your computer.
- 2 Select [System Preferences] from the Apple menu.
- 3 Click [Print & Fax].
- 4 In the [Print & Fax], click [+] button.

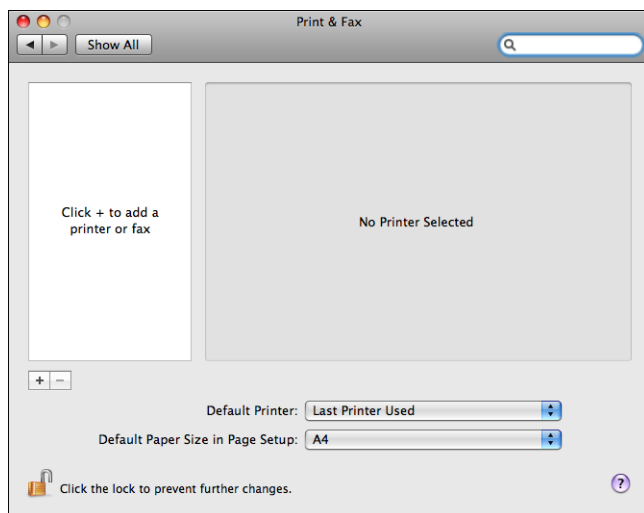

The detected printer appears in the Printer Browser.

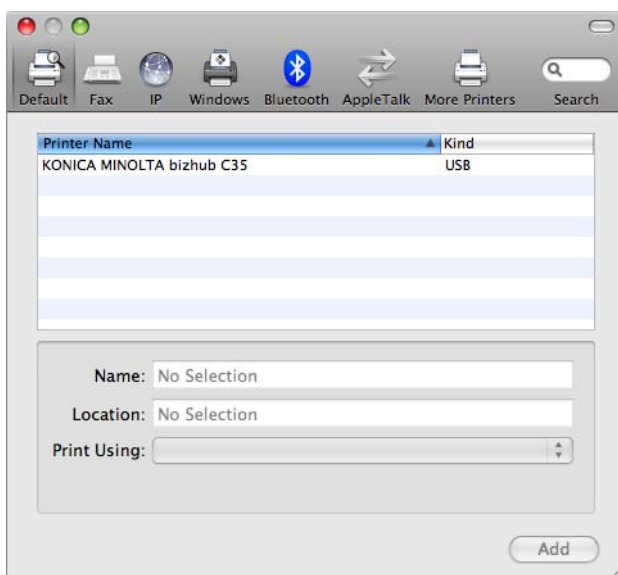


- 5 Select [KONICA MINOLTA bizhub C35] in the [Printer Name] list.

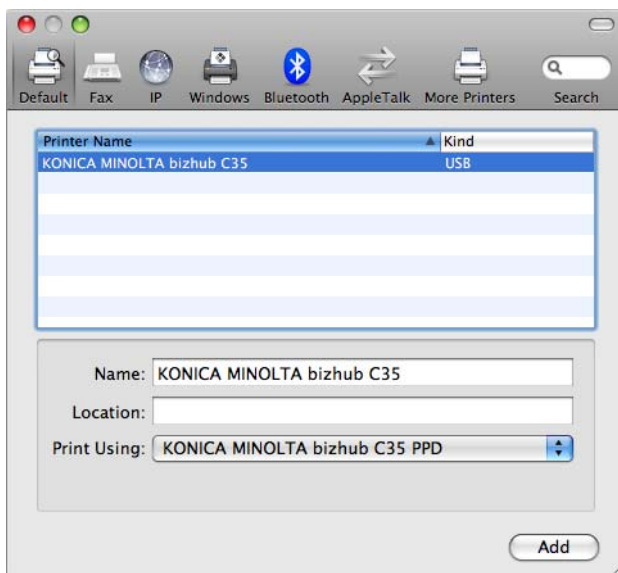


If [KONICA MINOLTA bizhub C35] does not appear, check that the printer is turned on and the USB cable is connected, and then restart the computer.

- 6 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Print Using] list.
- 7 Click [Add].
- 8 Select the appropriate settings in the [Hard Disk], [Paper Source Unit] according to your printer setup.

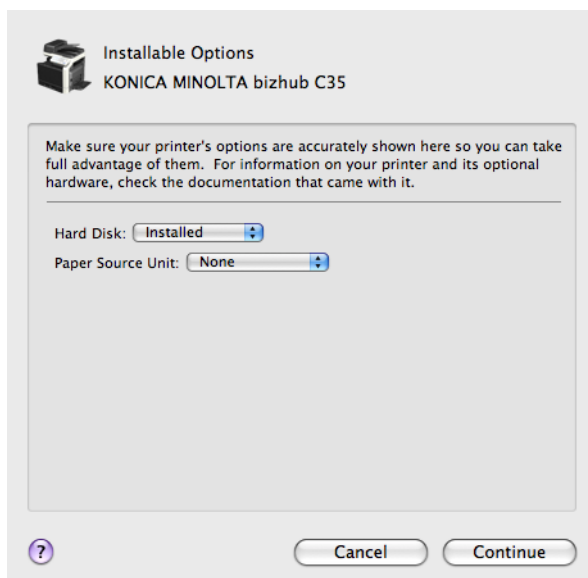

9 Click [Continue].

The new printer appears in the [Print & Fax] screen.

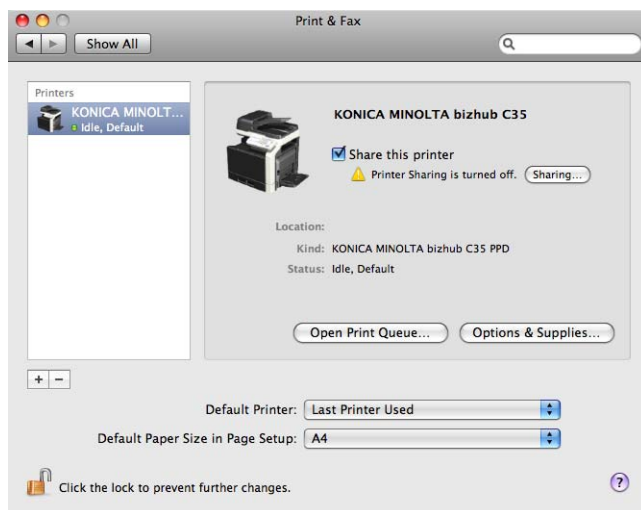


When Using a Network Connection


The network connection settings can be specified in one of three ways: Bonjour Setting, AppleTalk setting and IP printing setting (IPP, LPD or Socket).

Bonjour Setting


- 1 Connect the machine to an Ethernet network.
- 2 Select [System Preferences] from the Apple menu.
- 3 Click [Print & Fax].
- 4 In the [Print & Fax], click [+] button.

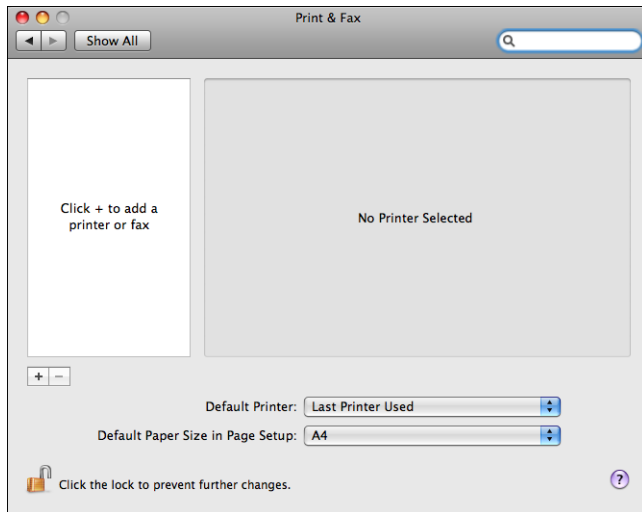

The detected printer appears in the Printer Browser.

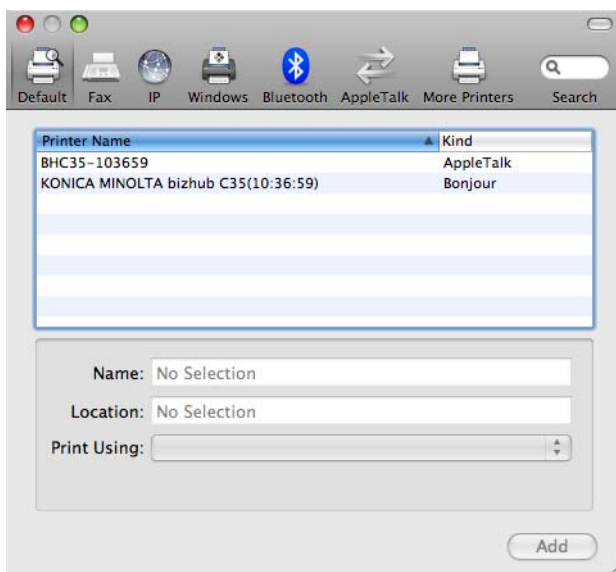


- 5 Select [KONICA MINOLTA bizhub C35(xx:xx:xx)] in the [Printer Name] list.

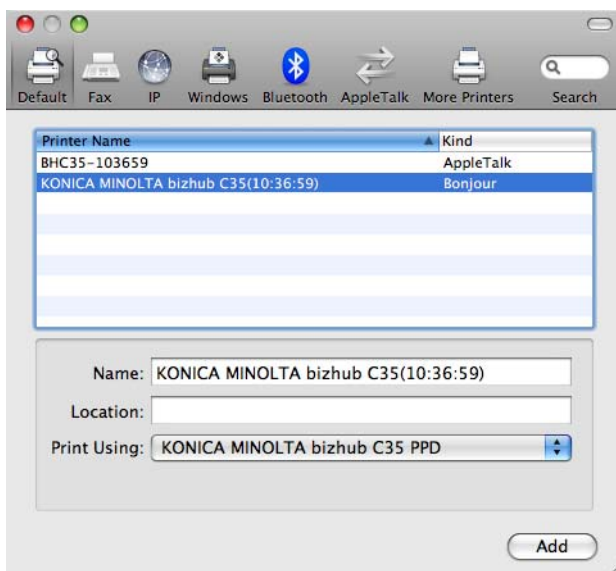


“xx:xx:xx” refers to the last six digits of the MAC address (in hexadecimal).

- 6 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Print Using] list.
- 7 Click [Add].
- 8 Select the appropriate settings in the [Hard Disk], [Paper Source Unit] according to your printer setup.

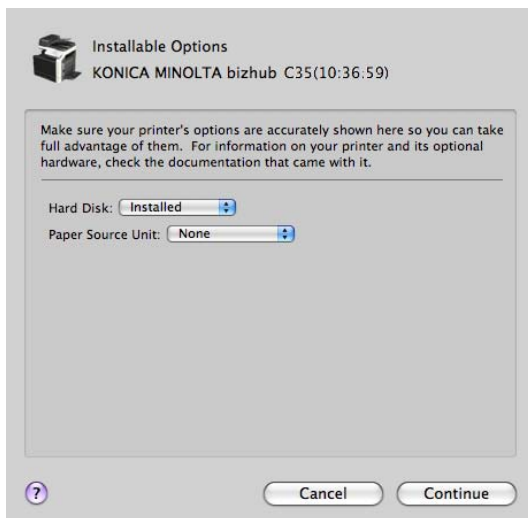


- 9 Click [Continue].

The new printer appears in the [Print & Fax] screen.

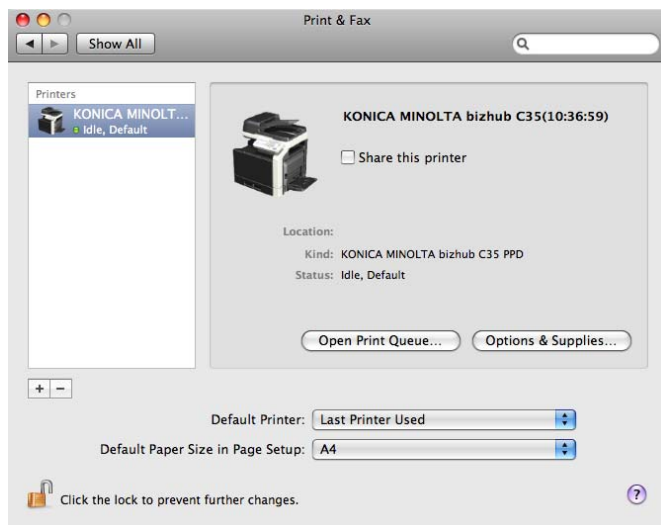


AppleTalk Setting (for Mac OS X 10.5)


- 1 Connect the machine to an Ethernet network.
- 2 Select [System Preferences] from the Apple menu.
- 3 Click [Print & Fax].
- 4 In the [Print & Fax], click [+] button.

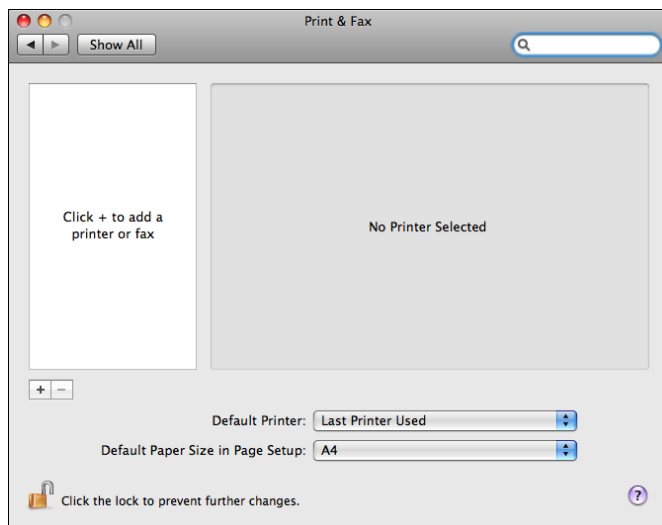

The detected printer appears in the Printer Browser.

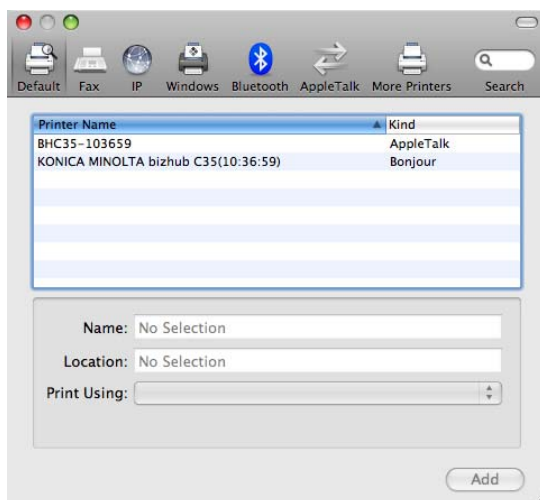


- 5 Select [BHC35-xxxxxx] in the [Printer Name] list.

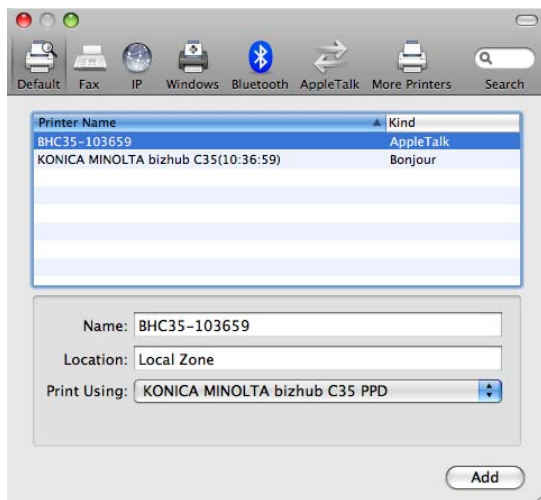

"xxxxxxx" refers to the last six digits of the MAC address (in hexadecimal).


- 6 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Print Using] list.
- 7 Click [Add].

- 8 Select the appropriate settings in the [Hard Disk] and [Paper Source Unit] according to your printer setup.

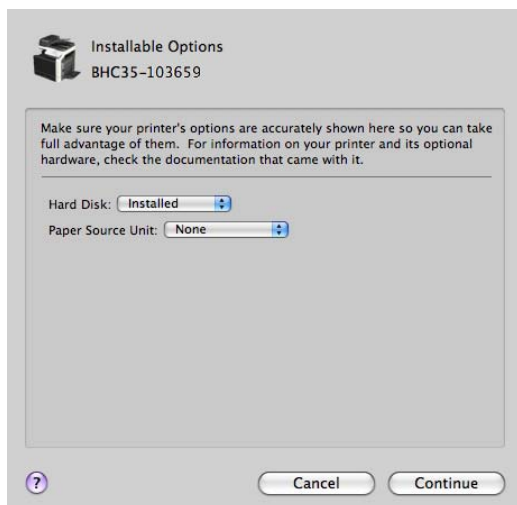


- 9 Click [Continue].

The new printer appears in the [Print & Fax] screen.

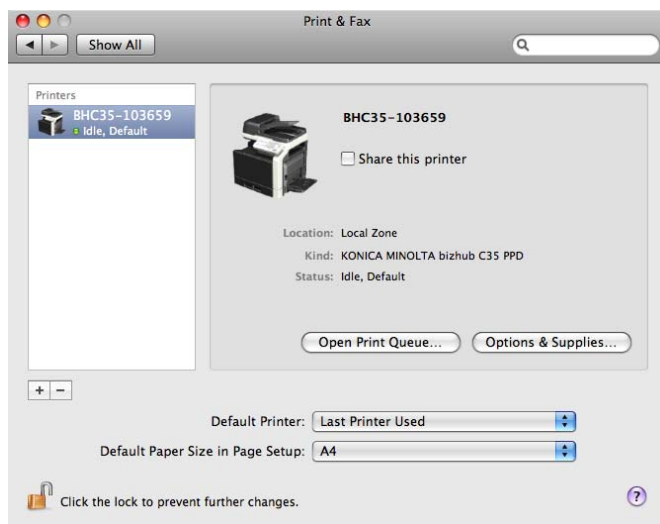


IP Printing Setting


- 1 Connect the machine to an Ethernet network.
- 2 Select [System Preferences] from the Apple menu.
- 3 Click [Print & Fax].
- 4 In the [Print & Fax], click [+] button.

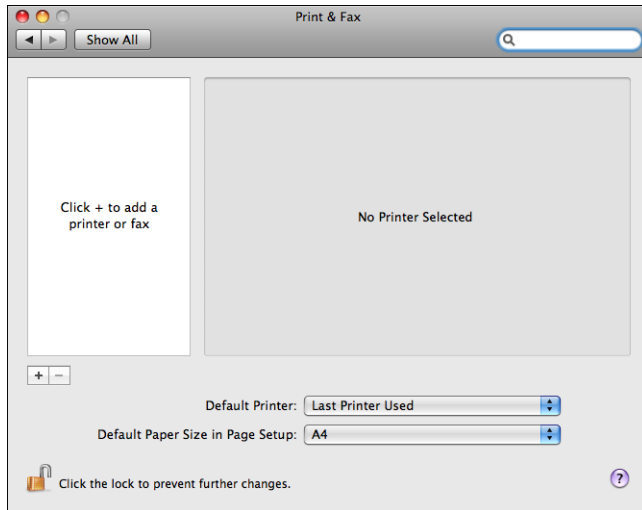

5 Click [IP].

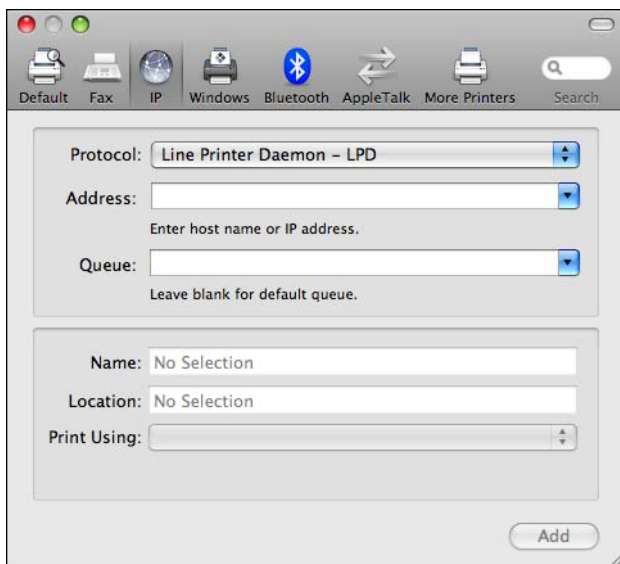


6 Select desired print protocol from the [Protocol] pop-up menu.

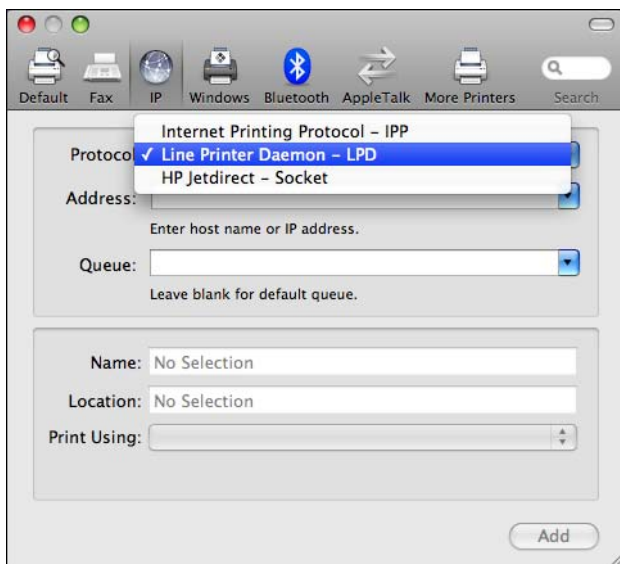

- For an IPP setup, select [Internet Printing Protocol - IPP].
- For an LPD setup, select [Line Printer Daemon - LPD].
- For a port 9100 setup, select [HP Jetdirect - Socket].


- 7 Enter the IP address for the machine in the [Address] text box.

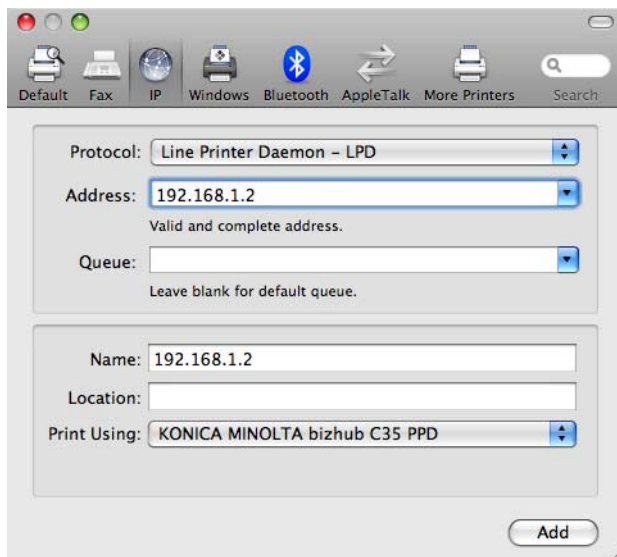

- For an IPP setup, "ipp" in the [Queue] text box.


- 8 Check that [KONICA MINOLTA bizhub C35 PPD] is selected in the [Print Using] list.
- 9 Click [Add].

- 10 Select the appropriate settings in the [Hard Disk], [Paper Source Unit] according to your printer setup.

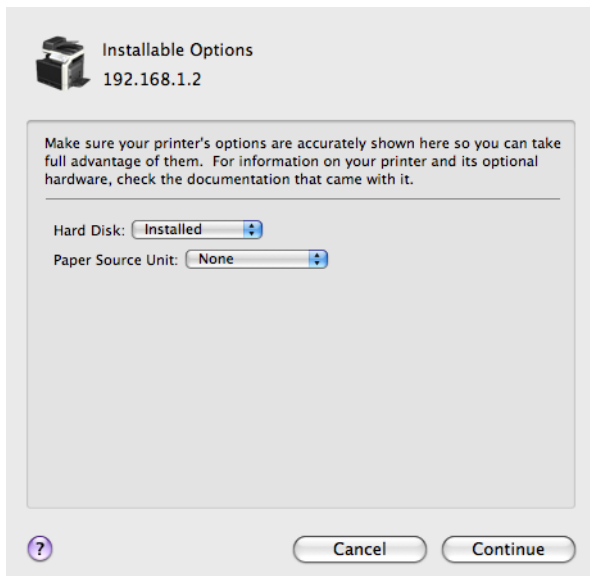

- 11 Click [Continue].


The new printer appears in the [Print & Fax] screen.

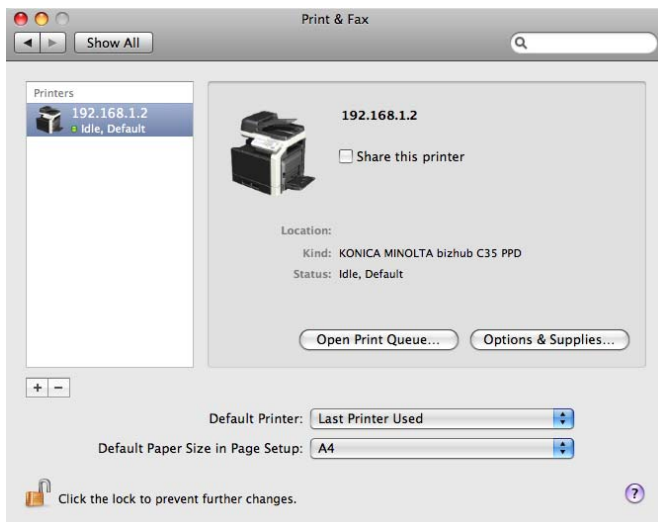


Selecting Print Options

For Mac OS X 10.2/10.3/10.4


- 1 Open [Printer Setup Utility (Print Center)], which can be accessed by clicking Startup disk, then [Applications], then [Utilities].
- 2 Select this printer in the [Printer List], and then select [Show Info] from the [Printers] menu.

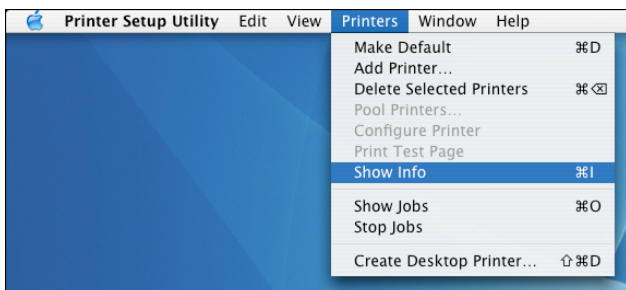

- 3 Select [Installable Options] from the pop-up menu.

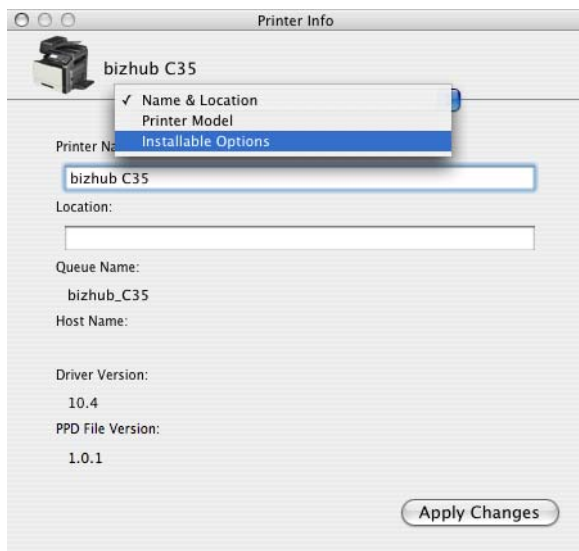


- 4 Select the appropriate settings in [Hard Disk] and [Paper Source Unit] according to your printer setup.

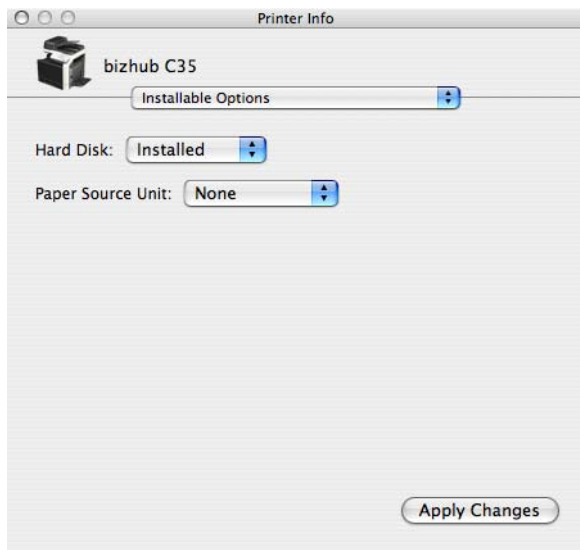


- 5 Click [Apply Changes].
- 6 Close the [Printer Info] dialog box.

For Mac OS X 10.5/10.6


- 1 Select [System Preferences] from the Apple menu.
- 2 Click [Print & Fax].
- 3 Select this printer in the [Printers] List, and then click [Options & Supplies].

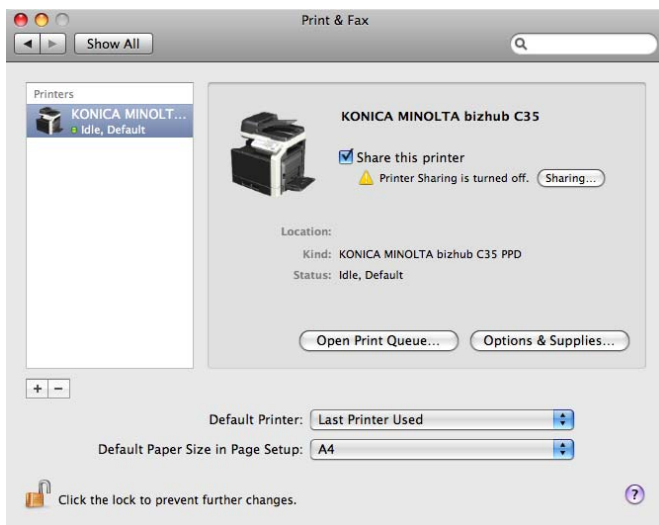

- 4 Select [Driver] tab.

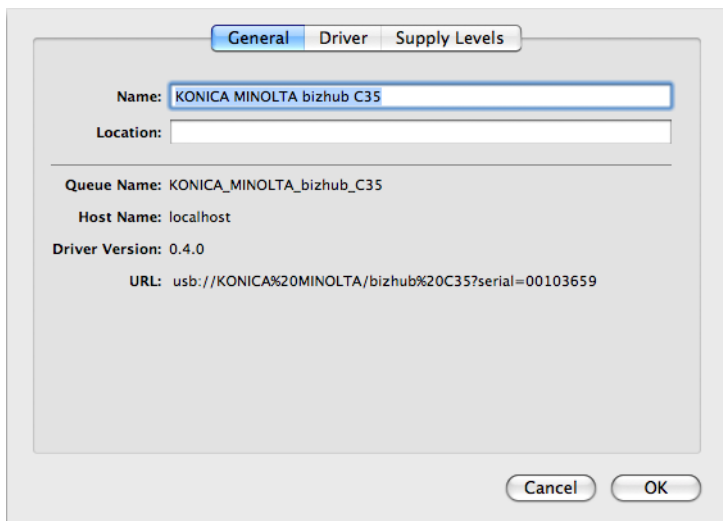

- 5 Select the appropriate settings in [Hard Disk] and [Paper Source Unit] according to your printer setup.

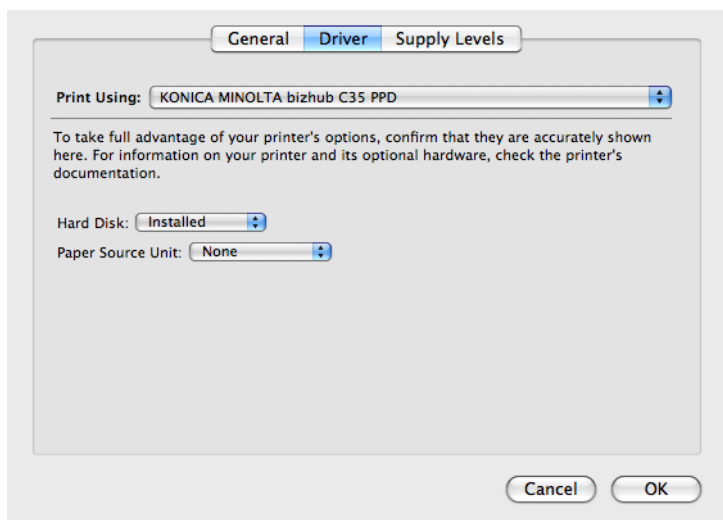


- 6 Click [OK].
- 7 Close the [Print & Fax] screen.

Specifying Page Setup Settings (Mac OS X 10.2/10.3/10.4/10.5/10.6)

The following dialog box appears when [Page Setup...] is selected from the [File] menu in the application being used.

- 1 Select [Page Setup...] from the [File] menu.
The [Page Setup] dialog box appears.
- 2 Select this printer in the [Format for] pop-up menu.

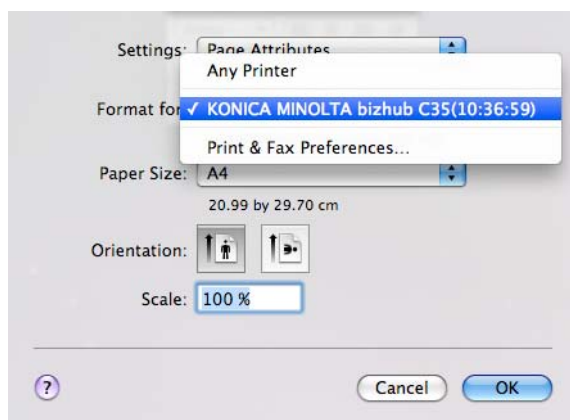


You can select the following sections from the [Settings] pop-up menu.

Section	Description
[Page Attributes]	This is used to specify the settings for the paper size, scaling, and print orientation.
[Save As Default]	This is used to save the new settings as the defaults.

Page Attributes Options

The [Page Attributes] section is used to specify the settings for the paper size, scaling, and print orientation.

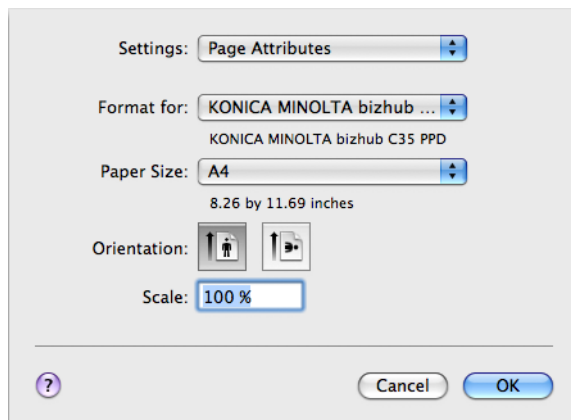

- [Paper Size]
Select the desired paper size from the Paper Size pop-up menu.
- [Orientation]
Select either a vertical or horizontal page orientation for printouts.
- [Scale]
If you want to enlarge or reduce the size of the printout, enter the scale ratio here.




Regardless of which paper size is selected, the machine does not print within 0.165" (4.2 mm) of the edge of the paper.

Specifying Custom Paper Size

You can also specify a paper size that is not listed in the [Paper Size] pop-up menu.

- 1 Select [Manage Custom Sizes] from the pop-up menu, in the [Page Setup] dialog box.

The [Custom Page Sizes] dialog box appears.

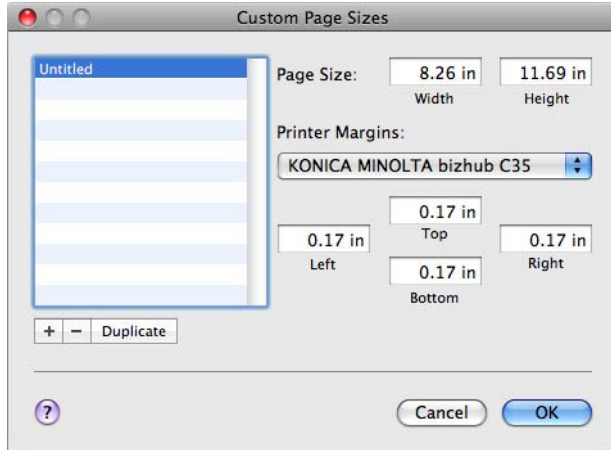

- **[+]**
Click this button to create a new custom page size.
- **[-]**
Click this button to delete a custom page size.
- **[Duplicate]**
Click this button to duplicate (copy) the settings of an existing custom page size and create a new custom page size based on those settings.
- **[Page Size]**
Enter the dimensions of the paper height and width for the custom page size.

Single-sided

[Width]: 3.62 - 8.50" (92 - 216 mm)

[Height]: 5.83 - 14.01" (148 - 356 mm)

Double-sided

[Width]: 7.17 - 8.50" (182 - 216 mm)

[Height]: 10.00 - 14.01" (254 - 356 mm)

- **[Printer Margins]**
Enter the dimensions for the top, left, right, and bottom margins.

2 After you have finished entering the settings, click [OK].




Regardless of which paper is selected, the printer does not print within 0.165" (4.2 mm) of the edge of the paper.

Specifying Print Settings (Mac OS X 10.4)

The following dialog box appears when [Print...] is selected from the [File] menu in the application being used.

- 1 Select [Print...] from the [File] menu.
The [Print] dialog box appears.
- 2 Select this printer in the [Printer] pop-up menu.
The Print dialog box is used to specify the following print options.

Print Dialog Box

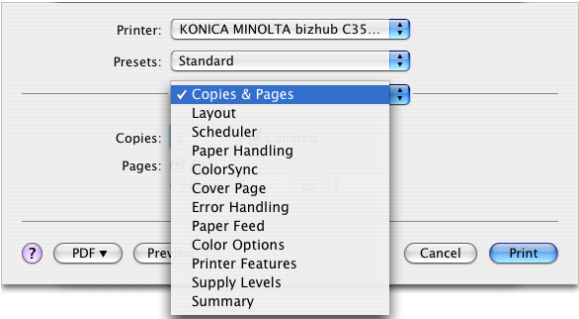

Section	Description
[Copies & Pages]	This section contains options for the number of copies to be printed and the range of pages to print.
[Layout]	This section contains options for specifying the page layout when printing and the setting for double-sided printing.
[Scheduler]	This section contains options for specifying the print timing and priority of jobs.
[Paper Handling]	This section contains options for specifying the pages to be printed and their printing order.
[ColorSync]	This section contains options for specifying ColorSync settings.
[Cover Page]	This section contains options for specifying cover page settings.
[Error Handling]	This section contains options for specifying how an error is reported.
[Paper Feed]	This section contains paper feed options.

Section	Description
[Color Options]	This section contains options for color printing.
[Printer Features]	This section contains options for specifying paper type and resolution settings.
[Supply Levels]	This section provides information for checking the amount of service life remaining on each consumable.
[Summary]	This is used to check the current settings.




No warning message will be displayed if options cannot be used together are selected.

Common buttons

- [?] (Help button)
Click this button to display help information about the Print dialog box.
- [PDF]
Click this button to select the PDF menu. The print output can be saved as a PDF file or faxed.
- [Preview]
Click this button to view a preview image of the printout, to check that the print options are set correctly.
- [Cancel]
Click this button to close the Print dialog box without applying any of the settings.
- [Print]
Click this button to print using the selected print options.

[Copies & Pages]

The [Copies & Pages] section is used to specify the number of copies to print and the range of pages to print.

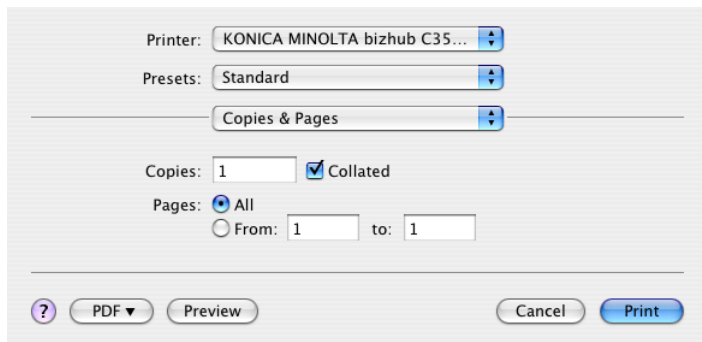

■ [Copies]

This specifies the number of copies to be printed. If the [Collated] checkbox is selected, all pages in the documents are printed as sets of print-outs.

For example, if 5 is entered for [Copies] and [Collated] is selected, the document is printed five times from the first page to the last page.


■ [Pages]

[All]: Prints all pages in the document.

[From], [to]: Specifies the range of pages to be printed.

[Layout]

The [Layout] section is used to specify the page layout when printing and the setting for double-sided printing.

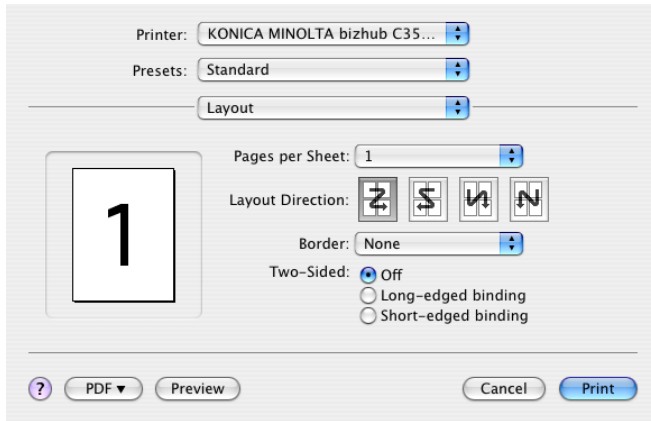

■ [Pages per Sheet]

Specifies the number of pages to be printed on one sheet of paper. For example, if [2] is selected, two pages are printed on one sheet of paper.

■ [Layout Direction]

If you are printing more than one page per sheet, this specifies the direction and order the pages should be arranged on each sheet of paper.

■ [Border]

This prints a border around the image for each of the pages printed on one sheet of paper when more than one page is printed on one sheet of paper.

■ [Two-Sided]

Select the desired setting for double-sided printing.


[Off]: Double-sided printing is not performed.

[Long-edged binding]: Double-sided printing is performed with the binding along the long edge of the paper.

[Short-edged binding]: Double-sided printing is performed with the binding along the short edge of the paper.

[Scheduler]

The [Scheduler] section is used to specify the timing and priority for printing jobs.

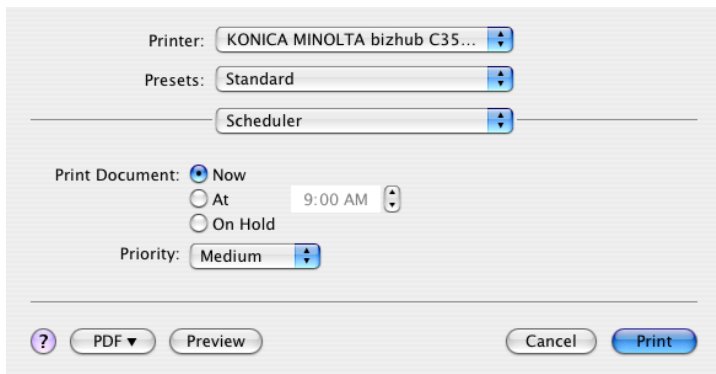

The screenshot shows the macOS Print Scheduler dialog box. At the top, the 'Printer' is set to 'KONICA MINOLTA bizhub C35...' and 'Presets' is set to 'Standard'. Below these, the 'Scheduler' section is active. Under 'Print Document:', the 'Now' radio button is selected. The 'At' option is also visible with a time field set to '9:00 AM'. The 'On Hold' option is also present. The 'Priority' is set to 'Medium'. At the bottom, there are buttons for '?', 'PDF', 'Preview', 'Cancel', and 'Print'.

■ [Print Document]

[Now]: Select this option to begin printing immediately.

[At]: Specify the time to begin printing.

[On Hold]: Select this option to hold the print job.

■ [Priority]

Select the priority for printing jobs that are being held.

[Paper Handling]

The [Paper Handling] section is used to specify the pages that are to be printed and the order in which the pages are printed.

The screenshot shows a 'Paper Handling' dialog box. At the top, there are dropdown menus for 'Printer:' (KONICA MINOLTA bizhub C35...) and 'Presets:' (Standard). Below these is a section titled 'Paper Handling' with a dropdown arrow. Inside this section, there are two main areas. The first area is 'Page Order:' with three radio buttons: 'Automatic' (selected), 'Normal', and 'Reverse'. The second area is 'Print:' with three radio buttons: 'All Pages' (selected), 'Odd numbered pages', and 'Even numbered pages'. Below these is a section titled 'Destination Paper Size:' with three options: 'Use documents paper size: Letter' (selected), 'Scale to fit paper size: Letter' (with a dropdown arrow), and 'Scale down only' (checked). At the bottom of the dialog, there are buttons for '?', 'PDF', 'Preview', 'Cancel', and 'Print'.

■ [Page Order]

[Automatic]: Select this option to print in the original page order of the document.

[Normal]: Select this option to print in the normal page order.

[Reverse]: Select this option to print in the reverse page order.

■ [Print]

[All Pages]: Select this option to print all pages.

[Odd numbered pages]: Select this option to print only the pages with odd page numbers.

[Even numbered pages]: Select this option to print only the pages with even page numbers.

■ [Destination Paper Size]

[Use documents paper size]: Select this option to use the document size as created by software applications.

[Scale to fit paper size]: Select this option to fit the document size to the size of paper used by the machine. Specify the size of paper used by the machine.


[Scale down only]: Select this option to reduce the printing size.

[ColorSync]



- [Color Conversion]
Allows you to select host-based color matching or printer-based color matching.
- [Quartz Filter]
Allows you to select Quartz Filter.

[Cover Page]

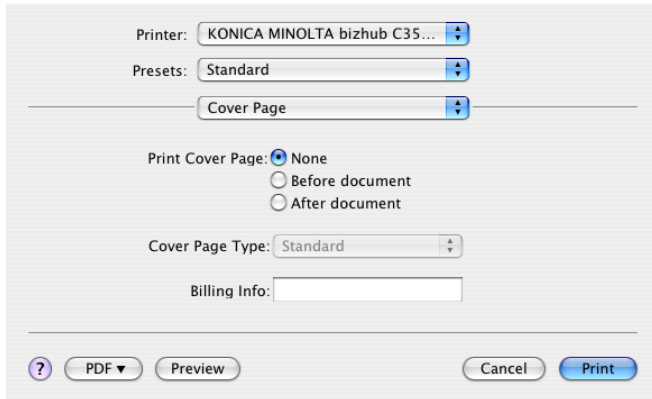

- [Print Cover Page]
Allows you to set cover page before or after document.
- [Cover Page Type]
Allows you to select cover page type.
- [Billing Info]
Allows you to set billing information printed on cover page.

[Error Handling]

Printer: KONICA MINOLTA bizhub C35...

Presets: Standard

Error Handling

PostScript Errors

☒ No special reporting

☐ Print detailed report

Tray Switching

☐ Use printer's default

☐ Switch to another cassette with the same paper size


☒ Display alert

? PDF Preview Cancel Print

- [PostScript Errors]
Allows you to select whether or not a report is outputted when a Post-Script error occurs.
- [Tray Switching]
This feature is not available with this printer.

[Paper Feed]

The [Paper Feed] section is used to specify the paper feed setting.

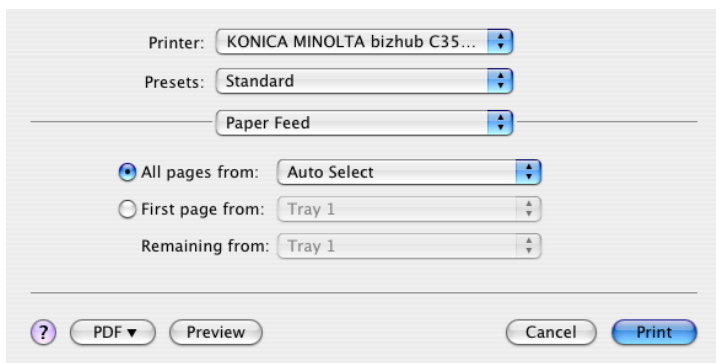

- [All pages from]
All pages in the document are printed using the paper in the specified paper tray.
- [First page from]
The first page of the document is printed on paper from a paper tray different from the tray used to print the rest of the document.
- [Remaining from]
The rest of the document is printed from the specified paper tray when the first page is to be printed on paper from a different tray.



If an optional tray is installed, select an [Paper Source Unit] under [Installable Options] (p. 1-61).

[Color Options]

Printer: KONICA MINOLTA bizhub C35...

Presets: Standard

Color Options

Color Settings: Auto

Brightness: 0%

☐ Color as Grayscale

☐ Color Separation

☐ Toner Save

Edge Strength: Middle

☐ Auto Trapping

Black Over Print: Off

Advanced Color Options

? PDF Preview Cancel Print

- [Color Settings]
Allows you to select a color preset.
- [Brightness]
Allows you to set Brightness.
- [Color as Grayscale]
Allows you to set Grayscale color.
- [Color Separation]
Allows you to set Color Separation.
- [Toner Save]
Allows you to set Toner Save Mode.
- [Edge Strength]
Allows you to select Edge Strength.
- [Auto Trapping]
Allows you to select whether or not neighboring colors are printed superimposed in order to prevent white space around images.
- [Black Over Print]
Allows you to specify whether black objects are printed (superimposed) on a neighboring color in order to prevent white space around black characters or figures.

If [Text/Figure] is selected, superimposed printing is applied to text and graphics.

If [Text] is selected, superimposed printing is applied to text.


■ [Advanced Color Options]

Click this button to display the [Advanced Color Options] pane.



This button enables when [Custom] is selected under [Quick Color].

[Advanced Color Options]/[Image]

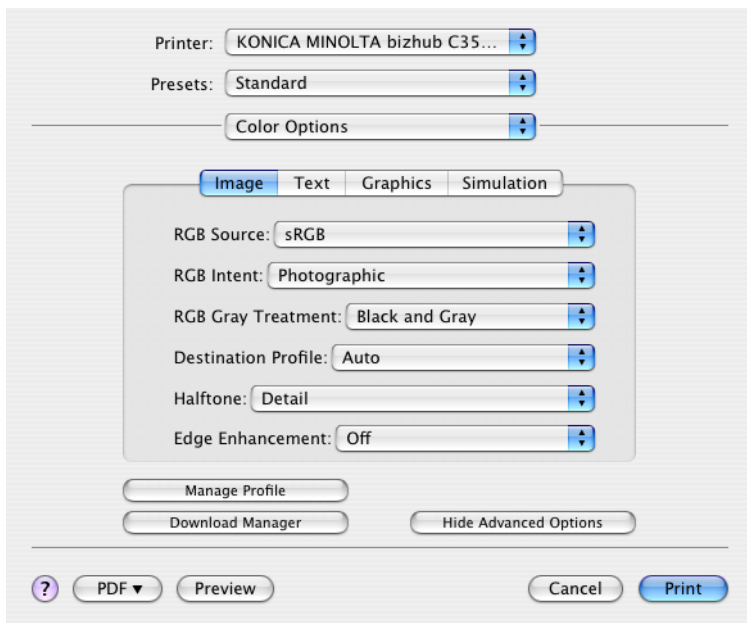

■ [RGB Source]

Allows you to select RGB color profiles for images.

■ [RGB Intent]

Allows you to select color intent for RGB images.

■ [RGB Gray Treatment]

Allows you to select RGB gray treatment for images.

■ [Destination Profile]

Allows you to select Destination Profile for images.

■ [Halftone]

Allows you to select halftone for images.

■ [Edge Enhancement]

Allows you to select Edge Enhancement for images.

- **[Hide Advanced Options]**
Click this button to hide the [Advanced Color Options] pane and display the [Color Options] pane.
- **[Manage Profile]**
Click this button to display the [Color Profile Management] dialog box. From this dialog box, color profiles can be added or deleted to those available as settings for [RGB Source] and [Simulation Profile] of the [Advanced Color Options] pane.
- **[Download Manager]**
Click this button to start up the installed Download Manager.



In order to start up Download Manager from the [Advanced Color Options] pane, Download Manager must be copied into the folder at the path [Applications/Download Manager bizhub C35]. After creating the folder [Download Manager bizhub C35] in the [Applications] folder, copy Download manager into the created folder.

[Advanced Color Options]/[Text]

Printer: KONICA MINOLTA bizhub C35...

Presets: Standard

Color Options

Image **Text** Graphics Simulation

RGB Source: sRGB

RGB Intent: Vivid

RGB Gray Treatment: Black and Gray

Destination Profile: Auto

Halftone: Line Art

Edge Enhancement: On

Manage Profile

Download Manager

Hide Advanced Options

? PDF Preview Cancel Print


- **[RGB Source]**
Allows you to select RGB color profiles for text.
- **[RGB Intent]**
Allows you to select color intent for RGB text.

- [RGB Gray Treatment]
Allows you to select RGB gray treatment for text.
- [Destination Profile]
Allows you to select Destination Profile for text.
- [Halftone]
Allows you to select halftone for text.
- [Edge Enhancement]
Allows you to select Edge Enhancement for text.
- [Hide Advanced Options]
Click this button to hide the [Advanced Color Options] pane and display the [Color Options] pane.
- [Manage Profile]
Click this button to display the Color Profile Management dialog box. From this dialog box, color profiles can be added or deleted to those available as settings for [RGB Source] and [Simulation Profile] of the [Advanced Color Options] pane.
- [Download Manager]
Click this button to start up the installed Download Manager.



In order to start up Download Manager from the [Advanced Color Options] pane, Download Manager must be copied into the folder at the path [Applications/Download Manager bizhub C35]. After creating the folder [Download Manager bizhub C35] in the [Applications] folder, copy Download manager into the created folder.

[Advanced Color Options]/[Graphics]

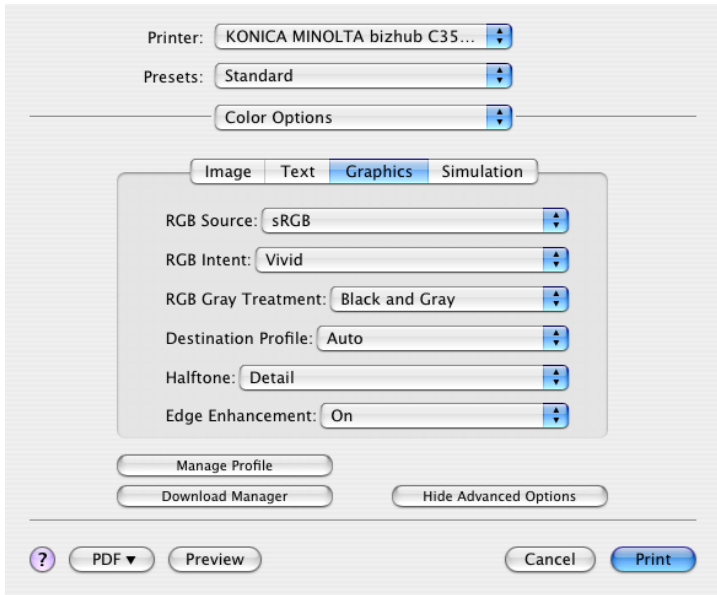

- [RGB Source]
Allows you to select RGB color profiles for graphics.
- [RGB Intent]
Allows you to select color intent for RGB graphics.
- [RGB Gray Treatment]
Allows you to select RGB gray treatment for graphics.
- [Destination Profile]
Allows you to select Destination Profile for graphics.
- [Halftone]
Allows you to select halftone for graphics.
- [Edge Enhancement]
Allows you to select Edge Enhancement for graphics.
- [Hide Advanced Options]
Click this button to hide the [Advanced Color Options] pane and display the [Color Options] pane.
- [Manage Profile]
Click this button to display the Color Profile Management dialog box. From this dialog box, color profiles can be added or deleted to those available as settings for [RGB Source] and [Simulation Profile] of the [Advanced Color Options] pane.


■ [Download Manager]

Click this button to start up the installed Download Manager.



In order to start up Download Manager from the [Advanced Color Options] pane, Download Manager must be copied into the folder at the path [Applications/Download Manager bizhub C35]. After creating the folder [Download Manager bizhub C35] in the [Applications] folder, copy Download manager into the created folder.

[Advanced Color Options]/[Simulation]

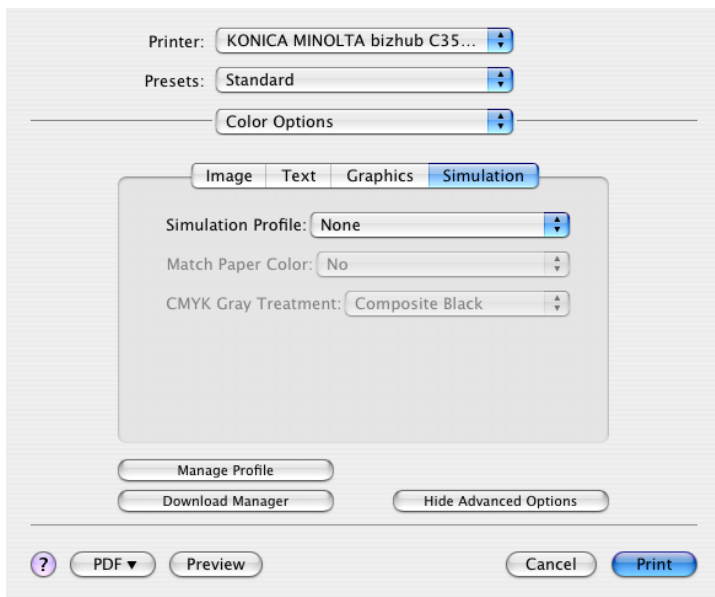

■ [Simulation Profile]

Allows you to select color profiles for simulation.

■ [Match Paper Color]

Allows you to set Match Paper Color.

■ [CMYK Gray Treatment]

Allows you to select Simulation gray treatment.

■ [Hide Advanced Options]

Click this button to hide the [Advanced Color Options] pane and display the [Color Options] pane.

■ [Manage Profile]

Click this button to display the Color Profile Management dialog box.

From this dialog box, color profiles can be added or deleted to those available as settings for [RGB Source] and [Simulation Profile] of the [Advanced Color Options] pane.


■ [Download Manager]

Click this button to start up the installed Download Manager.



In order to start up Download Manager from the [Advanced Color Options] pane, Download Manager must be copied into the folder at the path [Applications/Download Manager bizhub C35]. After creating the folder [Download Manager bizhub C35] in the [Applications] folder, copy Download manager into the created folder.

[Printer Features]

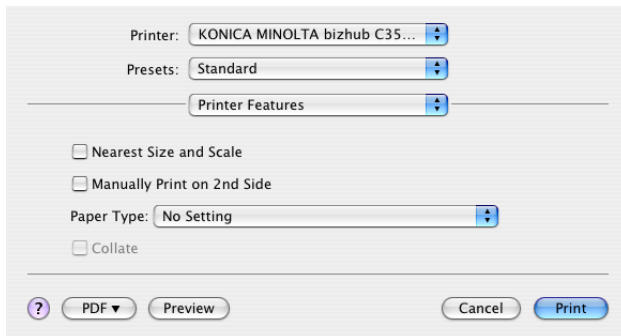

■ [Nearest Size and Scale]

If no paper tray contains paper of the specified size, the page is automatically enlarged or reduced and paper of the most appropriate size is selected.

■ [Manually Print on 2nd Side]

This feature must be set when you set paper already printed on the front side.

■ [Paper Type]


Select the desired paper type from the Paper Type pop-up menu.

■ [Collate]

Select whether or not to use the collate function.

[Supply Levels]

The [Supply Levels] section provides information for checking the amount of service life remaining on each consumable.

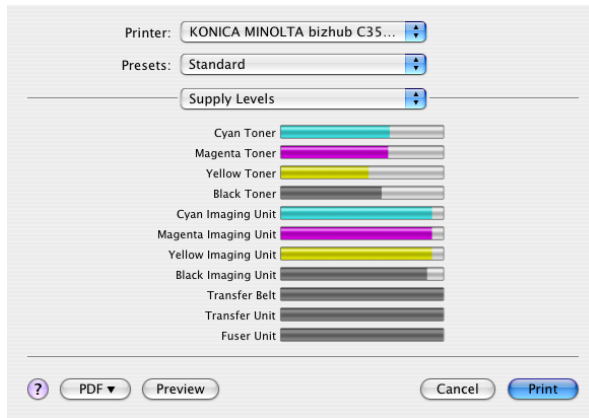


The [Supply Levels] section appears when a printer is created on Mac OS X 10.4 with a Bonjour, IPP, LPD, Socket connection.



The [Supply Levels] section may not appear depending on the application you use.

[Summary]

The [Summary] is used to check the currently selected print settings.

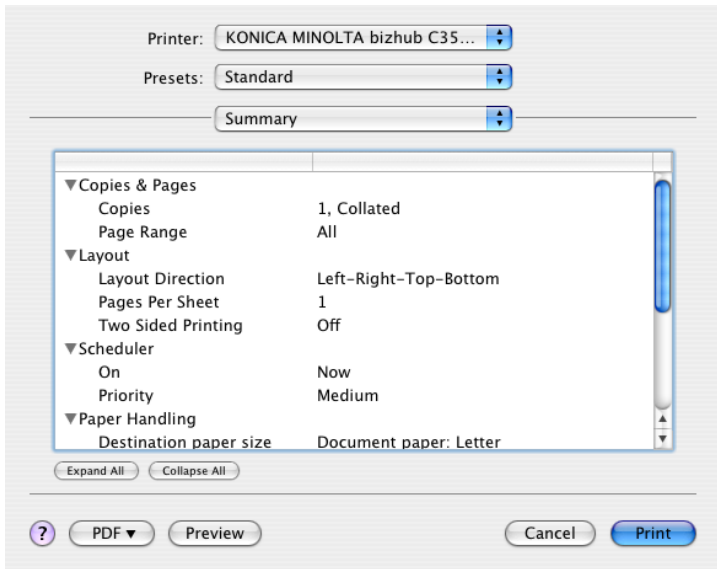

Specifying Print Settings (Mac OS X 10.5/10.6)

The following dialog box appears when [Print...] is selected from the [File] menu in the application being used.


1 Select [Print...] from the [File] menu.

The [Print] dialog box appears.

2 Select this printer in the [Printer] pop-up menu.

The Print dialog box is used to specify the following print options.

Print Dialog Box

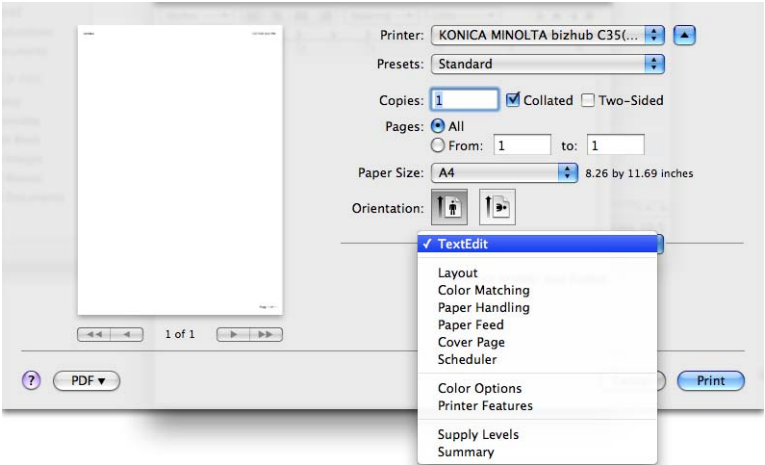

Section	Description
[Layout]	This section contains options for specifying the page layout when printing and the setting for double-sided printing.
[Color Matching]	This section contains options for specifying ColorSync settings.
[Paper Handling]	This section contains options for specifying the pages to be printed and their printing order.
[Paper Feed]	This section contains paper feed options.
[Cover Page]	This section contains options for specifying cover page settings.
[Scheduler]	This section contains options for specifying the print timing and priority of jobs.

Section	Description
[Color Options]	This section contains options for color printing.
[Printer Features]	This section contains options for specifying paper type and resolution settings.
[Supply Levels]	This section provides information for checking the amount of service life remaining on each consumable.
[Summary]	This is used to check the current settings.




No warning message will be displayed if options cannot be used together are selected.

Common buttons

- [?] (Help button)
This displays help information about the Print dialog box.
- [PDF]
Click this button to select the PDF menu. The print output can be saved as a PDF file or faxed.
- [Cancel]
Click this button to close the Print dialog box without applying any of the settings.
- [Print]
Click this button to print using the selected print options.
- [Copies]
This specifies the number of copies to be printed. If the [Collated] checkbox is selected, all pages in the documents are printed as sets of printouts. For example, if 5 is entered for [Copies] and [Collated] is selected, the document is printed five times from the first page to the last page. If [Two-Sided] checkbox is selected, the document is printed on both sides of the paper.
- [Pages]
[All]: Prints all pages in the document.
[From], [to]: Specifies the range of pages to be printed.
- [Paper Size]
Select the desired paper size from the [Paper Size] pop-up menu.
- [Orientation]
Select either a vertical or horizontal page orientation for printouts.

[Layout]

The [Layout] section is used to specify the page layout when printing and the setting for double-sided printing.

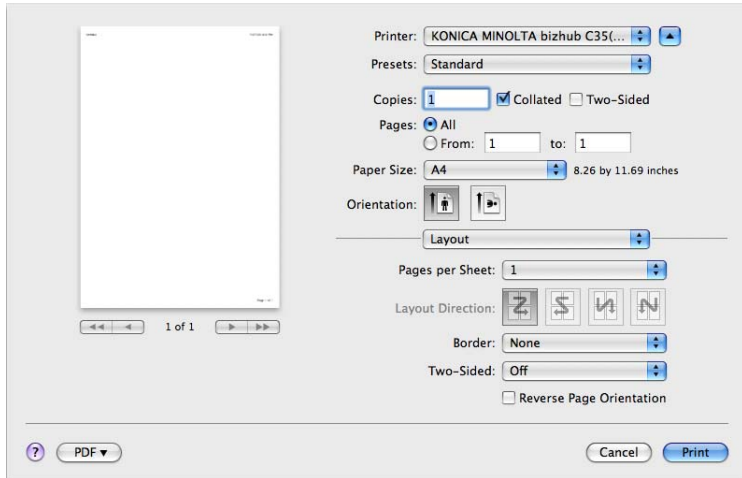

■ [Pages per Sheet]

Specifies the number of pages to be printed on one sheet of paper. For example, if [2] is selected, two pages are printed on one sheet of paper.

■ [Layout Direction]

If you are printing more than one page per sheet, this specifies the direction and order the pages should be arranged on each sheet of paper.

■ [Border]

This prints a border around the image for each of the pages printed on one sheet of paper when more than one page is printed on one sheet of paper.

■ [Two-Sided]

Select the desired setting for double-sided printing.

[Off]: Double-sided printing is not performed.

[Long-edge binding]: Double-sided printing is performed with the binding along the long edge of the paper.


[Short-edge binding]: Double-sided printing is performed with the binding along the short edge of the paper.

■ [Reverse Page Orientation]

The printing direction is inverted vertically.

- [Flip horizontally] (OS X 10.6 only)
Select whether or not to print the page flipped horizontally.


[Color Matching]

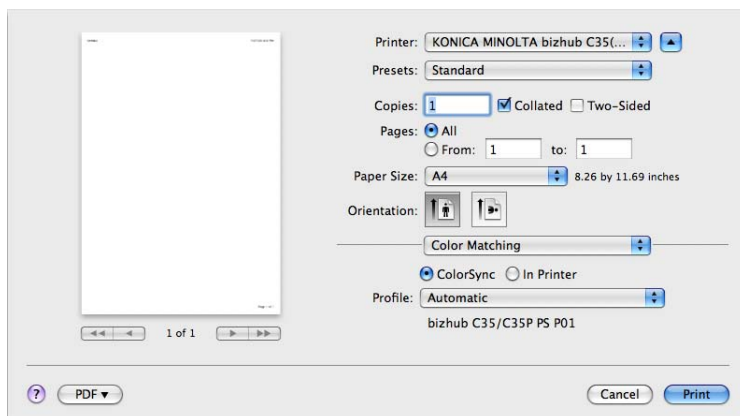

- [Color Matching]
[ColorSync]: Allows you to select host-based color matching.
[In Printer]: Allows you to select printer-based color matching.
- [Profile]
Allows you to select ColorSync Profile.

[Paper Handling]

The [Paper Handling] section is used to specify the pages that are to be printed and the order in which the pages are printed.

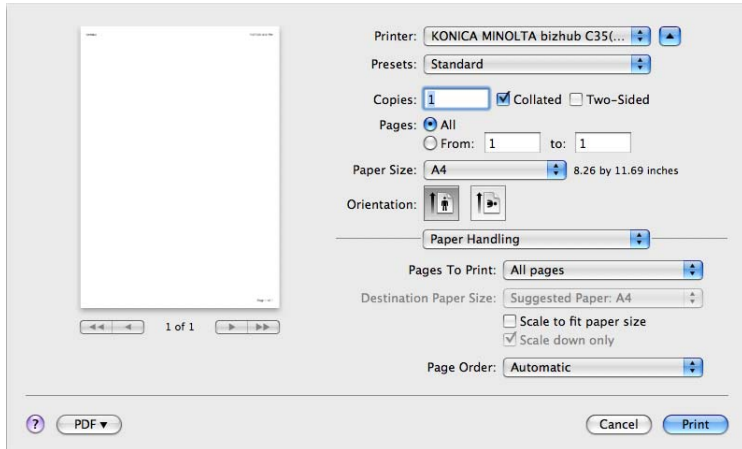

■ [Pages To Print]

[All pages]: Select this option to print all pages.

[Odd Only]: Select this option to print only the pages with odd page numbers.

[Even Only]: Select this option to print only the pages with even page numbers.

■ [Destination Paper Size]

Select this option to use the document size as created by software applications.

[Scale to fit paper size]: Select this option to fit the document size to the size of paper used by the printer.

Specify the size of paper used by the printer.

[Scale down only]: Select this option to reduce the printing size.

■ [Page Order]


[Automatic]: Select this option to print in the original page order of the document.

[Normal]: Select this option to print in the normal page order.

[Reverse]: Select this option to print in the reverse page order.

[Paper Feed]

The [Paper Feed] section is used to specify the paper feed setting.

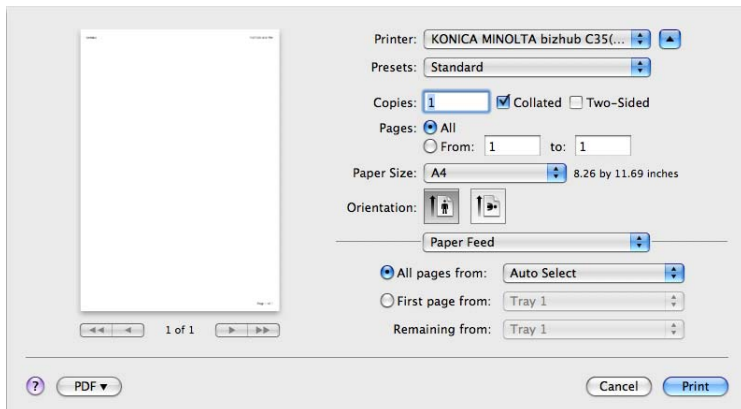

■ [All pages from]

All pages in the document are printed using the paper in the specified paper tray.

■ [First page from]

The first page of the document is printed on paper from a paper tray different from the tray used to print the rest of the document.


■ [Remaining from]

The rest of the document is printed from the specified paper tray when the first page is to be printed on paper from a different tray.



If an optional tray is installed, select an [Paper Source Unit] under [Installable Options] (p. 1-61).


[Cover Page]

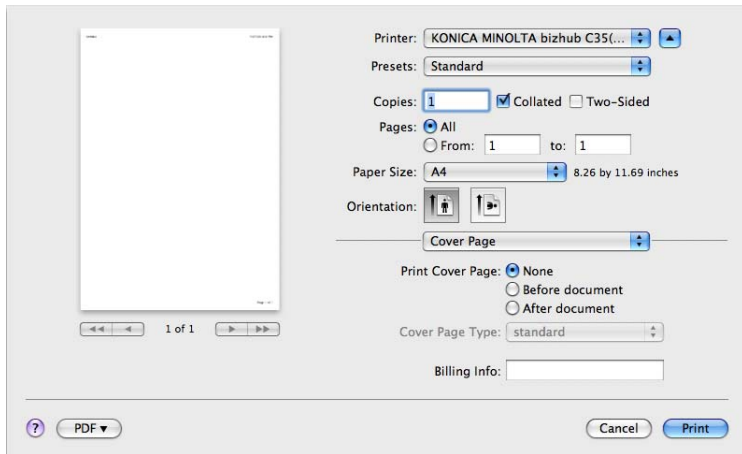

- [Print Cover Page]
Allows you to set cover page before or after document.
- [Cover Page Type]
Allows you to select cover page type.
- [Billing Info]
Allows you to set billing information printed on cover page.

[Scheduler]

The [Scheduler] section is used to specify the timing and priority for printing jobs.

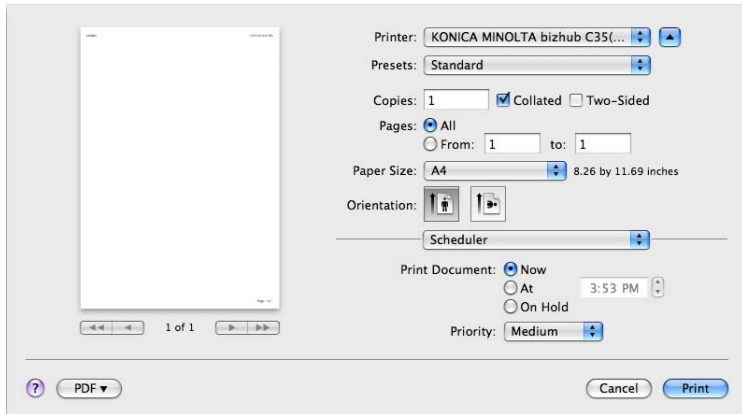

■ [Print Document]

[Now]: Select this option to begin printing immediately.


[At]: Specify the time to begin printing.

[On Hold]: Select this option to hold the print job.

■ [Priority]

Select the priority for printing jobs that are being held.

[Color Options]

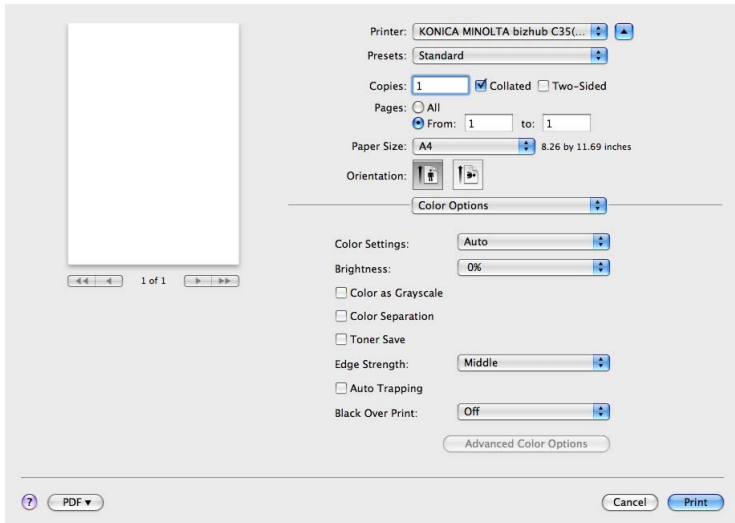

- [Color Settings]
Allows you to select a color preset.
- [Brightness]
Allows you to set Brightness.
- [Color as Grayscale]
Allows you to set Grayscale color.
- [Color Separation]
Allows you to set Color Separation.
- [Toner Save]
Allows you to set Toner Save mode.
- [Edge Strength]
Allows you to select Edge Strength.
- [Auto Trapping]
Allows you to select whether or not neighboring colors are printed super-imposed in order to prevent white space around images.

- [Black Over Print]

Allows you to specify whether black objects are printed (superimposed) on a neighboring color in order to prevent white space around black characters or figures.

If [Text/Figure] is selected, superimposed printing is applied to text and graphics.

If [Text] is selected, superimposed printing is applied to text.


- [Advanced Color Options]

Click this button to display the [Advanced Color Options] pane.



This button enables when [Custom] is selected under [Quick Color].

[Advanced Color Options]/[Image]

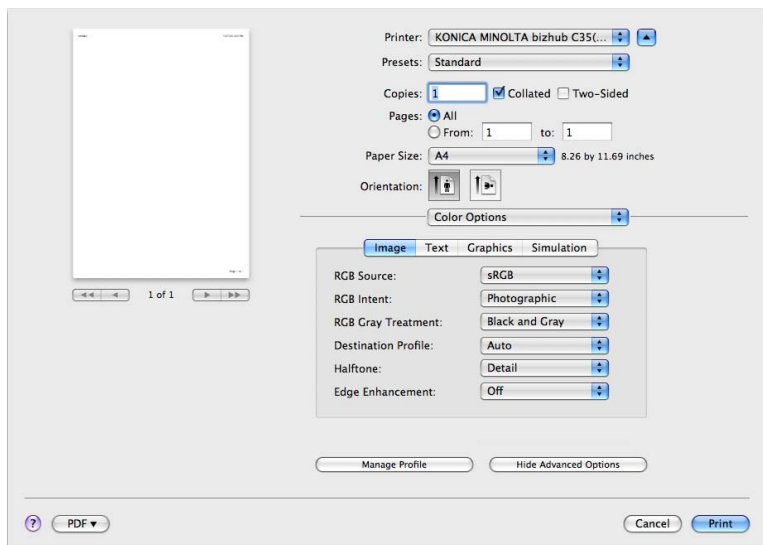

- [RGB Source]

Allows you to select RGB color profiles for images.

- [RGB Intent]

Allows you to select color intent for RGB images.

- [RGB Gray Treatment]

Allows you to select RGB gray treatment for images.

- [Destination Profile]


Allows you to select Destination Profile for images.

- [Halftone]

Allows you to select halftone for images.

- [Edge Enhancement]
Allows you to select Edge Enhancement for images.
- [Hide Advanced Options]
Click this button to hide the [Advanced Color Options] pane and display the [Color Options] pane.
- [Manage Profile]
Click this button to display the [Color Profile Management] dialog box. From this dialog box, color profiles can be added or deleted to those available as settings for [RGB Source] and [Simulation Profile] of the [Advanced Color Options] pane.


[Advanced Color Options]/[Text]

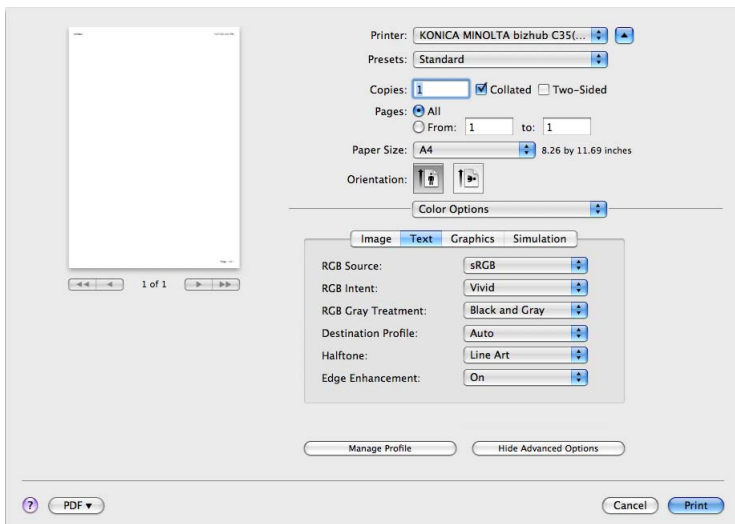

- [RGB Source]
Allows you to select RGB color profiles for text.
- [RGB Intent]
Allows you to select color intent for RGB text.
- [RGB Gray Treatment]
Allows you to select RGB gray treatment for text.
- [Destination Profile]
Allows you to select Destination Profile for text.
- [Halftone]
Allows you to select halftone for text.


- [Edge Enhancement]
Allows you to select Edge Enhancement for text.
- [Hide Advanced Options]
Click this button to hide the [Advanced Color Options] pane and display the [Color Options] pane.
- [Manage Profile]
Click this button to display the [Color Profile Management] dialog box. From this dialog box, color profiles can be added or deleted to those available as settings for [RGB Source] and [Simulation Profile] of the [Advanced Color Options] pane.

[Advanced Color Options]/[Graphics]

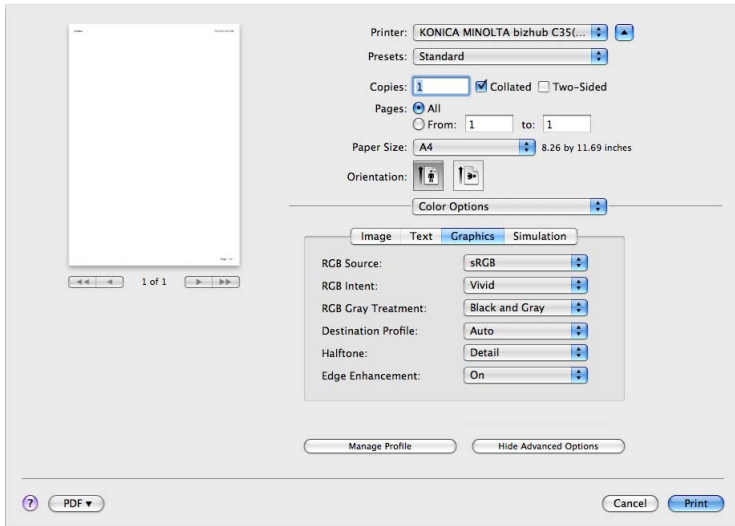


- [RGB Source]
Allows you to select RGB color profiles for graphics.
- [RGB Intent]
Allows you to select color intent for RGB graphics.
- [RGB Gray Treatment]
Allows you to select RGB gray treatment for graphics.
- [Destination Profile]
Allows you to select Destination Profile for graphics.
- [Halftone]
Allows you to select halftone for graphics.
- [Edge Enhancement]
Allows you to select Edge Enhancement for graphics.
- [Hide Advanced Options]
Click this button to hide the [Advanced Color Options] pane and display the [Color Options] pane.
- [Manage Profile]
Click this button to display the [Color Profile Management] dialog box. From this dialog box, color profiles can be added or deleted to those available as settings for [RGB Source] and [Simulation Profile] of the [Advanced Color Options] pane.

[Advanced Color Options]/[Simulation]

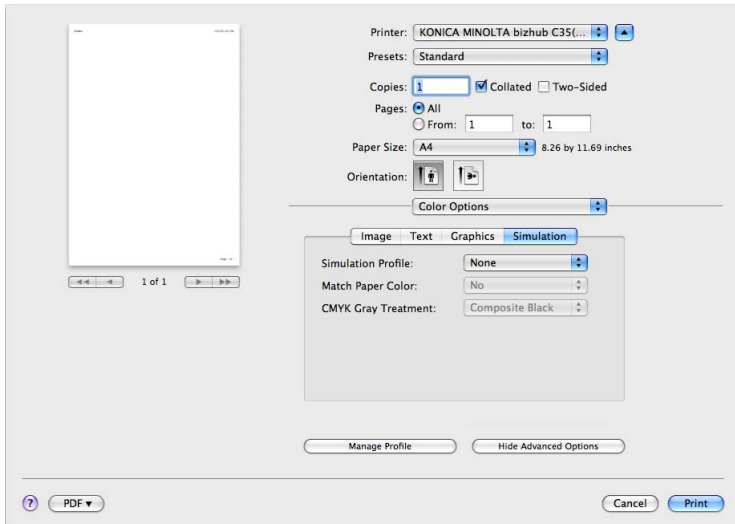

- **[Simulation Profiles]**
Allows you to select color profiles for simulation.
- **[Match Paper Color]**
Allows you to set Match Paper Color.
- **[CMYK Gray Treatment]**
Allows you to select Simulation gray treatment.
- **[Hide Advanced Options]**
Click this button to hide the [Advanced Color Options] pane and display the [Color Options] pane.
- **[Manage Profile]**
Click this button to display the [Color Profile Management] dialog box. From this dialog box, color profiles can be added or deleted to those available as settings for [RGB Source] and [Simulation Profile] of the [Advanced Color Options] pane.

[Printer Features]

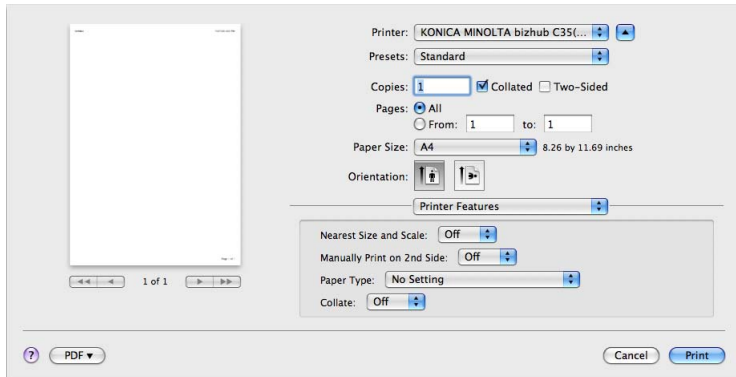

■ [Nearest Size and Scale]

If no paper tray contains paper of the specified size, the page is automatically enlarged or reduced and paper of the most appropriate size is selected.

■ [Manually Print on 2nd Side]

This feature must be set when you set paper already printed on the front side.


■ [Paper Type]

Select the desired paper type from the [Paper Type] pop-up menu.

■ [Collate]

Select whether or not to use the collate function.

[Supply Levels]

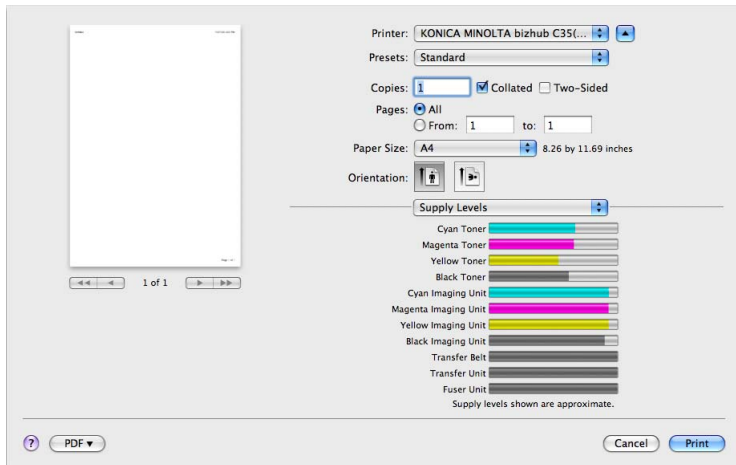

The [Supply Levels] section provides information for checking the amount of service life remaining on each consumable.




The [Supply Levels] section appears when a printer is created on Mac OS X 10.5/10.6 with a Bonjour, IPP, LPD, Socket connection.



The [Supply Levels] section may not appear depending on the application you use.

[Summary]

The [Summary] is used to check the currently selected print settings.

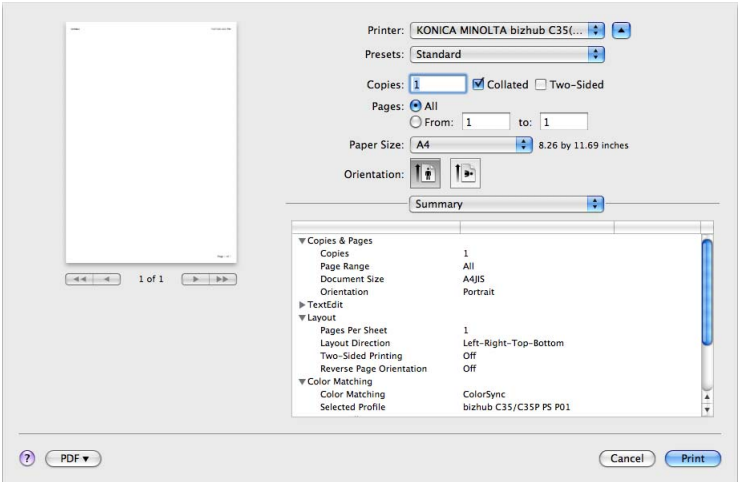

Specifying the Color Profile

Use Download Manager to download any color profile to the hard disk of the machine. By adding color profiles to the printer driver, printing can be performed by specifying any color profile.



The procedure for specifying the color profile on Mac OS X 10.5 is described below.

Preparation

Install the printer driver, and then add the printer. For details on adding the printer, refer to “Printer Settings (Mac OS X 10.5/10.6)” on page 1-46.

Install the Download Manager.



In order to start up Download Manager from the [Advanced Color Options] pane, Download Manager must be copied into the folder at the path [Applications/Download Manager bizhub C35]. After creating the folder [Download Manager bizhub C35] in the [Applications] folder, copy Download manager into the created folder.

Downloading Color Profiles


Use Download Manager to download any color profile to the hard disk of the machine.




For details on using Download Manager, refer to the Help for Download Manager.

- 1 Start Download Manager.

- 2 In the Download Manager window, select [Color Profile]. Then, from the [Choose Printer] list, select the printer where the color profile is to be saved.

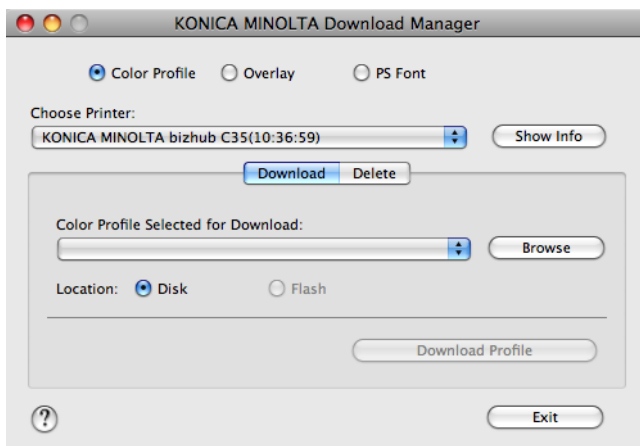


- 3 Click [Download], and then select [Disk] beside [Location].

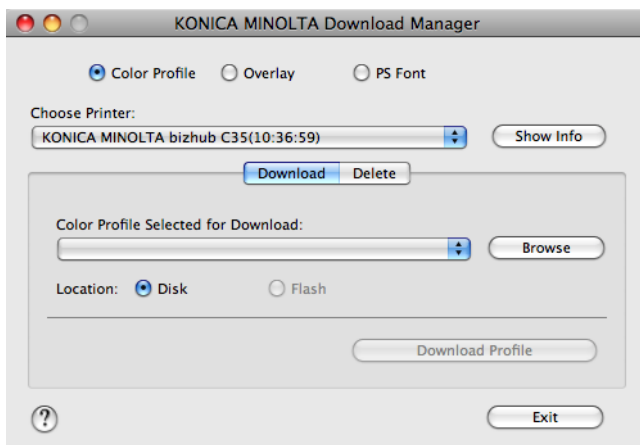


- 4 Click [Browse], and then select the color profile to be downloaded.



File names for color profiles should be in the following format: 8 or less ASCII characters + 3 or less ASCII extension characters.

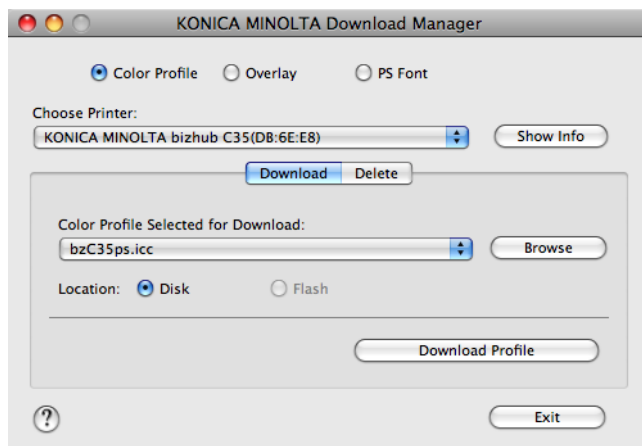

- 5 Click [Download Profile].
Downloading of the color profile to the hard disk of the machine.
- 6 Click [OK].

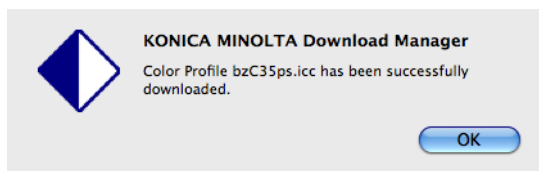

- 7 Click [Exit].




Next, specify the printer driver settings.

Specifying Printer Driver Settings


Add the color profile to the printer driver.

- 1 Display the Print dialog box for the application.


2 Select [Color Options].

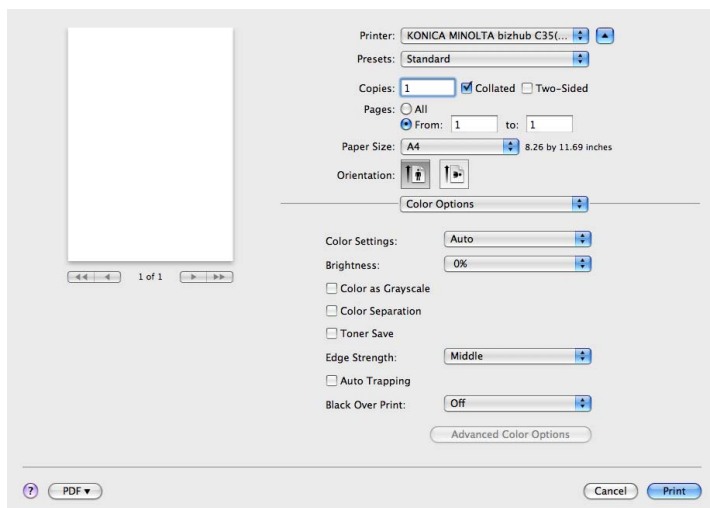


3 Select [Custom] beside [Color Settings], and then click [Advanced Color Options].

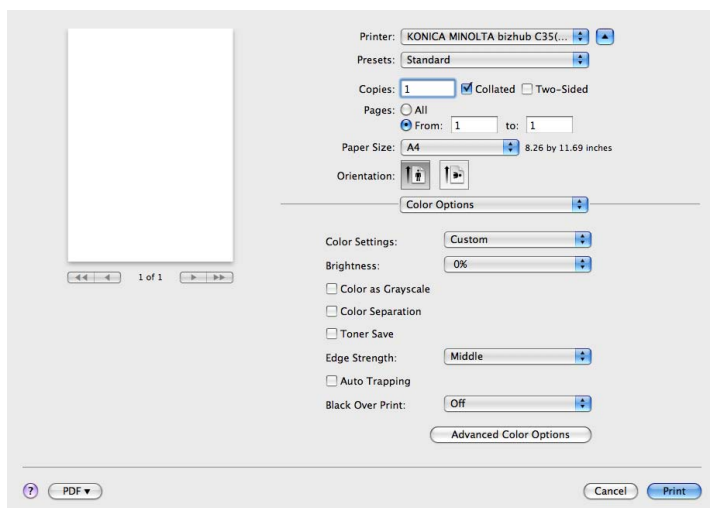


4 Click [Manage Profile].

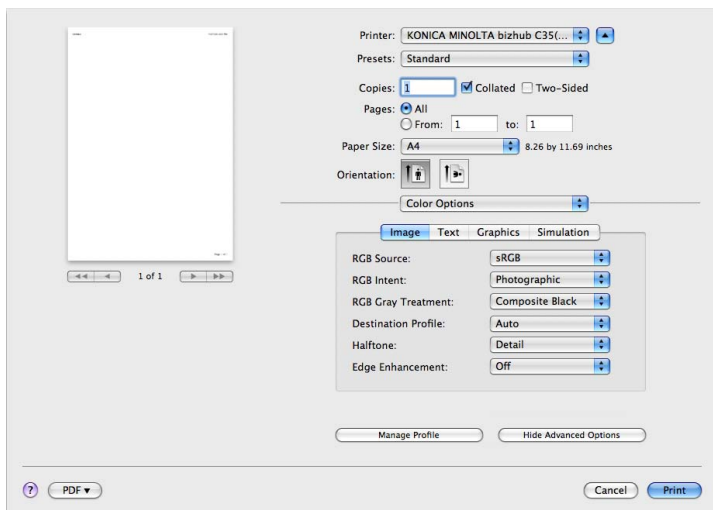


5 From [Driver Profile List], select the type of profile to use.

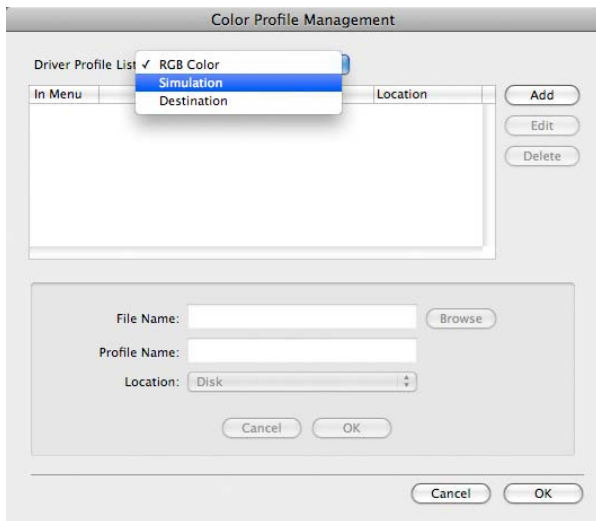


- 6 Select the color profile to use from the list, and then click [Add].

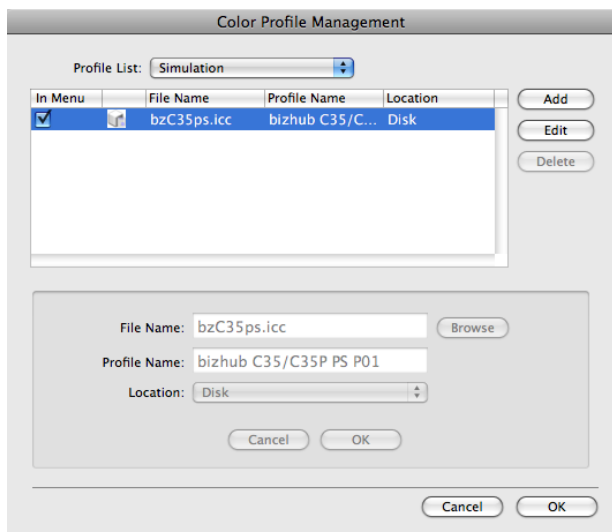


- 7 Click [OK].

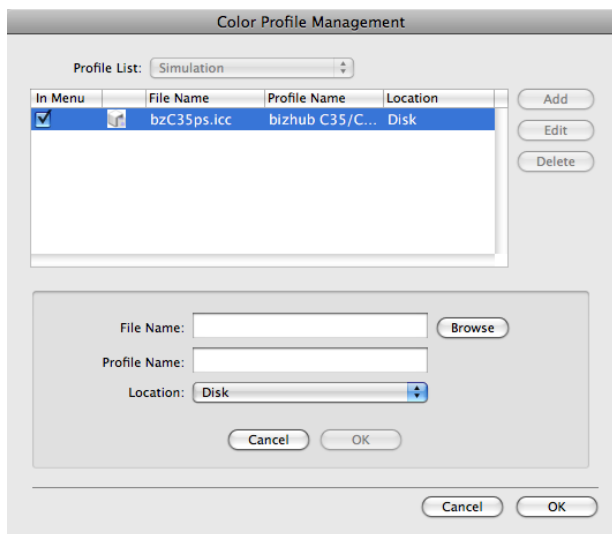

8 Select [Simulation].

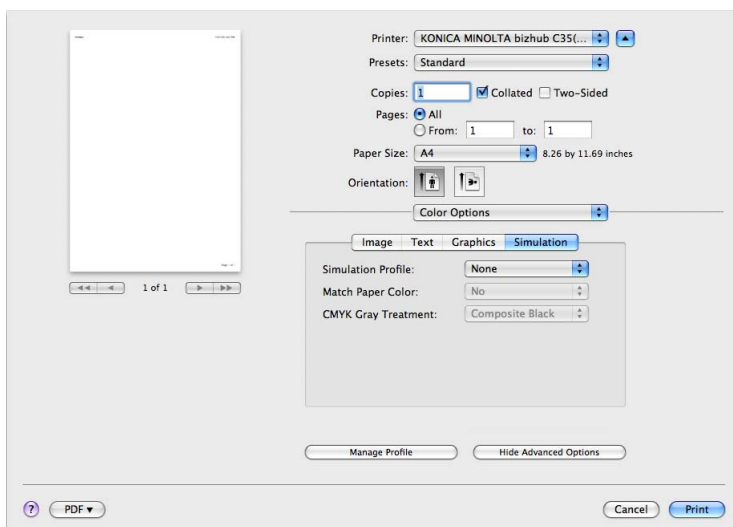

9 Select the added color profile before printing.

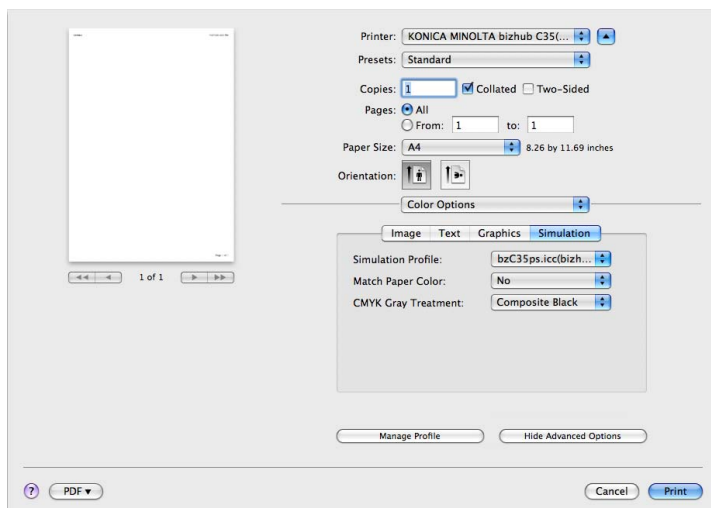

System Requirements for the Scanner Driver

Before installing the scanner driver, make sure that your system meets the following system requirements.

Computer	Apple Macintosh computer installed with the following processor: <ul style="list-style-type: none">— PowerPC G3 or later processor (PowerPC G4 or later is recommended)— Intel processor
Connecting the computer and machine	Network connection (10Base-T/100Base-TX/1000Base-T)
Operating system	Mac OS X (10.3.9/10.4/10.5/10.6)
RAM	128 MB or more
Available disk space	256 MB or more (for storing images)
Supported languages	English, French, German, Italian, Spanish, Czech, Portuguese, Russian, Polish, Dutch, Korean, Simplified Chinese, Traditional Chinese

Installing the Scanner Driver



You must have administrator privileges in order to install the scanner driver.



Before proceeding with the installation, be sure to exit all running applications.



In the following text, “TWAIN driver” may be used to indicate the scanner driver.

Installing the Scanner Driver



The procedure for installing the scanner driver on Mac OS X 10.5 is described below. The following procedure or some steps may be different depending on the version of the operating system being used. Complete the installation according to the instructions in the dialog boxes that appear.

- 1 Insert the Drivers CD/DVD in the CD/DVD-ROM drive of your Macintosh.
- 2 Double-click the CD icon on the desktop, [Drivers] folder, [Mac] folder, [Scanner] folder, and then double-click the [KONICA MINOLTA bizhub C35 Scanner.pkg].
The installer for the scanner driver starts up.
- 3 Click [Continue].




This package contains a program that determines if the software can be installed. Are you sure you want to continue?

If you're not sure about the source of this package, click Cancel to prevent it from running the program and installing the software.


Cancel

Continue


4 Click [Continue].

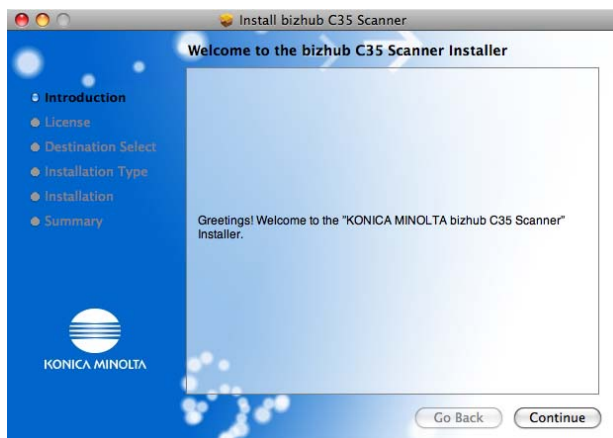


5 Check [Continue].

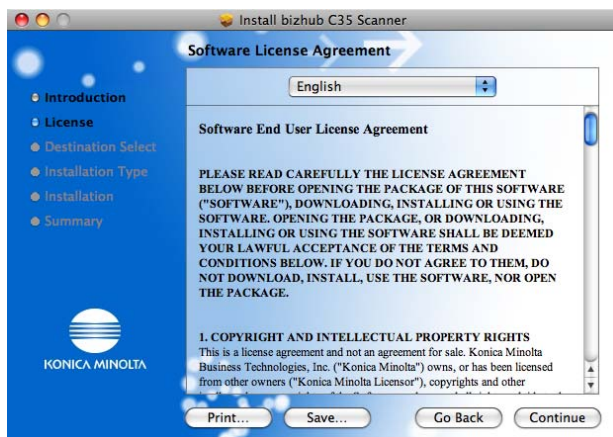

6 Click [Agree] in the confirmation dialog box if you agree to the terms of the license.

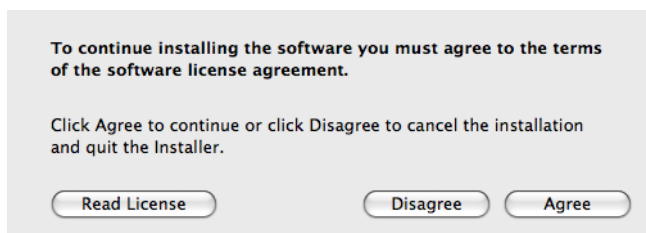

- 7 Click [Install] in the [Standard Install] page.

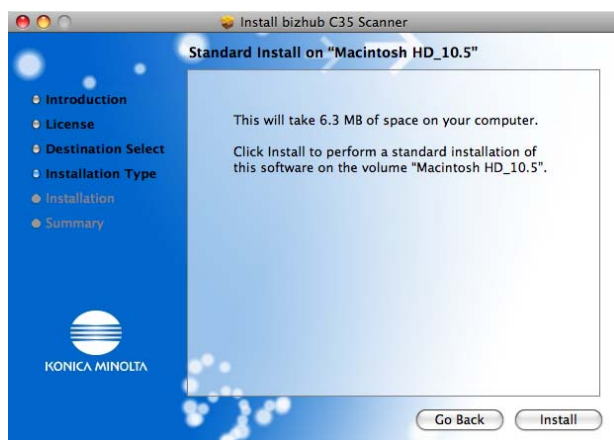


- 8 Enter the administrator user name and password in the Authenticate dialog box, and then click [OK].



Installation starts.


9 After the installation has been completed, click [Close].

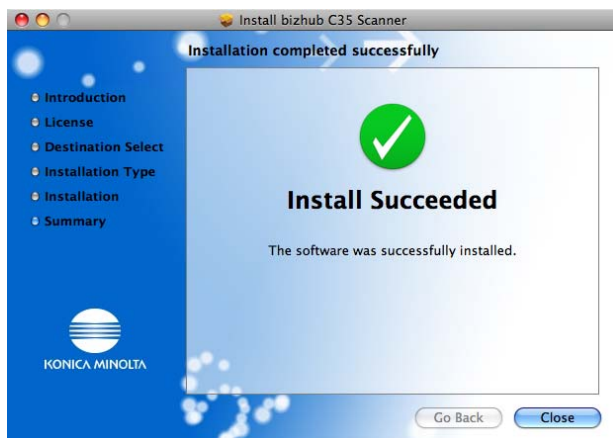

This completes the installation of the scanner driver.

Uninstalling the Scanner Driver


- 1 Double-click [KONICA MINOLTA bizhub C35 Uninstaller.app], which can be accessed by clicking [Library], then [Application Support], [KONICA MINOLTA], then [bizhub C35].
- 2 Click [Uninstallation].

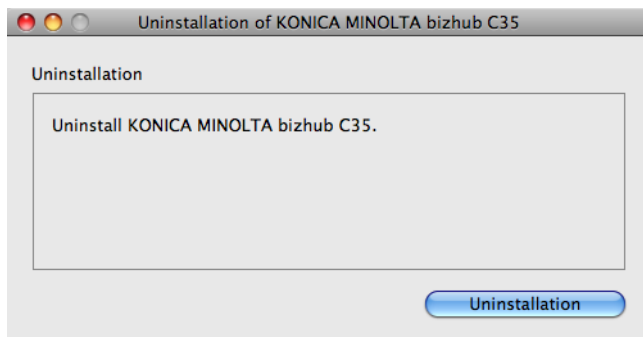

- 3 Click [OK].




- 4 Enter the administrator user name and password, and then click [OK].

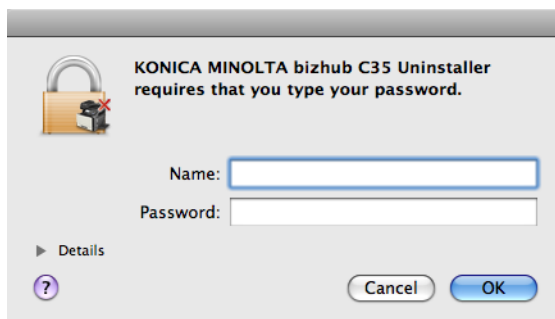

Uninstallation begins.

5 Click [OK].

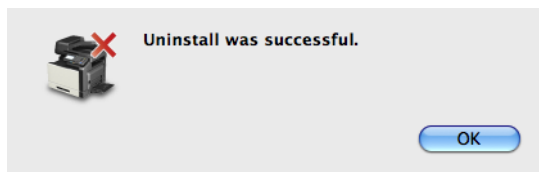

This completes the uninstallation of the scanner driver.

Scanning From a Computer Application


Documents can be scanned from a computer connected to this machine via a network. Scanning settings can be specified and the scanning operation can be performed from TWAIN-compatible applications. From the scanner driver, a preview can be displayed and various adjustments, such as the size of the scan area can be specified.

Basic Scanning Operation

- 1 Place the document to be scanned in the ADF or on the original glass.
- 2 Start the application to be used for scanning.
- 3 Start the scanner driver according to the application settings.
- 4 The following screen appears, and then click [Setting].



- 5 Select this printer in the [Select IP address from connected devices] list, and then click [OK].

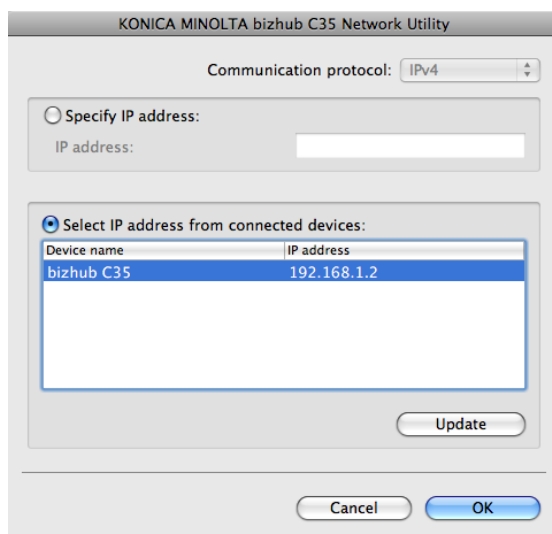

If this printer does not appear in the list, click [Update]. Otherwise, select [Specify IP address], and then enter the IP address of this machine in the [IP address] box.

- 6 Specify the necessary scanner driver settings.



For details on scanner driver setting, refer to the Printer/Copier/Scanner User's Guide or click [Help] icon in the screen.

- 7 Click the [Scan] button in the scanner driver.

Troubleshooting

Symptom	Solution
The setting in the saved presets are not applied.	Depending on the functions selected for the printer, some preset settings are not saved.
Media type error appears.	If a media type, such as "Thick paper", is specified for Tray 3 or Tray 4, a media type error appears and the printer stops. Be sure to specify a media type supported by Tray 3 or Tray 4.
The printer stops responding.	Depending on the operating system, some paper size and paper type combinations are not permitted. If the job was sent with an incorrect combination of settings, the printer stops responding. Be sure to print with the correct combination of paper size and paper type settings.
The printer is not detected using Rendezvous/Bonjour.	Using PageScope Web Connection, select the [Enable] on the [Bonjour Settings] page. For details, refer to "[Bonjour Settings]" on page 8-225.
Checking the version number of the printer driver and PPD file.	<ul style="list-style-type: none"> ■ For Mac OS X 10.4: Select the printer from Printer Setup Utility, and then click [Show Info] in the [Printers] menu. In the pop-up menu of the Printer Info dialog box, select [Name & Location]. ■ For Mac OS X 10.5/10.6: Select the printer from [Print & Fax], and then click [Options & Supplies]. Click [General] tab.
The dialog box may appear unusual when selecting other manufacturer printer and back to bizhub.	Close the Print dialog box, and then open it again.
The custom paper size is different from the size that was set.	Depending on the operating system, the custom paper size settings may change slightly due to OS round of errors in unit conversion (for example, 5.80" may change to 5.79").

Symptom	Solution
When printing 2 pages on a single sheet of paper, the pages are not centered on the paper.	Depending on the operating system, the pages are not centered on the paper when printing two pages on a single sheet of paper with the following paper sizes. Legal, Letter Plus, Foolscap, Government Legal, Statement, Folio
While printing from Acrobat Reader, the pages are not correctly collated or the print job is cancelled.	If a printing error occurs with Acrobat Reader, print using the preview feature provided by the operating system.
When Mac OS X 10.4 is used to send a job with a custom paper size that has a width of 21.6 cm, Letter-size paper is requested.	Change the width of the custom paper size to 21.59 cm, and then try sending the job again.

Operation on Linux 2

System Requirements for the Printer Driver

Before installing the printer driver, make sure that your system meets the following system requirements.

Operating systems	Red Hat Enterprise Linux 5 Desktop SUSE Linux Enterprise Desktop 10
Connecting the computer and printer	USB connection, Network connection (10Base-T/100Base-TX/1000Base-T)
RAM	More than OS recommendation (128 MB or more is recommended)
Network	LPR
	AppSocket/HP JetDirect
	IPP
Available hard disk space	256 MB or more



As an example, the descriptions of the operations for Red Hat Enterprise Linux 5 are provided in this chapter.

Installing PPD File From the Command Line



Before proceeding with the installation, be sure to exit all running applications.



Root privileges are required in order to install ppd file.


- 1 Copy the ppd file from the Drivers CD/DVD to the “/usr/share/cups/model” on the computer.



A ppd file for each language is available in the corresponding “Drivers/LinuxPPD/<language>” folder on the CD/DVD. Use the appropriate ppd file for the language.

- 2 From the Main Menu, select [Applications], then [Accessories], then [Terminal].

- 3 Enter the command “/etc/init.d/cups restart”.

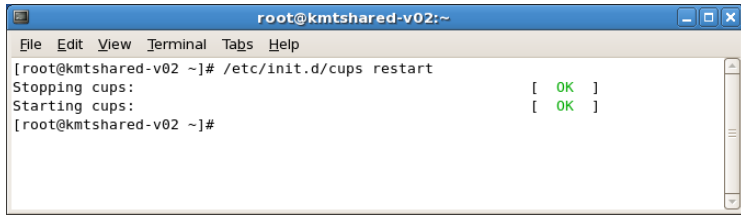

```
root@kmtshared-v02:~  
File Edit View Terminal Tabs Help  
[root@kmtshared-v02 ~]# /etc/init.d/cups restart  
Stopping cups: [ OK ]  
Starting cups: [ OK ]  
[root@kmtshared-v02 ~]#
```

- 4 Quit Terminal.

Adding the Printer Using Printer configuration




Before proceeding with the installation, be sure to exit all running applications.



Root privileges are required in order to add the printer.


- 1 Connect the machine to a computer or the network.

- With a USB connection, the following dialog box appears. Click [Cancel] to close the dialog box.

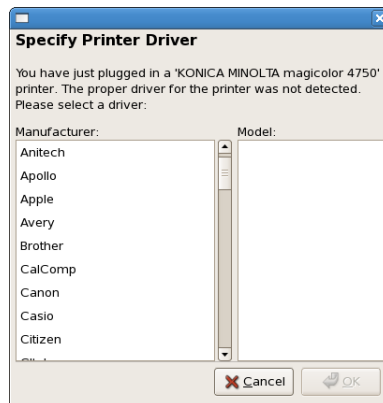


- 2 Insert the Drivers CD/DVD in the CD/DVD drive of your computer.


- 3 From the [System] menu, select [Administration], then [Printing].
The [Printer configuration] dialog box appears.

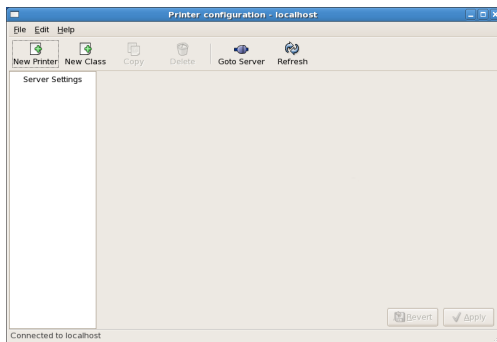

- 4 Click [New Printer].
The [New Printer] dialog box appears.
- 5 Enter the [Printer name], [Description], and [Location], and then click [Forward].

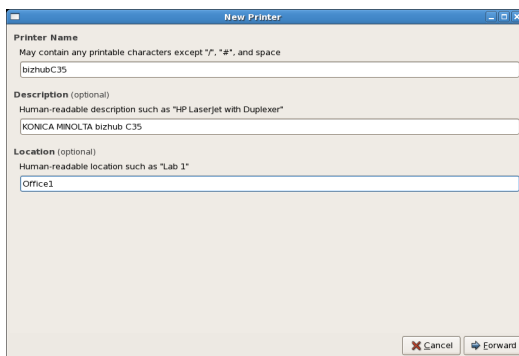

The printers that can be used are automatically searched for and listed in the left pane of the dialog box.

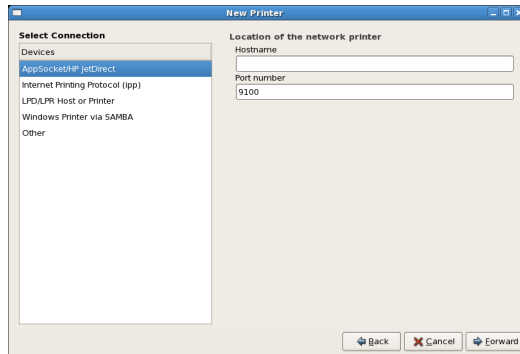

6 From the left pane of the dialog box, select the port for the machine to be installed.

- For a USB connection, select [KONICA MINOLTA bizhub C35 USB #1].

- For a machine connected to the network, select [KONICA MINOLTA bizhub C35] <IP address>.

- If the desired machine is not listed, select a device port from the [Devices] list. In the right pane of the dialog box, type in the host name or IP address for the machine.




- TCP/IP: [AppSocket/HP jetDirect, Internet Printing Protocol (ipp)] or [LPD/LPR Host or Printer]


- Host name of Internet Printing Protocol (ipp): <IP address>/ipp

7 Click [Forward].

8 Select [Provide PPD file].

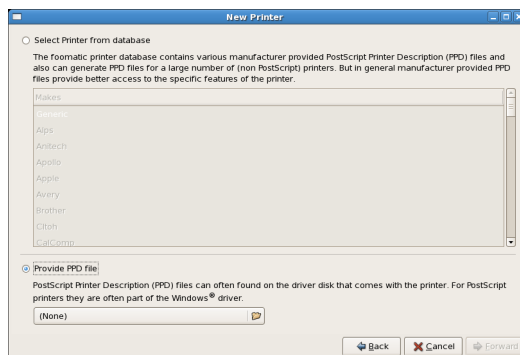


- 9 Click the folder icon.
The [Select A File] dialog box appears.
- 10 Select the PPD file.

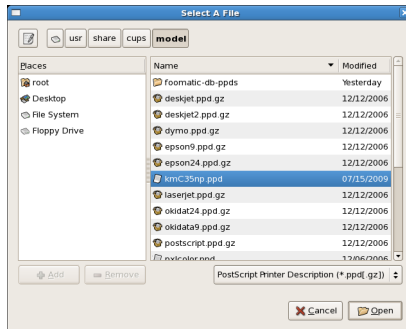


A ppd file for each language is available in the corresponding "Drivers/LinuxPPD/<language>" folder on the CD/DVD. Use the appropriate ppd file for the language.

- 11 Click [Open].


The [Select A File] dialog box is closed, and the name of the selected PPD file is displayed.

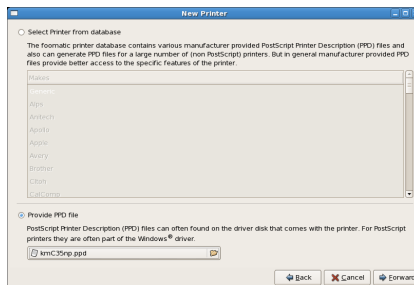

- 12 Click [Forward].
A confirmation message appears.

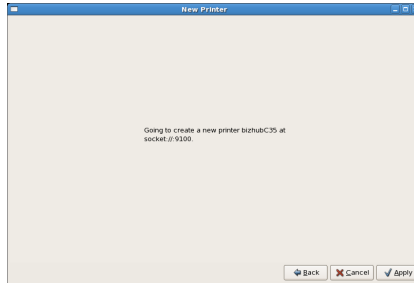

- 13 Click [Apply].
The following dialog box appears.

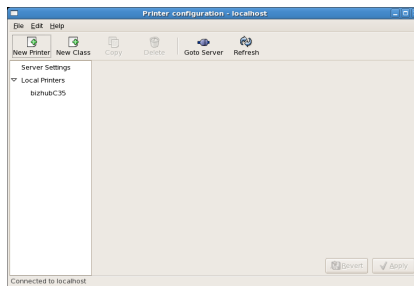

Adding the Printer on the CUPS Administration Web page




Before proceeding with the installation, be sure to exit all running applications.




Root privileges are required in order to add the printer.

- 1 Connect the machine to a computer or the network.
- With a USB connection, the following dialog box appears. Click [Cancel] to close the dialog box.

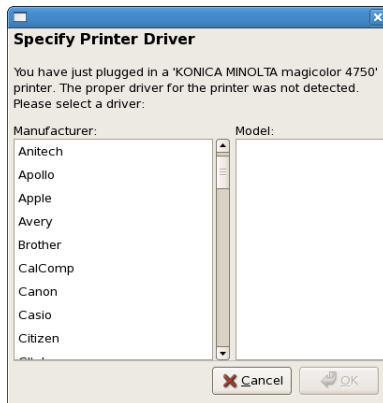


- 2 Start up the Web browser.
- 3 Enter the URL "http://localhost:631".
The CUPS Administration Web page appears.

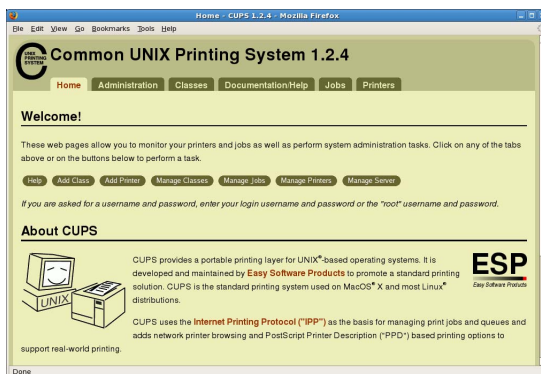

- 4 Click [Add Printer].


5 Enter the [Printer name], [Location], and [Description], and then click [Continue].

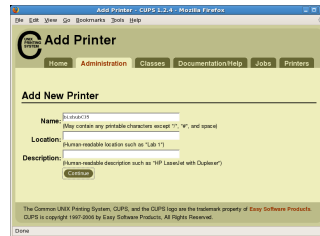

6 Select a Device Port from the [Device] list, then click [Continue].

- TCP/IP: [AppSocket/HP JetDirect], [Internet Printing Protocol (http)] or [LPD/LPR Host or Printer]

- USB: [USB Printer #1]

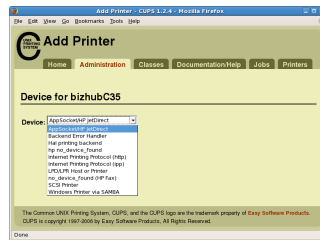


7 For a USB connection, skip to step 9. Enter the device URI in the following form: socket://<Printer IP or Printer Hostname>[:port]



Example:

Using Printer IP - socket://192.168.1.190:9100

Using printer Hostname - socket://Hostname:9100
Hostname may be substituted by IP Address, and Port is optional.

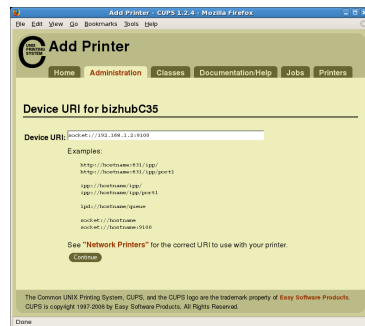


8 Click [Continue].


9 Select [KONICA MINOLTA], click [Continue].




A *ppd* file for each language is available in the corresponding "Drivers/LinuxPPD/<language>" folder on the CD/DVD. Use the appropriate *ppd* file for the language.

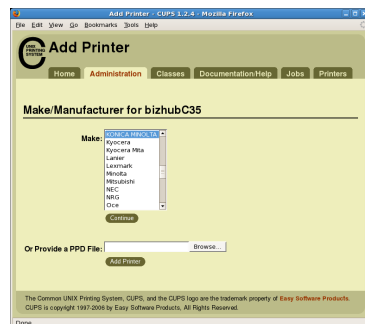


- 10 Select [KONICA MINOLTA bizhub C35 (en)], then click [Add Printer].

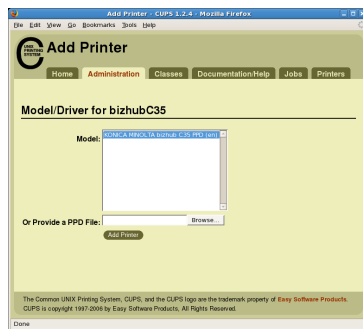

A pop-up window appears.

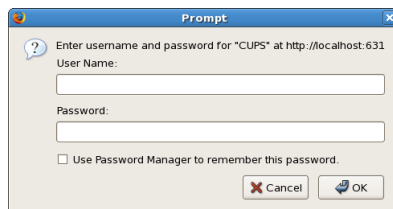

- 11 Enter the user name and password for using root privileges, and then click [OK]. The following message appears.

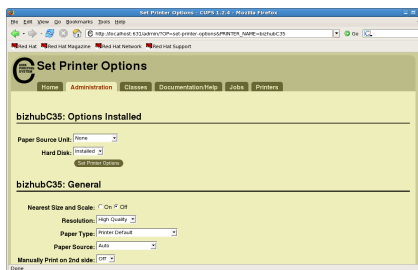


Specifying Printer Driver Settings

Displaying the Settings Page

- 1 Start up the Web browser.
- 2 Enter the URL “http://localhost:631”, and then click [Manage Printers].
The following window appears.



- 3 Click [Set Printer Options].
The printer driver settings page appears.

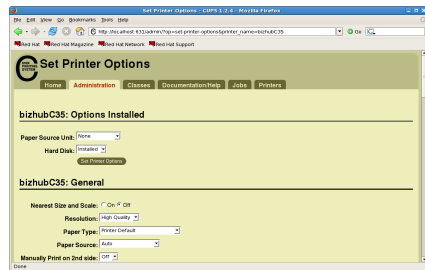

Printer Driver Settings

Options Installed

Parameters	Settings
[Paper Source Unit]	Select [Unit 3 + Unit 4], [Unit 4] if an optional lower feeder unit for the printer has been installed. ■ The default setting is [Disabled].
[Hard Disk]	Select [None], or [Installed] for the storage unit that is installed. ■ The default setting is [Installed].

General

Parameters	Settings
[Nearest Size and Scale]	If no paper tray contains paper of the specified size, the page is automatically enlarged or reduced and paper of the most appropriate size is selected. ■ The default setting is [Off].
[Resolution]	Displays the image resolution (High Quality) for printing.
[Paper Type]	Specifies the paper type as [Printer Default], [Plain Paper], [Recycled], [Glossy], [Glossy 2], [Label], [Thick 1 (91 - 150g/m2)], [Thick 2 (151 - 210g/m2)], [Letterhead], [Envelope], [Postcard], [Single Side Only (60 - 90g/m2)], or [Special Paper (60 - 90g/m2)]. ■ The default setting is [Printer Default].
[Paper Source]	Specifies the paper source as [Tray 1], [Tray 2], [Tray 3], [Tray 4], [Tray 1 (Manual Feed)], or [Auto]. ■ The default setting is [Auto].
[Manually Print on 2nd side]	Select whether or not to print on the back side of paper that has already been printed on. ■ The default setting is [Off].

Parameters	Settings
[Paper Sizes]	Specifies the paper size. An irregular paper size cannot be selected.
[Collate]	If [On] is selected, all pages in the documents are printed as sets of printouts. ■ The default setting is [Off].
[Duplex Options]	Specifies the duplex print binding position as [Simplex], [Long Edge], or [Short Edge], if the duplex unit for the printer has been installed. ■ The default setting is [Simplex].
[Select Color]	Specifies the color for printing as [Color] or [Grayscale]. ■ The default setting is [Color].
[Color Separation]	Specifies the color separation as [On] or [Off]. ■ The default setting is [Off].
[Brightness]	Specifies the brightness of the image as [-15%], [-10%], [-5%], [0%], [5%], [10%], or [15%]. ■ The default setting is [0%].
[Edge Strength]	Set the edge strength to [Off], [Low], [Middle] or [High]. ■ The default setting is [Middle].
[Toner Save]	Select whether or not economy printing is used. ■ The default setting is [Off].
[Auto Trapping]	Select whether or not neighboring colors are printed superimposed in order to prevent white space around images. ■ The default setting is [Off].

Parameters	Settings
[Black Over Print]	<p>Specify whether black objects are printed (superimposed) on a neighboring color in order to prevent white space around black characters or figures.</p> <p>If [Text/Figure] is selected, superimposed printing is applied to text and graphics.</p> <p>If [Text] is selected, superimposed printing is applied to text.</p> <p>■ The default setting is [Off].</p>

Image Options

Parameters	Settings
[Image RGB Source]	<p>Specifies RGB source for image as [None], [sRGB], [Adobe RGB (1998)], [Apple RGB], [ColorMatch RGB], or [Blue Adjust RGB].</p> <p>■ The default setting is [sRGB].</p>
[Image RGB Intent]	<p>Specifies RGB intent for image as [Vivid], [Photographic], [Relative Color], or [Absolute Color].</p> <p>■ The default setting is [Photographic].</p>
[Image RGB Gray Treatment]	<p>Specifies the RGB Gray Treatment as [Composite Black], [Black and Gray], or [Black Only].</p> <p>■ The default setting is [Black and Gray].</p>
[Image Halftone]	<p>Specifies the halftone for image as [Line Art], [Detail], or [Smooth].</p> <p>■ The default setting is [Detail].</p>
[Image Edge Enhancement]	<p>Select whether image edges are emphasized.</p> <p>■ The default setting is [Off].</p>

Text Options

Parameters	Settings
[Text RGB Source]	Specifies RGB source for text as [None], [sRGB], [Adobe RGB (1998)], [Apple RGB], [ColorMatch RGB], or [Blue Adjust RGB]. ■ The default setting is [sRGB].
[Text RGB Intent]	Specifies RGB intent for text as [Vivid], [Photographic], [Relative Color], or [Absolute Color]. ■ The default setting is [Vivid].
[Text RGB Gray Treatment]	Specifies the RGB Gray Treatment as [Composite Black], [Black and Gray], or [Black Only]. ■ The default setting is [Black and Gray].
[Text Halftone]	Specifies the halftone for text as [Line Art], [Detail], or [Smooth]. ■ The default setting is [Line Art].
[Text Edge Enhancement]	Select whether text edges are emphasized. ■ The default setting is [On].

Graphics Options

Parameters	Settings
[Graphics RGB Source]	Specifies RGB source for graphic as [None], [sRGB], [Adobe RGB (1998)], [Apple RGB], [ColorMatch RGB], or [Blue Adjust RGB]. ■ The default setting is [sRGB].
[Graphics RGB Intent]	Specifies RGB intent for graphic as [Vivid], [Photographic], [Relative Color], or [Absolute Color]. ■ The default setting is [Vivid].
[Graphics RGB Gray Treatment]	Specifies the RGB Gray Treatment as [Composite Black], [Black and Gray], or [Black Only]. ■ The default setting is [Black and Gray].

Parameters	Settings
[Graphics Halftone]	Specifies the halftone for graphic as [Line Art], [Detail] or [Smooth]. ■ The default setting is [Detail].
[Graphics Edge Enhancement]	Select whether graphic edges are emphasized. ■ The default setting is [On].

Simulation

Parameters	Settings
[Simulation Profile]	Specifies the simulation profile as [None], [SWOP], [Euroscale], [Commercial Press], [DIC], [TOYO], or [Japan Color]. ■ The default setting is [None].
[Match Paper Color]	Specifies the Match Paper Color. ■ The default setting is [Off].
[CMYK Gray Treatment]	Specifies simulation gray treatment as [Composite Black], [Black and Gray], or [Black Only]. ■ The default setting is [Composite Black].

Banners

Parameters	Settings
[Starting Banner]	Specifies the starting banner as [none], [classified], [confidential], [mls], [secret], [selinux], [standard], [te], [topsecret], or [unclassified]. ■ The default setting is [none].
[Ending Banner]	Specifies the ending banner as [none], [classified], [confidential], [mls], [secret], [selinux], [standard], [te], [topsecret], or [unclassified]. ■ The default setting is [none].

Printing a Document

The contents and available options that appear in the print dialog box may vary depending on the application being used.

Example Using OpenOffice



The procedure for printing on Red Hat Enterprise Linux 5 with OpenOffice 2.0.4 is described below. The following procedure or some steps may be different depending on the version of the operating system being used.




First, add the printer to the system.


For details on adding a printer to the system, refer to “Adding the Printer Using Printer configuration” on page 2-3 or “Adding the Printer on the CUPS Administration Web page” on page 2-8.

- 1 From the [Application] menu, select [Office], then [Word Processor].
- 2 Open the document to be printed.
- 3 Click [Print] in the [File] menu.

The [Print] dialog box appears.

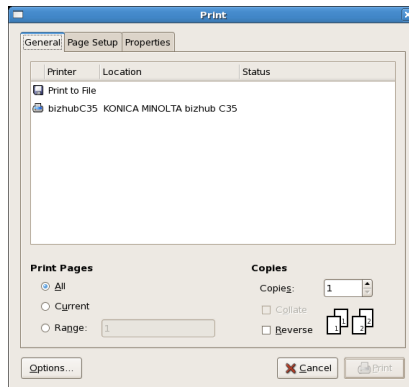

4 Select the name of the printer.

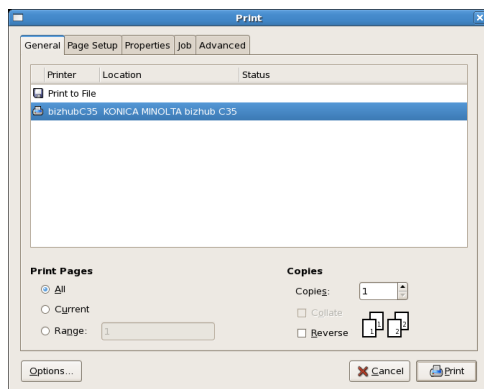


5 Click [Print] to print the document.

Checking Print Jobs

You can check the status of print jobs from a Web browser.

- 1 Start up the Web browser.
- 2 Enter the URL “http://localhost:631”.
The CUPS Administration Web page appears.

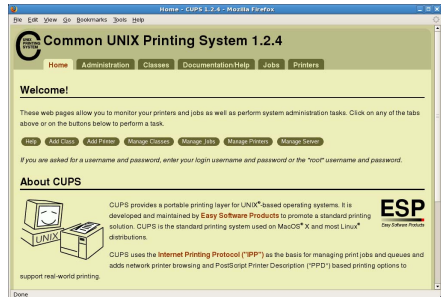

- 3 Click [Manage Jobs].
A list of the currently active print jobs appear.



To check the status of completed print jobs, click [Show Completed Jobs].



Troubleshooting

Symptom	Action
The printer stops because of a paper size error or a paper type error.	The job may have been sent with a prohibited combination of settings (for example, for the paper size and media type). Printing is not possible with postcards or overhead projector transparencies if [Plain Paper] is selected.
Printing does not continue with a custom paper size.	Printing with custom paper sizes is not possible directly from the printer driver. This can only be performed from the command line. Specify the following command to print data. <code>lpr -P [printer_name] -o media=Custom. [WIDTHxLENGTH] [file_name]</code> 1. Format of Custom. [WIDTHxLENGTH]: Custom.150x200mm, Custom.8x11in, Custom.15x20cm, or Custom.612x782 (postscript points) 2. The specified file must be a PS, PDF or JPEG file.
Printing cannot be completed correctly from OpenOffice or any other Office application (such as, Kword).	Applications running under Linux have their own print settings. Some of these functions may not be supported by this printer. Observe the following for best printing results. ■ Settings made within the application: Paper size and orientation ■ Settings made with the printer driver (kprinter): Settings other than those specified above (for example, paper type, tray, and resolution)
When printing from Acrobat Reader, part of the image is printed in solid black or the job is interrupted.	There is a compatibility problem between Ghostscript and Acrobat Reader. Try using a different PDF application.
Watermarks cannot be printed from Kword.	This is a bug with Kword. Use Overlay instead.

***Operation on
NetWare***

3

Printing With NetWare

The printer controller supports the following environments.

Network Printing in a NetWare Environment

NetWare Version	Protocol Used	Emulation	Service Mode
NetWare 4.x	IPX	Bindery/NDS	Pserver/Nprinter
NetWare 5.x/6	IPX	NDS	Pserver/Nprinter
	TCP/IP	NDPS(lpr)	

For Remote Printer Mode With NetWare 4.x Bindery Emulation



Before using bindery emulation, check that bindery emulation is compatible with the NetWare server.

- 1 From a client computer, log on with Supervisor permissions to access the NetWare server where the Pserver is registered.
- 2 Start up Pconsole.
- 3 From the [Available Options] list, select [Quick Setup], and then click the [Enter] button.
- 4 Enter the appropriate names in the [Printer Server Name], [Printer Name], [Print Queue Name], and [Print Queue Volume] fields, select [Other/Unknown] from the [Printer type] field, and then save the specified settings.
- 5 Click the [Esc] button to quit Pconsole.
- 6 Use the NetWare server console to load PSERVER.NLM.



For queue user privileges, printer notification option, assignment of multiple queues, and passwords, refer to the NetWare documentation, and specify settings as necessary.

- 7 In Administrator mode of PageScope Web Connection, select [NetWare Settings] from the [Network] tab, and then specify the following settings.

The screenshot shows the PageScope Web Connection Administrator interface. At the top, there is a header with 'Administrator' and a 'Log out' button. Below the header, there are two status indicators: 'Ready' with a printer icon and 'Ready' with a server icon. A navigation bar contains tabs for 'System', 'Security', 'Job', 'Print', 'Storage', 'Address', and 'Network'. The 'Network' tab is selected. On the left side, there is a list of settings categories: 'General Settings', 'TCP/IP Settings', 'E-mail Settings', 'LDAP Settings', 'HTTP Settings', 'IPP Settings', 'FTP Settings', 'SNMP Settings', 'SMB Settings', 'Web Service Settings', 'Bonjour Settings', 'NetWare Settings' (highlighted in orange), 'NetWare Status', 'AppleTalk Settings', 'Network Fax Settings', 'WebDAV Settings', 'OpenAPI Settings', 'TCP Socket Settings', and 'LLTD Settings'. The 'NetWare Settings' category is expanded, showing a list of settings: 'NetWare Settings', 'NetWare Status', 'AppleTalk Settings', 'Network Fax Settings', 'WebDAV Settings', 'OpenAPI Settings', 'TCP Socket Settings', and 'LLTD Settings'. The 'NetWare Settings' sub-category is selected, displaying the following settings:

NetWare Settings	
IPX/SPX	<input type="button" value="Enable"/>
Ethernet Frame Type	<input type="button" value="Auto"/>
NetWare Print Mode	<input type="button" value="NPrinter/RPrinter"/>
PServer Settings	
Print Server Name	<input type="text" value="BHC35-0B6F2B"/>
Print Server Password	<input type="checkbox"/> Change Password
Print Queue Scan Rate	<input type="text" value="1"/> sec. (1-65535)
Bindery/NDS	<input type="button" value="Bindery"/>
Preferred File Server	<input type="text"/>
Preferred NDS Context Name	<input type="text"/>
Preferred NDS Tree Name	<input type="text"/>
NPrinter/RPrinter Settings	
Printer Name	<input type="text" value="BHC35-0B6F2B"/>
Printer Number	<input type="text" value="255"/> (0-255, 255:Auto)

At the bottom right of the settings area, there are two buttons: 'Apply' and 'Clear'.

- [IPX/SPX]: Select [Enable].
- [Ethernet Frame Type]:
Select [Auto]. (Select the frame type according to the network environment.)
- [NetWare Print Mode]: Select [NPrinter/RPrinter].
- [Printer Name]:
Specify the printer name. (Default: [BHC35-XXXXXX])
- [Printer Number]:
Specify the printer number (0-255). When 255 is specified, the setting is [Auto].

- 8 Restart the printer (turn the printer off, then on again).

- 9 Use the NetWare server console to display the print server screen, and then check that the created printer is shown as [Waiting for Job] for the connected printer (0).

For Print Server Mode With NetWare 4.x Bindery Emulation



Before using bindery emulation, check that bindery emulation is compatible with the NetWare server.

- 1 From a client computer, log on with Supervisor permissions to access the NetWare server where the Pserver is registered.
- 2 Start up Pconsole.
- 3 From the [Available Options] list, select [Quick Setup], and then click the [Enter] button.
- 4 Enter the appropriate names in the [Printer Server Name], [Printer Name], [Print Queue Name], and [Print Queue Volume] fields, select [Other/Unknown] from the [Printer type] field, and then save the specified settings.
- 5 Click the [Esc] button to quit Pconsole.
- 6 In Administrator mode of PageScope Web Connection, select [NetWare Settings]. from the [Network] tab, and then specify the following settings.

The screenshot shows the PageScope Web Connection Administrator interface. At the top, there's a header with 'Administrator' and a 'Log out' button. Below the header, there's a navigation bar with tabs: System, Security, Job, Print, Storage, Address, and Network. The 'Network' tab is selected. On the left, there's a sidebar with a list of settings categories, including 'NetWare Settings' which is expanded. The main content area shows the 'NetWare Settings' configuration page. It has sections for 'NetWare Settings' and 'Printer/Printer Settings'. The 'NetWare Settings' section includes fields for 'IPX/SPX' (set to 'Enable'), 'Ethernet Frame Type' (set to 'Auto'), and 'NetWare Print Mode' (set to 'PServer'). The 'Printer/Printer Settings' section includes fields for 'Print Server Name' (set to 'BHC35-DB6F2B'), 'Print Server Password' (with a 'Change Password' checkbox), 'Print Queue Scan Rate' (set to '1 sec (1-65535)'), 'Bindery/NDS' (set to 'Bindery/NDS'), 'Preferred File Server' (set to 'file_server'), 'Preferred NDS Context Name', and 'Preferred NDS Tree Name'. At the bottom right, there are 'Apply' and 'Clear' buttons.

- [IPX/SPX]: Select [Enable].

- [Ethernet Frame Type]:
Select [Auto]. (Select the frame type according to the network environment.)
 - [NetWare Print Mode]: Select [PServer].
 - [Print Server Name]:
Specify the print server name created in step 4.
 - [Print Server Password]:
Specify only when setting from the NetWare server.
 - [Print Queue Scan Rate]: Specify 1. (Change as necessary.)
 - [Bindery/NDS]: Select [Bindery/NDS].
 - [Preferred File Server]:
Specify the name of the file server that connects to the Pserver.
- 7 Restart the printer (turn the printer off, then on again).
 - 8 Use the NetWare server console to load MONITOR.NLM.
 - 9 Select the connection information and, in the active connection column, check that the created Pserver is connected.

For NetWare 4.x Remote Printer Mode (NDS)

- 1 Log on to NetWare as an administrator from a client computer.
- 2 Start up NWadmin.
- 3 Select either the organization or organizational unit container that offers the print service, and then click [Print Services Quick Setup] on the [Tools] menu.
- 4 Enter the appropriate names in the [Printer Server Name], [Printer Name], [Print Queue Name], and [Print Queue Volume] fields, select [Other/Unknown] from the [Printer type] field, and then save the specified settings.



For queue user privileges, printer notification option, assignment of multiple queues, and passwords, refer to the NetWare documentation, and specify settings as necessary.

- 5 In Administrator mode of PageScope Web Connection, select [NetWare Settings] from the [Network] tab, and then specify the following settings.

The screenshot shows the PageScope Web Connection Administrator interface. At the top, there is a header with 'Administrator' and a 'Log out' button. Below the header, there are two status indicators: 'Ready' with a printer icon and 'Ready' with a refresh icon. A navigation bar contains tabs for 'System', 'Security', 'Job', 'Print', 'Storage', 'Address', and 'Network'. The 'Network' tab is selected. On the left side, there is a list of settings categories, with 'NetWare Settings' highlighted in orange. The main content area displays the 'NetWare Settings' configuration page. It includes sections for 'NetWare Settings', 'PServer Settings', and 'NPrinter/RPrinter Settings'. The 'NetWare Settings' section contains 'IPX/SPX' (set to 'Enable'), 'Ethernet Frame Type' (set to 'Auto'), and 'NetWare Print Mode' (set to 'NPrinter/RPrinter'). The 'PServer Settings' section contains 'Print Server Name' (set to 'BHC35-DB6F2B'), 'Print Server Password' (with a 'Change Password' button), 'Print Queue Scan Rate' (set to '1 sec. (1-65535)'), 'Bindery/NDS' (set to 'Bindery'), 'Preferred File Server', 'Preferred NDS Context Name', and 'Preferred NDS Tree Name'. The 'NPrinter/RPrinter Settings' section contains 'Printer Name' (set to 'BHC35-DB6F2B') and 'Printer Number' (set to '255 (0-255,255,Auto)'). At the bottom right, there are 'Apply' and 'Clear' buttons.

- [IPX/SPX]: Select [Enable].
- [Ethernet Frame Type]: Select [Auto]. (Select the frame type according to the network environment.)
- [NetWare Print Mode]: Select [NPrinter/RPrinter].
- [Printer Name]: Specify the printer name. (Default: [BHC35-XXXXXX])
- [Printer Number]: Specify the printer number (0-255). When 255 is specified, the setting is [Auto].

- 6 Restart the printer (turn the printer off, then on again)

- 7 Use the NetWare server console to load PSERVER.NLM.

- 8 Use the NetWare server console to display the print server screen, and then check that created printer is shown as [Waiting for Job] for the connected printer (0).

For NetWare 4.x/5.x/6 Print Server Mode (NDS)



To use the Print Server mode, the IPX protocol must be loaded on the NetWare server.

- 1 Log on to NetWare as an administrator from a client computer.
- 2 Start up NWadmin.
- 3 Select either the organization or organizational unit container that offers the print service, and then click [Print Services Quick Setup (non-NDPS)] on the [Tools] menu.
- 4 Enter the appropriate names in the [Printer Server Name], [Printer Name], [Print Queue Name], and [Print Queue Volume] fields, select [Other/Unknown] from the [Printer Type] field, and then click the [Create] button.



For queue user privileges, printer notification option, assignment of multiple queues, and passwords, refer to the NetWare documentation, and specify settings as necessary.

- 5 In Administrator mode of PageScope Web Connection, select [NetWare Settings] from the [Network] tab, and then specify the following settings.

The screenshot shows the NetWare Administrator web interface. At the top, there is a user bar for 'Administrator' with a 'Log out' button. Below this is a status bar showing 'Ready' and a refresh icon. The main navigation bar has tabs for System, Security, Job, Print, Storage, Address, and Network. The 'Network' tab is selected. On the left, a sidebar lists various settings categories, with 'NetWare Settings' highlighted. The main content area displays the 'NetWare Settings' configuration page. It includes sections for 'NetWare Settings' and 'Printer/Printer Settings'. The 'NetWare Settings' section contains fields for 'IPX/SPX' (set to 'Enable'), 'Ethernet Frame Type' (set to 'Auto'), and 'NetWare Print Mode' (set to 'PServer'). The 'Printer/Printer Settings' section contains fields for 'Print Server Name' (set to 'BHC35-DB6F2B'), 'Print Server Password' (with a 'Change Password' checkbox), 'Print Queue Scan Rate' (set to '1 sec. (1-65535)'), 'Enderly/NDS' (set to 'NDS'), 'Preferred File Server', 'Preferred NDS Context Name' (set to 'context'), and 'Preferred NDS Tree Name' (set to 'tree'). At the bottom right, there are 'Apply' and 'Clear' buttons.

Category	Setting	Value
NetWare Settings	IPX/SPX	Enable
	Ethernet Frame Type	Auto
	NetWare Print Mode	PServer
Printer/Printer Settings	Print Server Name	BHC35-DB6F2B
	Print Server Password	Change Password
	Print Queue Scan Rate	1 sec. (1-65535)
	Enderly/NDS	NDS
	Preferred File Server	
	Preferred NDS Context Name	context
	Preferred NDS Tree Name	tree

– [IPX/SPX]: Select [Enable].

- [Ethernet Frame Type]:
Select [Auto]. (Select the frame type according to the network environment.)
 - [NetWare Print Mode]: Select [PServer].
 - [Print Server Name]: Specify the print server name created in step 4.
 - [Print Server Password]: Specify only when setting from the NetWare server.
 - [Print Queue Scan Rate]: Specify 1. (Change as necessary.)
 - [Bindery/NDS]: Select [NDS].
 - [Preferred NDS Context Name]:
Specify the name of the context that connects to Pserver.
 - [Preferred NDS Tree Name]:
Specify the name of the tree that Pserver logs on to.
- 6 Restart the printer (turn the printer off, then on again).
 - 7 Use the NetWare server console to load MONITOR.NLM.
 - 8 Select the connection information and, in the active connection column, check that the created Pserver is connected.

For NetWare 5.x/6 Novell Distributed Print Service (NDPS)



Before specifying settings for NDPS, check that the NDPS broker and NDPS manager have been created and loaded.



Also, before performing the following procedure, check that the TCP/IP protocol has been set in the NetWare server, and check that the IP address has been set for this machine and that this machine is on.

- 1 Log on to NetWare as an administrator from a client computer.
- 2 Start up NWadmin.
- 3 Right-click the organization or organizational unit container where you will create the printer agent, and then click [NDPS Printer] on the [Create] submenu.
- 4 In the [NDPS Printer Name] box, enter the printer name.
- 5 In the [Printer Agent Source] column, select [Create a New Printer Agent], and then click the [Create] button.
- 6 Check the printer agent name, and then in the [NDPS Manager Name] box, browse through the NDPS manager names, and register one.

- 7 In the [Gateway Types], select [Novell Printer Gateway], and then register it.
- 8 In the Configure Novell PDS for Printer Agent window, select [(None)] for the printer type and [Novell Port Handler] for the port handler type, and then register the settings.
- 9 In [Connection type], select [Remote (LPR on IP)], and then register it.
- 10 Enter the IP address set for this machine as the host address, enter [Print] as the printer name, and then click the [Finish] button to register the settings.
- 11 The printer driver registration screen appears. Select [None] for each operating system to complete the registration.



For settings for the queue user rights, printer notification option, assignment of multiple queues, and passwords, refer to the NetWare documentation, and set them as necessary.

Setting Up a Client (Windows) Settings When Using the NetWare Server

- 1 For Windows 2000, click the [Start] button, point to [Settings], and then click [Printers].
For Windows 7/Server 2008 R2, click the [Start] button, select [Control Panel], and then click [Hardware and Sound] to select [Devices and Printers].
For Windows Vista/Server 2008, click the [Start] button, select [Control Panel], and then click [Hardware and Sound] to select [Printers].
For Windows XP/Server 2003, click the [Start] button, and then click [Printers and Faxes].



If [Printers and Faxes] does not appear in the Start menu, open the Control Panel from the Start menu, select [Printers and Other Hardware], and then select [Printers and Faxes].

- 2 For Windows 2000/Server 2003, double-click the [Add Printer] icon.
For Windows Vista/7/Server 2008/Server 2008 R2, click [Add a printer] on the menu.
For Windows XP, click [Add a printer] on the [Printer Tasks] menu. The [Add Printer Wizard] starts up.
- 3 In the port settings, browse the network, and specify the name of the created queue (or NDPS printer name).
- 4 In the [Printer Model] list, specify the folder on the CD/DVD that contains the printer driver for the operating system and printer driver to be used.
- 5 Follow the on-screen instructions to complete the installation.

Printer Utilities **4**

Installing Printer Utilities on Windows



You must have administrator privileges in order to install the Printer Utilities.



Before proceeding with the installation, be sure to exit all running applications.

The following procedure describes how to install the Printer Utilities.

End User Tools

- PageScope Direct Print

Administration Tools

- PageScope Data Administrator
- PageScope Net Care Device Manager

Applications

- Driver Packaging Utility

Operation Tools

- Download Manager

- 1 Insert Applications CD/DVD in your CD/DVD drive.
- 2 Select the type of tools from [End User Tools], [Administration Tools] and [Operation Tools].
- 3 From the Tools dialogs, select the utilities to be installed.
- 4 From Utility dialogs, select [Install].



Click [Back] button to display previous page.



Click [Top Menu] button to display top page.

- 5 Follow the onscreen instructions to complete the installation.
- 6 After the installation is complete, remove the Applications CD/DVD from your CD/DVD drive and store it in a safe place.

***Understanding
the Ethernet
Configuration
Menus***

5

Location within the Utility Settings screens

[Utility Settings]		
(Page 1/2)	[Accessibility]	
	[Meter Count]	
	[Address Registration]	
	[User Settings]	
(Page 2/2)	[Admin Settings]	
	(Page 1/4)	[Machine Settings]
		[Administrator Registration]
		[Address Registration]
		[Authentication]
	(Page 2/4)	[Ethernet]
		[Memory Direct Print]
		[Job Timeout]
		[Copy Settings]
	(Page 3/4)	[Print Settings]
		[Fax Settings]
		[Maintenance Menu]
		[Scan Settings]
	(Page 4/4)	[Security Settings]
		[Restore Defaults]
		[HDD Format]
		[Paper Empty]

Displaying the [Ethernet] screen

From the [Ethernet] screen (Admin Settings), specify various network settings for the machine.

From the Admin Settings screen, various settings are available to be changed by the machine administrator. In order to display the Admin Settings screen, the user must log on using the administrator password.

- 1 Press the [Utility/Counter] key.
- 2 Press [Admin Settings].
- 3 Type in the administrator password (Default: 12345678), and then press [OK].



If the administrator password is incorrectly entered three times, machine operations are locked. If this occurs, turn the machine off, then on again.

- 4 Press [Ethernet].




Restart the machine if any of the following Ethernet settings are changed.

- [TCP/IP] - [Enable]
- [TCP/IP] - [DHCP]
- [TCP/IP] - [BOOTP]
- [TCP/IP] - [ARP/PING]
- [TCP/IP] - [SLP]
- [TCP/IP] - [SNMP]
- [TCP/IP] - [IPv6] - [Enable]
- [TCP/IP] - [IPv6] - [Auto Setting]
- [Netware]
- [IEEE802.1X]

[Ethernet] (Admin Settings)

If the machine is connected to a network, the following settings should be specified.

For details about each setting, contact your network administrator.

Item	Description
[TCP/IP]	Specify settings for the machine's network connection (TCP/IP).
[Enable]	Select whether or not to enable TCP/IP. Default: [Yes]  If [No] is selected, the TCP/IP parameters do not appear.
[IP Address]	Specify the IP address used by this machine on the network.
[Subnet Mask]	Specify the subnet mask.
[Gateway]	Specify the gateway address.
[DHCP]	If there is a DHCP server on the network, select whether the IP address and other network information are automatically assigned by the DHCP server. Default: [OFF]
[BOOTP]	If there is a BOOTP server on the network, select whether the IP address and other network information are automatically assigned by the BOOTP server. Default: [OFF]
[ARP/PING]	Select whether or not the ARP/PING command is used when the IP address is assigned. Default: [OFF]
[HTTP]	Select whether or not to enable HTTP. Default: [Enable]
[FTP]	Select whether or not to enable the FTP server. Default: [Enable]

Item		Description
	[Telnet]	Select whether or not to enable Telnet transmissions. Default: [Enable]
	[Bonjour]	Select whether or not to enable Bonjour. Default: [Enable]
	[Dynamic DNS]	Select whether or not to enable Dynamic DNS. Default: [Disable]
	[IPP]	Select whether or not to enable IPP. Default: [Enable]
	[RAW Port]	Specify the RAW port settings.
	[Enable]	Select whether or not to enable the RAW port. Default: [Yes]
	[Bidirectional]	Select whether or not to enable RAW port bidirectional communication. Default: [OFF]
	[SLP]	Select whether or not to enable SLP. Default: [Enable]
	[SMTP]	Select whether or not to enable e-mail transmission operations for this machine. Default: [Enable]
	[SNMP]	Select whether or not to enable SNMP. Default: [Enable]
	[WSD Print]	Select whether or not to enable WSD printing. Default: [Enable]
	[IPSec]	Select whether or not to enable IPSec. Default: [Disable]

Item		Description
	[IP Address Filter]	Specify IP address filtering settings.
	[Permit Access]	Specify access permissions for IP address filtering. Default: [Disable]
	[Deny Access]	Specify access blocking for IP address filtering. Default: [Disable]
	[IPv6]	Specify IPv6 settings.
	[Enable]	Select whether or not to enable IPv6. Default: [Yes]
	[Auto Setting]	Select whether or not to enable the IPv6 auto setting. Default: [Enable]
	[Link Local]	Displays the link-local address.
	[Global Address]	Displays the global address.
	[Gateway Address]	Displays the gateway address.
	[Netware]	Select whether or not to enable NetWare. Default: [Disable]
	[AppleTalk]	Select whether or not to enable AppleTalk. Default: [Enable]
[Network Speed]		Specify the transmission speed for the network and the transmission method for bidirectional transmission. Default: [Auto]
[IEEE802.1X]		Select whether or not to enable IEEE802.1X. Default: [Disable]
[Binary Division]		Select whether or not transmission data is divided. Default: [OFF]

Item	Description
[S/MIME Comm. Setting]	Specify S/MIME communication settings.
[S/MIME Enabled]	Select whether or not to enable S/MIME. Default: [Disable]
[Digital Signature]	Select the setting for digital signatures. Select [Always add signature] to add the digital signature and send the E-mail message. Select [Do not add signature] to not add a digital signature when sending E-mail messages. Select [Select when sending] to allow the digital signature to be selected when sending the E-mail message. Default: [Do not add signature]
[Encryption Method]	Select the encryption method for the body of e-mail messages. Choices: [RC2-40], [RC2-64], [RC2-128], [DES], [3DES], [AES-128], [AES-192], [AES-256] Default: [3DES]
[Auto. Obtain Certificates]	Select whether or not to automatically obtain certificates. Default: [No]
[Print S/MIME Information]	Select whether or not to print S/MIME information. Default: [No]

***User
authentication
and account track***

6


Limiting users of this machine (device authentication)

This machine can be configured with device authentication in order to restrict its use.

Specify user authentication and account track settings to limit the use of this machine and control the operations available to each user. Manage individual users by specifying user authentication settings, and manage a group (such as a department) or multiple users by specifying account track settings.

Specify both user authentication and account track settings to manage each user connected to each account. You can also specify separate counters for the department and for the user, or you can specify that the two counters be totaled.

Specify settings according to the following flowchart. Clicking a step in the flowchart displays the description of the corresponding procedure.

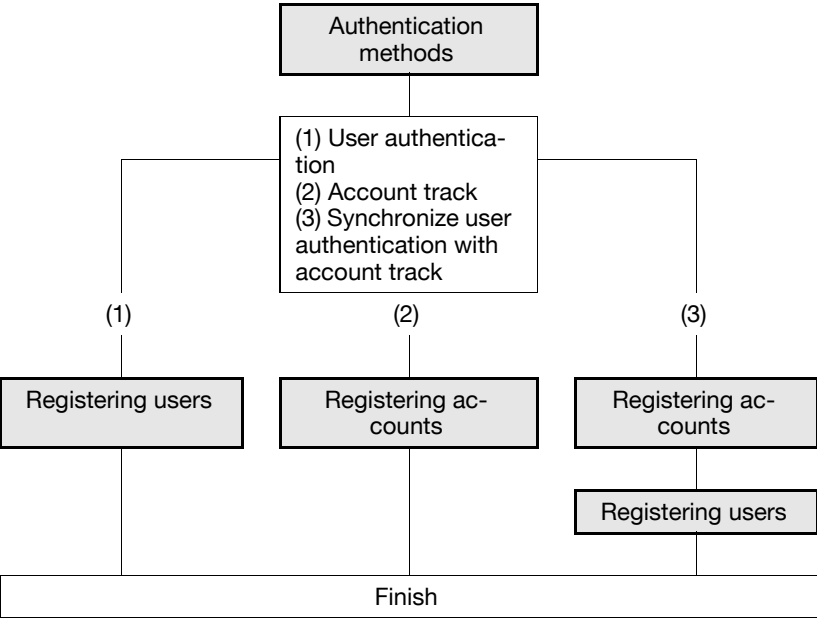

Authentication methods

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [General Settings].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

General Settings

User List

Public User Registration

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

User Authentication/Account Track

User Authentication

Device

Public Access

Allow

Ticket Hold Time (Active Directory)

600

 min. (1-600)

Account Track

Off

Account Track Method

Account Name & Password

Synchronize User Authentication & Account Track

Synchronize

Number of Counters Assigned for Users

600

 (1-999)

Print without Authentication

Restrict

Apply

Clear

Item	Description	Preliminary inquiry
[User Authentication]	Select [Device].	
[Public Access]	<p>Select whether to allow public user access.</p> <p>If [Allow] is selected, public users must press [Public User] in the login screen to log on to this machine.</p> <p>If [Allow (without Login)] is selected, the initial screen will appear if a public user has logged on. This machine can be used without completing an authentication process.</p>	Do you wish to permit public user access?
[Account Track]	To use account track, select [On].	Do you wish to use account track?
[Account Track Method]	<p>Select the account track authentication method.</p> <p>A setting must be specified if only account track is to be used.</p>	

Item	Description	Preliminary inquiry
[Synchronize User Authentication & Account Track]	To synchronize user authentication and account track and manage users for each account, select [Synchronize].	Do you wish to synchronize user authentication and account track settings?
[Number of Counters Assigned for Users]	Type in the number of counters to be assigned when user authentication and account track settings are specified.	



If [Enhanced Security Mode] is set to [On], - [User Authentication] cannot be set to [Off]. In addition, public user access cannot be permitted.

Registering users

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [User List] - [New Registration].

 Administrator  Ready  Ready  Ready		 Logout
System	Security	Job Print Storage Address Network

Authentication

- General Settings
- User List
- Public User Registration
- ID & Print Settings
- Authentication Device Settings
- PKI Settings
- IPsec
- IP Address Filtering
- IEEE802.1X
- Limiting Access to Destination
- Auto Logout

User Registration

No. 1

User Name

E-mail Address

Password

☒ Change Password

Function Permission

Copy

Scan to Network

Scan to HDD

Scan to USB Memory

Fax

Print

Manual Destination Input

Output Permission (Print)

Color

Black

Output Permission (Scan)

Color

Max. Allowance Set

☐ Total (1-9999999)

☐ Color (1-9999999)

☐ Black (1-9999999)

Authentication Device Settings

Authentication Device Information Not Registered

Item	Description	Preliminary inquiry
[User Name]	Type in a user name. (up to 64 characters)	
[E-mail Address]	Type in the e-mail address of the user. (up to 320 characters)	
[Password]	Type in a password. (up to 64 characters, excluding spaces and ")	

Item	Description	Preliminary inquiry
[Account Track Number]	<p>Specify the account number for the user being registered.</p> <p>Before an account number can be specified, accounts must have been registered.</p> <p>This item is displayed if user authentication and account track are synchronized.</p> <p>If the account number is omitted, the user must specify their user name and account number when logging on for the first time. The account number that the user specifies when they log on for the first time will be registered as the account number for the user.</p> <p>If account information is changed after the account number has been registered with a user, the account will no longer be linked to the user.</p>	
[Function Permission]	Select whether to permit [Copy], [Scan to Network], [Scan to HDD], [Scan to USB Memory], [Fax], [Print], [Manual Destination Input].	
[Output Permission (Print)]	Select whether to allow color or black-and-white printing.	
[Output Permission (Scan)]	Select whether to allow images to be scanned in color.	

Item	Description	Preliminary inquiry
[Max. Allowance Set]	Specify the maximum number of pages that can be printed. To specify a limit, select the appropriate check box, and then type in the desired maximum value.	
[Authentication Device Settings]	Shows whether or not an authentication device has been registered.	



When [Admin Settings] - [Security Settings] - [Security Details] - [Password Rules] is set to [On] in the control panel, a password containing less than eight characters cannot be specified. If a user has already been registered with a password containing less than eight characters, change the password so that it contains at least eight characters before setting [Password Rules] to [On].



If public user access is permitted, the [Function Permission] settings can be specified for public users. For details, refer to page 8-55.



When [Admin Settings] - [Security Settings] - [Security Details] - [Manual Destination Input] is set to [Restrict] in the control panel, the user cannot manually enter an address, regardless of the setting selected for this parameter.

Registering accounts

In Administrator mode of PageScope Web Connection, click [Security] tab - [Account Track List] - [New Registration].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Authentication

► General Settings

► User List

► Account Track List

► Public User Registration

► ID & Print Settings

► Authentication Device Settings

► PKI Settings

► IPsec

► IP Address Filtering

► IEEE802.1X

► Limiting Access to Destination

► Auto Logout

Account Track Registration

No.1

Account Name

Password

☒ Change Password

Output Permission (Print)

Color

Allow

Black

Allow

Output Permission (Scan)

Color

Allow

Max. Allowance Set

☐ Total

0(1-9999999)

☐ Color

0(1-9999999)

☐ Black

0(1-9999999)

Apply

Clear

Cancel

Item	Description	Preliminary inquiry
[Account Name]	Type in an account name. (up to 8 characters, excluding spaces and ")	
[Password]	Type in a password. (up to 8 characters, excluding spaces and ")	
[Output Permission (Print)]	Select whether to allow color or black-and-white printing.	
[Output Permission (Scan)]	Select whether to allow images to be scanned in color.	

Item	Description	Preliminary inquiry
[Max. Allowance Set]	<p>Specify the maximum number of pages that can be printed.</p> <p>To specify a limit, select the appropriate check box, and then type in the desired maximum value.</p>	



When [Admin Settings] - [Security Settings] - [Security Details] - [Password Rules] is set to [On] in the control panel, a password containing less than eight characters cannot be specified. If a user has already been registered with a password containing less than eight characters, change the password so that it contains at least eight characters before setting [Password Rules] to [On].


Limiting users of this machine (Active Directory authentication)

This machine can be configured with Active Directory authentication in order to restrict its use.

These settings must be specified if you wish to perform user authentication with Active Directory on Windows Server. The operations available to each user can be restricted.

In addition, you can restrict use of this machine through Active Directory authentication in an IPv6 environment configured with Active Directory on Windows Server 2008.

Specify settings according to the following flowchart. Clicking a step in the flowchart displays the description of the corresponding procedure.

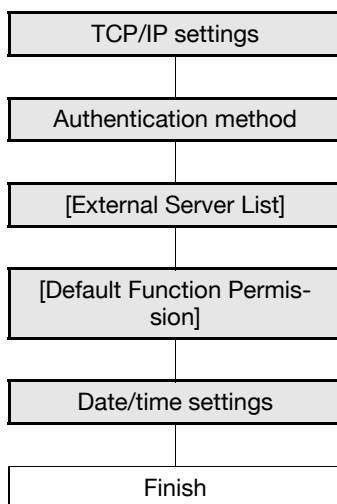

TCP/IP settings

Specify settings to use this machine in a TCP/IP network environment.

- In order to use Active Directory, register the DNS server connected to Active Directory for this machine.
- In order to perform Active Directory authentication in an IPv6 environment configured with Active Directory on Windows Server 2008, specify the IPv6 settings. For details on the IPv6 settings, refer to “[IPv6 Settings]” on page 8-188.

Authentication method

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [General Settings].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Authentication

► General Settings

► User List

► Account Track List

► External Server List

► Default Function Permission

► Public User Registration

► ID & Print Settings

► Authentication Device Settings

► PKI Settings

► IPsec

► IP Address Filtering

► IEEE802.1X

► Limiting Access to Destination

► Auto Logout

User Authentication/Account Track

User Authentication

External Server

Public Access

Allow

Ticket Hold Time (Active Directory)

600 min. (1-600)

Account Track

On

Account Track Method

Account Name & Password

Synchronize User Authentication & Account Track

Synchronize

Number of Counters Assigned for Users

500 (1-999)

Print without Authentication

Restrict

Apply

Clear

Item	Description	Preliminary inquiry
[User Authentication]	Select [External Server].	
[Public Access]	<p>Select whether to allow public user access.</p> <p>If [Allow] is selected, public users must press [Public User Access] in the login screen to log on to this machine.</p> <p>If [Allow (without Login)] is selected, the initial screen will appear if a public user has logged on. This machine can be used without completing an authentication process.</p>	Do you wish to permit public user access?

Item	Description	Preliminary inquiry
[Ticket Hold Time (Active Directory)]	Specify the length of time that Kerberos authentication tickets are held.	
[Account Track]	<p>To use account track, select [On].</p> <p>Before [On] can be selected, specify the authentication method, and then register accounts from the [Account Track List] page.</p>	Do you wish to use account track?
[Synchronize User Authentication & Account Track]	To synchronize user authentication and account track and manage users for each account, select [Synchronize].	Do you wish to synchronize user authentication and account track settings?

[External Server List]

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [External Server List] - [Edit] - [Active Directory].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

External Server (Active Directory)

General Settings

No.1

User List

Name

Account Track List

Server TypeActive Directory

External Server List

Default Domain Name

Default Function Permission

Public User Registration

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Apply

Clear

Cancel

Item	Description	Preliminary inquiry
[Name]	Type in the name of the external authentication server. (up to 32 characters)	
[Default Domain Name]	Type in the default domain name of Active Directory. (up to 64 characters)	Default domain name

[Default Function Permission]

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [Default Function Permission].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Authentication

► General Settings

► User List

► Account Track List

► External Server List

► Default Function Permission

► Public User Registration

► ID & Print Settings

► Authentication Device Settings

► PKI Settings

► IPsec

► IP Address Filtering

► IEEE802.1X

► Limiting Access to Destination

► Auto Logout

Default Function Permission

Copy

Scan to Network

Scan to HDD

Scan to USB Memory

Fax

Print

Manual Destination Input

Allow

Allow

Allow

Allow

Allow

Allow

Apply

Clear

Item	Description	Preliminary inquiry	
[Copy]	Specify the default function permissions for users authenticated with the external server.		
[Scan to Network]			
[Scan to HDD]			
[Scan to USB Memory]	If a user not registered on this machine is authenticated with the external server, the user will be registered on this machine with the function permissions specified here.		
[Fax]			
[Print]			
[Manual Destination Input]			
	After a user has been registered on this machine with the specified function permissions, the settings can be edited from the [User List] page.		



When [Admin Settings] - [Security Settings] - [Security Details] - [Manual Destination Input] is set to [Restrict] in the control panel, the user cannot manually enter an address, regardless of the setting selected for this parameter.

Date/time settings

In order to use Active Directory, specify the date and time of this machine.

You cannot log on to Active Directory if the system time of this machine and Active Directory is extremely different. Specify the date and time for this machine so that they match the system time of Active Directory.

Limiting users of this machine (Windows domain or workgroup authentication)


This machine can be configured with NTLM authentication in order to restrict its use.

These settings must be specified if you wish to perform NTLM authentication when using Windows NT 4.0 or when using Active Directory (NT-compatible domain environment) on a Windows Server. The operations available to each user can be restricted.

In addition, you can restrict use of this machine through NTLM authentication in an IPv6 environment configured with Active Directory (NT-compatible domain environment) on Windows Server 2008.

In order to perform NTLM authentication in an IPv6 environment, the Direct Hosting service must be enabled. In order to resolve names using a DNS server, register the DNS server and specify the DNS settings on this machine.

Specify settings according to the following flowchart. Clicking a step in the flowchart displays the description of the corresponding procedure.

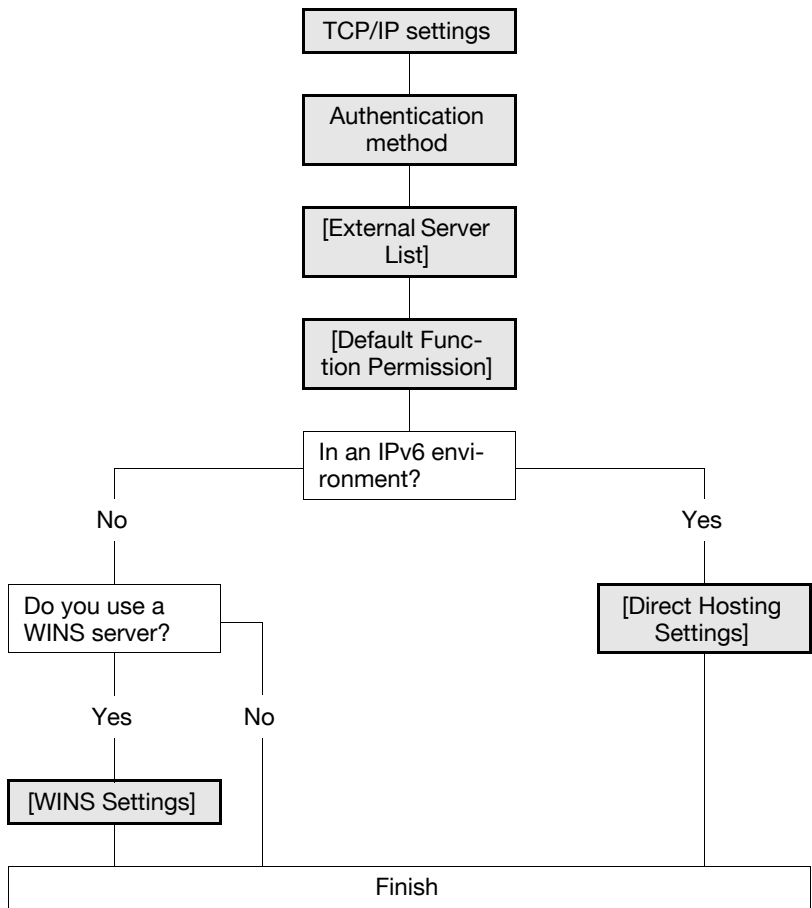

TCP/IP settings

Specify settings to use this machine in a TCP/IP network environment.

- In order to perform NTLM authentication in an IPv6 environment configured with Active Directory (NT-compatible domain environment) on Windows Server 2008, specify the IPv6 settings. For details on the IPv6 settings, refer to “[IPv6 Settings]” on page 8-188.
- In order to perform NTLM authentication in an IPv6 environment, the Direct Hosting service must be enabled. In order to resolve names using a DNS server, register the DNS server and specify the DNS settings on this machine.

Authentication method

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [General Settings].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Authentication

► General Settings

► User List

► Account Track List

► External Server List

► Default Function Permission

► Public User Registration

► ID & Print Settings

► Authentication Device Settings

► PKI Settings

► IPsec

► IP Address Filtering

► IEEE802.1X

► Limiting Access to Destination

► Auto Logout

User Authentication/Account Track

User Authentication

External Server

Public Access

Allow

Ticket Hold Time (Active Directory)

600

min. (1-600)

Account Track

On

Account Track Method

Account Name & Password

Synchronize User Authentication & Account Track

Synchronize

Number of Counters Assigned for Users

500

(1-999)

Print without Authentication

Restrict

Apply

Clear

Item	Description	Preliminary inquiry
[User Authentication]	Select [External Server].	
[Public Access]	<p>Select whether to allow public user access.</p> <p>If [Allow] is selected, public users must press [Public User Access] in the login screen to log on to this machine.</p> <p>If [Allow (without Login)] is selected, the initial screen will appear if a public user has logged on. This machine can be used without completing an authentication process.</p>	Do you wish to permit public user access?
[Account Track]	<p>To use account track, select [On].</p> <p>Before [On] can be selected, specify the authentication method, and then register accounts from the [Account Track List] page.</p>	Do you wish to use account track?
[Synchronize User Authentication & Account Track]	To synchronize user authentication and account track and manage users for each account, select [Synchronize].	Do you wish to synchronize user authentication and account track settings?

[External Server List]

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [External Server List] - [Edit] - [NTLM].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

External Server (NTLM)

General Settings

No.1

User List

Name

Account Track List

Server TypeNTLM v1

External Server List

Default Domain Name

Default Function Permission

Public User Registration

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Apply

Clear

Cancel

Item	Description	Preliminary inquiry
[Name]	Type in the name of the external authentication server. (up to 32 characters)	
[Server Type]	Select [NTLM v1] or [NTLM v2]. NTLMv2 is applied on Windows NT 4.0 (Service Pack 4) and later.	
[Default Domain Name]	Type in the NTLM default domain name. (up to 64 characters) The default domain name must be in uppercase letters.	Default domain name

[Default Function Permission]

Specify the default function permissions for users authenticated with the external server.

For details, refer to “[Default Function Permission]” on page 6-14.

[WINS Settings]

In order to start NTLM authentication via the router, WINS server settings must be specified.

For details, refer to “[WINS Settings]” on page 8-217.

[Direct Hosting Settings]

In order to perform NTLM authentication in an IPv6 environment, the Direct Hosting service must be enabled.


For details, refer to “[Direct Hosting Settings]” on page 8-220.

Limiting users of this machine (NDS over IPX/SPX authentication)

This machine can be configured with NDS over IPX/SPX authentication in order to restrict its use.

These settings must be specified if you wish to use NetWare 5.1 or later and use NDS authentication in an IPX/SPX environment. The operations available to each user can be restricted.

Specify settings according to the following flowchart. Clicking a step in the flowchart displays the description of the corresponding procedure.

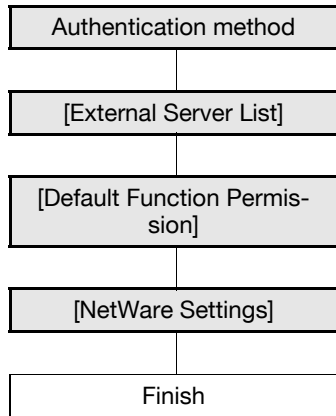

Authentication method

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [General Settings].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

General Settings

User List

Account Track List

External Server List

Default Function Permission

Public User Registration

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

User Authentication/Account Track

User Authentication

External Server

Public Access

Allow

Ticket Hold Time (Active Directory)

600 min. (1-600)

Account Track

On

Account Track Method

Account Name & Password

Synchronize User Authentication & Account Track

Synchronize

Number of Counters Assigned for Users

500 (1-999)

Print without Authentication

Restrict

Apply

Clear

Item	Description	Preliminary inquiry
[User Authentication]	Select [External Server].	
[Public Access]	<p>Select whether to allow public user access.</p> <p>If [Allow] is selected, public users must press [Public User Access] in the login screen to log on to this machine.</p> <p>If [Allow (without Login)] is selected, the initial screen will appear if a public user has logged on. This machine can be used without completing an authentication process.</p>	Do you wish to permit public user access?

Item	Description	Preliminary inquiry
[Account Track]	To use account track, select [On]. Before [On] can be selected, specify the authentication method, and then register accounts from the [Account Track List] page.	Do you wish to use account track?
[Synchronize User Authentication & Account Track]	To synchronize user authentication and account track and manage users for each account, select [Synchronize].	Do you wish to syn-chronize user authentication and account track set-tings?

[External Server List]

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [External Server List] - [Edit] - [NDS].

The screenshot shows the PageScope Web Connection Administrator interface. At the top, there is a header bar with a user icon and the text "Administrator" and a "Log out" button. Below the header, there are two status indicators: "Ready" with a printer icon and "Ready" with a folder icon. A navigation bar contains tabs for "System", "Security", "Job", "Print", "Storage", "Address", and "Network". The "Security" tab is selected, and a sub-menu on the left lists various security settings: "Authentication", "General Settings", "User List", "Account Track List", "External Server List", "Default Function Permission", "Public User Registration", "ID & Print Settings", "Authentication Device Settings", "PKI Settings", "IPsec", "IP Address Filtering", "IEEE802.1X", "Limiting Access to Destination", and "Auto Logout". The "External Server List" option is highlighted. The main content area displays the "External Server (NDS)" configuration. It includes a table with columns "No." and "Name". The first entry has "No." 1 and "Name" in an empty text box. Below the table, there are fields for "Server Type" (a dropdown menu showing "NDS over IPX/SPX"), "Default Tree" (an empty text box), and "Default Context" (an empty text box). At the bottom right of the configuration area, there are three buttons: "Apply", "Clear", and "Cancel".

Item	Description	Preliminary inquiry
[Name]	Type in the name of the external authentication server. (up to 32 characters)	
[Server Type]	Select [NDS over IPX/SPX].	
[Default Tree]	Type in the default NDS tree name. (up to 63 characters)	
[Default Context]	Type in the default NDS context name. (up to 191 characters)	

[Default Function Permission]

Specify the default function permissions for users authenticated with the external server.

For details, refer to "[Default Function Permission]" on page 6-14.

[NetWare Settings]

In Administrator mode of PageScope Web Connection, click [Network] tab - [NetWare Settings] - [NetWare Settings].

Administrator

Log out

Ready

SystemSecurityJobPrintStorageAddressNetwork

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

NNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

NetWare Settings

NetWare Status

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

NetWare Settings

IPX/SPX

Ethernet Frame Type

NetWare Print Mode

PServer Settings

Print Server Name

Print Server Password

Print Queue Scan Rate

Bindery/NDS

Preferred File Server

Preferred NDS Context Name

Preferred NDS Tree Name

NPrinter/RPrinter Settings

Printer Name

Printer Number

ApplyClear

Item	Description	Preliminary inquiry
[IPX/SPX]	Select [Enable].	
[Ethernet Frame Type]	Select a frame type to be used.	Frame type

Limiting users of this machine (NDS over TCP/IP authentication)

This machine can be configured with NDS over TCP/IP authentication in order to restrict its use.


These settings must be specified if you wish to use NetWare 5.1 or later and use NDS authentication in a TCP/IP environment. The operations available to each user can be restricted.

In order to perform NDS over TCP/IP authentication, DNS server settings must be specified from the [TCP/IP Settings] - [DNS Settings] page. During user authentication, the tree name and context name are required for the specified DNS server in order to obtain the IP address of the NDS authentication server.

Specify settings according to the following flowchart. Clicking a step in the flowchart displays the description of the corresponding procedure.



Apply the latest service pack to each version of NetWare.

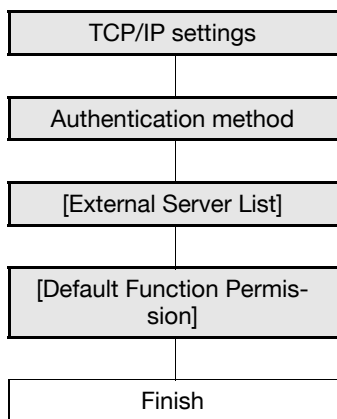

TCP/IP settings

Specify settings to use this machine in a TCP/IP network environment.

In order to perform NDS over TCP/IP authentication, DNS server settings must be specified.

Authentication method

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [General Settings].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Authentication

► General Settings

► User List

► Account Track List

► External Server List

► Default Function Permission

► Public User Registration

► ID & Print Settings

► Authentication Device Settings

► PKI Settings

► IPsec

► IP Address Filtering

► IEEE802.1X

► Limiting Access to Destination

► Auto Logout

User Authentication/Account Track

User Authentication

External Server

Public Access

Allow

Ticket Hold Time (Active Directory)

600

 min. (1-600)

Account Track

On

Account Track Method

Account Name & Password

Synchronize User Authentication & Account Track

Synchronize

Number of Counters Assigned for Users

500

 (1-999)

Print without Authentication

Restrict

Apply

Clear

Item	Description	Preliminary inquiry
[User Authentication]	Select [External Server].	
[Public Access]	<p>Select whether to allow public user access.</p> <p>If [Allow] is selected, public users must press [Public User Access] in the login screen to log on to this machine.</p> <p>If [Allow (without Login)] is selected, the initial screen will appear if a public user has logged on. This machine can be used without completing an authentication process.</p>	Do you wish to permit public user access?

Item	Description	Preliminary inquiry
[Account Track]	To use account track, select [On]. Before [On] can be selected, specify the authentication method, and then register accounts from the [Account Track List] page.	Do you wish to use account track?
[Synchronize User Authentication & Account Track]	To synchronize user authentication and account track and manage users for each account, select [Synchronize].	Do you wish to syn-chronize user authentication and account track set-tings?

[External Server List]

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [External Server List] - [Edit] - [NDS].

The screenshot shows the PageScope Web Connection Administrator interface. At the top, there is a user bar for 'Administrator' with a 'Log out' button. Below this, a status bar shows 'Ready' for both the system and the printer. The main navigation bar includes tabs for 'System', 'Security', 'Job', 'Print', 'Storage', 'Address', and 'Network'. The 'Security' tab is selected, and the left sidebar shows a tree view with 'Authentication' expanded, leading to 'External Server List'. The main content area is titled 'External Server (NDS)' and contains a table with one entry:

No.	Name	Server Type	Default Tree	Default Context
1	<input type="text"/>	NDS over TCP/IP	<input type="text"/>	<input type="text"/>

At the bottom right of the table, there are three buttons: 'Apply', 'Clear', and 'Cancel'.

Item	Description	Preliminary inquiry
[Name]	Type in the name of the external authentication server. (up to 32 characters)	
[Server Type]	Select [NDS over TCP/IP].	
[Default Tree]	Type in the default NDS tree name. (up to 63 characters)	
[Default Context]	Type in the default NDS context name. (up to 191 characters)	

[Default Function Permission]

Specify the default function permissions for users authenticated with the external server.

For details, refer to "[Default Function Permission]" on page 6-14.

Limiting users of this machine (LDAP authentication)


This machine can be configured with LDAP authentication in order to restrict its use.

These settings must be specified if you wish to use the LDAP server for user authentication. The operations available to each user can be restricted.

Specify settings according to the following flowchart. Clicking a step in the flowchart displays the description of the corresponding procedure.



In order to use the same LDAP server for both user authentication and destination searches, the certificate verification settings (specified in the [External Server List] page) for the LDAP server for user authentication must be specified based on the certificate verification settings (specified in [Network] - [LDAP Settings] - [LDAP Server Registration]) for the LDAP server for destination searches. For details on LDAP server settings for destination searches and certificate verification settings, refer to "[LDAP Server Registration]" on page 8-201.

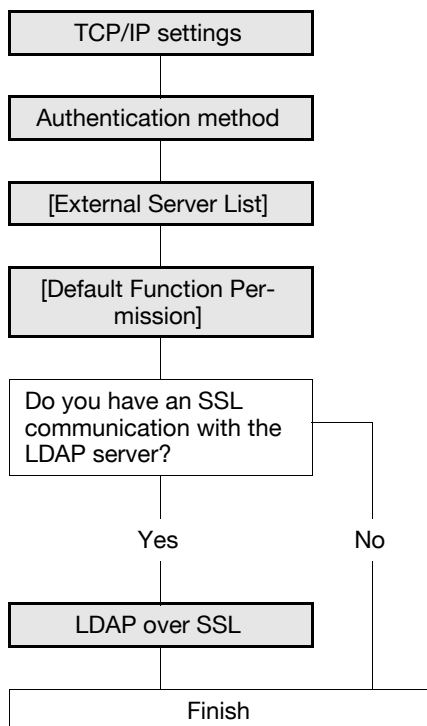

TCP/IP settings

Specify settings to use this machine in a TCP/IP network environment.

Authentication method

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [General Settings].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

General Settings

User List

Account Track List

External Server List

Default Function Permission

Public User Registration

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

User Authentication/Account Track

User Authentication

External Server

Public Access

Allow

Ticket Hold Time (Active Directory)

600 min. (1-600)

Account Track

On

Account Track Method

Account Name & Password

Synchronize User Authentication & Account Track

Synchronize

Number of Counters Assigned for Users

500 (1-999)

Print without Authentication

Restrict

Apply

Clear

Item	Description	Preliminary inquiry
[User Authentication]	Select [External Server].	
[Public Access]	<p>Select whether to allow public user access.</p> <p>If [Allow] is selected, public users must press [Public User Access] in the login screen to log on to this machine.</p> <p>If [Allow (without Login)] is selected, the initial screen will appear if a public user has logged on. This machine can be used without completing an authentication process.</p>	Do you wish to permit public user access?
[Account Track]	<p>To use account track, select [On].</p> <p>Before [On] can be selected, specify the authentication method, and then register accounts from the [Account Track List] page.</p>	Do you wish to use account track?
[Synchronize User Authentication & Account Track]	To synchronize user authentication and account track and manage users for each account, select [Synchronize].	Do you wish to synchronize user authentication and account track settings?

[External Server List]

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [External Server List] - [Edit] - [LDAP].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

External Server (LDAP)

General Settings

No.

1

User List

Name

Account Track List

Server Type

LDAP

External Server List

Server Address

Default Function Permission

Port Number

389 (1-65535)

Public User Registration

SSL

Disable

ID & Print Settings

Port Number (SSL)

336 (1-65535)

Authentication Device Settings

Search Base

PKI Settings

Timeout

60 sec. (5-300)

IPsec

Authentication Method

Digest-MD5

IP Address Filtering

Search Attribute

uid

IEEE802.1X

Limiting Access to Destination

Auto Logout

Apply

Clear

Cancel

Item	Description	Preliminary inquiry
[Name]	Type in the name of the external authentication server. (up to 32 characters)	
[Server Address]	<p>Specify the LDAP server address.</p> <p>Format: *.*.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>If the DNS server has already been configured, enter the host name instead.</p> <p>If IPv6 is being used, specify the IPv6 address.</p>	Server address

Item	Description	Preliminary inquiry
[Port Number]	Type in the port number. Default: 389	
[Search Base]	Specify the starting point for searching directories in the LDAP server. (up to 255 characters) Searches are performed by also including the sub-directories of the specified starting point.	
[Timeout]	Specify the length of time until the LDAP search times out.	
[Authentication Method]	Select the authentication method for logging on to the LDAP server. Select the same authentication method as that used on the LDAP server.	Server authentication method
[Search Attribute]	Specify the attributes to be used to search for user accounts. (up to 64 characters; The only symbol allowed is a hyphen (-).)	

[Default Function Permission]

Specify the default function permissions for users authenticated with the external server.

For details, refer to “[Default Function Permission]” on page 6-14.

LDAP over SSL

[External Server List]

In Administrator mode of PageScope Web Connection, click [Security] tab - [Authentication] - [External Server List] - [Edit] - [LDAP].

Item	Description	Preliminary inquiry
[SSL]	To apply SSL encryption to communications between this machine and the LDAP server, select [Enable].	Does the server support SSL?
[Port No.(SSL)]	Type in the port number to be used for SSL communications.	Server port number

LDAP settings

In Administrator mode of PageScope Web Connection, click [Security] tab - [PKI Settings] - [Protocol Settings] - [LDAP] - [Edit].

Item	Description	Preliminary inquiry
[Validity Period]	Select whether to check that the server certificate is within the validity period.	
[CN]	Select whether to check that the CN of the server certificate matches the server address.	
[Key Usage]	Select whether to check that the server certificate is used according to the purpose approved by the issuer.	

Item	Description	Preliminary inquiry
[Chain]	<p>Select whether to check that the server certificate chain (certification path) is correct.</p> <p>The chain is validated by referencing the external certificates managed on this machine. For details, refer to “[External Certificate]” on page 8-79.</p>	
[Check CRL Expiration]	<p>Select whether to use CRL (Certificate Revocation List) to check that the server certificate has not expired.</p>	
[Check OCSP Expiration]	<p>Select whether to use OCSP (Online Certificate Status Protocol) to check that the server certificate has not expired.</p>	

[Validate Certificate]

In Administrator mode of PageScope Web Connection, click [Security] tab - [PKI Settings] - [Validate Certificate].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

> Authentication

> ID & Print Settings

> Authentication Device Settings

> PKI Settings

> Device Certificate

> SSL/TLS Settings

> Protocol Settings

> External Certificate

> Validate Certificate

> IPsec

> IP Address Filtering

> IEEE802.1X

> Limiting Access to Destination

> Auto Logout

> Administrator Password

Certificate Verification Settings

Certificate Verification

Disable

Timeout

10

sec. (5-300)

OCSP Service

Disable

URL

Proxy Settings

Proxy Server Address

0.0.0.0

Proxy Server Port Number

8080

(1-65535)

User Name

Password

☐ Change Password

No Proxy for following domain

Apply

Clear

Item	Description	Preliminary inquiry
[Certificate Verifica- tion]	To verify the server certifi- cate, select [Enable].	
[Timeout]	Specify the length of time until expiration date confir- mation times out.	Do you wish to con- firm the expiration date?
[OCSP Service]	To use the OCSP service, select [Enable].	

Item	Description	Preliminary inquiry
[URL]	<p>Type in the URL of the OCSP service. (up to 511 characters)</p> <p>If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.</p>	
[Proxy Server Address]	<p>To confirm the expiration date via a proxy server, enter its address.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>If the DNS server has already been configured, you can enter the host name instead.</p> <p>When using IPv6, you can specify the IPv6 address.</p>	Server address
[Proxy Server Port Number]	Type in the port number of a proxy server.	Server port number
[User Name]	Type in the user name to log in to the proxy server. (up to 63 characters)	
[Change Password]	Select this check box to change the password.	
[Password]	Type in the password to log in to the proxy server. (up to 63 characters)	

Item	Description	Preliminary inquiry
[No Proxy for following domain]	<p>To enable expiration date confirmation, specify an address that does not use the proxy server depending on your environment.</p> <p>If the DNS server has already been configured, enter the host name instead.</p> <p>If IPv6 is being used, specify the IPv6 address.</p>	

Network Printing

7


Network Connection

Theory

To connect your printer in a TCP/IP network environment, you must make sure that the internal network addresses in the printer have been set.



In many cases, you have to enter only a unique IP address. However, you may also have to enter a subnet mask and/or a gateway (router) address, depending on your network configuration requirements.

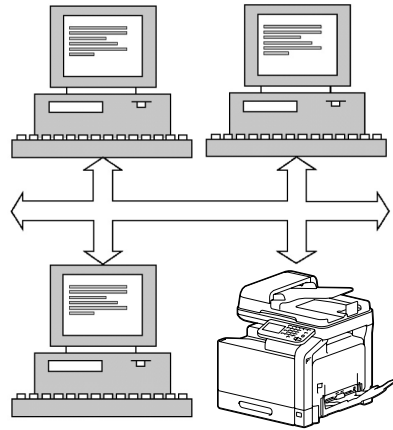

Making the Connection

Ethernet Interface

An RJ45 connector can be used as the Ethernet interface for this machine.

When connecting your machine to an Ethernet network, the tasks you perform depend on how you plan to set the machine's IP (Internet Protocol) address. Machines are shipped with a preset IP address, subnet mask, and gateway.

- **IP Address**—A unique identifier for each device on a TCP/IP network.
- **Subnet Mask**—A filter used to determine what subnet an IP address belongs to.
- **Gateway**—A node on a network that serves as an entrance to another network.

Since the IP address for each PC and machine on your network must be unique, you usually need to modify this preset address so it doesn't conflict with any other IP address or your network or any attached network. You can do this in one of two ways. Each is explained in detail in the following sections.

- Using DHCP
- Setting the address manually

Using DHCP

If your network supports DHCP (Dynamic Host Configuration Protocol), the machine's IP address will be automatically assigned by the DHCP server when you turn on the printer. (Refer to "Network Printing" on page 7-6 for a description of DHCP.)



If your machine is not automatically assigned an IP address, verify that DHCP is enabled on the machine ([Utility Settings] – [User Settings] – [Print Settings] – [Print Reports] – [Configuration Page]). If it is not enabled, you can enable it in the [Utility Settings] – [Admin Settings] – [Ethernet] – [TCP/IP] – [DHCP] menu.

- 1 Connect your machine to the network.

When using an Ethernet cable, plug the RJ45 connector into the Ethernet interface port of the machine.

- 2 Turn on your PC and machine.

- 3 After "Welcome!" appears in the control panel of the machine, print the configuration page, and then check the IP address that has been specified.
 - Print the configuration page by pressing the buttons indicated below. [Utility Settings] – [User Settings] – [Print Settings] – [Print Reports] – [Configuration Page]
- 4 Install the printer driver and utilities.



If the machine cannot be connected to a DHCP server, an IP address within the range between 169.254.0.0 and 169.254.255.255 is automatically set.

Setting the Address Manually

You may also manually change the machine's IP address, subnet mask, and gateway by using the following instructions. (See Chapter 5 "Understanding the Ethernet Configuration Menus" for more information.)



When manually setting the IP address, turn off DHCP, BOOTP and ARP/PING first. In addition, when the IP address is changed, add a new port or reinstall the printer driver.



CAUTION

You should always notify your network's administrator before changing the machine's IP address.

- 1 Turn on your PC and machine.
- 2 After "Welcome!" appears in the control panel of the machine, specify the IP address.
 - Specify the IP address by pressing the buttons indicated below. [Utility Settings] – [Admin Settings] – [Ethernet] – [TCP/IP] – [IP Address]
 - Change the setting, and then press [OK].
- 3 If you don't set the subnet mask or gateway, go to step 5.

If you don't set the subnet mask, but you set the gateway, go to step 4.

Specify the subnet mask for this machine.

- Specify the subnet mask by pressing the buttons indicated below. [Utility Settings] – [Admin Settings] – [Ethernet] – [TCP/IP] – [Subnet Mask]
- Change the setting, and then press [OK].

4 If you don't set the gateway, go to step 5.

Specify the gateway address for this machine.

- Specify the gateway address by pressing the buttons indicated below.
[Utility Settings] – [Admin Settings] – [Ethernet] – [TCP/IP] – [Gateway]

- Change the setting, and then press [OK].

5 After specifying administrator settings, reset the printer so that it can print.

6 After "Welcome!" appears in the control panel of the machine, print the configuration page, and then check the IP address, subnet mask and gateway address that has been specified.

- Print the configuration page by pressing the buttons indicated below. [Utility Settings] – [User Settings] – [Print Settings] – [Print Reports] – [Configuration Page]

7 Install the printer driver and utilities.

Network Printing

Network printing terms are described below.

- AppleTalk
- Bonjour
- BOOTP
- DDNS
- DHCP
- FTP
- HTTP
- IEEE802.1X
- IPP
- IPsec
- IPv6
- IPX/SPX
- LLMNR
- LLTD
- LPD/LPR
- SLP
- SMTP
- SNMP
- Port9100
- WSD print

This chapter contains descriptions on the network printing terms and the IPP printing methods.

AppleTalk

A generic name for the protocol suite developed by Apple Computer for computer networking.

Bonjour

Macintosh network technology for automatically detecting devices connected to the network and for specifying settings. Previously called “Rendezvous”, the name was changed to “Bonjour” starting with Mac OS X 10.4.

BOOTP

BOOTP (Bootstrap Protocol) is an Internet protocol that enables a diskless workstation to discover (1) its own IP address, (2) the IP address of a BOOTP server on the network, and (3) a file that can be loaded into memory to boot the workstation. This enables the workstation to boot without requiring a hard or floppy disk drive.

DDNS (Dynamic DNS)

DDNS (Dynamic Domain Name System) is technology for automatically assigning dynamically assigned IP addresses to fixed domains.

The recent availability of always-on Internet connections has resulted in an increased number of users turning their home computers into publicly accessible Web servers. The IP address supplied by the Internet service provider changes with each connection, complicating public access to the Internet.

By using a DDNS service, home computers can normally be accessed with a fixed host name.

DHCP

DHCP (Dynamic Host Configuration Protocol) is a protocol for assigning dynamic IP addresses to devices on a network. With dynamic addressing, a device can have a different IP address every time it connects to the network. In some systems, the device's IP address can even change while it is still connected. DHCP also supports a mix of static and dynamic IP addresses. Dynamic addressing simplifies network administration because the software keeps track of IP addresses rather than requiring an administrator to manage the task. This means that a new computer can be added to a network without the hassle of manually assigning it a unique IP address.

FTP

Abbreviation for File Transfer Protocol. A protocol for transferring files over the Internet or an intranet on the TCP/IP network.

HTTP

HTTP (HyperText Transfer Protocol) is the underlying protocol used by the World Wide Web. It defines how messages are formatted and transmitted, and what actions web servers and browsers should take in response to various commands. For example, when you enter a URL in your browser, this actually sends an HTTP command to the Web server directing it to fetch and transmit the requested web page.

IEEE802.1X

This protocol for determining the user authentication method within the LAN is compatible with wireless and wired LANs. Using the RADIUS server for user authentication, communication with authenticated users is permitted while all communication from unauthenticated clients is blocked, excluding authentication requests.

IPP

IPP (Internet Printing Protocol) is a protocol for end users' most common printing situations over the Internet. It allows users to find out about a printer's capabilities, submit print jobs to a printer, determine the status of the printer or print job, and cancel a previously submitted print job.

For more information on using IPP, See "Printing via IPP (Internet Printing Protocol)" on page 7-11.

IPsec

The security technology that is used with TCP/IP. A service with enhanced security can be provided by specifying the encryption of transmission packets and the authentication protocol.

IPv6

Abbreviation for Internet Protocol version 6.

A protocol that has been prepared to replace the currently used IPv4 protocol in response to increase in the number of devices that use the Internet.

Additional improvements include 128-bit IP addresses and added security features.

IPX/SPX

IPX/SPX (Internetwork Packet Exchange/Sequenced Packet Exchange) is a networking protocol developed by Novell. It was used mainly in NetWare environments as the general LAN protocol, where TCP/IP has become widespread.

LLMNR

The acronym for Link-local Multicast Name Resolution, which is a protocol used for the name resolution of neighboring computers. LLMNR uses simple exchange of request and response messages to perform name resolution of neighboring computers without configuring DNS server or clients.

LLTD

The acronym for Link Layer Topology Discovery, which is a technology investigating how the devices on the network are connected. Network devices with this technology are recognized by Windows 7/Vista/Server 2008 on the network, and displayed as icons configured on the network map of Windows 7/Vista.

LPD/LPR

LPD/LPR (Line Printer Daemon/Line Printer Request) is a platform-independent printing protocol that runs over TCP/IP. Originally implemented for BSD UNIX, its use has spread into the desktop world and is now an industry standard.

SLP

Traditionally, in order to locate services on the network, users had to supply the host name or network address of the machine providing the desired service. This has created many administrative problems.

However, SLP (Service Location Protocol) simplifies the discovery and use of network resources such as printers by automating a number of network services. It provides a framework that allows networking applications to discover the existence, location, and configuration of networked services.

With SLP users no longer need to know the names of network hosts. Instead, they need to know only the description of the service they are interested in. Based on this description, SLP is able to return the URL of the desired service.

Unicast, Multicast, and Broadcast

SLP is a unicast and a multicast protocol. This means that messages can be sent to one agent at a time (unicast) or to all agents (that are listening) at the same time (multicast). However, a multicast is not a broadcast. In theory, broadcast messages are “heard” by every node on the network. Multicast differs from broadcast because multicast messages are only “heard” by the nodes on the network that have “joined the multicast group.”

For obvious reasons network routers filter almost all broadcast traffic. This means that broadcasts that are generated on one subnet will not be “routed” or forwarded to any of the other subnets connected to the router (from the router’s perspective, a subnet is all machines connected to one of its ports). Multicasts, on the other hand, are forwarded by routers. Multicast traffic from a given group is forwarded by routers to all subnets that have at least one machine that is interested in receiving the multicast for that group.

SMTP

SMTP (Simple Mail Transfer Protocol) is a protocol for sending e-mail.

This protocol was originally used to send e-mail between servers; however, currently client e-mail software use it to also send e-mail to servers using POP.

SNMP

SNMP (Simple Network Management Protocol) is actually a set of protocols for managing complex networks. SNMP works by sending messages to different parts of a network. SNMP-compliant devices, called agents, store data about themselves in Management Information Bases (MIBs) and return this data to the SNMP requesters.

Port 9100

When printing through a network, TCP/IP port number 9100 can be used to send raw data.

Web Service Print

Printing is possible using the WSD (Web Service on Devices) function installed in Windows 7/Vista/Server 2008/Server 2008 R2. A connection supports WSD, detects the printer on the network automatically and connects. Specifying a WSD printer when printing from Windows Vista/7/Server 2008/Server 2008 R2 allows printing using Web service for communication.

Printing via IPP (Internet Printing Protocol)



You must have administrator privileges in order to install the printer driver.



If the [User Account Control] window appears when installing on Windows Vista/7/Server 2008/Server 2008 R2, click the [Continue] button or the [Yes] button.



For IPP printing, specify the network setting. Refer to “Making the Connection” on page 7-3 and “IPP” on page 7-8.

With Windows Server 2008/Server 2008 R2

When using Windows Server 2008/Server 2008 R2, settings must be specified in the operating system before the printer driver is installed.

- 1 Click the [Start] button.
- 2 Point to [Administrative Tools], and then click [Server Manager].



If the [User Account Control] dialog box appears, click the [Continue] button or the [Yes] button.

- 3 In the [Server Manager] main window, click [Add Features] in the [Features Summary] section.
- 4 Select the [Internet Printing Client] check box to install the feature.
- 5 Restart the computer.

Adding an IPP Port using the Drivers CD/DVD

- 1 Insert the Drivers CD/DVD in the CD/DVD drive of your computer. The installer starts up.




If Windows Vista/7/Server 2008/Server 2008 R2 is being used, click [Run AutoRun.exe] in the [AutoPlay] dialog box that appears when the CD/DVD is inserted.



If the installer does not start up automatically, double-click the [AutoRun.exe] icon on the CD/DVD.

- 2 Click [Printer Install].
- 3 Click [AGREE].
- 4 Click [Next].
- 5 Select [Install printers/MFPs], and then click [Next].


6 The connected printers are detected. Select this machine.

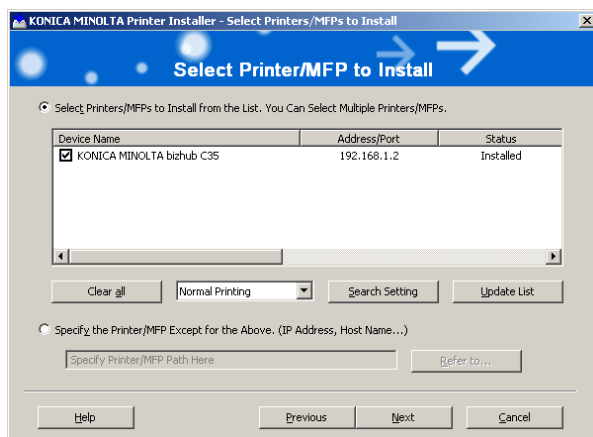


■ [Search Setting]: To search for printers on other networks, click this button.

■ [Update List]: To update the printer information, click this button.

7 Select [Internet Printing] as the printing method from the pull-down list, and then click [Next].

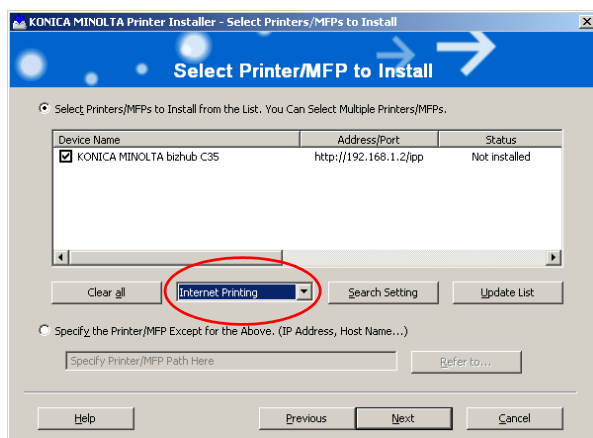


- 8 In the [Confirm Installation Settings] dialog box, click [Install].

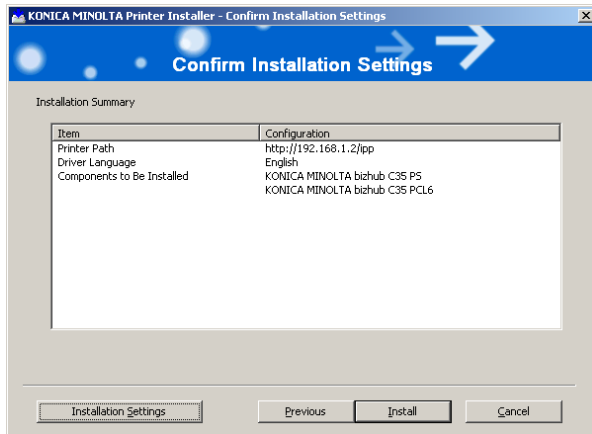

- [Installation Settings]: To change the settings, click this button.

- 9 Click [Finish].

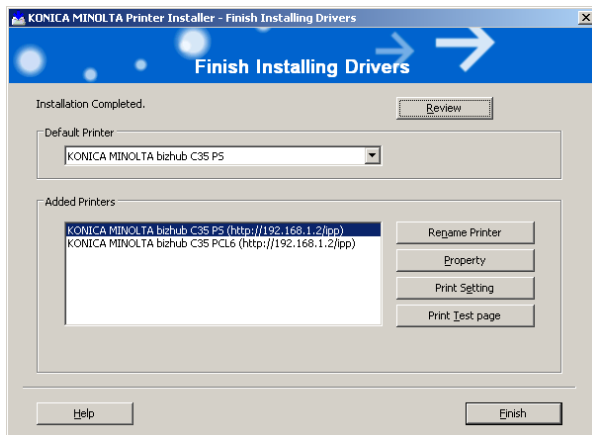


This completes the installation of the printer driver.

Adding an IPP Port using Add Printer Wizard – Windows Server 2003/XP/2000


- For Windows Server 2003/XP: Click [Start], select [Printers and Faxes], and then click [Add a Printer].
- For Windows 2000: Click [Start], point to [Settings], click [Printers], and then click [Add Printer].

- 1 In the second dialog box, select the [Network Printer] radio button, and then choose [Next].

Windows Server 2003/XP

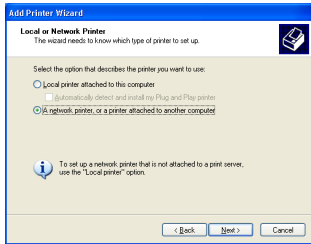


Windows 2000

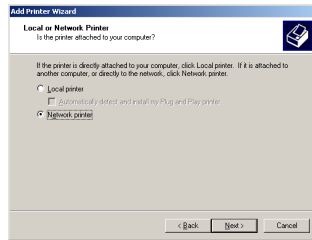


- 2 In the URL field in the next dialog box, enter the machine's network path-name in one of the following formats, and then choose [Next]:

- `http://ipaddress/ipp`
- `http://ipaddress:80/ipp`
- `http://ipaddress:631/ipp`

Windows Server 2003/XP

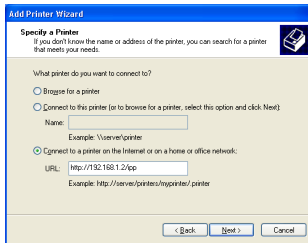

Windows 2000

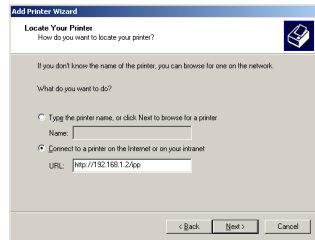


If your system cannot connect to the machine, the following message appears:

- **Windows Server 2003/XP**—“Windows cannot connect to the printer. Either the printer name was typed incorrectly, or the specified printer has lost its connection to the server. For more information, click Help.”
- **Windows 2000**—“Could not connect to the printer. You either entered a printer name that was incorrect or the specified printer is no longer connected to the server. Click Help for more information.”


3 Windows Server 2003/XP—Go to step 4.

Windows 2000—If you entered a valid path in the previous step, the following message displays: “The server on which the KONICA MINOLTA bizhub C35 printer resides does not have the correct printer driver installed. If you want to install the driver on your local computer, click OK.” The reason for this is that you do not yet have a printer driver installed. Choose [OK].

4 Choose [Have Disk].

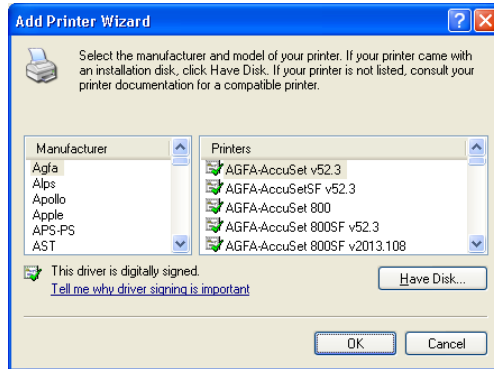


5 Choose [Browse].

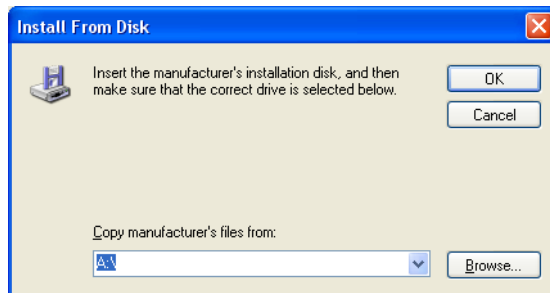


6 Locate the directory on the CD/DVD where the printer driver files are located and then click [Open].


7 Click [OK].

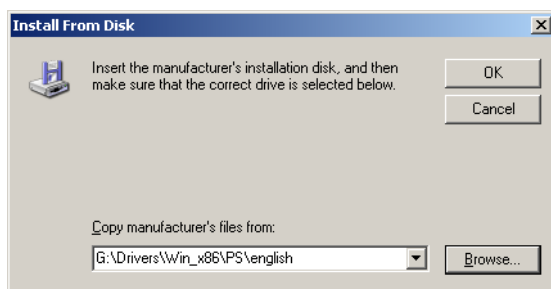


8 Click [OK].

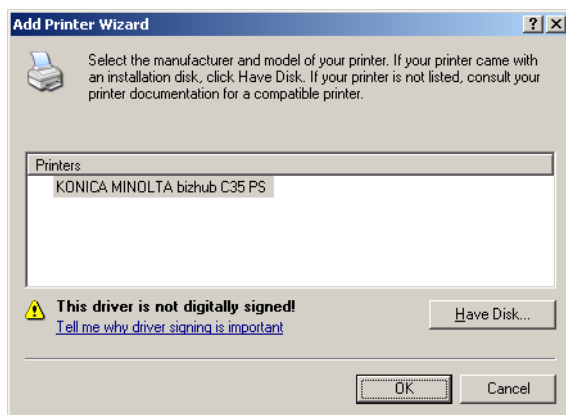

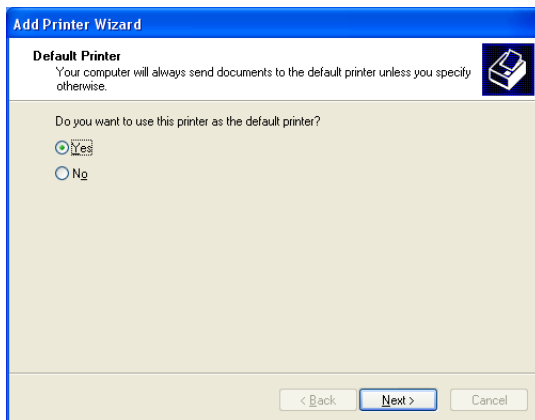

- 9 Select whether the machine is to be used as the default printer, and then click [Next].

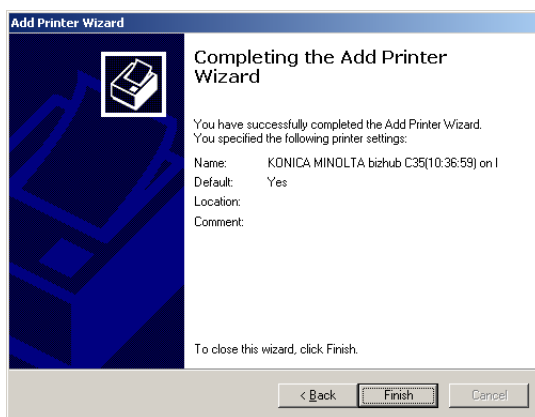


- 10 Click [Finish].




Adding an IPP Port using Add Printer Wizard – Windows Vista/7/Server 2008/Server 2008 R2

- 1 Click [Start], and then click [Control Panel].
- 2 Click [Printer] under [Hardware and Sound].
 -  When using Windows 7, click [View devices and printers] under [Hardware and Sound].
 -  When using Windows Server 2008 R2, click [View devices and printers] under [Hardware].
- 3 Click [Add a printer].
- 4 In the dialog box click [Add a network, wireless or Bluetooth printer].

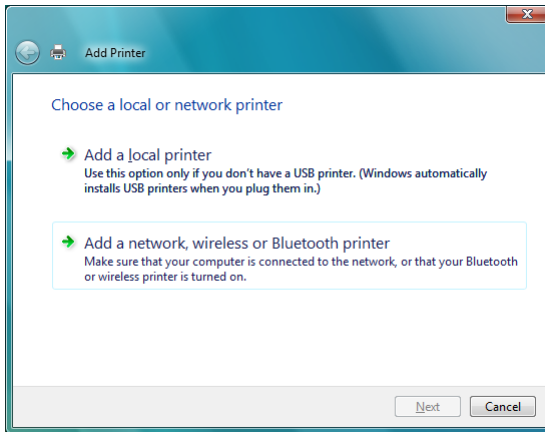


- 5 In the dialog box, click [The printer that I want isn't listed].

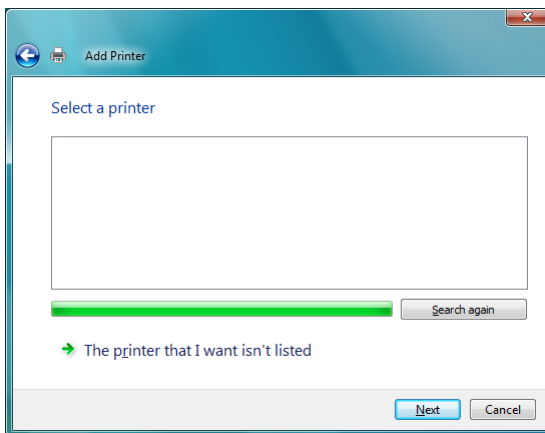


6 In the URL field in the next dialog box enter the machine's network path-name in one of the following formats and then choose [Next]:

- `http://ipaddress/ipp`
- `http://ipaddress:80/ipp`
- `http://ipaddress:631/ipp`

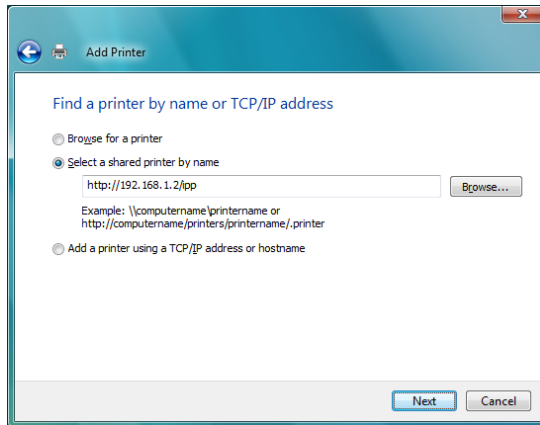


If your system cannot connect to the machine, the following message appears: "Windows cannot connect to the printer. Make sure that you have typed the name correctly, and that the printer is connected to network."

7 Click [Have Disk].

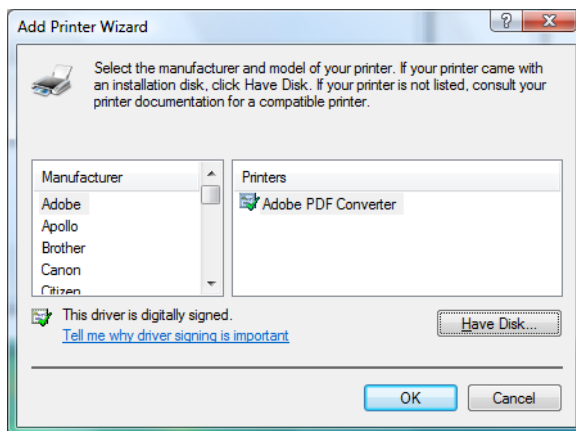


8 Click [Browse].

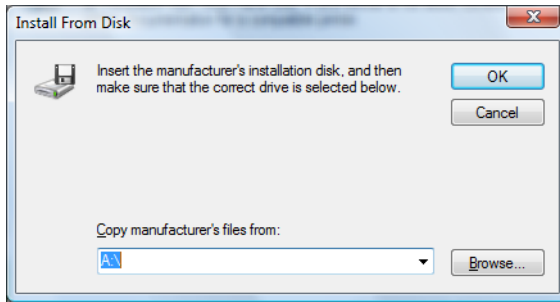


9 Locate the directory on the CD/DVD where the printer driver files are located and then click [Open].


10 Click [OK].

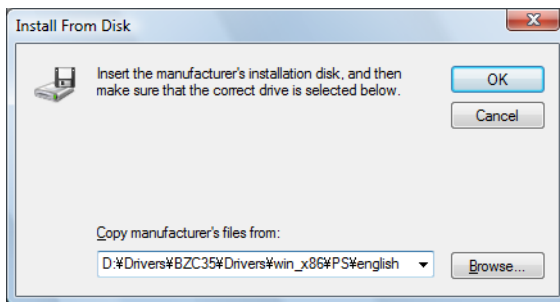


11 Click [OK].

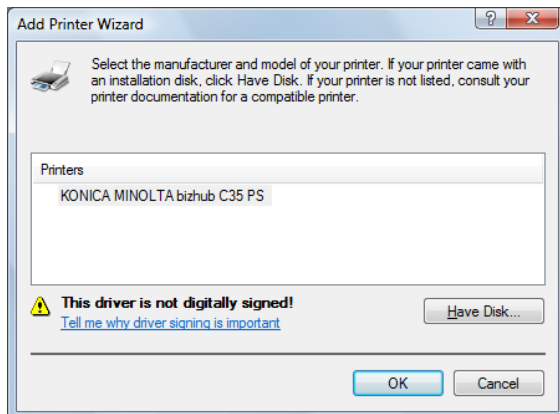

12 Click [Next].

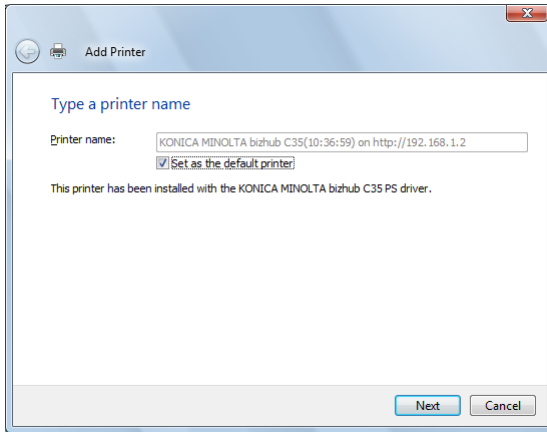

13 Click [Finish].

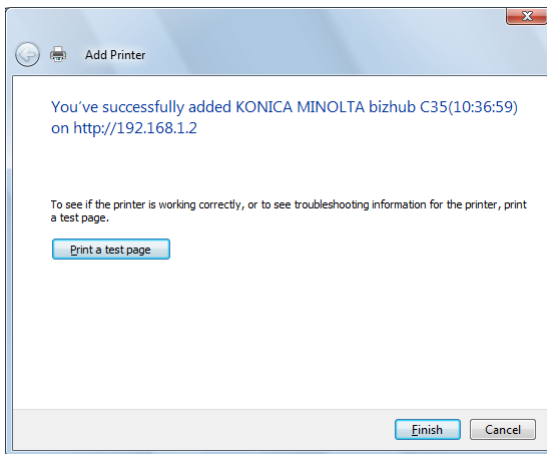

Printing via Web Service Print Function

In Windows Vista/7/Server 2008/Server 2008 R2, printers on the network that support Web Service print can be detected and installed.



You must have administrator privileges in order to install the printer driver.



Before proceeding with the installation, be sure to exit all running applications.



If the [User Account Control] window appears when installing on Windows Vista/7/Server 2008/Server 2008 R2, click the [Continue] button or the [Yes] button.



For Web Service print, specify the network setting. Refer to “Making the Connection” on page 7-3 and “Web Service Print” on page 7-10.

With Windows Server 2008/Server 2008 R2

When using Windows Server 2008/Server 2008 R2, settings must be specified in the operating system before the printer driver is installed.

1 Click the [Start] button.

2 Point to [Administrative Tools], and then click [Server Manager].



If the [User Account Control] dialog box appears, click the [Continue] button or the [Yes] button.

3 In the [Server Manager] main window, click [Add Roles] in the [Roles Summary] section.

4 Select the [Print Services] or [Print and Document Services] check box to install the feature.

Making the printer driver known from the Network window

To use Web service print in Windows Vista/7/Server 2008/Server 2008 R2, install the printer driver before making it known to the computer with plug and play.

- 1** Install the printer driver for this machine.
Install the printer driver using the installer or Add Printer Wizard.
The printer driver can be installed in any port.
For details, refer to “Adding an IPP Port using Add Printer Wizard – Windows Vista/7/Server 2008/Server 2008 R2” on page 7-18.
- 2** Turn on the power of the machine while it is connected to the network.
 - Since the printer is searched for, be sure to connect the machine to the network.
- 3** To use the Web service print, check that [Network discovery] is enabled in [Network and Sharing Center] on the computer.
- 4** Open the [Network] window.
 - In Windows Vista/Server 2008, click [Start], and [Network].
 - In Windows 7/Server 2008 R2, open [Computer] and click [Network].
If [Network] is not displayed in [Computer], click the [Network and Internet] category on the [Control Panel], and also click [View network computers and devices].

Connected computers and devices are detected.

- 5** Select the device name of the machine, and then click [Install] on the toolbar.
The printer driver for this machine is detected and the machine is ready to print.
- 6** After finishing the installation, make sure that the icon for the installed printer is displayed in the [Printers] or [Devices and Printers] window.



If the printer driver is not correctly installed, the driver must be updated using [Update Driver ...]. For details, refer to “Updating the driver after connecting this machine” on page 7-33.



*In Windows Vista/Server 2008, you can continue the task and specify the printer driver installation disk to install the printer driver if it is not installed in advance.
When the [Found New Hardware] window appears, follow the displayed messages to perform the procedure. For details, refer to “Adding a printer from the Network window” on page 7-24.*



In Windows 7/Server 2008 R2, you cannot specify the installation disk after the machine is connected to the computer. Install the printer driver in advance (Step 1).

Adding a printer from the Network window

In Windows Vista/Server 2008, you can add a Web service device using the addition function of the printer after connecting this machine.



In Windows 7/Server 2008 R2, a window for specifying an installation disk does not appear after the machine is connected to the computer. To connect this machine as described in "Making the printer driver known from the Network window" on page 7-23.

To use Web Service print, check that [Network discovery] is enabled in [Network and Sharing Center] on the computer.

1

Insert the Drivers CD/DVD in the CD/DVD drive of your computer.



Click [Run AutoRun.exe] in the [AutoPlay] dialog box that appears when the CD/DVD is inserted.



If the installer does not start up automatically, double-click the [Auto-Run.exe] icon on the CD/DVD.

The installer starts up.

2

Exit the installer.

3

Turn on the power of the machine while it is connected to the network.

■

Since the printer is searched for, be sure to connect the machine to the network.

4

To use Web Service print, check that [Network discovery] is enabled in [Network and Sharing Center] on the computer.

5

Open the [Network] window.

■

In Windows Vista/Server 2008, click [Start], and [Network].


■

In Windows 7, open [Computer] and click [Network].


■

If [Network] is not displayed in [Computer], click the [Network and Internet] category on the [Control Panel], and also click [View network computers and devices].


- 6 Select the device name of this machine, and then click [Install] on the tool-bar.

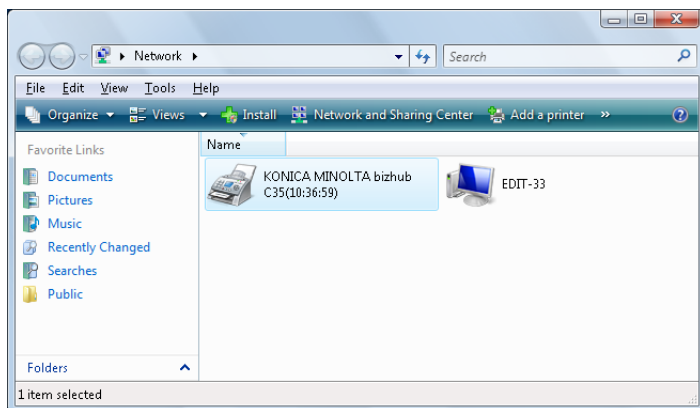


- 7 Click [Locate and install driver software (recommended)].

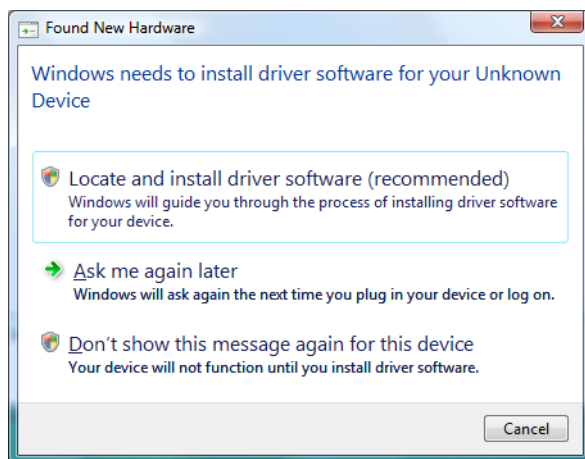


- 8 If Windows Vista is being used, go to step 8.
If Windows Server 2008 is being used, click [Don't search online].

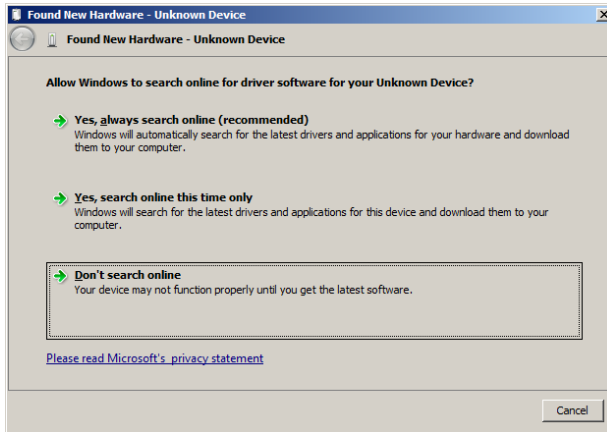

- 9 Click [Browse my computer for driver software (advanced)].

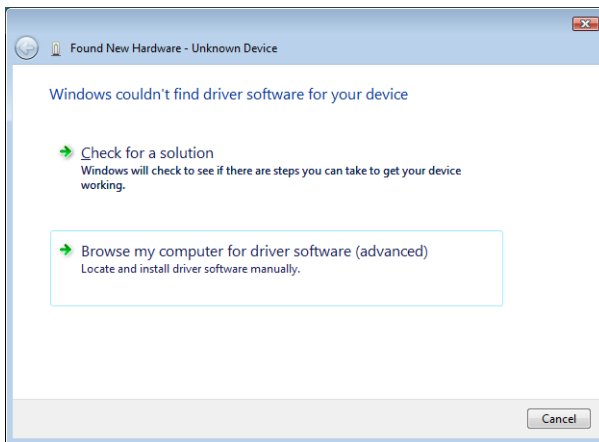

10 Click [Browse].

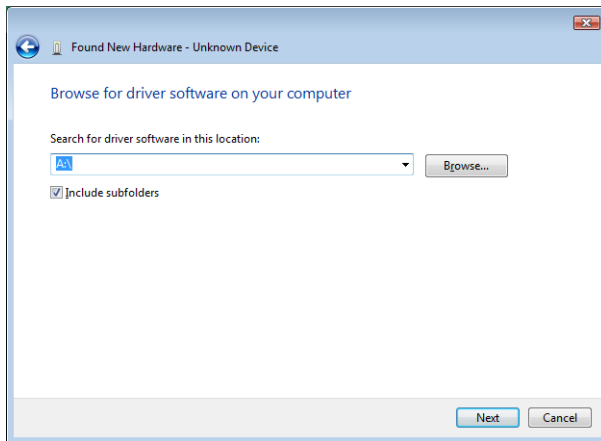

11 Locate the directory on the CD/DVD where the printer driver files are located and then click [OK].

12 Click [Next].

13 Click [Close].

Adding a printer using Add Printer Wizard

In Windows Vista/Server 2008, you can add a Web service device using the addition function of the printer after connecting this machine.



In Windows 7/Server 2008 R2, a window for specifying an installation disk does not appear after the machine is connected to the computer. To connect this machine as described in "Making the printer driver known from the Network window" on page 7-23.



Installing the driver to Windows Vista/Server 2008-based computers requires the administrator authority.

- 1 To use Web Service print, check that [Network discovery] is enabled in [Network and Sharing Center] on the computer.
- 2 Insert the Drivers CD/DVD in the CD/DVD drive of your computer. The installer starts up.




Click [Run AutoRun.exe] in the [AutoPlay] dialog box that appears when the CD/DVD is inserted.




If the installer does not start up automatically, double-click the [Auto-Run.exe] icon on the CD/DVD.

- 3 Exit the installer.
- 4 Click [Start], click [Control Panel], and then click [Printers].
- 5 Click [Add a printer] on the toolbar.
- 6 In the dialog box, click [Add a local printer].

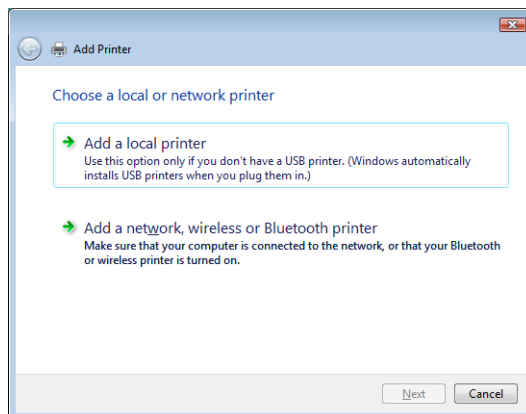


- 7 Click [Create a new port], and then select [Standard TCP/IP Port].

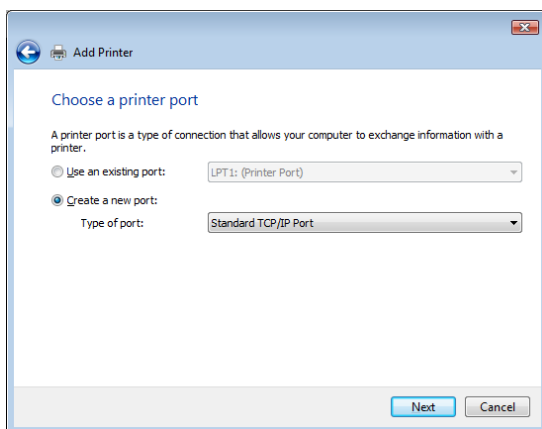


- 8 Click [Next].

- 9 Select [Web Services Device] and type the IP address for the machine, and then click [Next].

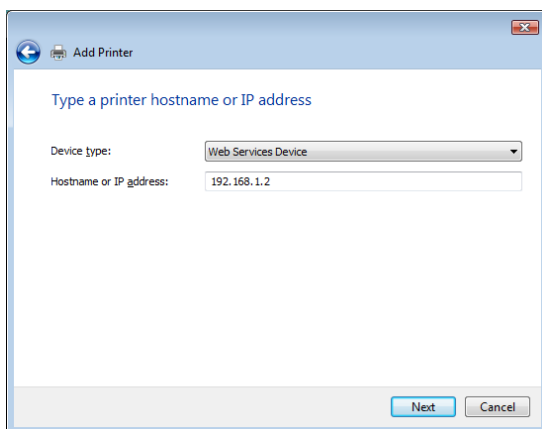


The [Found New Hardware] Wizard dialog box appears.


- 10 Click [Locate and install driver software (recommended)].

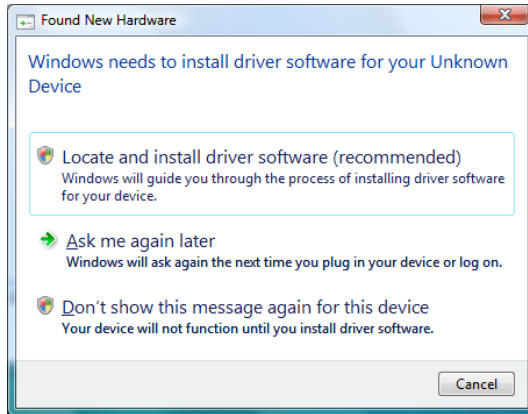


- 11 If Windows Vista is being used, go to step 12.
If Windows Server 2008 is being used, click [Don't search online].

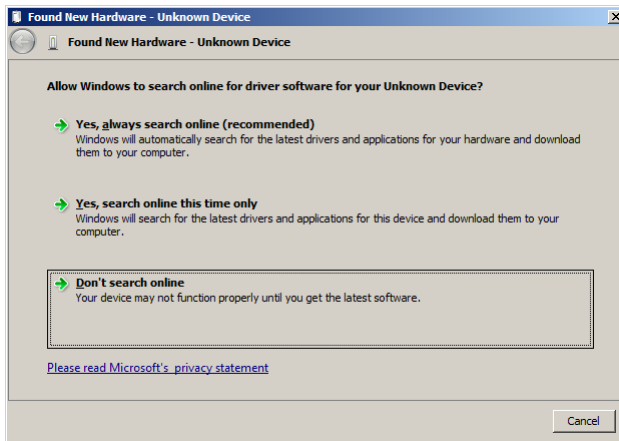

12 Click [Browse my computer for driver software (advanced)].

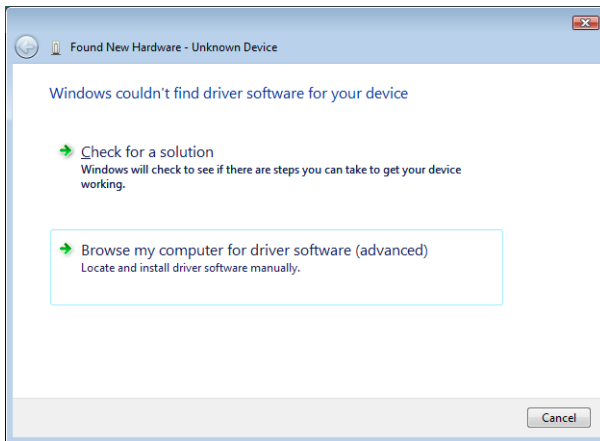

13 Click [Browse].

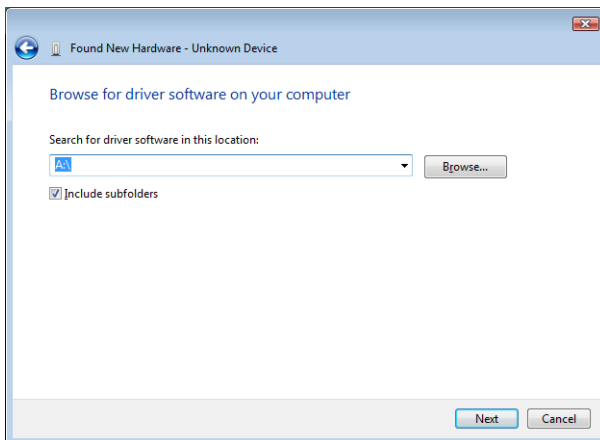


14 Locate the directory on the CD/DVD where the printer driver files and then click [OK].


15 Click [Next].

16 Click [Close].


17 Click [Next].

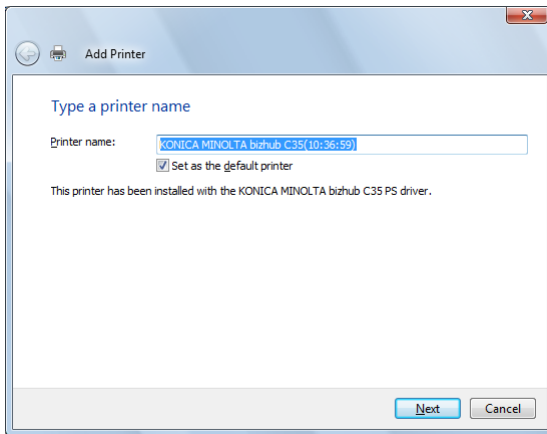

18 Select whether the printer driver is to be shared, and then click [Next].

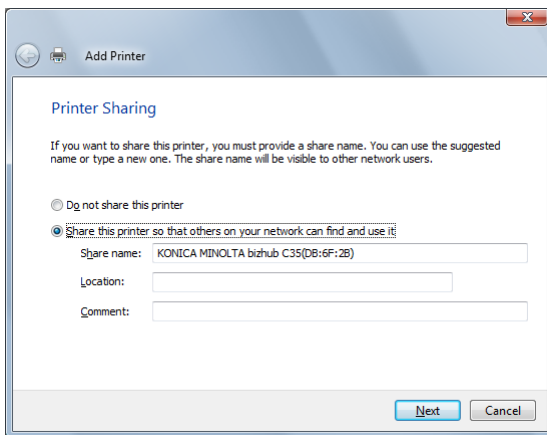

19 Click [Finish].

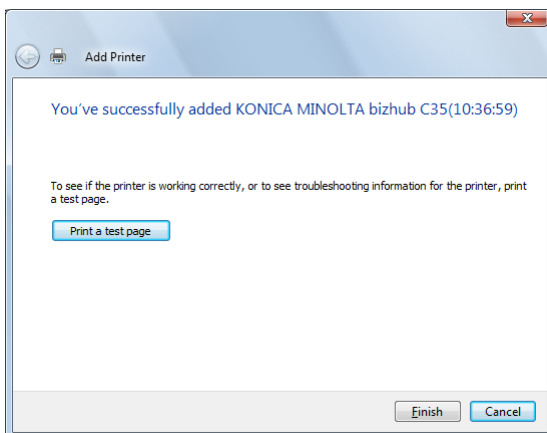

This completes the installation of the printer driver.

Updating the driver after connecting this machine

In Windows 7/Server 2008 R2, if this machine is connected without first installing the printer driver, the printer driver will not be correctly identified. If the printer driver is not correctly identified, the driver must be updated using [Update Driver].

- 1 Insert the Drivers CD/DVD in the CD-ROM/DVD drive of your computer. The installer starts up.



Click Run AutoRun.exe in the AutoPlay dialog box that appears when the CD/DVD is inserted.



If the installer does not start up automatically, double-click the Auto-Run.exe icon on the CD/DVD.

- 2 Exit the installer.
- 3 Open the [Devices and Printers] window.
 - Open the [Control Panel], select [Hardware and Sound], and then click [View devices and printers].
 - When [Control Panel] is displayed in an icon view, double-click [Devices and Printers].

- 4 Right-click the device name of the machine that is under [Unspecified] and then click [Properties].
 - If [Unknown Device] appears instead of the device name of the machine, right-click to remove the device, and install the printer driver. To connect this machine as described in “Making the printer driver known from the Network window” on page 7-23.
- 5 In the [Hardware] tab, click [Properties].
- 6 In the [General] tab, click [Change Settings].
- 7 In the [Driver] tab, click [Update Driver...].
- 8 In the page in which to select how to search the driver software, click [Browse my computer for driver software anyway].
- 9 Click [Browse...].
- 10 Locate the directory on the CD/DVD where the printer driver files are located (for example: Drivers\Windows\color\Drivers\Win_x86\PS\english), and then click [OK].
- 11 Click [Next].
- 12 Follow the instructions on the pages that follow.
 - If the [Windows Security] window for verifying the publisher appears, click [Install this driver software anyway].
- 13 Click [Close].
- 14 After finishing the installation, make sure that the icon for the installed printer is displayed in the [Device and Printer] window.
- 15 Remove the CD-ROM from the CD-ROM drive.
This completes the printer driver updating.



*In Windows Vista/Server 2008, [Update Driver...] is also available. In Windows Vista/Server 2008, you can specify [Update Driver...] by opening [Properties] for this machine that is listed in [Other Devices] under [Device Manager].
To select [Device Manager], right-click [Computer] and then click [Properties]. Select it in the [Tasks] pane that appears.*

If the bit number differs between the server operating system and client operating system

If the bit number differs between the print server's running operating system and client computer's running operating system while Windows Server 2008/Server 2008 R2 is running on the print server, the additional driver may not be installed correctly on the print server.

To solve this problem, specify the setup information file (ntprint.inf) of the operating system with a different bit number when installing the additional driver on the print server.

The following describes how to install the additional driver by specifying a setup information file in a different computer from that the print server.



- Before starting this procedure, prepare to configure a different client computer from that of the print server and install the operating system that has a bit number different from that of the print server.
- On the print server side, the system drive of the client computer is assigned as the network drive. Configure the setting to share the drive to be assigned in advance.

Installing the Additional Driver

As an example, the following procedure describes the operations performed when Windows Server 2008 (32 bits) is running on the print server and Windows Vista (64 bits) is running on the client computer.

- 1 Specify the client computer (64 bits) drive installed with the operating system (normally, drive C) as a shared drive.




This setting is available for only PostScript driver.

- 2 From the print server (32 bits), map the client computer (64 bits) drive (for example, "C"), specified as a shared drive in step 1, as a network drive (for example, "Z").




This setting is available for only PostScript driver.

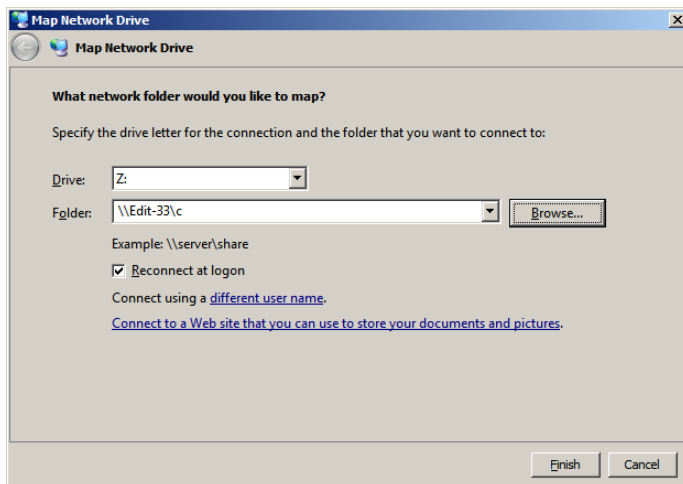

- 3 Install on the print server (32 bits) the driver for a 32-bit operating system.

- 4 Right-click the printer that was installed, and then click the appropriate menu command to display printer properties.

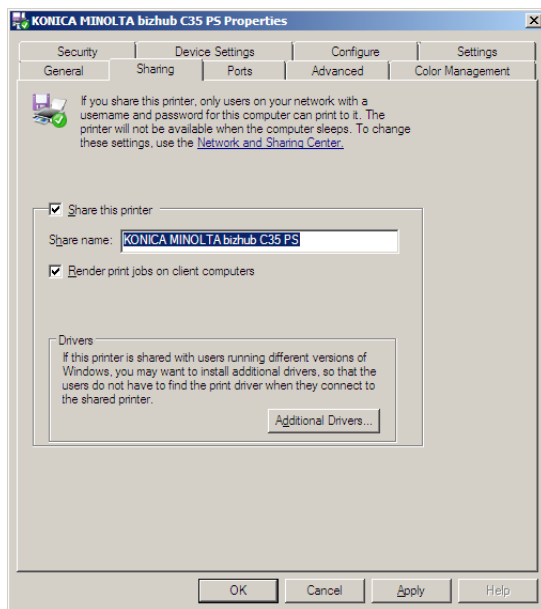


- 5 Select the [Sharing] tab, and then select the [Share this printer] check box.

- 6 Click [Additional Drivers].

The [Additional Drivers] dialog box appears.

- 7 Under [Processor], select the [x64] check box, and then click [OK].

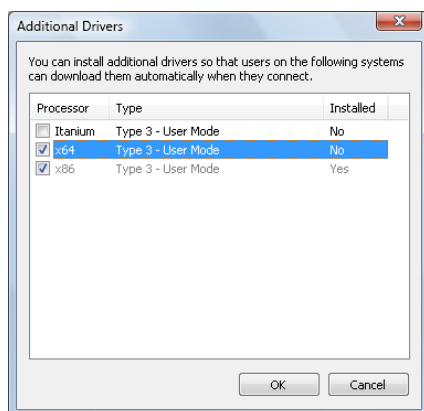


- 8 Specify the folder containing the driver for a 64-bit operating system.
A dialog box appears, requesting the location of the setup information file.
- 9 Click [Browse], and then select the setup information file (ntprint.inf) on the client computer mapped as a network drive.



This setting is available for only PostScript driver.

- Specify the file at the following path.
z:\Windows\System32\DriverStore\FileRepository\ntprint.inf_xxx
- In the path mentioned above, “z” indicates the mapped network drive. In addition, the characters indicated by “_xxx” at the end may differ depending on the driver version.
- Depending on the client computer being used, the setup information file may be stored in a different location. If there is a folder named “amd64” at the same level as “ntprint.inf”, specify the setup information file for a 64-bit operating system located within that folder. In addition, if the driver for a 32-bit operating system is to be installed, specify the setup information file in the folder named “i386” at the same level as “ntprint.inf”.

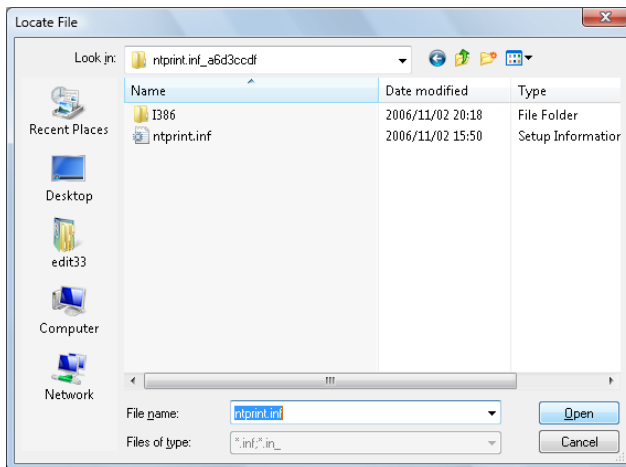

- 10 Click [Open].
The installation begins.
- 11 After the installation is completed, click [Close].
This completes the installation of the driver for a 64-bit operating system onto the print server (32 bits).

Troubleshooting

Symptom	Action
Some client functions are not available with the Point and Print feature when the server is running Windows Server 2008 /Windows Server 2008 R2/Server 2003 and the client computer is running Windows XP/Vista/2000/7.	Install the printer driver directly on the client computer.


Using PageScope Web Connection

8

About PageScope Web Connection

This chapter provides information on PageScope Web Connection, an HTTP (HyperText Transfer Protocol)-based web page that resides in your printer and that you can access using your Web browser.

This page gives you instant access to printer status and the most frequently used printer configuration options. Anyone on your network can access the printer using their web browser software. In addition, with the proper password, you can change the configuration of the printer without leaving your PC.

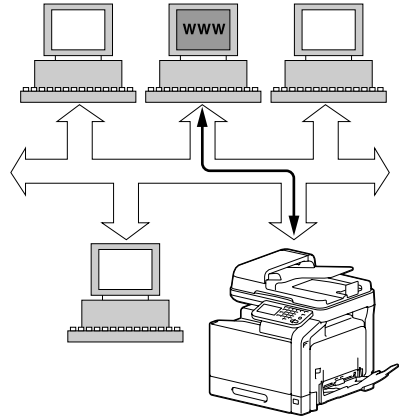

Users who are not given passwords by the administrator can still view the configuration settings and options but are not able to save or apply changes.

Display Language

The language used in the PageScope Web Connection screens is specified from the printer's control panel. For details on specifying the display language, refer to the Printer/Copier/Scanner User's Guide.

In addition, the language can be selected from the [Language] drop-down list in PageScope Web Connection. For details, refer to "Language Setting" on page 8-10.

Requirements

To use PageScope Web Connection, the following is required:

- Windows Server 2008 R2/Server 2008/Server 2003/Vista/XP/2000/7
Mac OS X 10.2.8/10.3/10.4/10.5/10.6
Red Hat Enterprise Linux 5, SUSE Linux Enterprise 10
- Microsoft Internet Explorer version 6.0 or later
Mozilla Firefox version 2.0 or later



You do not need an Internet connection.

- TCP/IP communication software (used by PageScope Web Connection) installed on your PC
- A network, to which both your PC and the printer are connected



You cannot access PageScope Web Connection using a local (USB) connection.

Setting Up the Printer Web Page

Setting up the printer web page to run on your network involves two basic steps:

- Determining the name or address of your printer
- Setting up the “no proxy” preferences in your browser software

Determining the Printer Name

The printer web page can be accessed in two ways:



The printer names can also be determined via WINS if the network supports it.

- Through the assigned name of the printer—This name comes from the IP host table (the filename is [hosts]) on the computer system and is usually assigned by the system administrator (for example, bizhub C35). It may be more convenient for you to use the printer name than the IP address.

Location of the Host Table on the PC

- Windows Server 2008 R2/Server 2008/Server 2003/XP/Vista/7
 \windows\system32\drivers\etc\hosts
- Windows 2000\
 winnt\system32\drivers\etc\hosts
- Through the printer's IP address—The IP address of your printer is a unique number and, therefore, may be the preferred identification to enter, especially if you have more printers active in your network. The printer's IP address is listed on the configuration page.

Location of the Configuration Page in the Printer's Configuration Menu

- [Utility/Counter] - [User Settings] - [Print Settings] - [Print Reports] - [Configuration Page] - [Print]

Setting Up Your Browser Software

Since your printer resides on your intranet and is not accessible beyond the firewall of your network, you must set up the proper “preferences” in your browser software. Your printer name or IP address must be added to the “no proxy” list in the preferences dialog box of the browser.



You need to do this procedure only once.


The sample screens below may be different from yours depending on software versions and operating systems in use.



Our examples represent the IP address of the printer with: xxx.xxx.xxx.xxx. Always enter your printer's IP address without leading zeros. For example, 192.168.001.002 should be entered as 192.168.1.2.

Internet Explorer (version 6.0 for Windows)


- 1 Start Internet Explorer.
- 2 From the [Tools] menu choose [Internet Options].
- 3 Select the [Connections] tab on the dialog box.
- 4 Choose the [LAN Settings] button to display the Local Area Network (LAN) Settings dialog box.
- 5 Select [Advanced] in Proxy server to open the Proxy Settings dialog box.
- 6 In the [Exceptions] text box, type a comma after the last entry and then type the printer name or the IP address of your printer.
- 7 Choose [OK] three times to return to the main browser window.
- 8 Enter the printer's IP address in the URL Address box to access the printer home page.

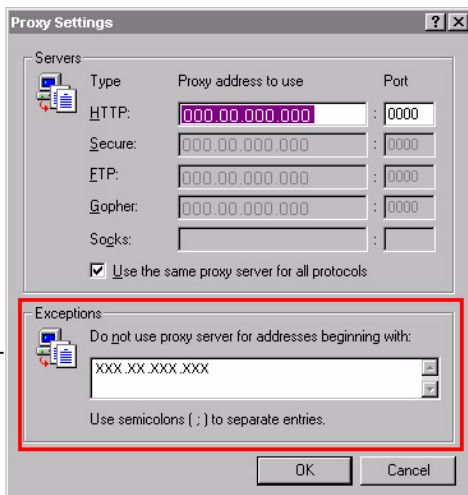

Address  http://192.168.1.2/

Mozilla Firefox (version 2.0 for Mac OS X 10.5)

- 1 Start Mozilla Firefox.
- 2 From the [Firefox] menu choose [Preferences].
- 3 Click [Advanced] at the top of the dialog box.
- 4 Click the [Network] tab.
- 5 In the [Connection] section, click [Settings].
The Connection Settings dialog box appears.
- 6 Select the [Manual proxy configuration] radio button.
- 7 In the [No Proxy for]: text box, type a comma after the last entry, and then type the printer name or the IP address of your printer.
- 8 Click [OK] in the two dialog boxes to return to the main browser window.
- 9 Enter the printer name or IP address in the URL Location box to access the printer home page.

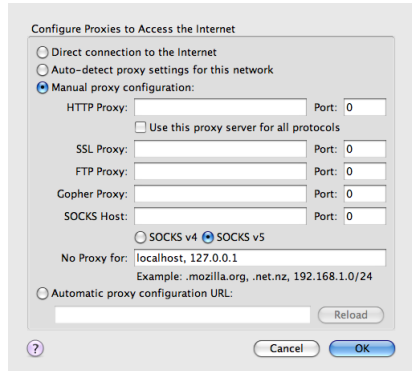

Understanding the PageScope Web Connection Window

The illustration below identifies the navigation and configuration areas of the windows that you see in PageScope Web Connection windows.

Click to refresh the information

Click to log out of current mode

Links to main topics

Login user name

Current status

Administrator

Ready

Ready

Log out

System

Security

Job

Print

Storage

Address

Network

▼ Device Information

▶ Summary

▶ Paper Source

▶ Output Tray

▶ Storage

▶ Interface Information

▶ Consumables

▶ Counter

▶ Online Assistance

▶ Import/Export

▶ Date/Time Settings


▶ Machine Settings

▶ ROM Version

▶ Maintenance

▶ Notification Settings

Device Status



Administrator Name
Device Name
Device Location
Device Information
Engine Serial Number A121001905012

Memory

1536 MB

HDD

Installed

Fax Board

Installed

Duplex

Installed

Paper Source

Tray1,Tray2,Tray3

Output Tray

MainTray

Network

Ethernet 10Base-T/100Base-TX/1000Base-T

Links to subtopics

Configuration area

Navigation

Selecting the main topic and subtopic displays the configuration area for the printer options (parameters) associated with your selections.

To change a current setting, click on the current setting and then select from the available choices or enter the new value.



In order to apply or save any changes made to the configuration settings, PageScope Web Connection must be logged in from Administrator Mode. (For details, refer to “Administrator Mode” on page 8-12.)

Current Status

The current status of the machine is displayed at the top of all PageScope Web Connection windows. The icon displays the type of status being displayed.

Icon	Status	Description	Examples
	Ready	The machine is online and either ready to be operated or already operating.	[Ready to Copy] [Warming up]
	Warning	Caution is required, but scanning or printing can continue.	[Toner is low.] [Replace imaging unit soon.]
	Error	Caution is required before the next scanning or printing job can be performed.	[Cover Open] [Misfeed Detected]
	Fatal	The machine must be restarted. If the error is not corrected after the machine has been restarted, the machine must be repaired.	[Service Call]

Logging on to PageScope Web Connection


Login Page

User authentication, account track and language settings can be specified by using PageScope Web Connection. In order to perform authentication, you must log on in Administrator Mode. For details on authentication, refer to “[Authentication]” on page 8-43.



As many as 8 sessions (users and an administrator) can log on to PageScope Web Connection at the same time. These can be logged on as Public User, Registered User or Administrator.

Language

English (English) 

Log in

☐ Public User

☐ Registered User

☐ Administrator

User Name

User Password

Account Name

Account Password

SSL is not set-up. Please set up SSL after admin logs in to secure safety of the information.

Log in

Clear

Language Setting

If necessary, the display language used for Web Connection can be changed.

Language

English (English)

English (English)

Français (French)

Italiano (Italian)

Deutsch (German)

Español (Spanish)

Português (Portuguese)

Čeština (Czech)

Polski (Polish)

Русский (Russian)

Nederlands (Dutch)

日本語 (Japanese)

한국어 (Korean)

简体中文 (Chinese-Simplified)

繁體中文 (Chinese-Traditional)

☐ Administrator

SSL is not set-up. Please set up SSL after admin logins to secure safety of the information.

Log in

Clear

Public User Mode


In Public User Mode, you can view configuration settings but not change them.

- 1 Select [Public User].
- 2 Click the [Log in] button.


Registered User Mode

In Registered User Mode, you can view configuration settings but not change them.


User Authentication Mode

 To enter User Authentication Mode, log on in Administrator mode, set [User Authentication] (in the [Security] - [Authentication] - [General Settings] page) to [Device] or [External Server], and then register a new user in the [Security] - [Authentication] - [User List] - [New Registration] page. For details, refer to "[General Settings] (shown above)" on page 8-43 and "[User List] ([New Registration]/[Edit])" on page 8-46.

- 1 Select [Registered User].

- 2 Type in the user name and user password in the [User Name] and [User Password] text boxes.
 - 3 If [Account Track] (in the [Security] - [Authentication] - [General Settings] page) is set to [On], continue with step 4. If it is set to [Off], continue with step 5.
 - 4
 - (If [Synchronize User Authentication & Account Track] is set to [Do Not Synchronize] and [Account Track Method] is set to [Account Name & Password] in the [Security] - [Authentication] - [General Settings] page) Type in the account name and account password in the [Account Name] and [Account Password] text boxes.
 - (If [Synchronize User Authentication & Account Track] is set to [Do Not Synchronize] and [Account Track Method] is set to [Password Only] in the [Security] - [Authentication] - [General Settings] page) Type in the account password in the [Account Password] text box.
-  *When [Synchronize User Authentication & Account Track] (in the [Security] - [Authentication] - [General Settings] page) is set to [Synchronize], [Account Name] and [Account Password] will not be displayed in the login page even if [Account Track] is set to [On].*
- 5 Click the [Log in] button.

Account Track Mode

 *To enter Account Track Mode, log on in Administrator mode, set [Account Track] (in the [Security] - [Authentication] - [General Settings] page) to [On], and then register a new account in the [Security] - [Authentication] - [Account Track List] - [New Registration] page. For details, refer to “[General Settings] (shown above)” on page 8-43 and “[Account Track List] ([New Registration]/[Edit])” on page 8-50.*

- 1 Select [Account].
- 2
 - (If [Account Track Method] is set to [Account Name & Password] in the [Security] - [Authentication] - [General Settings] page) Type in the account name and account password in the [Account Name] and [Account Password] text boxes.
 - (If [Account Track Method] is set to [Password Only] in the [Security] - [Authentication] - [General Settings] page) Type in the account password in the [Account Password] text box.
- 3 Click the [Log in] button.

Administrator Mode

In order to change any configuration settings through PageScope Web Connection, you must first enter Administrator Mode.

- 1 Select [Administrator].
- 2 Click the [Log in] button.
- 3 Type the password in the [Administrator Password] text box.

Administrator Password



Default password is set to "12345678"; however, once you have logged on in Administrator Mode, the password can be specified in the [Security] - [Administrator Password] window. [Administrator Password] window does not appear if there is no HTTPS connection or if [Enhanced Security Mode] is set to [On].

- 4 Click [OK] button.

Configuring the Printer

In order to make any configuration changes through PageScope Web Connection, you must first enter Administrator Mode. See “Administrator Mode” on page 8-12. for instructions on logging into Administrator Mode.

[System] tab

This page allows you to configure several user- and printer-specific items.

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Device Information

► Summary

► Paper Source

► Output Tray

► Storage

► Interface Information

► Consumables

► Counter

► Online Assistance

► Import/Export

► Date/Time Settings


► Machine Settings

► ROM Version

► Maintenance

► Notification Settings

Device Status



Administrator Name

Device Name

Device Location

Device Information

Engine Serial Number

A121001905012

Memory

1536 MB

HDD

Installed

Fax Board

Installed

Duplex

Installed

Paper Source

Tray1,Tray2,Tray3

Output Tray

MainTray


Network

Ethernet 10Base-T/100Base-TX/1000Base-T

[Device Information]

[Summary] (previous page)

The [System] - [Device Information] - [Summary] window provides the following information.

Item	Description
[Memory]	Displays the amount of memory installed in the printer.
[HDD]	Displays [Installed].
[Fax Board]	Displays [Installed].
[Duplex]	Displays [Installed].
[Paper Source]	Identifies the paper feed units installed on the printer.  <i>[Tray3] and [Tray4] appear only if the optional lower feeder unit is installed.</i>
[Output Tray]	Identifies the output trays installed on the printer.
[Network]	Lists the installed printer interface (Ethernet 10Base-T/100Base-TX/1000Base-T).

[Paper Source]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Device Information

▶ Summary

▶ Paper Source

▶ Output Tray

▶ Storage

▶ Interface Information

▶ Consumables

▶ Counter

▶ Online Assistance

▶ Import/Export

▶ Date/Time Settings

▶ Machine Settings

▶ ROM Version

▶ Maintenance

▶ Notification Settings


Paper Source

Paper Source	Paper Size	Paper Type	Status	Capacity
Tray1	A4	Plain Paper	Empty	100
Tray2	A4	Plain Paper	Ready	250
Tray3	Legal	Plain Paper	Ready	500

The [System] - [Device Information] - [Paper Source] window provides the following information.

Item	Description
[Paper Source]	Identifies the paper feed units Tray 1/2/3/4 installed on the printer.
[Paper Size]	Indicates the size of paper loaded in a specific tray.
[Paper Type]	Indicates the type of paper loaded in a specific tray.
[Status]	Indicates the paper status ([Ready] or [Empty]) for each tray.
[Capacity]	Displays the maximum capacity for each paper tray.

[Output Tray]

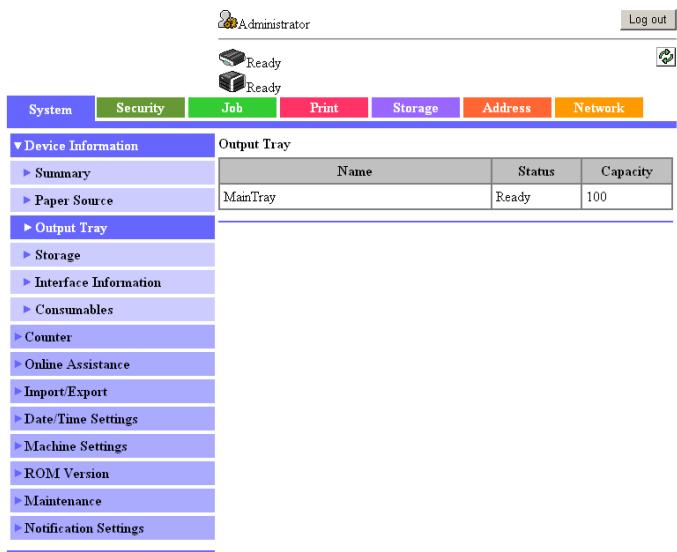

The [System] - [Device Information] - [Output Tray] window provides the following information.

Item	Description
[Name]	Displays the name of the output tray.
[Status]	Displays the status ([Ready], [Full]) of the output tray.
[Capacity]	Displays the maximum capacity for the output tray.

[Storage]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Device Information

▶ Summary

▶ Paper Source

▶ Output Tray

▶ Storage

▶ Interface Information

▶ Consumables

▶ Counter

▶ Online Assistance

▶ Import/Export

▶ Date/Time Settings

▶ Machine Settings

▶ ROM Version

▶ Maintenance

▶ Notification Settings

Hard Disk (Print)

Total	Used	Remaining
20470 MB	10 MB	20460 MB

Hard Disk (Scan)

Total	Used	Remaining
20470 MB	2 MB	20468 MB

The [System] - [Device Information] - [Storage] window provides the following information.

Item	Description
[Total]	Displays the total amount of space on the hard disk.
[Used]	Displays the amount of space on the hard disk that is used.
[Remaining]	Displays the amount of space remaining on the hard disk.

Configuring the Printer

8-17

[Interface Information]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Device Information

▶ Summary

▶ Paper Source

▶ Output Tray

▶ Storage

▶ Interface Information

▶ Consumables

▶ Counter

▶ Online Assistance

▶ Import/Export

▶ Date/Time Settings

▶ Machine Settings

▶ ROM Version

▶ Maintenance

▶ Notification Settings

Protocol Information

TCP/IP

Enable

SMTP

Enable

POP

Enable

LDAP

Enable

IPP

Enable

FTP TX

Enable

FTP Server

Enable

SNMP

Enable

SMB Client

Enable

SLP

Enable

LPD

Enable

WINS

Enable

Bonjour

Enable

AppleTalk

Enable

NetWare

Disable

Network Information

Type

Ethernet 10Base-T/100Base-TX/1000Base-T

Ethernet Speed

Auto

IP Address

192.168.1.2

IPv6 Link Local Address

fe80::220:6bff:fe:db:62b

IPv6 Global Address

/0

MAC Address

00:20:6b:db:6f:2b

Host Name

BHC35-DB6F2B

Print Server Name (NetWare)

BHC35-DB6F2B

Printer Name (Apple Talk)

BHC35-DB6F2B

Current Zone Name (AppleTalk)

*

Bonjour Name

KONICA MINOLTA bizhub C35 (DB-6F2B)

Friendly Name

KONICA MINOLTA bizhub C35 (DB-6F2B)

WSD Printer Name

KONICA MINOLTA bizhub C35 (DB-6F2B)

Scanner Name

KONICA MINOLTA bizhub C35 (DB-6F2B)


The [System] - [Device Information] - [Interface Information] window provides the following information.

Item		Description
[Protocol Informa- tion]	[TCP/IP]	If [Enable] is displayed, TCP/IP is enabled. If [Disable] is displayed, TCP/IP is disabled.
	[SMTP]	If [Enable] is displayed, SMTP is enabled. If [Disable] is displayed, SMTP is disabled.
	[POP]	If [Enable] is displayed, POP is enabled. If [Disable] is displayed, POP is disabled.
	[LDAP]	If [Enable] is displayed, LDAP is enabled. If [Disable] is displayed, LDAP is disabled.
	[IPP]	If [Enable] is displayed, IPP is enabled. If [Disable] is displayed, IPP is disabled.


Item		Description
	[FTP TX]	If [Enable] is displayed, FTP TX is enabled. If [Disable] is displayed, FTP TX is disabled.
	[FTP Server]	If [Enable] is displayed, the FTP server function is enabled. If [Disable] is displayed, the FTP server function is disabled.
	[SNMP]	If [Enable] is displayed, SNMP is enabled. If [Disable] is displayed, SNMP is disabled.
	[SMB Client]	If [Enable] is displayed, the SMB client function is enabled. If [Disable] is displayed, the SMB client function is disabled.
	[SLP]	If [Enable] is displayed, SLP is enabled. If [Disable] is displayed, SLP is disabled.
	[LPD]	If [Enable] is displayed, LPD is enabled. If [Disable] is displayed, LPD is disabled.
	[WINS]	If [Enable] is displayed, WINS is enabled. If [Disable] is displayed, WINS is disabled.
	[Bonjour]	If [Enable] is displayed, Bonjour is enabled. If [Disable] is displayed, Bonjour is disabled.
	[AppleTalk]	If [Enable] is displayed, AppleTalk is enabled. If [Disable] is displayed, AppleTalk is disabled.
	[NetWare]	If [Enable] is displayed, NetWare is enabled. If [Disable] is displayed, NetWare is disabled.

Item		Description
[Network Information]	[Type]	Identifies the type of network interface installed on the printer (Ethernet 10Base-T/100Base-TX/1000Base-T).
	[Ethernet Speed]	Indicates the transmission speed for the network and the transmission method for bidirectional transmission.
	[IP Address]	Identifies the IP (Internet Protocol) address of the Ethernet interface.
	[IPv6 Link Local Address]	Identifies the IPv6 link local address of the Ethernet interface.
	[IPv6 Global Address]	Identifies the IPv6 global address of the Ethernet interface.
	[MAC Address]	Identifies the Media Access Control (MAC) address of the Ethernet interface.
	[Host Name]	Identifies the host name for the printer.
	[Print Server Name (NetWare)]	Identifies the Print Server Name for the NetWare.
	[Printer Name (AppleTalk)]	Identifies the printer name on AppleTalk.
	[Current Zone Name (AppleTalk)]	Identifies the Current Zone Name for the AppleTalk.
	[Bonjour Name]	Displays the Bonjour name for the printer.
	[Friendly Name]	Displays the friendly name.
	[WSD Printer Name]	Displays the WSD printer name for the printer.
	[Scanner Name]	Displays the scanner name.

[Consumables]

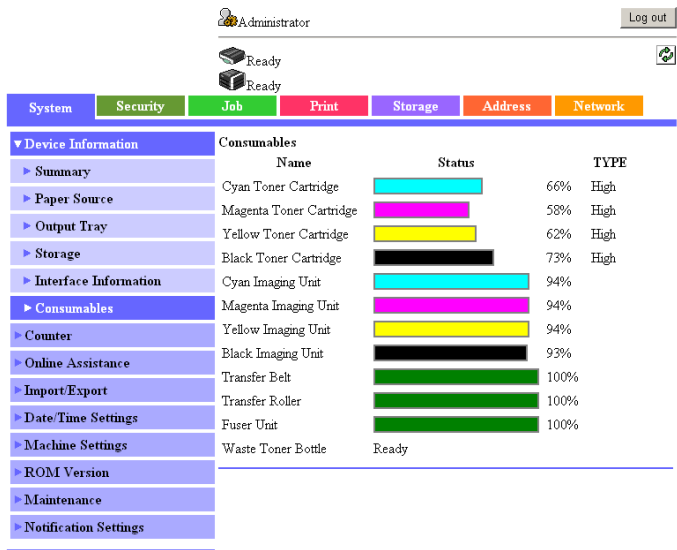

The [System] - [Device Information] - [Consumables] window provides the following information.

Item	Description
[Name]	Identifies the type of consumable that is being monitored.
[Status]	<div>Indicates the remaining life of the consumables.</div> <div>■ Toner Cartridge, Imaging Unit, Transfer Belt, Transfer Roller, Fuser Unit: Percentage</div> <div> <i>The percentages remaining for the consumables may be different from the actual amounts and should be used only as reference.</i></div> <div>■ Waste Toner Bottle: [Ready], [Near Full], or [Full]</div>
[TYPE]	<div>Identifies the type of Toner Cartridge.</div> <div>■ [High]</div>

[Counter]

[Total Counter]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Device Information

▼ Counter

▶ Total Counter

▶ Sheets Printed by Paper Size

▶ Sheets Printed by Paper Type

▶ Online Assistance

▶ Import/Export

▶ Date/Time Settings

▶ Machine Settings

▶ ROM Version

▶ Maintenance

▶ Notification Settings

Total Counter

	Total
Total	1360073577
Total Duplex	1347570128
Total Normalized	653
Number of Used Papers	466

Copy Counter

	Full Color	Black	Total
Total	345845	125	345970
Large Size	1477513556	0	1477513556

Print Counter

	Full Color	Black	Total
Total	347929	14	347943
Large Size	1477513556	9	1477513565

Scan/Fax Counter

	Print (Black)	Scans
Total	67	347861
Large Size	0	1095774464

The [System] - [Counter] - [Total Counter] page provides the following information.

Item	Description
Total Counter	Displays the total number of pages that have been printed by this machine.
Copy Counter	Displays the number of pages that have been copied.
Print Counter	Displays the number of pages that have been printed.
Scan/Fax Counter	Displays the number of pages that have been scanned or faxed.

[Sheets Printed by Paper Size]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Device Information

Counter

Total Counter

Sheets Printed by Paper Size

Sheets Printed by Paper Type

Online Assistance

Import/Export

Date/Time Settings

Machine Settings

ROM Version

Maintenance

Notification Settings

Sheets Printed by Paper Size

	Total
Letter	1
Legal	0
A4	133
A5	0
B5(JIS)	0
Custom Size	0
Others	0

The [System] - [Counter] - [Sheets Printed by Paper Size] page shows the number of pages of each paper size that was used by this machine.

[Sheets Printed by Paper Type]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Device Information

Counter

Total Counter

Sheets Printed by Paper Size

Sheets Printed by Paper Type

Online Assistance

Import/Export

Date/Time Settings

Machine Settings

ROM Version

Maintenance

Notification Settings

Sheets Printed by Paper Type

	Total
Plain Paper	134
Recycled	0
Thick 1	0
Thick 2	0
Label	0
Envelope	0
Postcard	0
Letterhead	0
Glossy 1	0
Glossy 2	0
Single Side Only	0
Special Paper	0

The [System] - [Counter] - [Sheets Printed by Paper Type] page shows the number of pages of each paper type that was used by this machine.

[Online Assistance]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Device Information

Counter

Online Assistance

Online Assistance

Import/Export

Date Time Settings

Machine Settings

ROM Version

Maintenance

Notification Settings

Online Assistance

Contact Name

KONICA MINOLTA Customer Support

Contact Information

Product Help URL

http://pagescope.com

Corporate URL

http://konicaminolta.com

Supplies and Accessories

Contact Utility Link

http://pagescope.com

Driver URL

Apply

Clear

The [System] - [Online Assistance] - [Online Assistance] window allows you to configure the following items.

Item	Description
[Contact Name]	Sets the name of the person or organization responsible for providing assistance with the printer. Range: Up to 63 characters Default: KONICA MINOLTA Customer Support
[Contact Information]	Sets the web site for printer assistance. Range: Up to 127 characters Default: [Blank]
[Product Help URL]	Sets the help web site address for printer assistance. Range: Up to 127 characters Default: http://pagescope.com
[Corporate URL]	Sets the KONICA MINOLTA corporate web site address. Range: Up to 127 characters Default: http://konicaminolta.com

Item	Description
[Supplies and Accessories]	<p>Sets the web address where you can purchase printer supplies and accessories.</p> <p>Range: Up to 127 characters</p> <p>Default: [Blank]</p>
[Contact Utility Link]	<p>Specifies the link to the Printer Management Utilities.</p> <p>Range: Up to 127 characters</p> <p>Default: http://pagescope.com</p>
[Driver URL]	<p>Specify where the printer driver is saved.</p> <p>Range: Up to 127 characters</p> <p>Default: [Blank]</p>

[Import/Export]



This page appears when [Job Log] (in the [System] - [Machine Settings] page) is set to [Enable].

[Job Log]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Device Information

Counter

Online Assistance

Import/Export

Job Log

Authentication

Address

Date/Time Settings

Machine Settings

ROM Version

Maintenance

Notification Settings

Job Log

Export

Last 10

Export

Clear

Clear

The [System] - [Import/Export] - [Job Log] window allows you to configure the following items.



This page appears when [Job Log] (in the [System] - [Machine Settings] page) is set to [Enable].

Item	Description
[Export]	<p>Specify the number of job logs to be retrieved. The specified number of job logs is retrieved from the most recent job logs. If the specified number of job logs is larger than the number of job logs available, all job logs are retrieved.</p> <p>Choices: [Last 10], [Last 50], [Last 100], [Last 250], [Last 500], [All] Default: [Last 10]</p>
[Export] button	Exports the job log information on the device to the computer.
[Clear] button	Click to delete all job log information.

[Authentication]

The screenshot shows the printer's web interface. At the top, there is a user bar with a user icon and the name 'Administrator', and a 'Log out' button. Below this, there are two status indicators: 'Ready' with a printer icon and 'Ready' with a network icon. A navigation bar contains tabs for 'System', 'Security', 'Job', 'Print', 'Storage', 'Address', and 'Network'. The 'Security' tab is selected. On the left, a list of settings is shown: 'Device Information', 'Counter', 'Online Assistance', 'Import/Export' (expanded), 'Job Log', 'Authentication' (selected), 'Address', 'Date/Time Settings', 'Machine Settings', 'ROM Version', 'Maintenance', and 'Notification Settings'. The main content area is titled 'Authentication'. It contains three sections: 'Import' with a text box and a 'Browse...' button, an 'Import' button; 'Export' with an 'Export' button; and 'Clear' with a 'Clear' button.


The [System] - [Import/Export] - [Authentication] window allows you to configure the following items.



This page appears when [User Authentication] (in the [Security] - [Authentication] - [General Settings] page) is set to [Device] or [External Server].

Item	Description
[Import] Text Box	Type in the name of the file containing the registered user authentication information to be imported.
[Browse] button	Allows the registered user authentication information transferred to the device to be searched.
[Import] button	Transfers the registered user authentication information to the device.
[Export] button	Exports the registered user authentication information to the computer.
[Clear] button	Click to delete all user authentication and account track settings specified on the machine.

[Address]

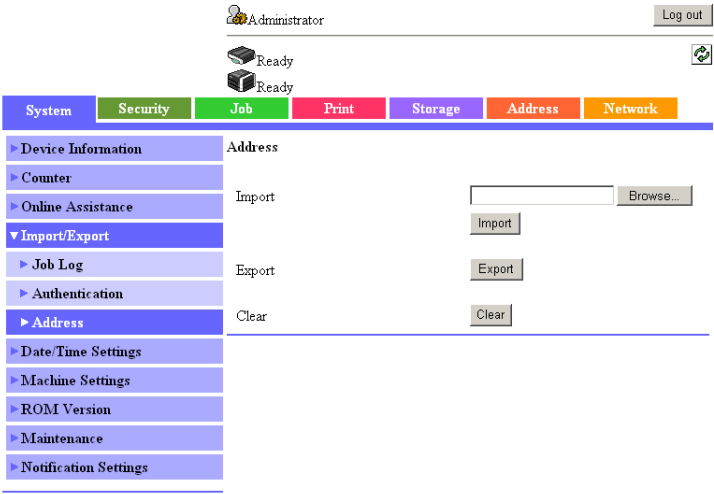

The [System] - [Import/Export] - [Address] page allows you to configure the following items.

Item	Description
[Import]	Type in the name of the file containing the registered destination information to be imported.
[Browse] button	Click to search for the file containing the registered destination information.
[Import] button	Click to send to the machine the file containing the registered destination information.
[Export] button	Click to export to the computer all destination information registered on the machine.
[Clear] button	Click to delete all destination information registered on the machine.

[Date/Time Settings]



This menu item appears only if the user has logged on to Administrator mode.

[Manual Settings]

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

Device Information
Counter
Online Assistance
Import/Export
▼ Date/Time Settings
▶ Manual Settings
▶ Time Adjustment Settings
Daylight Saving Time Settings
▶ Machine Settings
▶ ROM Version
▶ Maintenance
▶ Notification Settings

Manual Settings

Year (2000-2032)
Month (1-12)
Day (1-31)
Hour (0-23)
Minute (0-59)
Time Zone

Apply Clear

The [System] - [Date/Time Settings] - [Manual Settings] window allows you to configure the following items:

Item	Description
[Year]	Specifies the year for the printer's internal clock. Range: [2000] - [2032] Configuration Menu Equivalent: [Admin Settings] - [Machine Settings] - [Date & Time Settings] - [Date]
[Month]	Specifies the month for the printer's internal clock. Range: [1] - [12] Configuration Menu Equivalent: [Admin Settings] - [Machine Settings] - [Date & Time Settings] - [Date]

Item	Description
[Day]	<p>Specifies the day for the printer's internal clock.</p> <p>Range: [1] - [31]</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Machine Settings] - [Date & Time Settings] - [Date]</p>
[Hour]	<p>Specifies the hour for the printer's internal clock.</p> <p>Range: [0] - [23]</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Machine Settings] - [Date & Time Settings] - [Time]</p>
[Minute]	<p>Specifies the minute for the printer's internal clock.</p> <p>Range: [0] - [59]</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Machine Settings] - [Date & Time Settings] - [Time]</p>
[Time Zone]	<p>Specifies the time zone for sending e-mail notifications.</p> <p>Range: [GMT-12:00] - [GMT+13:00]</p> <p>Default: [GMT]</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Machine Settings] - [Date & Time Settings] - [Time Zone]</p>

[Time Adjustment Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Device Information

Counter

Online Assistance

Import/Export

Date/Time Settings

Manual Settings

Time Adjustment Settings

Daylight Saving Time Settings

Machine Settings

ROM Version

Maintenance

Notification Settings

Time Adjustment Settings

Time Adjustment

Time Adjustment

NTP Server Address

NTP Server Address

Port Number

Port Number

Time Zone

Time Zone

Adjustment Time

Adjustment Time

Disable

0.0.0.0

123

GMT

Unknown

Apply

Clear

The [System] - [Date/Time Settings] - [Time Adjustment Settings] window allows you to configure the following items:

Item	Description
[Time Adjustment]	Select whether or not the time is automatically adjusted with NTP. Choices: [Enable], [Disable] Default: [Disable]
[NTP Server Address]	Specifies the NTP server address. IPv4 address, IPv6 address or FQDN (Fully Qualified Domain Name) can be specified. Range: Up to 63 characters Default: [0.0.0.0]
[Port Number]	Specifies the NTP server port number. Range: [1] - [65535] Default: [123]
[Time Zone]	Specifies the time difference from GMT. Range: [GMT-12:00] - [GMT+13:00] Default: [GMT]

Item	Description
[Adjustment Time]	Shows the last modification date and time. Default: [Unknown]

[Daylight Saving Time Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Device Information

Counter

Online Assistance

Import/Export

▼ Date/Time Settings

Manual Settings

Time Adjustment Settings

Daylight Saving Time Settings

Machine Settings

ROM Version

Maintenance

Notification Settings

Daylight Saving Time Settings

Daylight Saving Time


Enable

60 min. (1-150)


Apply

Clear


The [System] - [Date/Time Settings] - [Daylight Saving Time Settings] page allows you to configure the following items.


Item	Description
[Daylight Saving Time]	<p>Select whether or not daylight saving time is observed.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p> <div>  <p>When [Enable] is selected, the time adjustment for daylight saving time can be specified.</p> </div>


[Machine Settings]

 Administrator

Log out

 Ready

 Ready



System

Security

Job

Print

Storage

Address

Network

▶ Device Information

▶ Counter

▶ Online Assistance

▶ Import/Export

▶ Date/Time Settings

▼ Machine Settings

▶ Machine Settings

▶ ROM Version

▶ Maintenance

▶ Notification Settings

Machine Settings

Device Name

Device Location

Device Information

Administrator Name

Administrator E-mail Address

Do Startup Page

Unit of Measure

Energy Saver Time

Job Log

Hide Personal Information

Off

Millimeters

30 Minutes

Enable

Off

Apply

Clear

The [System] - [Machine Settings] - [Machine Settings] window allows you to configure the following items:

Item	Description
[Device Name]	Specify the name of the printer. Range: Up to 127 characters Default: [Blank]
[Device Location]	Specify the setup location for the printer. Range: Up to 127 characters Default: [Blank]
[Device Information]	Specify information for the printer. Range: Up to 127 characters Default: [Blank]
[Administrator Name]	Specify the name of the administrator for the printer. Range: Up to 127 characters Default: [Blank]
[Administrator E-mail Address]	Specify the e-mail address of the administrator for the printer. Default: [Blank]

Item	Description
[Do Startup Page]	<p>Select whether or not a startup page is printed when the printer is turned on.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Startup Page Setting]</p>
[Unit of Measure]	<p>Select the measurement units used to indicate lengths.</p> <p>Choices: [Inches], [Millimeters]</p>
[Energy Saver Time]	<p>Specify the length of time until the machine enters Power Save mode.</p> <p>Choices: [5-15 Minutes], [30 Minutes], [1 Hour], [3 Hours]</p> <p>Default: [10 Minutes]</p> <p>Configuration menu equivalent: [Admin Settings] - [Machine Settings] - [Sleep Time Settings]</p>
[Job Log]	<p>Select whether or not the Job Log function is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Disable]</p>
[Hide Personal Information]	<p>Select whether or not the names of printed files ([File Name]) are displayed in the Job tab.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p>

[ROM Version]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▶ Device Information

▶ Counter

▶ Online Assistance

▶ Import/Export

▶ Date/Time Settings

▶ Machine Settings

▼ ROM Version

▶ ROM Version

▶ Maintenance

▶ Notification Settings

ROM Version

Controller ROM Version

Engine ROM Version

Boot ROM Version

Panel ROM Version

Scanner ROM Version

Fax Board ROM Version

A12130G0040105

A12150G0020000


A12199G0010000

A12120G0014805

A12123G0030000

A12140G0010700

The [System] - [ROM Version] - [ROM Version] window provides the following information.

 This menu item appears only if the user has logged on to Administrator mode.


Item	Description
[Controller ROM Version]	Displays the ROM version of the printer controller.
[Engine ROM Version]	Displays the ROM version of the printer engine.
[Boot ROM Version]	Displays the ROM version of the boot ROM.
[Panel ROM Version]	Displays the ROM version of the panel ROM.
[Scanner ROM Version]	Displays the ROM version of the scanner ROM.
[Fax Board ROM Version]	Displays the ROM version of the fax board ROM.

[Maintenance]



This menu item appears only if the user has logged on to Administrator mode.

[Clear Settings]

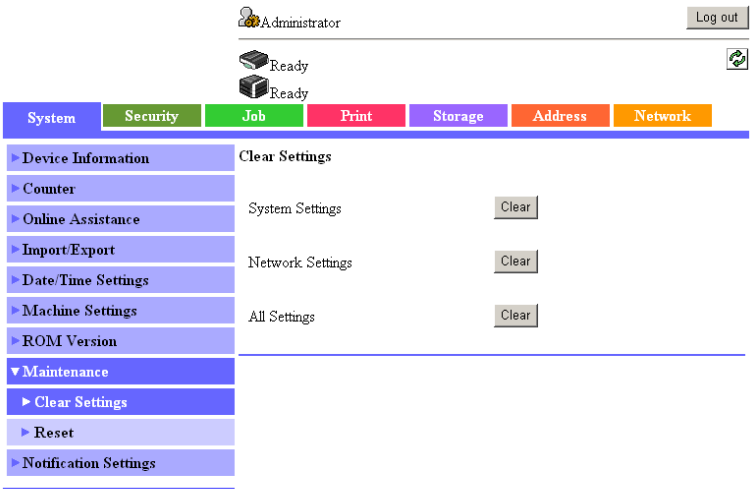


The [System] - [Maintenance] - [Clear Settings] page allows you to reset the printer settings to its factory defaults.

Item	Description
[System Settings]	Resets the system settings to their defaults. Configuration Menu Equivalent: [Admin Settings] - [Restore Defaults] - [Restore System]
[Network Settings]	Resets the network settings to their defaults. Configuration Menu Equivalent: [Admin Settings] - [Restore Defaults] - [Restore Network]
[All Settings]	Resets all settings to their defaults. Configuration Menu Equivalent: [Admin Settings] - [Restore Defaults] - [Restore All]

Item	Description
[Clear] button	When clicked, the message [Is it OK to restore Factory Defaults?] appears. Click [OK] to automatically restart the printer and return the settings to their default values.

[Reset]

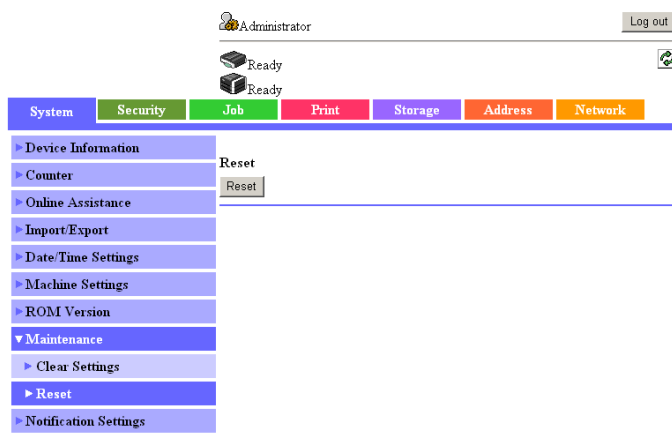

The [System] - [Maintenance] - [Reset] page allows you to reset the printer controller.

Item	Description
[Reset] button	When clicked, the message [Is it OK to reset?] appears. Click [OK] to automatically restart the printer.

[Notification Settings]



This menu item appears only if the user has logged on to Administrator mode.

[Status Notification Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Device Information

Counter

Online Assistance

Import/Export

Date/Time Settings

Machine Settings

ROM Version

Maintenance

Notification Settings

Status Notification Settings

Total Counter Notification Settings

Status Notification Settings

IP Address

Notification Address

Port Number

Community Name

IPX Address

Notification Address

Node Address

Community Name

E-mail Address

Notification Address

Alert

Paper Empty

Paper Jam

Maintenance

Toner Out

Output Tray Full

Fuser Unit End

Operator Call

Service Call

Job Complete

Job Error

0.0.0.0

162 (1-65535)

public

00000000

000000000000

public

Enable

Enable

Enable

Enable

Enable

Enable

Enable

Enable

Enable

Enable

Apply

Clear

The [System] - [Notification Settings] - [Status Notification Settings] window allows you to configure the following items:

Item		Description
[IP Address]	[Notification Address]	Specify the IP address of the SNMP trap receiver. An IPv4 or IPv6 address or a host name can be specified. Range: Up to 63 characters Default: [0.0.0.0]
	[Port Number]	Specify the port number of the SNMP trap. Range: 1 - 65535 Default: [162]
	[Community Name]	Specify the community name for the SNMP trap. Range: Up to 15 characters Default: [public]

Item		Description
[IPX Address]	[Notification Address]	Specify the IPX address of the SNMP trap receiver. Range: 8 characters Default: [00000000]
	[Node Address]	Specify the node address of the SNMP trap receiver. Range: 12 characters Default: [000000000000]
	[Community Name]	Specify the community name for the SNMP trap. Range: Up to 15 characters Default: [public]
[E-mail Address]	[Notification Address]	Specifies the e-mail address where the notification is sent. Range: Up to 320 characters Default: [Blank]
[Alert]	[Paper Empty]	Specifies whether or not a notification is sent when the paper tray runs out of paper. Choices: [Enable], [Disable] Default: [Enable]
	[Paper Jam]	Specifies whether or not a notification is sent when a paper misfeed occurs. Choices: [Enable], [Disable] Default: [Enable]
	[Maintenance]	Specifies whether or not a notification is sent when the time for a periodic maintenance has been reached. Choices: [Enable], [Disable] Default: [Enable]
	[Toner Out]	Specifies whether or not a notification is sent when the toner is empty. Choices: [Enable], [Disable] Default: [Enable]

Item		Description
	[Output Tray Full]	Specifies whether or not a notification is sent when the output tray has become full. Choices: [Enable], [Disable] Default: [Enable]
	[Fuser Unit End]	Specifies whether or not a notification is sent when the fuser unit has reached the end of its service life. Choices: [Enable], [Disable] Default: [Enable]
	[Operator Call]	Specifies whether or not a notification is sent when the operator must be called. Choices: [Enable], [Disable] Default: [Enable]
	[Service Call]	Selects whether or not notification is sent to the service representative when a condition occurs that requires servicing. Choices: [Enable], [Disable] Default: [Enable]
	[Job Complete]	Specifies whether or not a notification is sent when a print job is completed correctly. Choices: [Enable], [Disable] Default: [Enable]
	[Job Error]	Specifies whether or not a notification is sent when a job could not be printed because an error occurred. Choices: [Enable], [Disable] Default: [Enable]

[Total Counter Notification Settings]

Administrator

Log out

Ready

Ready

SystemSecurityJobPrintStorageAddressNetwork

Device Information

Counter

Online Assistance

Import/Export

Date/Time Settings

Machine Settings

ROM Version

Maintenance

Notification Settings

Status Notification Settings

Total Counter Notification Settings

Total Counter Notification Settings

Model Name

Schedule Setting

Schedule 1

☐ Daily

☐ Interval of Day(s)

☐ Weekly

☒ Interval of Week(s)

Interval of Day(s)

Interval of Week(s)

Day of the Week

Monthly

(1-31)

(1-6)

Mon

(1-6)

☐ Schedule 2

☐ Daily

☐ Interval of Day(s)

☐ Weekly

☒ Interval of Week(s)

Interval of Day(s)

Interval of Week(s)

Day of the Week

Monthly

(1-31)

(1-6)

Mon

(1-31)

Register Notification Address

Address 1

E-mail Address

☐ Notifies by Schedule 1

☐ Notifies by Schedule 2

Address 2

E-mail Address

☐ Notifies by Schedule 1

☐ Notifies by Schedule 2

Address 3

E-mail Address

☐ Notifies by Schedule 1

☐ Notifies by Schedule 2

Send Now

Apply

Clear

The [System] - [Notification Settings] - [Total Counter Notification Settings] page allows you to configure the following items.

Item		Description
[Total Counter Notification Settings]	[Model Name]	Specify the model name that appears in e-mail messages sent as notifications of the total counter for this machine.
[Schedule Setting]	[Schedule 1]/ [Schedule 2]	<p>Specify settings for the notification schedules.</p> <p>Schedules 1 and 2 can be registered with different settings.</p> <p>[Daily]: Select this setting to send notifications at an interval in days. Specify the interval (in days) when notifications are to be sent.</p> <p>[Weekly]: Select this setting to send notifications at a weekly interval. Specify the interval (in weeks) for sending notifications. In addition, select the day of the week when notifications are to be sent.</p> <p>[Monthly]: Select this setting to send notifications at a monthly interval. Specify the interval (in months) for sending notifications. In addition, select the day of the month when notifications are to be sent.</p>
[Register Notification Address]		Type in the destination e-mail address. In addition, select a notification schedule.

[Security] tab

From the [Security] tab, all settings related to user authentication and network security can be specified.



The [Security] tab appears only if the user has logged on to Administrator mode.



If a setting is changed for any of the following parameters, all registered user/account information as well as job data/images related to users/accounts are cleared.

- User Authentication
- Account Track
- Account Track Method
- Number of Counters Assigned for Users

However, if the user authentication method is changed ([Device] or [External Server]), the user/account information is not cleared.


[Authentication]

[General Settings] (shown above)

From the [General Settings] page, the user authentication method can be specified.



This menu item will not appear when PageScope Authentication Manager is used for authentication.

Item	Description
[User Authentication]	<p>Select whether or not user authentication is performed.</p> <p>[Device]: Select this setting for user authentication to be performed by the machine.</p> <p>[External Server]: Select this setting for user authentication to be performed by an external server.</p> <p>[Off]: Select this setting for user authentication to not be performed.</p> <p>Default: [Off]</p>
[Public Access]	<p>Select whether or not to permit access by public users when authentication settings have been specified.</p> <p>To allow public user access, select [Allow].</p> <p>Default: [Allow]</p>
[Ticket Hold Time (Active Directory)]	<p>Specify the length of time that Kerberos authentication tickets are held.</p> <p>Default: [600]</p>
[Account Track]	<p>Select whether or not account track is performed.</p> <p>Default: [Off]</p>
[Account Track Method]	<p>Specify the account track authentication method.</p> <p>[Account Name & Password]: Select this setting to perform authentication with the account name and password.</p> <p>[Password Only]: Select this setting to perform authentication with only the password.</p> <p>Default: [Account Name & Password]</p>
[Synchronize User Authentication & Account Track]	<p>Select whether or not user authentication and account track settings are to be synchronized.</p> <p>Default: [Synchronize]</p>
[Number of Counters Assigned for Users]	<p>Type in the number of counters to be assigned when user authentication and account track settings are specified.</p>
[Print without Authentication]	<p>Select whether or not to permit print jobs that have no authentication information specified.</p> <p>Default: [Restrict]</p> <p> If [Enhanced Security Mode] is set to [On], [Print without Authentication] cannot be set to [Allow].</p>

[User List]



This menu item appears when [User Authentication] (in the [Security] - [Authentication] - [General Settings] page) is set to [Device] or [External Server].

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

General Settings

User List

Account Track List

Public User Registration

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

User List

New Registration

Search for Number

1-50

No.	User Name	Edit	Delete
-----	-----------	------	--------

The [Security] - [Authentication] - [User List] page allows you to configure the following items.

Item	Description
[Search for Number]	Select the range of user registration numbers ([No.]) to be displayed. Default: [1 - 50]
[No.]	Displays the registration number for the user.
[User Name]	Displays the registered user name.
[Edit] button	Click to edit the information for the registered user.
[Delete] button	Click to delete the registered user.
[New Registration] button	Click to register a new user.

[User List] ([New Registration]/[Edit])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

General Settings

User List

Account Track List

Public User Registration

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

User Registration

No.

1

User Name

E-mail Address

Password

☒ Change Password

Account Track Number

(1-999)

Function Permission

Copy

Allow

Scan to Network

Allow

Scan to HDD

Allow

Scan to USB Memory

Allow

Fax

Allow

Print

Allow

Manual Destination Input

Allow

Output Permission (Print)

Color

Allow

Black

Allow

Output Permission (Scan)

Color

Allow

Max. Allowance Set

☐ Total

(1-99999999)

☐ Color

(1-99999999)

☐ Black

(1-99999999)

Authentication Device Settings

Authentication Device Information



Not Registered




Apply

Clear

Cancel

The [Security] - [Authentication] - [User List] - [New Registration] page allows you to configure the following items.

Item		Description
[User Registration]	[No.]	Displays the registration number for the new user.
	[User Name]	<div>Specify the name of the new user. Range: Up to 64 characters Default: [Blank]</div> <div> <i>A user name that already exists cannot be specified.</i></div> <div> <i>"Public" cannot be specified as the user name.</i></div>

Item		Description
	[External Server Name]	<p>Displays the name of the external server that performed authentication.</p> <p> <i>This item appears only if the following setting has been specified in the [Security] - [Authentication] - [General Settings] page. [User Authentication]: Select [External Server].</i></p>
	[E-mail Address]	<p>Specify the e-mail address of the new user.</p> <p>Range: Up to 320 characters Default: [Blank]</p>
	[Password]	<p>Specify the password of the new user.</p>
	[Account Track Number]	<p>Specify the account that the user belongs to.</p> <p>Range: 1 to 999 Default: [Blank]</p> <p> <i>Create the account in the [Security] - [Authentication] - [Account Track List] - [New Registration] page before specifying a setting.</i></p> <p> <i>This item appears only if the following settings have been specified in the [Security] - [Authentication] - [General Settings] page. [User Authentication]: Select [Device] or [External Server]. [Account Track]: Select [On].</i></p>
[Function Permission]		<p>Select whether to permit [Copy], [Scan to Network], [Scan to HDD], [Scan to USB Memory], [Fax], [Print], [Manual Destination Input].</p>
[Output Permission (Print)]		<p>Select whether to allow color or black-and-white printing.</p>
[Output Permission (Scan)]		<p>Select whether to allow images to be scanned in color.</p>

Item	Description
[Max. Allowance Set]	Specify the maximum number of pages that can be printed. To specify a limit, select the appropriate check box, and then type in the desired maximum value.
[Authentication Device Settings]	Shows whether or not an authentication device has been registered.

[Account Track List]



This menu item appears when [Account Track] (in the [Security] - [Authentication] - [General Settings] page) is set to [On].

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

▼ Authentication Account Track List

► General Settings New Registration

► User List Search for Number 1-50 ▼

► Account Track List

► Public User Registration

► ID & Print Settings

► Authentication Device Settings

► PKI Settings

► IPsec

► IP Address Filtering

► IEEE802.1X

► Limiting Access to Destination

► Auto Logout

No.	Account Name	Edit	Delete
-----	--------------	------	--------

The [Security] - [Authentication] - [Account Track List] page allows you to configure the following items.

Item	Description
[Search for Number]	Select the range of account registration numbers ([No.]) to be displayed. Default: [1 - 50]
[No.]	Displays the registration number for the account.
[Account Name]	Displays the registered account name.
[Edit] button	Click to edit the information for the registered account.
[Delete] button	Click to delete the registered account.
[New Registration] button	Click to register a new account.

[Account Track List] ([New Registration]/[Edit])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Authentication

▶ General Settings

▶ User List

▶ Account Track List

▶ Public User Registration

▶ ID & Print Settings

▶ Authentication Device Settings

▶ PKI Settings

▶ IPsec

▶ IP Address Filtering

▶ IEEE802.1X

▶ Limiting Access to Destination

▶ Auto Logout

Account Track Registration

No.1

Account Name

Change Password

Password

Output Permission (Print)

Color

Black

Output Permission (Scan)

Color

Max. Allowance Set

Total

Color


Black

Apply

Clear

Cancel

The [Security] - [Authentication] - [Account Track List] - [New Registration] page allows you to configure the following items.

Item		Description
[Account Track Registration]	[No.]	Displays the registration number for the new account.
	[Account Name]	Specify the name of the new account. Range: Up to 8 characters Default: [Blank]  An account name that already exists cannot be specified.
	[Password]	Specify the password of the new account.
[Output Permission (Print)]		Select whether to allow color or black-and-white printing.
[Output Permission (Scan)]		Select whether to allow images to be scanned in color.
[Max. Allowance Set]		Specify the maximum number of pages that can be printed. To specify a limit, select the appropriate check box, and then type in the desired maximum value.

[External Server List]



This menu item appears when [User Authentication] (in the [Security] - [Authentication] - [General Settings] page) is set to [External Server].

Administrator Log out

Ready

Ready

System Security Job Print Storage Address Network

▼ Authentication

► General Settings

► User List

► Account Track List

► External Server List

► Default Function Permission

► Public User Registration

► ID & Print Settings

► Authentication Device Settings

► PKI Settings

► IPsec

► IP Address Filtering

► IEEE802.1X

► Limiting Access to Destination

► Auto Logout

External Server List

No.	Default	Server Name	Server Type	Edit	Delete
1	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
2	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
3	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
4	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
5	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
6	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
7	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
8	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
9	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
10	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
11	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
12	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
13	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
14	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
15	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
16	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
17	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
18	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
19	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>
20	<input type="radio"/>			<input type="button" value="Edit"/>	<input type="button" value="Delete"/>

The [Security] - [Authentication] - [External Server List] page allows you to configure the following items.

Item	Description
[No.]	Displays the range of external server registration numbers ([No.]) to be displayed.
[Default]	Select the default external server.
[Server Name]	Displays the registered server name.
[Server Type]	Displays the registered server type.
[Edit] button	Click to edit the information for the registered external server.
[Delete] button	Click to delete the registered external server.

[External Server List] ([Edit])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

General Settings

User List

Account Track List

External Server List

Default Function Permission

Public User Registration

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

External Server (Active Directory)

No.1

Name


Server TypeActive Directory

Default Domain Name

ApplyClearCancel

The [Security] - [Authentication] - [External Serve List] - [Edit] page allows you to configure the following items.

Item		Description
[External Server (Active Directory)]	[No.]	Displays the registration number for the external server. Range: 1 to 20
	[Name]	Specify the name of the external server. Range: Up to 32 characters Default: [Blank]
	[Server Type]	Displays the external server type.
	[Default Domain Name]	Type in the default domain name for Active Directory. Range: Up to 64 characters
[External Server (NTLM)]	[No.]	Displays the registration number for the external server. Range: 1 to 20
	[Name]	Specify the name of the external server. Range: Up to 32 characters Default: [Blank]
	[Server Type]	Select the new external server type. Choices: [NTLM v1], [NTLM v2] Default: [NTLM v1]

Item		Description
	[Default Domain Name]	Type in the NTLM default domain name. Range: Up to 64 characters
[External Server (NDS)]	[No.]	Displays the registration number for the external server. Range: 1 to 20
	[Name]	Specify the name of the external server. Range: Up to 32 characters Default: [Blank]
	[Server Type]	Select the new external server type. Choices: [NDS over TCP/IP], [NDS over IPX/SPX] Default: [NDS over TCP/IP]
	[Default Tree]	Type in the default NDS tree name. Range: Up to 63 characters Default: [Blank]
	[Default Context]	Type in the default NDS context name. Range: Up to 127 characters Default: [Blank]
[External Server (LDAP)]	[No.]	Displays the registration number for the external server. Range: 1 to 20
	[Name]	Specify the name of the external server. Range: Up to 32 characters Default: [Blank]
		 <i>A external server name that already exists cannot be specified</i>
	[Server Type]	Displays the external server type.
	[Server Address]	Specify the LDAP server address. An IPv4 address, IPv6 address or FQDN (fully qualified domain name) can be specified. Range: Up to 255 characters Default: [Blank]
	[Port Number]	Specify the port number. Range: [1] to [65535] Default: [389]
	[SSL]	Select whether or not SSL is used. Choices: [Enable], [Disable] Default: [Disable]

Item		Description
	[Port Number (SSL)]	Specify the SSL port number. Range: [1] to [65535] Default: [636]
	[Search Base]	Specify the starting point for searching directories in the LDAP server. Searches are performed by also including the sub-directories of the specified starting point. Range: Up to 255 characters Default: [Blank]
	[Timeout]	Specify the length of time until the LDAP search times out. Range: [5] to [300] Default: [60]
	[Authentication Method]	Select the authentication method for logging on to the LDAP server. Select the same authentication method as that used on the LDAP server. Default: [Digest-MD5]
	[Search Attribute]	Specify the attributes to be used for performing an LDAP search. Range: Up to 64 characters Default: [uid]

[Default Function Permission]

Specify the default function permissions for users authenticated with the external server.

For details, refer to "[Default Function Permission]" on page 6-14.

[Public User Registration]



This menu item does not appear if public user access is not permitted.

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

Authentication

- General Settings
- User List
- Account Track List
- External Server List
- Default Function Permission
- Public User Registration**
- ID & Print Settings
- Authentication Device Settings
- PKI Settings
- IPsec
- IP Address Filtering
- IEEE802.1X
- Limiting Access to Destination
- Auto Logout

Public User Registration

Function Permission

Copy Allow

Scan to Network Allow

Scan to HDD Allow

Scan to USB Memory Allow

Fax Allow

Print Allow

Manual Destination Input Allow

Output Permission (Print)

Color Allow

Black Allow

Output Permission (Scan)

Color Allow

Apply Clear

The [Security] - [Authentication] - [Public User Registration] page allows you to configure the following items.

Item	Description
[Function Permission]	Select whether to permit [Copy], [Scan to Network], [Scan to HDD], [Scan to USB Memory], [Fax], [Print], [Manual Destination Input].
[Output Permission (Print)]	Select whether to allow color or black-and-white printing.
[Output Permission (Scan)]	Select whether to allow images to be scanned in color.

[ID & Print Settings]

[ID & Print & Print Settings]



- This menu item appears in the following cases.*
- When [User Authentication] (in the [Security] - [Authentication] - [General Settings] page) is not set to [Off]
 - When PageScope Authentication Manager is used for authentication

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

ID & Print Settings

ID & Print

Public User

Default Operation Selection

Disable

Save

Begin Printing


Apply

Clear


The [Security] - [ID & Print Settings] - [ID & Print Settings] window allows you to configure the following items:

Item	Description
[ID & Print]	Select whether or not the ID & Print function is used. Default: [Disable]
[Public User]	On models compatible with the ID & Print function, select whether or not public user jobs are immediately printed or stored. Default: [Save]
[Default Operation Selection]	Select the default operation you want to apply after authentication has been completed (success in login). Default: Begin Printing

[Authentication Device Settings]

 This menu item appears only if a loadable driver has been installed for operating an authentication device.

[General Settings]

 When a setting on this page is changed, the card information saved on the printer is erased.

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

General Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

General Settings

Authentication Type

Card Authentication

IC Card Type


Type A


ApplyClear

From the [General Settings] page, basic settings can be specified for performing authentication using an authentication device.

Item	Description
[Authentication Type]	Select the authentication method. Default: [None]
[IC Card Type]	Displays the types of cards supported by the loadable driver. Choices: [Type A], [MIFARE (UID)], [LEGIC (UID)], [MIFARE (UID) / LEGIC(UID)], [MIFARE (PID)], [LEGIC (PID)], [HID-Prox], [FeliCa], [FeliCa (SSFC)], [FeliCa (FCF:General)], [FeliCa (FCF:Campus)], [HID iCLASS] Default: [Type A]

[MIFARE Settings]

 Specify MIFARE settings. This menu item appears only if the loadable driver supports MIFARE.

 When a setting on this page is changed, the card information saved on the printer is erased.

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

General Settings

MIFARE Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

MIFARE Settings

Key 1

000000000000

Key 2

000000000000

Key Type

Key 1

ID Block Number

0

Apply

Clear

The [Security] - [Authentication Device Settings] - [MIFARE Settings] page allows you to configure the following items.

Item	Description
[Key 1]/ [Key 2]	Key for accessing data on the card Default: [0]
[Key Type]	Select the key to be used for access. Default: [Key 1]
[ID Block Number]	Block number for the user ID on the card Range: 0 to 255 Default: [0]

[LEGIC Settings]



Specify LEGIC settings. This menu item appears only if the loadable driver supports LEGIC.



When a setting on this page is changed, the card information saved on the printer is erased.

Administrator Log out

Ready Ready

System Security **Job** Print Storage Address Network

Authentication
ID & Print Settings
▼ Authentication Device Settings
 General Settings
 ▶ LEGIC Settings
 PKI Settings
 IPsec
 IP Address Filtering
 IEEE802.1X
 Limiting Access to Destination
 Auto Logout

LEGIC Settings

STAMP of User ID


PID Length


Apply Clear

The [Security] - [Authentication Device Settings] - [LEGIC Settings] page allows you to configure the following items.

Item	Description
[STAMP of User ID]	Stamp indicating the location of the user ID on the card Default: [0]
[PID Length]	Specify the length of the PID. Range: 1 to 16 Default: [16]

[FeliCa (SSFC) Settings]

 Specify FeliCa (SSFC) settings. This menu item appears only if the loadable driver supports FeliCa (SSFC).

 When a setting on this page is changed, the card information saved on the printer is erased.

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

General Settings

FeliCa (SSFC) Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

FeliCa (SSFC) Settings

Room Code

Floor Code

Building Code

Area Code

Security Level

Company Identification Code

Code 1

Code 2

Code 3

Code 4

Code 5

Code 6

Code 7

Code 8

Code 9

Code 10

Company Code

Apply

Clear

The [Security] - [Authentication Device Settings] - [FeliCa (SSFC) Settings] page allows you to configure the following items.

Item	Description
[Room Code]	Specify the room number. Range: 0 to 65535 Default: [0]
[Floor Code]	Specify the floor number. Range: 0 to 65535 Default: [0]
[Building Code]	Specify the building number. Range: 0 to 65535 Default: [0]

Item		Description
[Area Code]		Specify the region number. Range: 0 to 65535 Default: [0]
[Security Level]		Select the security level. Range: 0 to 65535 Default: [0]
[Company Identification Code]	[Code 1] to [Code 10]	Specify the company identification code. Default: [0]
[Company Code]		Specify the company code.

[HID (iCLASS) Settings]



Specify HID (iCLASS) settings. This menu item appears only if the loadable driver supports HID (iCLASS).



When a setting on this page is changed, the card information saved on the printer is erased.

Administrator Log out

Ready Ready

System Security **Job** Print Storage Address Network

> Authentication
 > ID & Print Settings
 ▼ Authentication Device Settings
 > General Settings
 > **HID (iCLASS) Settings**
 > PKI Settings
 > IPsec
 > IP Address Filtering
 > IEEE802.1X
 > Limiting Access to Destination
 > Auto Logout

HID iCLASS Settings

ID Length

Apply Clear

The [Security] - [Authentication Device Settings] - [HID (iCLASS) Settings] page allows you to configure the following items.

Item	Description
[ID Length]	Select the key to be used for access. Range: 1 to 16 Default: [8]

[PKI Settings]

[Device Certificate]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Device Certificate

New Registration

Default	Issued By	Issued To	Expiration Date	Detail	Edit
C	BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010	Detail	Edit
Ⓒ	BHC35-DB6F2B	BHC35-DB6F2B	04/26/2011	Detail	Edit

ApplyClear

The [Security] - [PKI Settings] - [Device Certificate] page allows you to configure the following items.

Item	Description
[New Registration] button	Click to register a new device certificate. Select how the new certificate will be registered: by creating a self-signed certificate, by requesting that a certificate be issued, or by importing a certificate.
[Default]	Select the default device certificate. Select the device certificate used as a default when device certificates are not used according to the protocol.
[Issued By]	Displays the issuer of the device certificate.

[Issued To]	Displays the destination where the device certificate was issued.
[Expiration Date]	Displays the expiration date of the device certificate.
[Detail] button	Click to view detailed information about the device certificate.
[Edit] button	Click to edit information for the device certificate.

[Device Certificate] ([New Registration])

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Create a Self-signed Certificate

Common Name BHC35-DB6F2B

Organization

Organization Unit

Locality

State/Province

Country


E-mail Address


Validity Start Date 06/08/2010

Validity Period 1 days (1-3650)

Apply Clear Cancel

The [Security] - [PKI Settings] - [Device Certificate] - [New Registration] page allows you to configure the following items.

Item		Description
[Create a Self-signed Certificate]	[Common Name]	Displays the common name for the printer to be used when creating an SSL certificate. It is created from the "Printer Host Name. DNS Server". If no DNS server is available, only the host name is used to create the common name.  This text is read-only.
	[Organization]	Specify the name of the group or organization. Range: Up to 63 characters

Item		Description
	[Organization Unit]	Specify the name of the department. Range: Up to 63 characters
	[Locality]	Specify the name of the municipality. Range: Up to 127 characters
	[State/Province]	Specify the name of the state or province. Range: Up to 127 characters
	[Country]	Specify the name of the country as a country code regulated by ISO03166. (2 characters)
	[E-mail Address]	Type in the e-mail address. Range: Up to 127 characters
	[Validity Start Date]	Displays the current time.
	[Validity Period]	Specify the validity period. Range: 1 to 3650 (days) Default: [1]
[Request a Certificate]	[Common Name]	Displays the common name for the printer to be used when creating an SSL certificate. It is created from the "Printer Host Name. DNS Server". If no DNS server is available, only the host name is used to create the common name.  <i>This text is read-only.</i>
	[Organization]	Specify the name of the group or organization. Range: Up to 63 characters
	[Organization Unit]	Specify the name of the department. Range: Up to 63 characters
	[Locality]	Specify the name of the municipality. Range: Up to 127 characters
	[State/Province]	Specify the name of the state or province. Range: Up to 127 characters
	[Country]	Specify the name of the country as a country code regulated by ISO03166. (2 characters)
	[E-mail Address]	Type in the e-mail address. Range: Up to 127 characters

Item		Description
[Import a Certificate]	[File]	Specify the file name of the device certificate to be imported. Click [Browse] to specify where to save the certificate file.
	[Password]	Type in the password to decode an encrypted certificate file. Range: Up to 32 characters
	[Retype Password]	Re-type the password for confirmation. Range: Up to 32 characters

[Device Certificate] ([Edit])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Device Certificate

☒ Certificate Information


☐ Export a Certificate

☐ Delete a Certificate

Next

Cancel

The [Security] - [PKI Settings] - [Device Certificate] - [Edit] page allows you to configure the following items.

Item		Description
[Certificate Information]		Select to view detailed information about the device certificate.
[Export a Certificate]	[Password]	Type in the password to decode an encrypted certificate file. Range: Up to 32 characters
	[Retype Password]	Re-type the password for confirmation. Range: Up to 32 characters
[Install a Certificate]	[File]	Specify the data for the text format sent from the certificate authority (CA). Click [Browse], and then specify the location for saving the certificate information to be registered.
[Delete a Certificate]		Click [OK] to remove the registered device certificate.  If [Enhanced Security Mode] is set to [On], the device certificate cannot be deleted.

[SSL/TLS Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

SSL/TLS Settings

SSL/TLS

Encryption Strength

Enable

AES-256, 3DES, RC4-128, DES, RC4-40

Apply

Clear

The [Security] - [PKI Settings] - [SSL/TLS Settings] page allows you to configure the following items.

Item	Description
[SSL/TLS]	Select the SSL transmission mode. Default: [Enable]
[Encryption Strength]	Select the SSL encryption strength. Choices: [AES-256], [AES-256, 3DES], [AES-256, 3DES, RC4-128, DES, RC4-40] Default: [AES-256, 3DES, RC4-128, DES, RC4-40]

[Protocol Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

► Authentication

► ID & Print Settings

► Authentication Device Settings

▼ PKI Settings

► Device Certificate

► SSL/TLS Settings

► Protocol Settings

► External Certificate

► Validate Certificate

► IPsec

► IP Address Filtering

► IEEE802.1X



► Limiting Access to Destination

► Auto Logout

Protocol Settings

Protocol	Issued By	Issued To	Edit
IEEE802.1X	Default		Edit
S/MIME	Default		Edit
HTTP Server	Default		Edit
E-mail Send (SMTP)	Default		Edit
E-mail Receive (POP)	Default		Edit
TCP Socket	Default		Edit
LDAP	Default		Edit
WebDAV Client	Default		Edit
OpenAPI	Default		Edit
Web Service	Default		Edit

The [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol]	Displays the classification for each protocol.
[Issued By]	Displays the issuer of the device certificate.  If no device certificates have been registered, [Not Installed] appears.  If a protocol has been specified as the default, [Default] appears.
[Issued To]	Displays the destination of the device certificate.
[Edit] button	Click to change the device certificate or confirm the details of the device certificate.

[Protocol Settings] ([Edit] (IEEE802.1X))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

ProtocolIEEE802.1X

Certificate Verification Settings

Validity PeriodEnable

CNDisable

ChainDisable

Device Certificate

	Issued By	Issued To	Expiration Date
Default			
BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010	

ApplyClear

Clicking [Edit] for the IEEE802.1X protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Certificate Verification Settings]	Specify settings for verifying the server certificate. [Validity Period]: Select whether to check that the server certificate is within the validity period. [CN]: Select whether to check that the CN of the server certificate matches the server address. [Chain]: Select whether to check that the server certificate chain (certification path) is correct.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (S/MIME))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

ProtocolS/MIME

Device Certificate

	Issued By	Issued To	Expiration Date
g	Default		
C	BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010

Apply

Clear

Clicking [Edit] for the S/MIME protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (HTTP Server))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

ProtocolHTTP Server

Device Certificate

	Issued By	Issued To	Expiration Date
g	Default		
C	BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010

Apply

Clear

Clicking [Edit] for the HTTP Server protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (E-Mail Send (SMTP))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

ProtocolE-mail Send (SMTP)

Certificate Verification Settings

Validity PeriodEnable

CNDisable

ChainDisable

Key UsageDisable

Check CRL ExpirationDisable

Check OCSP ExpirationDisable

Device Certificate

	Issued By	Issued To	Expiration Date
Default			
BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010	

ApplyClear

Clicking [Edit] for the E-Mail Send (SMTP) protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Certificate Verification Settings]	Specify settings for verifying the server certificate. [Validity Period]: Select whether to check that the server certificate is within the validity period. [CN]: Select whether to check that the CN of the server certificate matches the server address. [Chain]: Select whether to check that the server certificate chain (certification path) is correct. [Key Usage]: Select whether to check that the server certificate is used according to the purpose approved by the issuer. [Check CRL Expiration]: Select whether to use the certificate revocation list (CRL) to check that the server certificate has not expired. [Check OCSP Expiration]: Select whether to use the Online Certificate Status Protocol (OCSP) to check that the server certificate has not expired.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (E-Mail Receive (POP)))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

ProtocolE-mail Receive (POP)

Certificate Verification Settings

Validity PeriodEnable

CNDisable

ChainDisable

Key UsageDisable

Check CRL ExpirationDisable

Check OCSP ExpirationDisable

Device Certificate

	Issued By	Issued To	Expiration Date
Default			
	BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010

ApplyClear

Clicking [Edit] for the E-Mail Send (POP) protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Certificate Verification Settings]	Specify settings for verifying the server certificate. [Validity Period]: Select whether to check that the server certificate is within the validity period. [CN]: Select whether to check that the CN of the server certificate matches the server address. [Chain]: Select whether to check that the server certificate chain (certification path) is correct. [Key Usage]: Select whether to check that the server certificate is used according to the purpose approved by the issuer. [Check CRL Expiration]: Select whether to use the certificate revocation list (CRL) to check that the server certificate has not expired. [Check OCSP Expiration]: Select whether to use the Online Certificate Status Protocol (OCSP) to check that the server certificate has not expired.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (TCP Socket))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

ProtocolTCP Socket

Device Certificate

	Issued By	Issued To	Expiration Date
Default			
BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010	

Apply

Clear

Clicking [Edit] for the TCP Socket protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (LDAP))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▶ Authentication

▶ ID & Print Settings

▶ Authentication Device Settings

▼ PKI Settings

▶ Device Certificate

▶ SSL/TLS Settings

▶ Protocol Settings

▶ External Certificate

▶ Validate Certificate

▶ IPsec

▶ IP Address Filtering

▶ IEEE802.1X

▶ Limiting Access to Destination

▶ Auto Logout

Protocol Settings

ProtocolLDAP

Certificate Verification Settings

Validity PeriodEnable

CNDisable

ChainDisable

Key UsageDisable

Check CRL ExpirationDisable

Check OCSP ExpirationDisable

Device Certificate

	Issued By	Issued To	Expiration Date
Default			
BHC35-DB6F2B	BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010

ApplyClear

Clicking [Edit] for the LDAP protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Certificate Verification Settings]	Specify settings for verifying the server certificate. [Validity Period]: Select whether to check that the server certificate is within the validity period. [CN]: Select whether to check that the CN of the server certificate matches the server address. [Chain]: Select whether to check that the server certificate chain (certification path) is correct. [Key Usage]: Select whether to check that the server certificate is used according to the purpose approved by the issuer. [Check CRL Expiration]: Select whether to use the certificate revocation list (CRL) to check that the server certificate has not expired. [Check OCSP Expiration]: Select whether to use the Online Certificate Status Protocol (OCSP) to check that the server certificate has not expired.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (WebDAV Client))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

Protocol

WebDAV Client

Certificate Verification Settings

Validity Period

Enable

CN

Disable

Chain

Disable

Key Usage

Disable

Check CRL Expiration

Disable

Check OCSP Expiration

Disable

Device Certificate

	Issued By	Issued To	Expiration Date
Default			
BHC35-DB6F2B	BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010

Apply Clear

Clicking [Edit] for the WebDAV Client protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Certificate Verification Settings]	Specify settings for verifying the server certificate. [Validity Period]: Select whether to check that the server certificate is within the validity period. [CN]: Select whether to check that the CN of the server certificate matches the server address. [Chain]: Select whether to check that the server certificate chain (certification path) is correct. [Key Usage]: Select whether to check that the server certificate is used according to the purpose approved by the issuer. [Check CRL Expiration]: Select whether to use the certificate revocation list (CRL) to check that the server certificate has not expired. [Check OCSP Expiration]: Select whether to use the Online Certificate Status Protocol (OCSP) to check that the server certificate has not expired.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (OpenAPI))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

Protocol

OpenAPI

Certificate Verification Settings

Validity Period

Enable

CN

Disable

Chain

Disable

Key Usage

Disable

Check CRL Expiration

Disable

Check OCSP Expiration

Disable

Client Certificate

Disable

Device Certificate

	Issued By	Issued To	Expiration Date
Default			
BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010	

Apply Clear

Clicking [Edit] for the OpenAPI protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Certificate Verification Settings]	Specify settings for verifying the server certificate. [Validity Period]: Select whether to check that the server certificate is within the validity period. [CN]: Select whether to check that the CN of the server certificate matches the server address. [Chain]: Select whether to check that the server certificate chain (certification path) is correct. [Key Usage]: Select whether to check that the server certificate is used according to the purpose approved by the issuer. [Check CRL Expiration]: Select whether to use the certificate revocation list (CRL) to check that the server certificate has not expired. [Check OCSP Expiration]: Select whether to use the Online Certificate Status Protocol (OCSP) to check that the server certificate has not expired. [Client Certificate]: Select whether to request for client certificates.
[Device Certificate]	Select the certificate to be used.

[Protocol Settings] ([Edit] (Web Service))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Protocol Settings

Protocol

Web Service

Certificate Verification Settings

Validity Period

Enable

Chain

Disable

Key Usage

Disable

Check CRL Expiration

Disable

Check OCSP Expiration

Disable

Client Certificate

Disable

Device Certificate

	Issued By	Issued To	Expiration Date
Default			
	BHC35-DB6F2B	BHC35-DB6F2B	12/01/2010


Apply

Clear

Clicking [Edit] for the Web Service protocol in the [Security] - [PKI Settings] - [Protocol Settings] page allows you to configure the following items.

Item	Description
[Protocol Settings]	Displays the name of the selected protocol.
[Certificate Verification Settings]	Specify settings for verifying the server certificate. [Validity Period]: Select whether to check that the server certificate is within the validity period. [Chain]: Select whether to check that the server certificate chain (certification path) is correct. [Key Usage]: Select whether to check that the server certificate is used according to the purpose approved by the issuer. [Check CRL Expiration]: Select whether to use the certificate revocation list (CRL) to check that the server certificate has not expired. [Check OCSP Expiration]: Select whether to use the Online Certificate Status Protocol (OCSP) to check that the server certificate has not expired. [Client Certificate]: Select whether to request for client certificates.
[Device Certificate]	Select the certificate to be used.

[External Certificate]

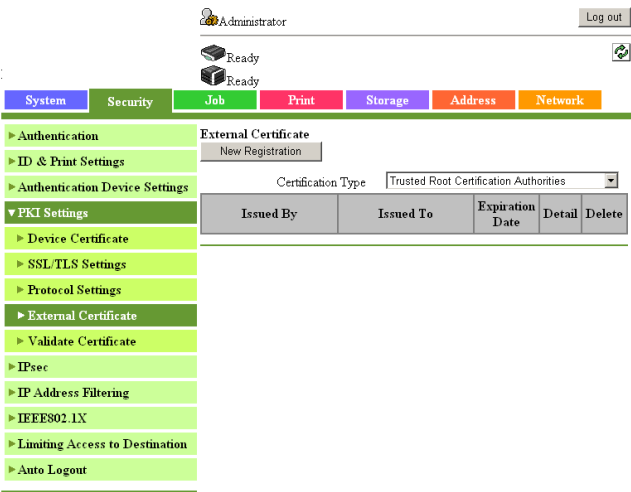

The [Security] - [PKI Settings] - [External Certificate] page allows you to configure the following items.

Item	Description
[New Registration] button	Click to register a new external certificate.
[Certification Type]	Select the type of external certificates to be displayed. External certificates of the selected type appear in the list.
[Issued By]	Displays the issuer of the external certificate.
[Issued To]	Displays the destination where the external certificate was issued.
[Expiration Date]	Displays the expiration date of the external certificate.
[Detail] button	Click to confirm detailed information about the external certificate.
[Delete] button	Click to display a message, requesting confirmation to delete the external certificate.

[External Certificate] ([New Registration])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Import a Certificate

Certification Type

Trusted Root Certification Authorities

File

Browse...

Apply

Clear

Cancel

Clicking [New Registration] in the [Security] - [PKI Settings] - [External Certificate] page allows you to configure the following items.

Item		Description
[Import a Certificate]		Import an external certificate.
	[Certification Type]	Select the type of external certificate to be registered. If [Trusted Root Certification Authorities] is selected, a root certificate from a trusted certificate authority (CA) will be registered. If [Trusted Intermediate Certification Authorities] is selected, an interim certificate from a trusted certificate authority (CA) will be registered. If [Trusted Certificate] is selected, trusted certificates will be individually registered. If [Untrusted Certificate] is selected, untrusted certificates will be individually registered.
	[File]	Click [Browse] to specify a new external certificate to be registered.

[Validate Certificate]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

Device Certificate

SSL/TLS Settings

Protocol Settings

External Certificate

Validate Certificate

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Certificate Verification Settings

Certificate Verification

Timeout

OCSP Service

URL

Proxy Settings

Proxy Server Address

Proxy Server Port Number

User Name

Password

No Proxy for following domain

Disable

10 sec. (5-300)

Disable

0.0.0.0

8080 (1-65535)

☐ Change Password

Apply

Clear

The [Security] - [PKI Settings] - [Validate Certificate] page allows you to configure the following items.

Item		Description
[Certificate Verification Settings]	[Certificate Verification]	Select whether or not certificate verification is performed.
	[Timeout]	Specify the timeout period for expiration date confirmation.
	[OCSP Service]	Select this check box to use the OCSP service.
	[URL]	Type in the URL of the OCSP service. Range: Up to 511 characters If this item is left blank, the machine accesses the URL of the OCSP service embedded in the certificate. If the URL of the OCSP service is not embedded in the certificate, an error will occur.

Item		Description
[Proxy Settings]	[Proxy Server Address]	To confirm the expiration date via a proxy server, enter its address. Specify the LDAP server address. An IPv4 address, IPv6 address or FQDN (fully qualified domain name) can be specified. Range: Up to 255 characters Default: [0.0.0.0]
	[Proxy Server Port Number]	Specify the port number of the proxy server.
	[User Name]	Type in the user name for logging on to the proxy server. Range: Up to 63 characters
	[Password]	Select [Change Password] to change the password. Type in the password for logging on to the proxy server. Range: Up to 63 characters
	[No Proxy for following domain]	To enable expiration date confirmation, specify an address that does not use the proxy server, depending on your environment. If the DNS server has already been configured, the host name can be entered instead. When using IPv6, the IPv6 address can be entered.

[IPsec]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

IPsec

General Settings

IPsec

IKE Life Time

IKE Diffie-Hellman Group

IPsec SA Life Time

Disable

28800sec

Group2

3600sec

OK

DUT Settings

No.

Encryption Algorithm

Authentication Algorithm

Edit

Delete

1

Edit

Delete

2

Edit

Delete

3

Edit

Delete

4

Edit

Delete

IPsec SA Settings

No.

Security Protocol

Encryption Algorithm for ESP

Authentication Algorithm for ESP

Authentication Algorithm for AH

Edit

Delete

1

Edit

Delete

2

Edit

Delete

3

Edit

Delete

4

Edit

Delete

5

Edit

Delete

6

Edit

Delete

7

Edit

Delete

8

Edit

Delete

IPsec Peer Settings

No.

Peer's Address

Pre-Shared Key

Encryption Mode

Edit

Delete

1

Edit

Delete

2

Edit

Delete

3

Edit

Delete

4

Edit

Delete

5

Edit

Delete

6

Edit

Delete

7

Edit

Delete

8

Edit

Delete

9

Edit

Delete

10

Edit

Delete

Apply

The [Security] - [IPsec] - [IPsec] page allows you to configure the following items.

Item		Description
[General Settings]	[IPsec]	Displays whether or not the IPsec function is enabled.
	[IKE Life Time]	Displays the length of the life for the IKE.
	[IKE Diffie-Hellman Group]	Displays the IKE Diffie-Hellman group.
	[IPsec SA Life Time]	Displays the length of the life for the IPsec SA.
	[Edit] button	Click to display the settings page.
[IKE Settings], [IPsec SA Settings], [IPsec Peer Settings]		Displays the registered settings.
	[Edit] button	Click to display the settings page.
	[Delete] button	Click to delete the settings.

[General Settings] ([Edit])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

General Settings

IPsec

Disable

IKE Life Time

28800

sec. (80-604800)

IKE Diffie-Hellman Group

Group2

IPsec SA Life Time

3600

sec. (120-604800)

Apply

Clear

Cancel

The [Security] - [IPsec] - [IPsec] - [General Settings] - [Edit] page allows you to configure the following items.

Item	Description
[IPsec]	Select whether or not to enable the IPsec function. Choices: [Enable], [Disable] Default: [Disable]
[IKE Life Time]	Specify the length (in seconds) of the life for the IKE. Range: [80] to [604800] Default: [28800]
[IKE Diffie-Hellman Group]	Select the IKE Diffie-Hellman group. Choices: [Group1], [Group2] Default: [Group2]
[IPsec SA Life Time]	Specify the length (in seconds) of the life for the IPsec SA. Range: [120] to [604800] Default: [3600]

[IKE Settings] ([Edit])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

IKE Settings

No.1

Encryption AlgorithmDES-CBC

Authentication AlgorithmMD5

ApplyClearCancel

The [Security] - [IPsec] - [IPsec] - [IKE Settings] - [Edit] page allows you to configure the following items.

Item	Description
[No.]	Displays the number to be registered.
[Encryption Algorithm]	Select the encryption algorithm to be used when creating a control tunnel. Choices: [DES-CBC], [3DES-CBC] Default: [DES-CBC]
[Authentication Algorithm]	Select the authentication algorithm to be used when creating a control tunnel. Choices: [MD5], [SHA-1] Default: [MD5]

[IPsec SA Settings] ([Edit])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

IPsec SA Settings

No.1

Security ProtocolAH

Encryption Algorithm for ESPNone

Authentication Algorithm for ESPNone

Authentication Algorithm for AHMD5

ApplyClearCancel


The [Security] - [IPsec] - [IPsec] - [IPsec SA Settings] - [Edit] page allows you to configure the following items.

Item	Description
[No.]	Displays the number to be registered.
[Security Protocol]	Select the security protocol. Choices: [AH], [ESP], [ESP & AH] Default: [AH]
[Encryption Algorithm for ESP]	When [Security Protocol] is set to [ESP], select the ESP encryption algorithm. Choices: [None], [DES-CBC], [3DES-CBC], [AES-CBC], [AES-CTR] Default: [None]
[Authentication Algorithm for ESP]	When [Security Protocol] is set to [ESP], select the ESP authentication algorithm. Choices: [None], [MD5], [SHA-1] Default: [None]

Item	Description
[Authentication Algorithm for AH]	<p>When [Security Protocol] is set to [AH], select the AH authentication algorithm.</p> <p>Choices: [MD5], [SHA-1]</p> <p>Default: [MD5]</p>

[IPsec Peer Settings] ([Edit])


The [Security] - [IPsec] - [IPsec] - [IPsec Peer Settings] - [Edit] page allows you to configure the following items.

Item	Description
[No.]	Displays the number to be registered.
[Encapsulation Mode]	<p>Select the operation mode of IPsec.</p> <p>Choices: [Not Use], [Tunnel Mode], [Transport Mode]</p> <p>Default: [Not Use]</p>
[Peer's Address]	<p>Specify the IP address of the peer.</p> <p>Range: 2 to 39 characters</p> <p>Default: [Blank]</p> <p> An IPv4 or IPv6 address can be specified.</p>

Item	Description
[Perfect Forward Secrecy]	To increase the IKE strength, select [Use]. Choices: [Not Use], [Use] Default: [Not Use]
[Pre-Shared Key]	Specify the pre-shared key text shared with the peer. Range: Up to 64 characters Default: [Blank]

[IP Address Filtering]

[IP Address Filtering]

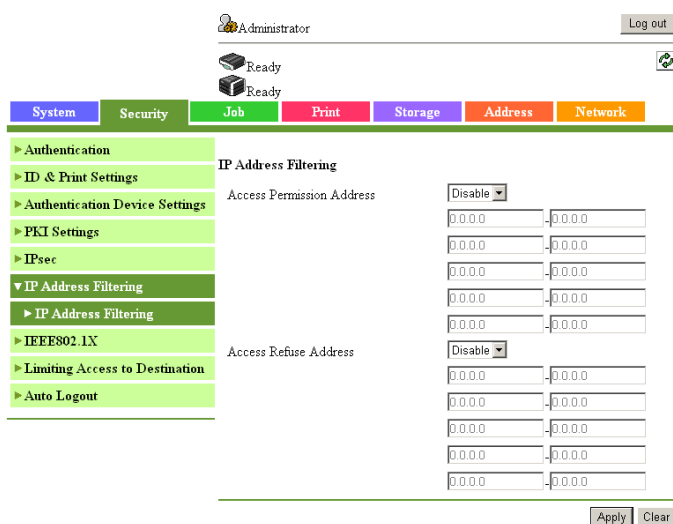

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

IP Address Filtering

Access Permission Address

Disable

0.0.0.0 - 0.0.0.0

0.0.0.0 - 0.0.0.0

0.0.0.0 - 0.0.0.0

0.0.0.0 - 0.0.0.0

0.0.0.0 - 0.0.0.0

Access Refuse Address

Disable

0.0.0.0 - 0.0.0.0

0.0.0.0 - 0.0.0.0

0.0.0.0 - 0.0.0.0

0.0.0.0 - 0.0.0.0



0.0.0.0 - 0.0.0.0



Apply Clear

The [Security] - [IP Address Filtering] - [IP Address Filtering] page allows you to configure the following items.



If the range of permitted IP addresses in [Access Permission Address] overlaps the range of refused IP addresses in [Access Refuse Address], the refused addresses in [Access Refuse Address] are given priority.

Item	Description
[Access Permission Address]	To specify addresses being permitted access, select [Enable]. Choices: [Enable], [Disable] Default: [Disable]
Range of IP address permitted access	<p>Specify the starting and ending addresses of ranges being permitted access. Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.) Default: [0.0.0.0]</p> <p> To specify a single IP address, type the same IP address into both the box for the starting IP address and for the ending IP address, or type "0.0.0.0" into the box for either the starting IP address or the ending IP address.</p> <p> If the starting IP address is larger than the ending IP address, the setting is not applied.</p>

Item	Description
[Access Refuse Address]	<p>To specify addresses being denied access, select [Enable].</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Disable]</p>
Range of IP address refused access	<p>Specify the starting and ending addresses of ranges being denied access.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>Default: [0.0.0.0]</p> <p> <i>To specify a single IP address, type the same IP address into both the box for the starting IP address and for the ending IP address, or type "0.0.0.0" into the box for either the starting IP address or the ending IP address.</i></p> <p> <i>If the starting IP address is larger than the ending IP address, the setting is not applied.</i></p>

[IEEE802.1X]

[IEEE802.1X]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

IEEE802.1X

Limiting Access to Destination

Auto Logout

IEEE802.1X

IEEE802.1X

EAP Type

User ID

Password

TTLS Anonymous Name

TTLS Authentication Type

Send Client Certificate

Server ID

Encryption Strength

Network Stop

Limit Time

Disable

None

☐ Change Password

anonymous

MS-CHAPv2

Disable

Low

Disable


sec. (60-255)

Apply

Clear

The [Security] - [IEEE802.1X] - [IEEE802.1X] page allows you to configure the following items.


Item	Description
[IEEE802.1X]	Select whether or not to enable the IEEE802.1X function. Choices: [Enable], [Disable] Default: [Disable]
[EAP Type]	Select the type of authentication used with IEEE802.1X. Choices: [None], [EAP-MD5], [EAP-TLS], [EAP-TTLS], [PEAP], [Server Specification] Default: [None]
[User ID]	If [EAP Type] is set to [EAP-MD5], [EAP-TLS], [EAP-TTLS], [PEAP] or [Server Specification], specify the account name. Range: Up to 128 characters Default: [Blank]

Item	Description
[Password]	<p>Select [Change Password] to change the password.</p> <p>If [EAP Type] is set to [EAP-MD5], [EAP-TTLS], [PEAP] or [Server Specification], specify the password.</p> <p>Range: Up to 128 characters</p> <p>Default: [Blank]</p>
[TTLS Anonymous Name]	<p>Specify the logon name used with EAP-TTLS primary authentication.</p> <p>If [EAP Type] is set to [EAP-TTLS] or [Server Specification], specify the TTLS anonymous name.</p> <p>Range: Up to 128 characters</p> <p>Default: [anonymous]</p> <p> <i>If [EAP Type] is set to [Server Specification] while the actual authentication method is EAP-MD5, type in the same name as that specified for [User ID].</i></p>
[TTLS Authentication Type]	<p>Select the EAP-TTLS phase 2 authentication procedure.</p> <p>If [EAP Type] is set to [EAP-TTLS] or [Server Specification], select the TTLS anonymous type.</p> <p>Choices: [PAP], [MS-CHAP], [MS-CHAPv2]</p> <p>Default: [MS-CHAPv2]</p>
[Send Client Certificate]	<p>Select whether or not the client certificate is sent when the client certificate is requested by the server. If [EAP Type] is set to [EAP-TTLS], [PEAP] or [Server Specification], select the setting to send the client certificate.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Disable]</p>

Item	Description
[Server ID]	Specify the characters used for verification through backward matching with the CN attributes of the server certificate. If [EAP Type] is set to [EAP-TLS], [EAP-TTLS], [PEAP] or [Server Specification], specify the server ID. Range: Up to 64 characters Default: [Blank]
[Encryption Strength]	Select the encryption level of TLS packets with EAP-TLS/TTLS/PEAP. If [EAP Type] is set to [EAP-TLS], [EAP-TTLS], [PEAP] or [Server Specification], select the encryption strength. Choices: [Low], [Medium], [High] Default: [Low]
[Network Stop]	Select whether or not to stop the network if authentication fails from the start of authentication. Choices: [Enable], [Disable] Default: [Disable]
	[Limit Time] Specify the length of time to postpone stopping the network when [Network Stop] is set to [Enable]. Range: 60 to 255 (seconds) Default: [60]

[Limiting Access to Destination]

[Restrict User Access]

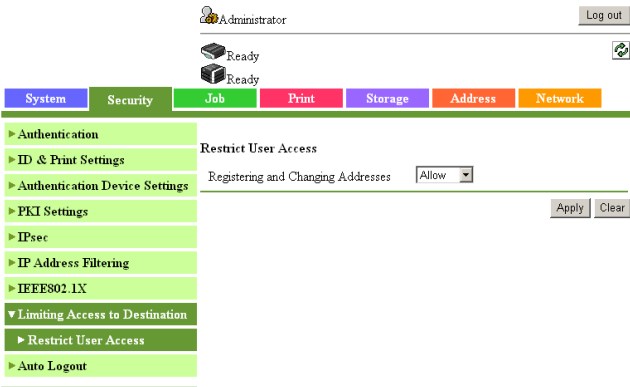

The [Security] - [Limiting Access to Destination] - [Restrict User Access] page allows you to configure the following items.

Item	Description
[Registering and Changing Addresses]	Select whether or not to prohibit users from registering or editing destinations. Choices: [Allow], [Restrict] Default: [Allow]

[Auto Logout]

[Auto Logout]

Administrator

Log out

Ready

Ready

SystemSecurityJobPrintStorageAddressNetwork

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Auto Logout

Auto Logout

Admin Mode Logout Time

10 min (1-60)

User Mode Logout Time

60 min (1-60)

Apply

Clear

The [Security] - [Auto Logout] - [Auto Logout] page allows you to configure the following items.

Item	Description
[Admin Mode Logout Time]	<p>Specify the length of time to automatically log off from Administrator mode.</p> <p>Range: 1 to 60 (minutes)</p> <p>Default: [10]</p>
[User Mode Logout Time]	<p>Specify the length of time to automatically log off from User mode.</p> <p>Range: 1 to 60 (minutes)</p> <p>Default: [60]</p>

[Administrator Password]

[Administrator Password]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Authentication

ID & Print Settings

Authentication Device Settings

PKI Settings

IPsec

IP Address Filtering

IEEE802.1X

Limiting Access to Destination

Auto Logout

Administrator Password

Administrator Password

Administrator Password

Current Password


New Password

Retype New Password

Apply

Clear


The [Security] - [Administrator Password] - [Administrator Password] page allows you to configure the following items.

 This menu item does not appear if there is no HTTPS connection or if [Enhanced Security Mode] is set to [On].

Item	Description
[Current Password]	Type in the currently specified administrator password.
[New Password]	Type in the new administrator password. Range: Up to 8 characters (excluding spaces and ")
[Retype New Password]	Type in the new administrator password again for confirmation.

[Job] tab

This page allows you to view the status of current print jobs.

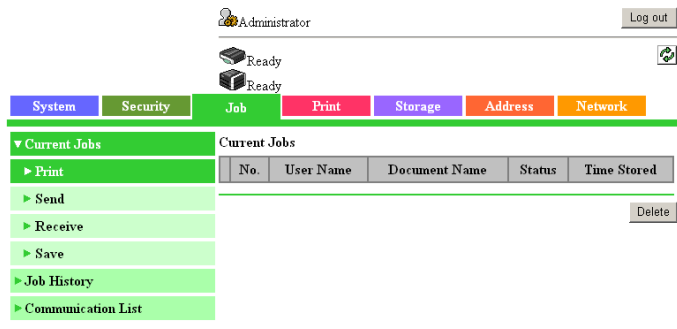


[Current Jobs]

[Print] (shown above)

The [Job] - [Current Jobs] - [Print] page allows you to configure the following items.

Item	Description
[No.]	Displays the identification number of the print job. Each print job that the printer receives is assigned a unique identification number.
[User Name]	Displays the name of the owner for the print job, if known.
[Document Name]	Displays the name of the print file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Status]	Displays the current status of the print job. (Waiting, Parsing, Printing, Scanning, Pause, Cancel, or Abort)
[Time Stored]	Displays the time that the job was queued.
[Delete] button	Click to delete the print job(s) whose check box in column 1 has been selected.


[Send]

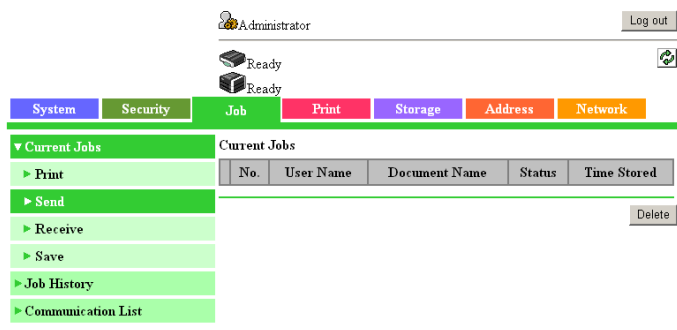

The [Job] - [Current Jobs] - [Send] page allows you to configure the following items.

Item	Description
[No.]	Displays the identification number of the transmission job. Each job sent by the printer is assigned a unique identification number.
[User Name]	Displays the name of the owner for the transmission job, if known.
[Document Name]	Displays the name of the transmission file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Status]	Displays the current status of the transmission job. (Waiting, Spooling, Parsing, Printing, Scanning, Transferring, Pause, Sending, Dialing, Dialing, Wait To Redial or TimerTx)
[Time Stored]	Displays the time that the job was queued.
[Delete] button	Click to delete the transmission job(s) whose check box in column 1 has been selected.

[Receive]

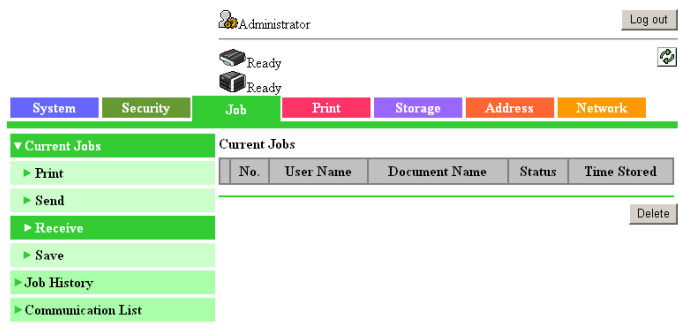

The [Job] - [Current Jobs] - [Receive] page allows you to configure the following items.

Item	Description
[No.]	Displays the identification number of the reception job. Each job received by the printer is assigned a unique identification number.
[User Name]	Displays the name of the owner for the reception job, if known.
[Document Name]	Displays the name of the reception file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Status]	Displays the current status of the reception job. (Waiting, Printing, Transferring, Pause, Receiving, Dialing, Dialing or Wait To Redial)
[Time Stored]	Displays the time that the job was queued.
[Delete] button	Click to delete the reception job(s) whose check box in column 1 has been selected.

[Save]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Current Jobs

► Print

► Send

► Receive

► Save

► Job History

► Communication List

Current Jobs


No.	User Name	Document Name	Status	Time Stored
<div>Delete</div>				

The [Job] - [Current Jobs] - [Save] page allows you to configure the following items.

Item	Description
[No.]	Displays the identification number of the stored job. Each job stored on the printer is assigned a unique identification number.
[User Name]	Displays the name of the owner for the stored job, if known.
[Document Name]	Displays the name of the stored file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Status]	Displays the current status of the stored job. (Scanning or Pause)
[Time Stored]	Displays the time that the job was queued.
[Delete] button	Click to delete the stored job(s) whose check box in column 1 has been selected.

[Job History]


[Print]

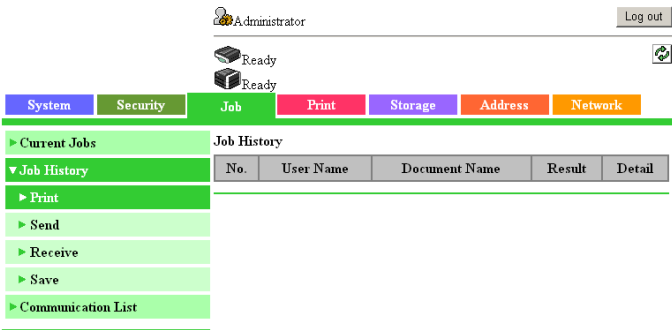

The [Job] - [Job History] - [Print] page allows you to configure the following items.

Item	Description
[No.]	Displays the identification number of the print job. Each print job that the printer receives is assigned a unique identification number.
[User Name]	Displays the name of the owner for the print job, if known.
[Document Name]	Displays the name of the print file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Result]	Displays the result of the print job. (OK, Error, or Canceled)
[Detail] button	Click to display a page containing details.


[Send]

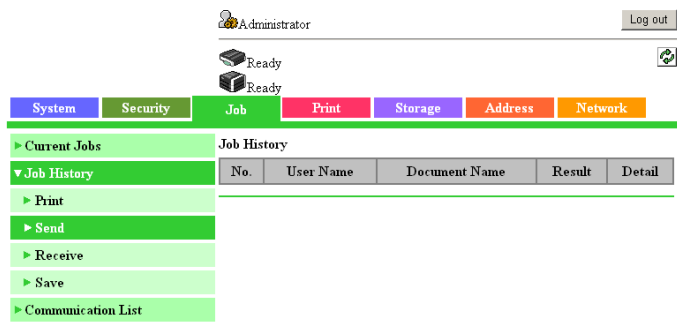

The [Job] - [Job History] - [Send] page allows you to configure the following items.

Item	Description
[No.]	Displays the identification number of the transmission job. Each job sent by the printer is assigned a unique identification number.
[User Name]	Displays the name of the owner for the transmission job, if known.
[Document Name]	Displays the name of the transmission file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Result]	Displays the result of the transmission job. (OK, Error, or Canceled)
[Detail] button	Click to display a page containing details.


[Receive]

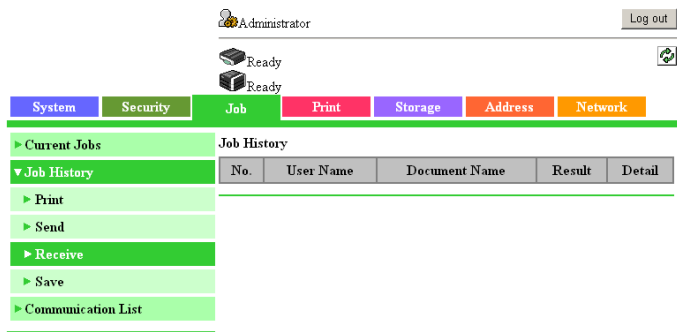

The [Job] - [Job History] - [Receive] page allows you to configure the following items.

Item	Description
[No.]	Displays the identification number of the reception job. Each job received by the printer is assigned a unique identification number.
[User Name]	Displays the name of the owner for the reception job, if known.
[Document Name]	Displays the name of the reception file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Result]	Displays the result of the reception job. (OK, Error, or Canceled)
[Detail] button	Click to display a page containing details.

[Save]

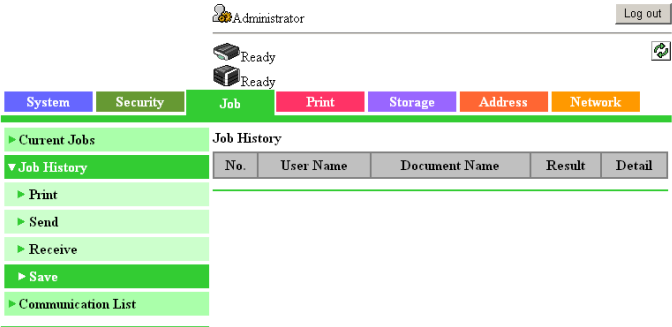

The [Job] - [Job History] - [Save] page allows you to configure the following items.

Item	Description
[No.]	Displays the identification number of the stored job. Each job stored on the printer is assigned a unique identification number.
[User Name]	Displays the name of the owner for the stored job, if known.
[Document Name]	Displays the name of the stored file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Result]	Displays the result of the stored job. (OK, Error, or Canceled)
[Detail] button	Click to display a page containing details.

[Job History] ([Detail])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▶ Current Jobs

▼ Job History

▶ Print

▶ Send

▶ Receive

▶ Save

▶ Communication List

Detail

No.245

TypePrint

User NameAdministrator

Document NameProfile Delete

Number of Originals1

Copies1


ResultOK


Time Stored04/23/2010 13:54:18

Time Finished04/23/2010 13:54:34

OK

The [Job] - [Job History] - [Detail] window provides the following information for the selected job.


 As an example, a description of the [Job] - [Job History] - [Print] - [Detail] page is provided below.

Item	Description
[No.]	Displays the identification number of the print job. Each print job that the printer receives is assigned a unique identification number.
[Type]	Displays the job type.
[User Name]	Displays the name of the owner for the print job, if known.
[Document Name]	Displays the name of the print file. This cell remains empty if [Hide Personal Information] is set to [On] in the [System] - [Machine Settings] page.
[Number of Originals]	Displays the number of pages in the document.
[Copies]	Displays the number of printed copies.  This item does not appear in the [Send] - [Detail], [Receive] - [Detail] and [Save] - [Detail] pages.

Item	Description
[Result]	Displays the result of the print job (OK, Error, or Canceled)
[Time Stored]	Displays the time that the job was queued.
[Time Finished]	Displays the time that printing finished.
[OK] button	Click to return to the previous page.

[Communication List]

[Scan]

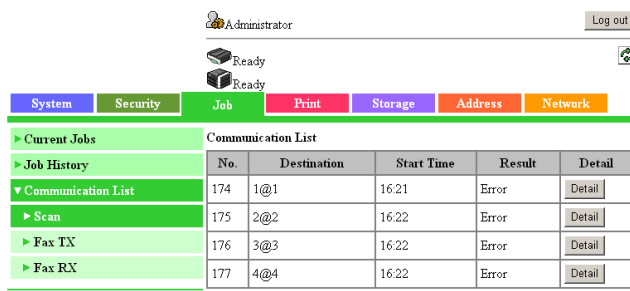


The screenshot shows the printer's web interface. At the top, there is a user bar with 'Administrator' and a 'Log out' button. Below this, there are status indicators for 'Ready' and 'Ready' with a refresh icon. A navigation bar contains tabs: System, Security, Job, Print, Storage, Address, and Network. The 'Job' tab is selected. On the left, a sidebar lists 'Current Jobs', 'Job History', 'Communication List' (expanded), 'Scan', 'Fax TX', and 'Fax RX'. The main content area displays the 'Communication List' for 'Scan' jobs. It is a table with columns: No., Destination, Start Time, Result, and Detail. There are four rows of data, all showing 'Error' results.

No.	Destination	Start Time	Result	Detail
174	1@1	16:21	Error	Detail
175	2@2	16:22	Error	Detail
176	3@3	16:22	Error	Detail
177	4@4	16:22	Error	Detail

The [Job] - [Communication List] - [Scan] page allows you to configure the following items.

Item	Description
[No.]	Displays the transmission ID.
[Destination]	Displays the transmission recipient.
[Start Time]	Displays the time that the job started.
[Result]	Displays the results of the job.
[Detail] button	Click to display a page containing details.

[Fax TX]

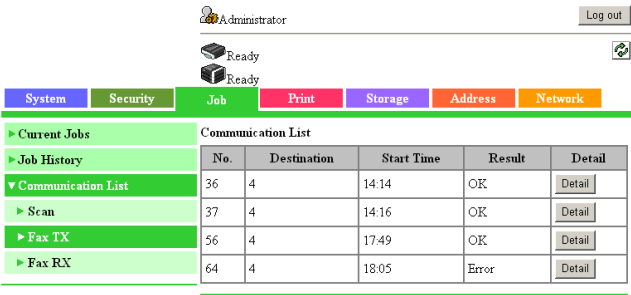

The [Job] - [Communication List] - [Fax TX] page allows you to configure the following items.

Item	Description
[No.]	Displays the transmission ID.
[Destination]	Displays the transmission recipient.
[Start Time]	Displays the time that the job started.
[Result]	Displays the results of the job.
[Detail] button	Click to display a page containing details.

[Fax RX]

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

► Current Jobs

► Job History

▼ Communication List

► Scan

► Fax TX


► Fax RX



No.	Destination	Start Time	Result	Detail
38		14:18	OK	Detail
39		14:27	OK	Detail
44		15:12	OK	Detail
46		17:21	OK	Detail


The [Job] - [Communication List] - [Fax RX] page allows you to configure the following items..

Item	Description
[No.]	Displays the transmission ID.
[Destination]	Displays the transmission recipient.
[Start Time]	Displays the time that the job started.
[Result]	Displays the results of the job.
[Detail] button	Click to display a page containing details.

[Communication List] ([Detail])

 Administrator Log out

 Ready 

 Ready

System Security Job Print Storage Address Network

▶ Current Jobs

▶ Job History

▼ Communication List

▶ Scan

▶ Fax TX

▶ Fax RX

Communication List

No. 2

Destination

Mode Scan

Start Time 12/08/2009 16:03:44

Number of Originals 1

Result OK

OK

The [Job] - [Communication List] - [Detail] window provides the following information for the selected job.



As an example, the [Job] - [Communication List] - [Scan] - [Detail] page is shown.

Item	Description
[No.]	Displays the transmission ID.
[Destination]	Displays the transmission recipient.
[Mode]	Displays the communication type.
[Start Time]	Displays the time that the job started.
[Communication Time]	Displays the transmission time.
[Number of Originals]	Displays the number of pages in the document.
[Result]	Displays the results of the job.
[OK] button	Click to return to the previous page.

[Print] tab

This page allows more detailed printer settings to be specified.

[Default Settings]

[General Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Default Settings

► General Settings

► Paper Source Settings

► Tray Mapping Settings

► PCL Settings

► PostScript Settings

► XPS Settings

► Print Quality Settings

► Font/Form

► Download Font/Form

► Report Types

► Direct Print

General Settings

PDL

Auto

Paper Source

Tray2

Duplex

Off

Output Tray

MainTray

Copies

1

(1-9999)

Paper Size

A4

Width

210

mm(92-216)

Length

297

mm(148-356)

Paper Type

Plain Paper

Collate

Off

Auto Continue

Off

Hold Job Timeout

Disabled


Grayscale Page

Grayscale Print


Apply

Clear

The [Print] - [Default Settings] - [General Settings] window allows you to configure the following items:

 The settings on this page can be changed only if the user has logged on to Administrator mode.

Item	Description
[PDL]	Selects default language to be selected. Choices: [Auto], [PCL], [PS] Default: [Auto] Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [Default Emulation]

Item	Description
[Paper Source]	<p>The paper tray that is normally used can be specified.</p> <p>Choices: [Tray1], [Tray2], [Tray3], [Tray4] Default: [Tray2] Configuration Menu Equivalent: [Admin Settings] - [Copy Settings] - [Paper Priority]</p> <p> <i>[Tray3] and [Tray4] appear only if an optional lower feeder unit is installed.</i></p>
[Duplex]	<p>If [Long-Edge Binding] is selected, the pages will be printed on both sides of the paper for long-edge binding.</p> <p>If [Short-Edge Binding] is selected, the pages will be printed on both sides of the paper for short-edge binding.</p> <p>Choices: [Off], [Short-Edge Binding], [Long-Edge Binding] Default: [Off] Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Simplex/Duplex]</p>
[Output Tray]	Displays the name of the output tray.
[Copies]	<p>Specifies the default setting for number of copies to be printed.</p> <p>Range: 1-9999 Default: 1 Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Copies]</p>
[Paper Size]	<p>Specifies the default setting for the size of paper.</p> <p>Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray1] - [Paper Size]</p>

Item	Description
[Width]	<p>Specifies the paper width when [Paper Size] is set to [Custom Size].</p> <p>Range: 3.63 - 8.50 (inch) / 92 - 216 (mm)</p> <p>Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray1] - [Custom Size] - [Width]</p>
[Length]	<p>Specifies the paper length when [Paper Size] is set to [Custom Size].</p> <p>Range: 5.83 - 14.00 (inch) / 148 - 356 (mm)</p> <p>Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray1] - [Custom Size] - [Length]</p>
[Paper Type]	<p>Specifies the default setting for the type of paper.</p> <p>Choices: [Plain Paper], [Recycled], [Thick 1], [Thick 2], [Label], [Envelope], [Postcard], [Letterhead], [Glossy 1], [Glossy 2], [Single Side Only], [Special Paper]</p> <p>Default: [Plain Paper]</p> <p>Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray1] - [Paper Type]</p>
[Collate]	<p>If [On] is selected, all pages in a copy of the document can be printed before printing the next copy. If [Off] is selected, all copies of the document are not printed separately.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p> <p>Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Paper Tray Settings] - [Paper Setting] - [Collate]</p>

Item	Description
[Auto Continue]	<p>Select whether or not printing continues if the size or type of paper in the selected paper tray is different from the size or type of paper for the print job.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Auto Continue]</p>
[Hold Job Timeout]	<p>Select the length of time until print jobs saved on the hard disk are deleted. If [Disable] is selected, print jobs are not deleted at a specific time.</p> <p>Choices: [Disabled], [One Hour], [Four Hours], [One Day], [One Week]</p> <p>Default: [Disabled]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Hold Job Timeout]</p>
[Grayscale Page]	<p>Select the operation to be performed for black-and-white pages in a job specified for color printing.</p> <p>If [Auto] is selected, printing is automatically performed according to the first page of the job.</p> <p>If [Grayscale Print] is selected, black-and-white printing is automatically performed depending on each page.</p> <p>If [Color Print] is selected, color printing is performed, even for a black-and-white page.</p> <p>Choices: [Auto], [Grayscale Print], [Color Print]</p> <p>Default: [Grayscale Print]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Grayscale Page]</p>

[Paper Source Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Default Settings

▶ General Settings

▶ Paper Source Settings

▶ Tray Mapping Settings

▶ PCL Settings

▶ PostScript Settings

▶ XPS Settings

▶ Print Quality Settings

▶ Font/Form

▶ Download Font/Form

▶ Report Types

▶ Direct Print

Paper Source Settings

Tray1

Paper Size

Width

Length

Paper Type

Tray2

Paper Size

Width

Length

Paper Type

Tray3

Paper Size

Paper Type

Tray Chaining

Tray Chaining

Custom Size

210

mm(92-216)

297

mm(148-356)

Plain Paper

A4

210

mm(92-216)

297

mm(148-356)

Plain Paper

Legal


Plain Paper

Enable

Apply

Clear

The [Print] - [Default Settings] - [Paper Source Settings] window allows you to configure the following items:

 Some settings on this page can be changed only if the user has logged on to Administrator mode.

Item		Description
[Tray1]	[Paper Size]	<p>Specifies the setting for the size of paper loaded into Tray 1.</p> <p>Default: [Letter] (120V model) [A4] (Other model)</p> <p>Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray1] - [Paper Size]</p>

Item		Description
	[Width]	<p>Specifies the paper width when [Paper Size] is set to [Custom Size].</p> <p>Range: 3.63 - 8.50 (inch) / 92 - 216 (mm)</p> <p>Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray1] - [Custom Size] - [Width]</p>
	[Length]	<p>Specifies the paper length when [Paper Size] is set to [Custom Size].</p> <p>Range: 5.83 - 14.00 (inch) / 148 - 356 (mm)</p> <p>Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray1] - [Custom Size] - [Length]</p>
	[Paper Type]	<p>Specifies the setting for the type of paper loaded into Tray 1.</p> <p>Choices: [Any], [Plain Paper], [Recycled], [Thick 1], [Thick 2], [Label], [Envelope], [Postcard], [Letterhead], [Glossy 1], [Glossy 2], [Single Side Only], [Special Paper]</p> <p>Default: [Plain Paper]</p> <p>Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray1] - [Paper Type]</p>

Item		Description
[Tray2]	[Paper Size]	<p>Specifies the setting for the size of paper loaded into Tray 2.</p> <p>Default: [Letter] (120V model) [A4] (other model)</p> <p>Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray2] - [Paper Size]</p>
	[Width]	<p>Specifies the paper width when [Paper Size] is set to [Custom Size].</p> <p>Range: 3.63 - 8.50 (inch) / 92 - 216 (mm)</p> <p>Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray2] - [Custom Size] - [Width]</p>
	[Length]	<p>Specifies the paper length when [Paper Size] is set to [Custom Size].</p> <p>Range: 5.83 - 11.69 (inch) / 148 - 297 (mm)</p> <p>Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray2] - [Custom Size] - [Length]</p>
	[Paper Type]	<p>Specifies the setting for the type of paper loaded into Tray 2.</p> <p>Choices: [Any], [Plain Paper], [Recycled], [Thick 1], [Thick 2], [Label], [Postcard], [Letterhead], [Glossy 1], [Glossy 2], [Single Side Only], [Special Paper]</p> <p>Default: [Plain Paper]</p> <p>Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray2] - [Paper Type]</p>

Item		Description
[Tray3] This item appears only if an optional lower feeder unit is installed.	[Paper Size]	Displays the setting for the size of paper loaded into Tray 3. Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray3] - [Paper Size]
	[Paper Type]	Specifies the setting for the type of paper loaded into Tray 3. Choices: [Any], [Plain Paper], [Recycled], [Single Side Only], [Special Paper] Default: [Plain Paper] Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray3] - [Paper Type]
[Tray4] This item appears only if an optional lower feeder unit is installed.	[Paper Size]	Displays the setting for the size of paper loaded into Tray 4. Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray4] - [Paper Size]
	[Paper Type]	Specifies the setting for the type of paper loaded into Tray 4. Choices: [Any], [Plain Paper], [Recycled], [Single Side Only], [Special Paper] Default: [Plain Paper] Configuration Menu Equivalent: [User Settings] - [Printer Settings] - [Paper Settings] - [Paper Tray Settings] - [Tray4] - [Paper Type]

Item		Description
[Tray Chaining]	[Tray Chaining]	<p>If [Enable] is selected and the specified paper tray runs out of paper during printing, a paper tray loaded with paper of the same size is automatically selected so printing can continue.</p> <p>If [Disable] is selected and the specified paper tray runs out of paper, printing stops.</p> <p>Choices: [Enable], [Disable] Default: [Enable] Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Auto Tray Switching]</p>

[Tray Mapping Settings]

The screenshot shows a configuration window titled "Administrator" with a "Log out" button. Below the title bar are icons for "Ready" status and a refresh button. A navigation bar contains tabs for System, Security, Job, Print, Storage, Address, and Network. The "Print" tab is selected, and the "Tray Mapping Settings" window is open. On the left is a tree view with "Tray Mapping Settings" selected. The main area shows "Tray Mapping Mode" set to "Off" and a list of logical trays (0-9) each mapped to a physical tray (Physical Tray 2).


Logical Tray	Physical Tray
Logical Tray 0	Physical Tray 2
Logical Tray 1	Physical Tray 1
Logical Tray 2	Physical Tray 2
Logical Tray 3	Physical Tray 2
Logical Tray 4	Physical Tray 2
Logical Tray 5	Physical Tray 2
Logical Tray 6	Physical Tray 2
Logical Tray 7	Physical Tray 2
Logical Tray 8	Physical Tray 2
Logical Tray 9	Physical Tray 2

Buttons at the bottom right: Apply, Clear

The [Print] - [Default Settings] - [Tray Mapping Settings] window provides the following information.



The settings on this page can be changed only if the user has logged on to Administrator mode.

Item	Description
[Tray Mapping Mode]	<p>Select whether or not the Tray Mapping function is used.</p> <p>Choices: [On], [Off] Default: [Off] Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Tray Mapping] - [Tray Mapping Mode]</p>
[Logical Tray 0-9]	<p>Select the tray that is used for printing when a print job is received from another manufacturer's printer driver.</p> <p>The default setting for [Logical Tray 1] is [Physical Tray1]. The default setting for all other trays is [Physical Tray2].</p> <p>Choices: [Physical Tray1], [Physical Tray2], [Physical Tray3], [Physical Tray4] Configuration Menu Equivalent: [User Settings] - [Print Settings] - [Paper Settings] - [Tray Mapping] - [Logical Tray 0-9]</p> <p> <i>[Physical Tray3] and [Physical Tray4] appear only if an optional lower feeder unit is installed.</i></p>

[PCL Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Default Settings

► General Settings

► Paper Source Settings

► Tray Mapping Settings

► PCL Settings

► PostScript Settings

► XPS Settings

► Print Quality Settings

► Font Form

► Download Font Form

► Report Types

► Direct Print

PCL Settings

Font Number

0

(0-102)

Symbol Set

PC-8

Lines Per Page

60

(5-128)

Font Point Size

12.00

(4.00-999.75)

Font Pitch Size

10.00

(0.44-99.99)

CR/LF Mapping

CR=CR LF=LF

Print Quality Settings

Contrast

0

Image Printing

Source

sRGB

Intent

Photographic

Gray Treatment

Black and Gray

Text Printing

Source

sRGB

Intent

Vivid

Gray Treatment

Black and Gray

Graphics Printing

Source

sRGB

Intent

Vivid

Gray Treatment

Black and Gray

Apply

Clear

The [Print] - [Default Settings] - [PCL Settings] window allows you to configure the following items:



The settings on this page can be changed only if the user has logged on to Administrator mode.

Item		Description
[PCL Settings]	[Font Number]	<p>Specify the default font in the PCL language.</p> <p>Range: 0 to 102</p> <p>Default: [0]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [PCL] - [Font Source] - [Font Number]</p>

Item		Description
	[Symbol Set]	<p>Select the symbol set used with the PCL language.</p> <p>Default: [PC-8]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [PCL] - [Font Source] - [Symbol Set]</p>
	[Lines Per Page]	<p>Specify the number of lines per page in the PCL language.</p> <p>Range: 5 to 128</p> <p>Default: [68]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [PCL] - [Lines Per Page]</p>
	[Font Point Size]	<p>Specify the font size in the PCL language.</p> <p>Range: 4.00 to 999.75</p> <p>Default: [12.00]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [PCL] - [Font Source] - [Point Size]</p>
	[Font Pitch Size]	<p>Specify the font pitch in the PCL language.</p> <p>Range: 0.44 to 99.99</p> <p>Default: [10.00]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [PCL] - [Font Source] - [Pitch Size]</p>

Item		Description
	[CL/LF Mapping]	<p>Select the definitions of the CR/LF codes in the PCL language.</p> <p>Choices: [CR=CR LF=LF], [CR=CRLF LF=LF], [CR=CR LF=LFCR], [CR=CRLF LF=LFCR]</p> <p>Default: [CR=CR LF=LF]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [PCL] - [CR/LF Mapping]</p>
[Print Quality Settings]	[Contrast]	<p>Select the contrast of the image.</p> <p>Choices: [+15%], [+10%], [+5%], [0], [-5%], [-10%], [-15%]</p> <p>Default: [0]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [PCL Settings] - [Contrast]</p>
	[Image Printing]	
	[Source]	<p>Select the color space for RGB data.</p> <p>Choices: [Device Color], [sRGB]</p> <p>Default: [sRGB]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [PCL Settings] - [Image Printing] - [RGB Source]</p>
	[Intent]	<p>Select the characteristic applied when converting RGB data to CMYK data.</p> <p>Choices: [Vivid], [Photographic]</p> <p>Default: [Photographic]</p>
	[Gray Treatment]	<p>Select the method used to reproduce black and grays in RGB data.</p> <p>Choices: [Composite Black], [Black and Gray], [Black Only]</p> <p>Default: [Black and Gray]</p>

Item			Description
	[Text Printing]	[Source]	<p>Select the color space for RGB data.</p> <p>Choices: [Device Color], [sRGB]</p> <p>Default: [sRGB]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [PCL Settings] - [Text Printing] - [RGB Source]</p>
		[Intent]	<p>Select the characteristic applied when converting RGB data to CMYK data.</p> <p>Choices: [Vivid], [Photographic]</p> <p>Default: [Vivid]</p>
		[Gray Treatment]	<p>Select the method used to reproduce black and grays in RGB data.</p> <p>Choices: [Composite Black], [Black and Gray], [Black Only]</p> <p>Default: [Black and Gray]</p>
	[Graphic Printing]	[Source]	<p>Select the color space for RGB data.</p> <p>Choices: [Device Color], [sRGB]</p> <p>Default: [sRGB]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [PCL Settings] - [Graphics Printing] - [RGB Source]</p>
		[Intent]	<p>Select the characteristic applied when converting RGB data to CMYK data.</p> <p>Choices: [Vivid], [Photographic]</p> <p>Default: [Vivid]</p>
		[Gray Treatment]	<p>Select the method used to reproduce black and grays in RGB data.</p> <p>Choices: [Composite Black], [Black and Gray], [Black Only]</p> <p>Default: [Black and Gray]</p>

[PostScript Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Default Settings

► General Settings

► Paper Source Settings

► Tray Mapping Settings

► PCL Settings

► PostScript Settings

► XPS Settings

► Print Quality Settings

► Font Form

► Download Font Form

► Report Types

► Direct Print

PostScript Settings

Wait Timeout0 sec (0-300)

PS ProtocolAuto

Print to PS ErrorOff

Auto TrappingOff

Black OverprintOff

Print Quality Settings

Image Printing

RGB Source sRGB

RGB IntentPhotographic

RGB Gray TreatmentBlack and Gray

Destination ProfileAuto

Text Printing

RGB Source sRGB

RGB IntentVivid

RGB Gray TreatmentBlack and Gray

Destination ProfileAuto

Graphics Printing

RGB Source sRGB

RGB IntentVivid

RGB Gray TreatmentBlack and Gray

Destination ProfileAuto

Simulation

ProfileNone


IntentRelative Color

CMYK Gray TreatmentComposite Black

Apply

Clear



The [Print] - [Default Settings] - [PostScript Settings] window allows you to configure the following items:



 The settings on this page can be changed only if the user has logged on to Administrator mode.



Item		Description
[PostScript Settings]	[Wait Timeout]	<p>Specify the length of time until Postscript times out. "0" means that no timeout control is applied.</p> <p>Range: 0 to 300 (seconds)</p> <p>Default: [0]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [Postscript] - [Wait Timeout]</p>


Item		Description
	[PS Protocol]	<p>Select the PS protocol.</p> <p>Choices: [Auto], [Normal], [Binary]</p> <p>Default: [Auto]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Set- tings] - [Emulation] - [Postscript] - [PS Protocol]</p>
	[Print to PS Error]	<p>Select whether or not error printing is performed.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Set- tings] - [Emulation] - [Postscript] - [Print PS Errors]</p>
	[Auto Trapping]	<p>Select whether or not neighboring colors are printed superimposed in order to prevent white space around images.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Set- tings] - [Emulation] - [Postscript] - [Auto Trapping]</p>

Item		Description
	[Black Overprint]	<p>Select whether black objects are printed (superimposed) on a neighboring color in order to prevent white space around black characters or figures.</p> <p>If [Text/Graphic] is selected, superimposed printing is applied to text and graphics.</p> <p>If [Text] is selected, superimposed printing is applied to text.</p> <p>Choices: [Off], [Text], [Text/Graphic]</p> <p>Default: [Off]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [Postscript] - [Black Overprint]</p>


Item			Description
[Print Quality Settings]	[Image Printing]	[RGB Source]	<p>Select the color space for RGB data.</p> <p>Choices: [Device Color], [sRGB], [AppleRGB], [AdobeRGB1998], [Color-MatchRGB], [BlueAdjustRGB], [Custom Profile]</p> <p>Default: [sRGB]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [PS Settings] - [Image Printing] - [RGB Source]</p> <p> <i>With [Custom Profile], the name of the file saved on the hard disk appears.</i></p>
		[RGB Intent]	<p>Select the characteristic applied when converting RGB data to CMYK data.</p> <p>Choices: [Vivid], [Photographic], [Relative Color], [Absolute Color]</p> <p>Default: [Photographic]</p>
		[RGB Gray Treatment]	<p>Select the method used to reproduce black and grays in RGB data.</p> <p>Choices: [Composite Black], [Black and Gray], [Black Only]</p> <p>Default: [Black and Gray]</p>
		[Destination Profile]	<p>Select the ICC destination profile to be used for the printed output.</p> <p>Choices: [Auto], [Custom Profile]</p> <p>Default: [Auto]</p> <p> <i>With [Custom Profile], the name of the file saved on the hard disk appears.</i></p>

Item			Description
	[Text Printing]	[RGB Source]	<p>Select the color space for RGB data.</p> <p>Choices: [Device Color], [sRGB], [AppleRGB], [AdobeRGB1998], [Color-MatchRGB], [BlueAdjustRGB], [Custom Profile]</p> <p>Default: [sRGB]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [PS Settings] - [Text Printing] - [RGB Source]</p> <p> With [Custom Profile], the name of the file saved on the hard disk appears.</p>
		[RGB Intent]	<p>Select the characteristic applied when converting RGB data to CMYK data.</p> <p>Choices: [Vivid], [Photographic], [Relative Color], [Absolute Color]</p> <p>Default: [Vivid]</p>
		[RGB Gray Treatment]	<p>Select the method used to reproduce black and grays in RGB data.</p> <p>Choices: [Composite Black], [Black and Gray], [Black Only]</p> <p>Default: [Black and Gray]</p>
		[Destination Profile]	<p>Select the ICC destination profile to be used for the printed output.</p> <p>Choices: [Auto], [Custom Profile]</p> <p>Default: [Auto]</p> <p> With [Custom Profile], the name of the file saved on the hard disk appears.</p>

Item			Description
	[Graphics Printing]	[RGB Source]	<p>Select the color space for RGB data.</p> <p>Choices: [Device Color], [sRGB], [AppleRGB], [AdobeRGB1998], [Color-MatchRGB], [BlueAdjustRGB], [Custom Profile]</p> <p>Default: [sRGB]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [PS Settings] - [Graphics Printing] - [RGB Source]</p> <p> With [Custom Profile], the name of the file saved on the hard disk appears.</p>
		[RGB Intent]	<p>Select the characteristic applied when converting RGB data to CMYK data.</p> <p>Choices: [Vivid], [Photographic], [Relative Color], [Absolute Color]</p> <p>Default: [Vivid]</p>
		[RGB Gray Treatment]	<p>Select the method used to reproduce black and grays in RGB data.</p> <p>Choices: [Composite Black], [Black and Gray], [Black Only]</p> <p>Default: [Black and Gray]</p>
		[Destination Profile]	<p>Select the ICC destination profile to be used for the printed output.</p> <p>Choices: [Auto], [Custom Profile]</p> <p>Default: [Auto]</p> <p> With [Custom Profile], the name of the file saved on the hard disk appears.</p>

Item			Description
	[Simulation]	[Profile]	<p>Select the specific ICC simulation profile to be used for the printed output.</p> <p>Choices: [None], [SWOP], [Euroscale], [CommercialPress], [JapanColor], [TOYO], [DIC], [Custom Profile]</p> <p>Default: [None]</p> <p>Configuration menu equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [PS Settings] - [Simulation] - [Simulation Profile]</p> <p> <i>With [Custom Profile], the name of the file saved on the hard disk appears.</i></p>
		[Intent]	<p>Select the characteristic applied with simulation printing.</p> <p>Choices: [Relative Color], [Absolute Color]</p> <p>Default: [Relative Color]</p>
		[CMYK Gray Treatment]	<p>Select the method used to reproduce black and grays in RGB data.</p> <p>Choices: [Composite Black], [Black and Gray], [Black Only]</p> <p>Default: [Composite Black]</p>

[XPS Settings]

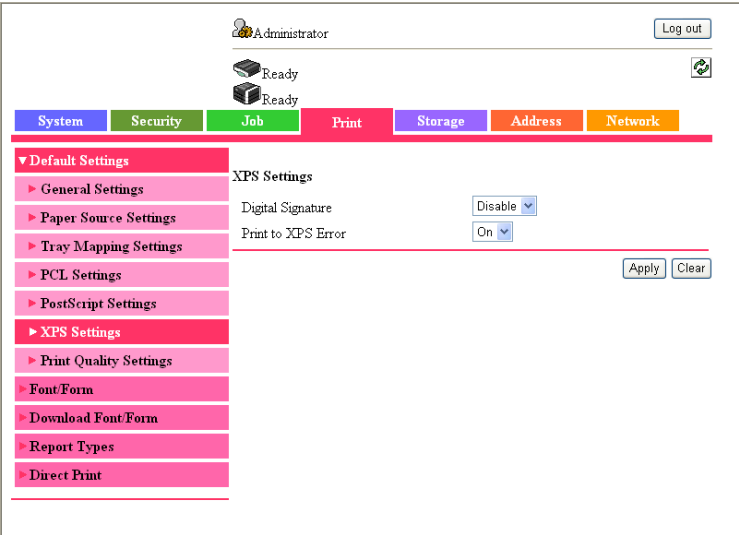

The [Print] - [Default Settings] - [XPS Settings] window allows you to configure the following items:



The settings on this page can be changed only if the user has logged on to Administrator mode.

Item	Description
[Digital Signature]	<p>Specify whether to verify digital signature. When [Enable] is selected, the document without a valid digital signature is not printed.</p> <p>Choices: [Enable], [Disable] Default: [Disable] Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [XPS] - [Digital Signature]</p>
[Print to XPS Error]	<p>Specify whether to print error message when an error occurs during XPS print.</p> <p>Choices: [On], [Off] Default: [On] Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Emulation] - [XPS] - [XPS Error Page]</p>

[Print Quality Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Default Settings

► General Settings

► Paper Source Settings

► Tray Mapping Settings

► PCL Settings

► PostScript Settings

► XPS Settings

► Print Quality Settings

► Font Form

► Download Font/Form

► Report Types

► Direct Print

Print Quality Settings

Color Mode

Color

Color Separation

Off

Brightness

0

Halftone

Image Printing

Detail

Text Printing

Line Art

Graphics Printing

Detail

Edge Enhancement

Image Printing

Off

Text Printing

On

Graphics Printing

On

Edge Strength

Middle

Economy Print Mode

Off

Calibration Settings

Tone Calibration

On

Cyan Density

Highlight

0

Middle

0

Shadow

0

Magenta Density

Highlight

0

Middle

0

Shadow

0

Yellow Density

Highlight

0

Middle

0

Shadow

0

Black Density

Highlight

0

Middle

0

Shadow

0

Apply

Clear

The [Print] - [Default Settings] - [Print Quality Settings] window allows you to configure the following items:



The settings on this page can be changed only if the user has logged on to Administrator mode.

Item		Description
[Print Quality Settings]	[Color Mode]	<p>If [Color] is selected, the pages are printed in full color.</p> <p>If [Monochrome] is selected, the pages are printed in black and white.</p> <p>Choices: [Color], [Monochrome]</p> <p>Default: [Color]</p> <p>Configuration Menu Equivalent:</p> <p>[Admin Settings] - [Print Settings] - [Quality Settings] - [Color Mode]</p>

Item		Description
	[Color Separation]	<p>If [On] is selected, color separation is performed.</p> <p>If [Off] is selected, color separation is not performed.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Color Separation]</p>
	[Brightness]	<p>Specifies the brightness of the printed image.</p> <p>Choices: [+15%], [+10%], [+5%], [0], [-5%], [-10%], [-15%]</p> <p>Default: [0]</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Brightness]</p>
	[Halftone (Image/Text/Graphics Printing)]	<p>Specifies how halftones are reproduced.</p> <p>If [Line Art] is selected, halftones are reproduced with high precision.</p> <p>If [Detail] is selected, halftones are reproduced with detail.</p> <p>If [Smooth] is selected, halftones are reproduced with smoothness.</p> <p>Choices: [Line Art], [Detail], [Smooth]</p> <p>Default: [Detail] (Image/Graphics) [Line Art] (Text)</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Halftone] - [Image Printing]/[Text Printing]/[Graphics Printing]</p>

Item		Description
	[Edge Enhancement (Image/Text/ Graphics Printing)]	<p>Select whether image/text/graphics edges are emphasized.</p> <p>If [On] is selected, the edges are emphasized.</p> <p>If [Off] is selected, the edges are not emphasized.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off] (Image) [On] (Text / Graphics)</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Edge Enhancement] - [Image Printing]/ [Text Printing]/[Graphics Printing]</p>
	[Edge Strength]	<p>Select the desired amount that edges are emphasized.</p> <p>If [Off] is selected, the edges are not emphasized.</p> <p>If [Low] is selected, the edges are slightly emphasized.</p> <p>If [Middle] is selected, the edges are emphasized by an average amount.</p> <p>If [High] is selected, the edges are highly emphasized.</p> <p>Choices: [Off], [Low], [Middle], [High]</p> <p>Default: [Middle]</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Edge Strength]</p>
	[Economy Print Mode]	<p>Select whether to print graphics with a reduced density by reducing the amount of toner that is used.</p> <p>When Economy Print Mode is enabled, the amount of toner used is reduced when printing many drawings.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p> <p>Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Economy Print]</p>

Item		Description
[Calibration Settings]	[Tone Calibration]	<p>If [On] is indicated, image adjustments are applied. If [Off] is indicated, image adjustments are not applied.</p> <p>Choices: [On], [Off] Default: [On] Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Gradation Adjust] - [Tone Calibration]</p>
	[Cyan]/[Magenta]/[Yellow]/[Black Density] (Highlight)	<p>Specifies the density of the highlight color.</p> <p>Choices: [-3], [-2], [-1], [0], [+1], [+2], [+3] Default: [0] Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Gradation Adjust] - [CMYK Density] - [Cyan]/[Magenta]/[Yellow]/[Black] - [Highlight]</p>
	[Cyan]/[Magenta]/[Yellow]/[Black Density] (Middle)	<p>Specifies the density of the middle color.</p> <p>Choices: [-3], [-2], [-1], [0], [+1], [+2], [+3] Default: [0] Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Gradation Adjust] - [CMYK Density] - [Cyan]/[Magenta]/[Yellow]/[Black] - [Middle]</p>
	[Cyan]/[Magenta]/[Yellow]/[Black Density] (Shadow)	<p>Specifies the density of the shadow color.</p> <p>Choices: [-3], [-2], [-1], [0], [+1], [+2], [+3] Default: [0] Configuration Menu Equivalent: [Admin Settings] - [Print Settings] - [Quality Settings] - [Gradation Adjust] - [CMYK Density] - [Cyan]/[Magenta]/[Yellow]/[Black] - [Shadow]</p>

[Font/Form]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▶ Default Settings

▼ Font/Form

▶ PCL Font

▶ PostScript Font

▶ Form Overlay

▶ Color Profile

▶ Download Font Form

▶ Report Types

▶ Direct Print

PCL Font


No.	Font Name	Source
0	Courier	ROM
1	Courier Italic	ROM
2	Courier Bold	ROM
3	Courier Bold Italic	ROM
4	Naskh	ROM
5	Naskh Bold	ROM
6	Albertus Medium	ROM
7	Albertus Extra Bold	ROM
8	Antique Olive	ROM
9	Antique Olive Italic	ROM
10	Antique Olive Bold	ROM
11	Arial	ROM
12	Arial Italic	ROM
13	Arial Bold	ROM
14	Arial Bold Italic	ROM

[PCL Font] (shown above)

The [Print] - [Font/Form] - [PCL Font] page provides the following information.

Item	Description
[No.]	Displays the control number of the font.
[Font Name]	Displays the name of the font.
[Source]	Displays the location of the font.


[PostScript Font]

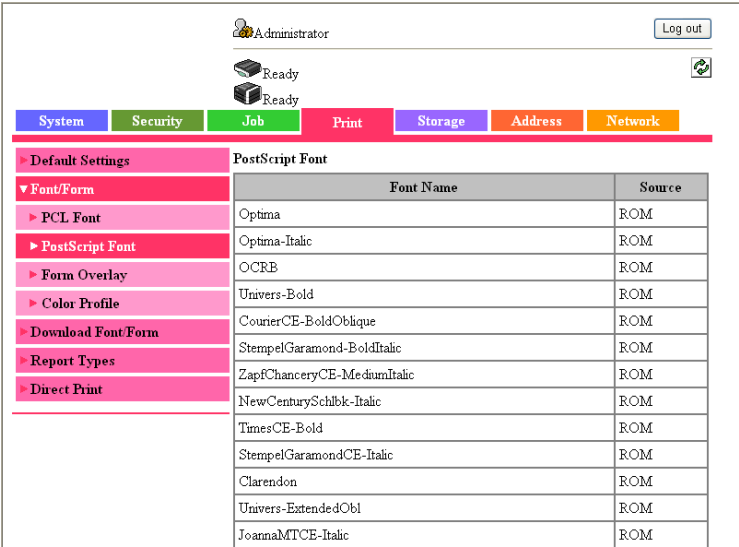

The [Print] - [Font/Form] - [PostScript Font] page provides the following information.

Item	Description
[Font Name]	Displays the name of the font.
[Source]	Displays the location of the font.

[Form Overlay]

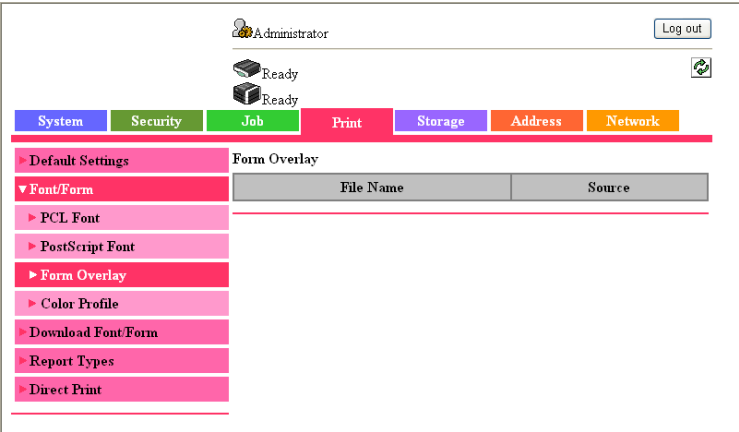

The [Print] - [Font/Form] - [Form Overlay] page provides the following information.

Item	Description
[File Name]	Displays the name of the overlay.
[Source]	Displays the location of the overlay.

[Color Profile]

Administrator

Ready

Ready

Log out

System

Security

Job

Print

Storage

Address

Network

Default Settings

Font/Form

PCL Font

PostScript Font

Form Overlay

Color Profile

Download Font/Form

Report Types

Direct Print

Color Profile

File Name	Profile Name	Class	Color Space	Source
sRGB	sRGB	Display Device	RGB	ROM
AppleRGB	AppleRGB	Display Device	RGB	ROM
AdobeRGB1998	AdobeRGB1998	Display Device	RGB	ROM
ColorMatchRGB	ColorMatchRGB	Display Device	RGB	ROM
BlueAdjustRGB	BlueAdjustRGB	Input Device	RGB	ROM
SWOP	SWOP	Output Device	CMYK	ROM
Euroscale	Eurocolor	Output Device	CMYK	ROM
CommercialPress	CommercialPress	Output Device	CMYK	ROM
JapanColor	JapanColor	Output Device	CMYK	ROM
TOYO	TOYO	Output Device	CMYK	ROM
DIC	DIC	Output Device	CMYK	ROM

The [Print] - [Font/Form] - [Color Profile] page provides the following information.

Item	Description
[File Name]	Displays the file name of the color profile.
[Profile Name]	Displays the name of the color profile.
[Class]	Displays the type of color profile.
[Color Space]	Displays the color space for the color profile.
[Source]	Displays the location of the color profile.

[Download Font/Form]



This menu item appears only if the user has logged on to Administrator mode.

[PostScript Font]

Administrator Log out

Ready
Ready

System Security **Job** Print Storage Address Network

► Default Settings Download PostScript Font

► Font Form

▼ Download Font/Form

► PostScript Font

► Form Overlay

► Color Profile

► Report Types

► Direct Print

Source HDD

File Browse...

Download

Delete PostScript Font

☒

Font Name	Source

Delete

The [Print] - [Download Font/Form] - [PostScript Font] window allows you to configure the following items:

Item		Description
[Download Post-Script Font]	[Source]	Specify the download destination (hard disk) of the font.
	[File]	Specify the file name for the PostScript font to be downloaded.
	[Browse] button	Click to display a dialog box for browsing to the PostScript font file.
	[Download] button	Click to download the specified PostScript font file to the machine.
[Delete Post-Script Font]	Check box	Select the check box of the font to be deleted, and then click [Delete] to delete the selected font from the printer.
	[Font Name]	Displays the name of the fonts.
	[Source]	Displays the storage source of the font.
[Delete] button		Deletes the PostScript font file(s) whose check boxes the left end are checked.

[Form Overlay]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Default Settings

Font/Form

Download Font/Form

PostScript Font

Form Overlay

Color Profile

Report Types

Direct Print

Download Form Overlay

Source

HDD

File

Browse...

Download

Delete Form Overlay

☒

File Name

Source

Delete

The [Print] - [Download Font/Form] - [Form Overlay] window allows you to configure the following items:

Item		Description
[Download Form Overlay]	[Source]	Specify the download destination (hard disk) of the form overlay file.
	[File]	Specify the file name for the form overlay to be downloaded.
	[Browse] button	Click to display a dialog box for browsing to the form overlay file.
	[Download] button	Click to download the specified form overlay file to the machine.
[Delete Form Overlay]	Check box	Select the check box of the form overlay file to be deleted, and then click [Delete] to delete the selected form overlay from the printer.
	[File Name]	Displays the name of the overlays.
	[Source]	Displays the storage source of the form overlay.
[Delete] button		Deletes the form overlay file(s) whose check boxes the left end are checked.

[Color Profile]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▶ Default Settings

▶ Font/Form

▼ Download Font/Form

▶ PostScript Font

▶ Form Overlay

▶ Color Profile

▶ Report Types

▶ Direct Print

Download Color Profile

Source

HDD

File

Browse...

Download

Delete Color Profile

☒

File Name

Profile Name

Class

Color Space

Source

Delete

The [Print] - [Download Font/Form] - [Color Profile] window allows you to configure the following items:


Item		Description
[Download Color Profile]	[Source]	Specify the download destination (hard disk) of the color profile.
	[File]	Specify the file name for the color profile to be downloaded.
	[Browse] button	Click to display a dialog box for browsing to the color profile file.
	[Download] button	Click to download the specified color profile to the machine.
[Delete Color Profile]	Check box	Select the check box of the color profile file to be deleted, and then click [Delete] to delete the selected color profile from the printer.
	[File Name]	Displays the name of the color profile.
	[Profile Name]	Displays the name of the color profile.
	[Class]	Displays the type of color profile.
	[Color Space]	Displays the color space for the color profile.
	[Source]	Displays the storage source of the color profile.

Item	Description
[Delete] button	Deletes the color profile file(s) whose check boxes the left end are checked.



When Download Manager is being used, long file names cannot be specified for downloaded form PostScript fonts, overlays or color profiles. Make sure that file names comply with the 8.3 format (MS-DOS file name format). In addition, file names consisting of a maximum of 31 characters can be specified with the printer driver.


[Report Types]

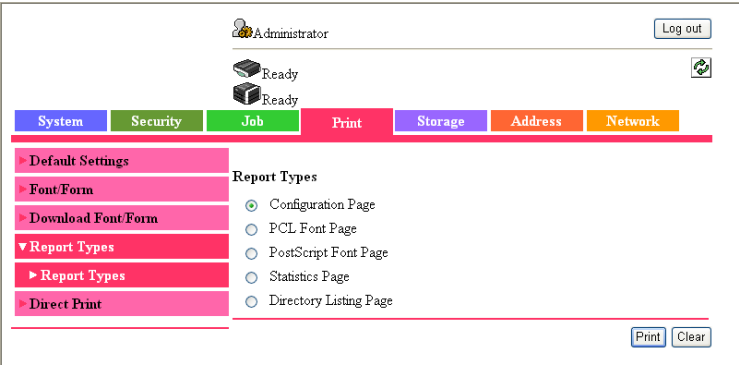

The [Print] - [Report Types] - [Report Types] page allows you to configure the following items.

Item	Description
[Configuration Page]	Prints the printer configuration page.
[PCL Font Page]	Prints the PCL font lists.
[PostScript Font Page]	Prints the PostScript font lists.
[Statistics Page]	Prints the statistics page such as the number of pages printed.
[Directory Listing Page]	Prints the directory list.

[Direct Print]

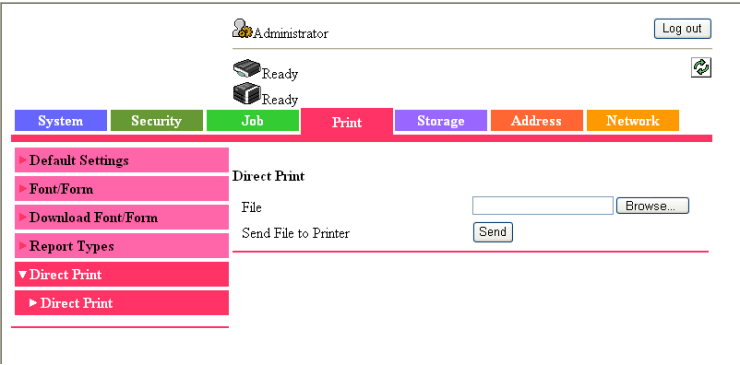

The [Print] - [Direct Print] - [Direct Print] page allows you to configure the following items.




The following file formats can be printed using direct printing: PDF, TIFF, JPEG, and XPS.

Item	Description
[File]	Specify the location of the file to be printed. Click [Browse], and then select the file.
[Browse] button	Click to display a dialog box for browsing to the file to be printed.
[Send] button	Click to send the specified file to the machine.

[Storage] tab

From this tab, image data saved on the machine can be managed.

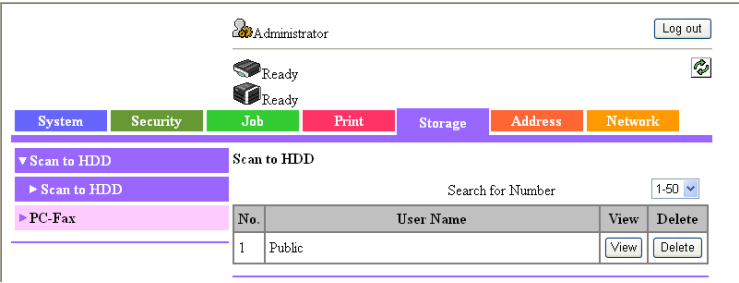

[Scan to HDD]

[Scan to HDD] (shown above)

The [Storage] - [Scan to HDD] - [Scan to HDD] page allows you to configure the following items.



Some settings on this page can be changed only if the user has logged on to Administrator mode.

Item	Description
[Search for Number]	Select the range of user registration numbers ([No.]) to be displayed. Default: [1 - 50]
[No.]	Displays the registration number for the user.
[User Name]	Displays the registered user name.
[View] button	Click to view a thumbnail of the file stored by the user.
[Delete] button	Click to delete all files stored by the user.

[Scan to HDD] ([View])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network


▼ Scan to HDD

► Scan to HDD

► PC-Fax

Scan to HDD


Search for Number 1-10

Thumbnail	File Name	Copy	Delete
	SKMBT_C35060116025400.pdf	<div>Copy</div>	<div>Delete</div>

The [Storage] - [Scan to HDD] - [Scan to HDD] - [View] page allows you to configure the following items.

Item	Description
[Search for Number]	Select the range of registration numbers to be displayed.
[Thumbnail]	Displays a thumbnail of the stored file.
[File Name]	Displays the name of the stored file.
[Copy] button	Click to download the stored file.
[Delete] button	Click to delete the stored file from the machine's hard disk.

[Scan to HDD] ([File Information])

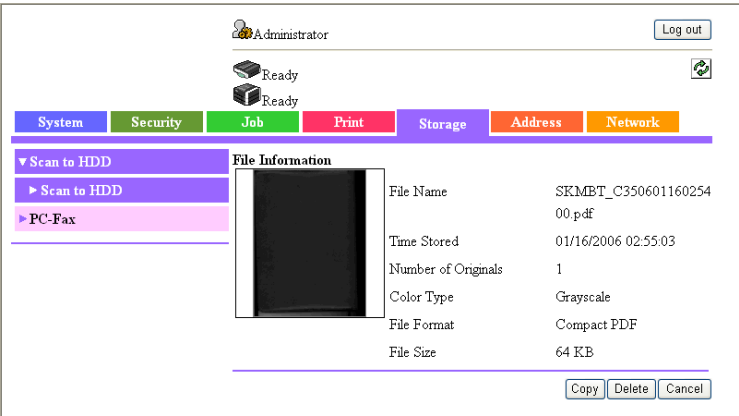

Clicking a thumbnail or file name in the [Storage] - [Scan to HDD] - [Scan to HDD] - [View] page displays the [File Information] page. The [File Information] page provides the following information.

Item	Description
[File Name]	Displays the name of the file.
[Time Stored]	Displays the date that the file was stored.
[Number of Originals]	Displays the number of document pages in the file.
[Color Type]	Displays the color information for the file.
[File Format]	Displays the file format.
[File Size]	Displays the file size.
[Copy] button	Click to download the file.
[Delete] button	Click to delete the file from the machine's hard disk.
[Cancel] button	Click to deselect this file and return to the [View] page.

[PC-Fax]

[PC-Fax]



If a memory reception password has been specified, a page appears so that the password can be typed in. If the correct password has been typed in, the following page appears.

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

► Scan to HDD

▼ PC-Fax

► PC-Fax

PC-Fax

Search for Number


1-10

Thumbnail	File Name	Copy	Print	Delete
	F98011603030.tif	Copy	Print	Delete

The [Storage] - [PC-Fax] - [PC-Fax] page allows you to configure the following items.

Item	Description
[Search for Number]	Select the range of registration numbers to be displayed.
[Thumbnail]	Displays a thumbnail of the stored file.
[File Name]	Displays the name of the stored file.
[Copy] button	Click to download the stored file.
[Print] button	Click to print the stored file. After the file is printed, it is deleted from the machine.
[Delete] button	Click to delete the stored file from the machine.

[PC-Fax] ([File Information])

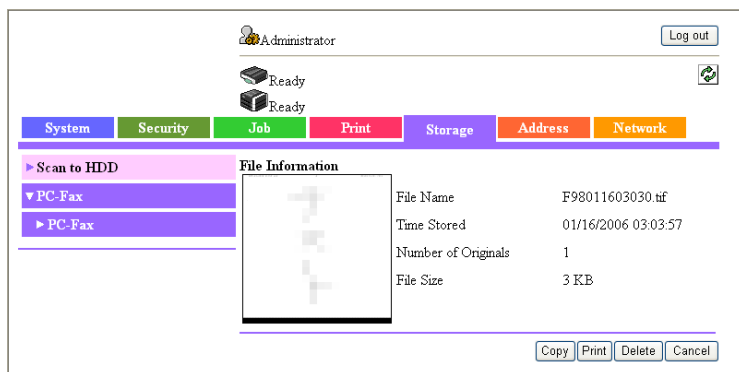

Clicking a thumbnail or file name in the [Storage] - [PC-Fax] - [PC-Fax] page displays the [File Information] page. The [File Information] page provides the following information.

Item	Description
[File Name]	Displays the name of the file.
[Time Stored]	Displays the date that the file was stored.
[Number of Originals]	Displays the number of document pages in the file.
[File Size]	Displays the file size.
[Copy] button	Click to download the file.
[Print] button	Click to print the file. After the file is printed, it is deleted from the machine.
[Delete] button	Click to delete the file from the machine.
[Cancel] button	Click to deselect the file and return to the [PC-Fax] page.

[Address] tab

From the [Address] tab, settings can be specified for destination information registered on the machine and for e-mail message subject and body text.



If invalid data has been entered (too many characters or left blank) when the [Apply] button is clicked, an error message does not appear, but the entered data is cleared and the destination is not registered. If the destination does not appear in the list, enter valid data, and then click the [Apply] button.


[Address Book]

[Address Book List]

The [Address] - [Address Book] - [Address Book List] page allows you to configure the following items.

Item	Description
[New Registration] button	Click to add new destinations to the address book.
[Search by Number]	Select a range of registration numbers to display the list of destinations in the selected range.
[Search from Index]	Select an index to display the list of destinations registered with the selected index.
[No.]	Displays the registration number.
[Function]	Displays the registered function.
[Name]	Displays the registered name.
[Edit] button	Click to edit the registered destination.
[Delete] button	Click to delete a destination from the address book.

[Address Book List] ([New Registration])

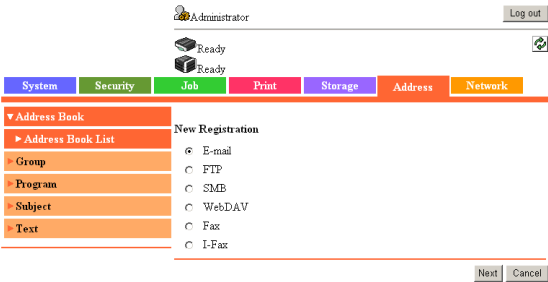

The [Address] - [Address Book] - [Address Book List] - [New Registration] page allows you to configure the following items.

Item	Description
[New Registration]	<p>Select the type of destination to be registered.</p> <p>[E-mail]: Select this setting to register an e-mail destination. For details, refer to “[Address Book List] ([New Registration])/[Edit] (E-mail))” on page 8-153.</p> <p>[FTP]: Select this setting to register an FTP destination. For details, refer to “[Address Book List] ([New Registration])/[Edit] (FTP))” on page 8-154.</p> <p>[SMB]: Select this setting to register an SMB destination. For details, refer to “[Address Book List] ([New Registration])/[Edit] (SMB))” on page 8-156.</p> <p>[WebDAV]: Select this setting to register a WebDAV destination. For details, refer to “[Address Book List] ([New Registration])/[Edit] (WebDAV))” on page 8-158.</p> <p>[Fax]: Select this setting to register a fax destination. For details, refer to “[Address Book List] ([New Registration])/[Edit] (Fax))” on page 8-160.</p> <p>[I-Fax]: Select this setting to register an I-Fax destination. For details, refer to “[Address Book List] ([New Registration])/[Edit] (I-Fax))” on page 8-161.</p>

[Address Book List] ([New Registration]/[Edit] (E-mail))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Address Book

▶ Address Book List

▶ Group

▶ Program

▶ Subject

▶ Text

Address Book (E-mail)

No.

0(0-2000,0:Auto)

Name

Index

ABC

☐ Main

Destination Information

E-mail Address

S/MIME Certification

Not Installed

☐ Edit a Certification

☒ Register a Certification

Browse...

☐ Delete a Certification

Apply

Clear

Cancel

Selecting [E-mail] in the [Address] - [Address Book] - [Address Book List] - [New Registration] page displays a page that allows you to configure the following items.

Item	Description
[Address Book (E-mail)]	Specify the information for the destination to be registered.
[No.]	Specify the registration number of the destination.
[Name]	Type in the destination name.
[Index]	Select the index characters that will be used to search for the destination. Select the [Main] check box if it is a frequently used destination.
[Destination Information]	Specify detailed destination information.
[E-mail Address]	Specify the e-mail address of the destination.
[S/MIME Certification]	Displays whether a certificate is registered.

Item		Description
	[Edit a Certification]	Select the check box to edit information for the certificate. [Register a Certification]: Select this option to specify a certificate file and register a certificate. [Delete a Certification]: Select this option to delete a registered certificate.

[Address Book List] ([New Registration]/[Edit] (FTP))

The screenshot shows a web interface for configuring an Address Book (FTP). At the top, there's a user bar for 'Administrator' with a 'Log out' button. Below it are status indicators for 'Ready' and 'Ready'. A navigation bar contains tabs for System, Security, Job, Print, Storage, Address, and Network. The 'Address' tab is selected, and the 'Address Book List' option is expanded in the sidebar. The main content area is titled 'Address Book (FTP)' and contains the following fields:

- No.:** A text box with '0' and a dropdown for '(0-2000,0:Auto)'.
- Name:** A text box.
- Index:** A dropdown menu showing 'ABC'.
- Destination Information:**
 - Host Address:** A text box.
 - File Path:** A text box with '/'.
 - anonymous:** A dropdown menu showing 'Off'.
 - User ID:** A text box with 'anonymous'.
 - Password:** A text box with a checked 'Change Password' checkbox.
 - PASV Mode:** A dropdown menu showing 'On'.
 - Proxy:** A dropdown menu showing 'Off'.
 - Port Number:** A text box with '21' and a dropdown for '(1-65535)'.

At the bottom right, there are three buttons: 'Apply', 'Clear', and 'Cancel'.

Selecting [FTP] in the [Address] - [Address Book] - [Address Book List] - [New Registration] page displays a page that allows you to configure the following items.

Item		Description
[Address Book (FTP)]		Specify the information for the destination to be registered.
	[No.]	Specify the registration number of the destination.
	[Name]	Type in the destination name.

Item		Description
	[Index]	<p>Select the index characters that will be used to search for the destination.</p> <p>Select the [Main] check box if it is a frequently used destination.</p>
[Destination Information]		Specify detailed destination information.
	[Host Address]	<p>Type in the IP address of the destination FTP server.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>If the DNS server has already been configured, the host name can be entered instead.</p> <p>When using IPv6, the IPv6 address can be entered.</p>
	[File Path]	Specify the destination directory.
	[anonymous]	Select whether to allow anonymous users to access the FTP server.
	[User ID]	Type in the user ID for logging on to the FTP server. (up to 127 bytes)
	[Password]	Type in the password for logging on to the FTP server. (up to 127 bytes)
	[PASV Mode]	Select whether to communicate in PASV mode.
	[Proxy]	Select whether to use a proxy server.
	[Port Number]	Specify the port number.

[Address Book List] ([New Registration]/[Edit] (SMB))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Address Book

▶ Address Book List

▶ Group

▶ Program

▶ Subject

▶ Text

Address Book (SMB)

No.0(0-2000,0:Auto)

Name

IndexABC

☐ Main

Destination Information

Host Address

File Path\

User ID

Password☒ Change Password

Apply

Clear

Cancel

Selecting [SMB] in the [Address] - [Address Book] - [Address Book List] - [New Registration] page displays a page that allows you to configure the following items.

Item	Description
[Address Book (SMB)]	Specify the information for the destination to be registered.
[No.]	Specify the registration number of the destination.
[Name]	Type in the destination name.
[Index]	Select the index characters that will be used to search for the destination. Select the [Main] check box if it is a frequently used destination.

Item	Description
[Destination Information]	Specify detailed destination information.
[Host Address]	<p>Type in the host name, IPv4 address or IPv6 address of the destination computer.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>Host name must be specified in upper-case.</p> <p>To perform SMB transmission using an IPv6 address, set the Direct Hosting to [Enable]. For details, refer to “[Direct Hosting Settings]” on page 8-220.</p>
[File Path]	<p>Specify the destination directory. (up to 255 bytes)</p> <p>If the directory name is different from the share name, specify the share name.</p>
[User ID]	Type in the user ID for logging on to the destination computer. (up to 127 bytes)
[Password]	Type in the password for logging on to the destination computer. (up to 127 bytes)

[Address Book List] ([New Registration]/[Edit] (WebDAV))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Address Book

▶ Address Book List

▶ Group

▶ Program

▶ Subject

▶ Text

Address Book (WebDAV)

No.0(0-2000,0:Auto)

Name

IndexABC

☐ Main

Destination Information

Host Address

File Path/

User ID

Password☒ Change Password

SSLOff

ProxyOff

Port Number80(1-65535)

Apply

Clear

Cancel

Selecting [WebDAV] in the [Address] - [Address Book] - [Address Book List] - [New Registration] page displays a page that allows you to configure the following items.

Item	Description
[Address Book (WebDAV)]	Specify the information for the destination to be registered.
[No.]	Specify the registration number of the destination.
[Name]	Type in the destination name.
[Index]	Select the index characters that will be used to search for the destination. Select the [Main] check box if it is a frequently used destination.

Item	Description
[Destination Information]	Specify detailed destination information.
[Host Address]	<p>Type in the IP address of the destination WebDAV server.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>If the DNS server has already been configured, the host name can be entered instead.</p> <p>When using IPv6, the IPv6 address can be entered.</p>
[File Path]	Specify the destination directory. (up to 142 bytes)
[User ID]	Type in the user ID for logging on to the destination WebDAV server. (up to 63 bytes)
[Password]	Type in the password for logging on to the destination WebDAV server. (up to 63 bytes)
[SSL]	Select whether to use SSL for encryption.
[Proxy]	Select whether to use a proxy server.
[Port Number]	Specify the port number.

[Address Book List] ([New Registration]/[Edit] (Fax))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Address Book

▶ Address Book List

▶ Group

▶ Program

▶ Subject

▶ Text

Address Book (Fax)

No.
0 (0-2000,0 Auto)

Name

Index
ABC

☐ Main

Destination Information

Destination

Communication Setting
☐ V34 Off
☐ ECM Off
☐ Check Destination

Apply

Clear

Cancel

Selecting [Fax] in the [Address] - [Address Book] - [Address Book List] - [New Registration] page displays a page that allows you to configure the following items.

Item	Description
[Address Book (Fax)]	Specify the information for the destination to be registered.
[No.]	Specify the registration number of the destination.
[Name]	Type in the destination name.
[Index]	Select the index characters that will be used to search for the destination. Select the [Main] check box if it is a frequently used destination.
[Destination Information]	Specify detailed destination information.
[Destination]	Type in the fax number of the destination.
[Communication Setting]	Specify the communication settings. Select the check box for [V34 Off], [ECM Off] or [Check Destination] to enable the corresponding function.

[Address Book List] ([New Registration]/[Edit] (I-Fax))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ Address Book

▶ Address Book List

▶ Group

▶ Program

▶ Subject

▶ Text

Address Book (I-Fax)

No.

(0-2000,0 Auto)

Name

Index

ABC

☐ Main

Destination Information

E-mail Address

Apply

Clear


Cancel

Selecting [I-Fax] in the [Address] - [Address Book] - [Address Book List] - [New Registration] page displays a page that allows you to configure the following items.

Item		Description
[Address Book (I-Fax)]		Specify the information for the destination to be registered.
	[No.]	Specify the registration number of the destination.
	[Name]	Type in the destination name.
	[Index]	Select the index characters that will be used to search for the destination. Select the [Main] check box if it is a frequently used destination.
[Destination Information]		Specify detailed destination information.
	[E-mail Address]	Specify the e-mail address of the destination.

[Group]

[Group List]

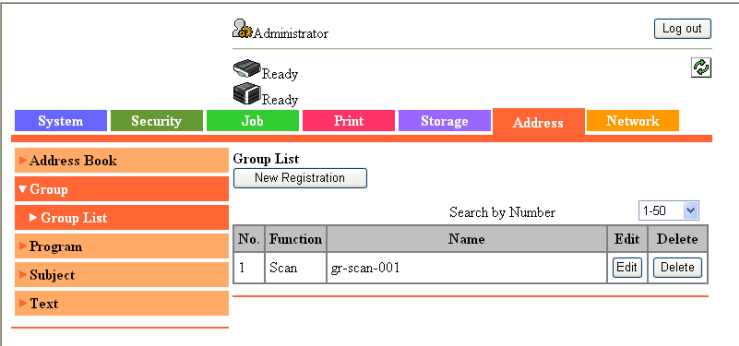

The [Address] - [Group] - [Group List] page allows you to configure the following items.

Item	Description
[New Registration] button	Click to register a new group.
[Search by Number]	Select a range of registration numbers to display the list of group destinations in the selected range.
[No.]	Displays the registration number.
[Function]	Displays the registered function.
[Name]	Displays the registered name.
[Edit] button	Click to edit the registered group.
[Delete] button	Click to delete the group.

[Group List] ([New Registration])

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Address Book

Group

Group List

Program

Subject

Text

New Registration

☒ Scan

☐ Fax


Next




Cancel

The [Address] - [Address Book] - [Group List] - [New Registration] page allows you to configure the following items.

Item	Description
[New Registration]	<p>Select the type of group destination to be registered.</p> <p>[Scan]: Select this setting to register a group destination where scan data is to be sent. For details, refer to “[Group List] ([New Registration]/[Edit] (Scan))” on page 8-164.</p> <p>[Fax]: Select this setting to register a group destination where faxes are to be sent. For details, refer to “[Group List] ([New Registration]/[Edit] (Fax))” on page 8-165.</p>

[Group List] ([New Registration]/[Edit] (Scan))

 Administrator
 Log out

 Ready
  Ready
 

System
Security
Job
Print
Storage
Address
Network

▶ Address Book

▶ Group

▶ Group List

▶ Program

▶ Subject

▶ Text

Group (Scan)

Name

Destination

Search by Number

Search from Index

Search from Function

<input checked="" type="checkbox"/>	No.	Function	Name
<input checked="" type="checkbox"/>	1	E-mail	email-ad-001

Apply
Clear
Cancel

Selecting [Scan] in the [Address] - [Group] - [Group List] - [New Registration] page displays a page that allows you to configure the following items.

Item	Description
[Group (Scan)]	Specify the information for the group destination to be registered.
[Name]	Type in the destination name.
[Destination]	Select the destinations to be added to the group.
[Search by Number]	Select a range of registration numbers to display the list of destinations in the selected range.
[Search from Index]	Select an index to display the list of destinations registered with the selected index.
[Search from Function]	Select a function from the list to display the list of destinations registered with the selected function.
Destinations list	Select the check boxes for the destinations to be added to the group, and then click [Apply].

[Group List] ([New Registration]/[Edit] (Fax))

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Address Book

Group

Group List

Program

Subject

Text

Group (Fax)

Name

Group_Fax

Destination

Search by Number

1-50

Search from Index

Search from Function

<input checked="" type="checkbox"/>	No.	Function	Name
<input checked="" type="checkbox"/>	2	Fax	ad-fax-01

Apply

Clear

Cancel

Selecting [Fax] in the [Address] - [Group] - [Group List] - [New Registration] page displays a page that allows you to configure the following items.

Item	Description
[Group (Fax)]	Specify the information for the group destination to be registered.
[Name]	Type in the destination name.
[Destination]	Select the destinations to be added to the group.
[Search by Number]	Select a range of registration numbers to display the list of destinations in the selected range.
[Search from Index]	Select an index to display the list of destinations registered with the selected index.
[Search from Function]	Select a function from the list to display the list of destinations registered with the selected function.
Destinations list	Select the check boxes for the destinations to be added to the group, and then click [Apply].

[Program]

[Program List]

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

Address Book Program List

Group Search by Number 1-50


No.	Function	Name	Edit	Delete
1			Edit	Delete
2			Edit	Delete
3			Edit	Delete
4			Edit	Delete
5			Edit	Delete
6			Edit	Delete
7			Edit	Delete
8			Edit	Delete
9			Edit	Delete
10			Edit	Delete

The [Address] - [Program] - [Program List] page allows you to configure the following items.

Item	Description
[Search by Number]	Select a range of registration numbers to display the list of program destinations in the selected range.
[No.]	Displays the registration number.
[Function]	Displays the registered function.
[Name]	Displays the registered name.

Item	Description
[Edit] button	<p>Click to register a program destination or edit an existing one.</p> <p>If no program destinations have been registered when this button is clicked, the [New Registration] page appears. Select the communication method for the program destination to be registered. For details, refer to “[Program List] ([New Registration])” on page 8-167.</p> <p>If a program destination has already been registered when this button is clicked, the [Program Settings] page appears. Change the settings for the registered program destination. For details, refer to “[Program Settings]” on page 8-172.</p>
[Delete] button	Click to delete the program destination.

[Program List] ([New Registration])

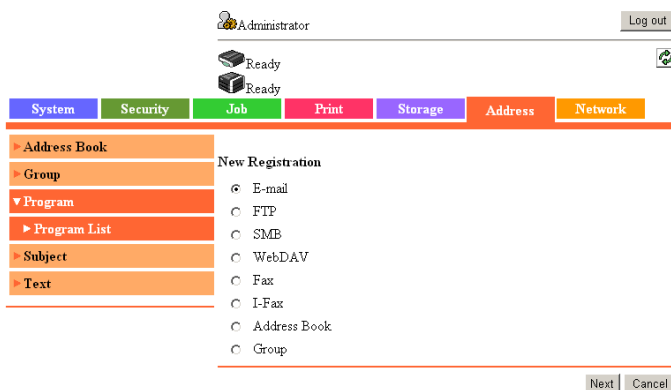

The [Address] - [Program] - [Program List] - [New Registration] page allows you to configure the following items.

Item	Description
[New Registration]	<p>Select the communication method for the new program destination to be registered.</p> <p>Select a communication method, and then click [Next]. A page for specifying the destination information appears, corresponding to the selected communication method.</p> <p>For details on the items in the page for specifying the destination information, refer to the corresponding page listed below.</p> <p>If [E-mail], [FTP], [SMB], [Fax], [I-Fax] or [WebDAV] was selected: “[Program]” on page 8-168</p> <p>If [Address Book] was selected: “[Program (Address Book)]” on page 8-170</p> <p>If [Group] was selected: “[Program (Group)]” on page 8-171</p>

[Program]

Administrator Log out

Ready

Ready

System Security **Job** Print Storage Address **Network**

▶ Address Book
 ▶ Group
 ▼ Program
 ▶ Program List
 ▶ Subject
 ▶ Text

Program (E-mail)

No. 1

Name

Destination Information

E-mail Address

S/MIME Certification Not Installed

☐ Edit a Certification
☒ Register a Certification Browse...
☐ Delete a Certification

Apply Clear Cancel

In the [Address] - [Program] - [Program List] - [Program] page, specify information for the program destination, corresponding to the communication method selected in the [New Registration] page.



If [E-mail] was selected in the previous page as the communication method for the program destination

Item	Description
<div data-bbox="193 121 544 150">[Program (E-mail)]</div> <div data-bbox="378 188 544 217">[No.]</div> <div data-bbox="378 255 544 284">[Name]</div>	<div data-bbox="555 121 1001 177">Specify the information for the program destination to be registered.</div> <div data-bbox="555 188 1001 244">Specify the registration number of the destination.</div> <div data-bbox="555 255 1001 284">Type in the destination name.</div>
[Destination Information]	<div data-bbox="555 301 1001 472">Specify detailed destination information. The items that appear differ depending on the communication method selected in the [New Registration] page. For details, refer to the corresponding page listed below.</div> <div data-bbox="555 480 1001 536">[E-mail]: “[Address Book List] ([New Registration])/[Edit] (E-mail))” on page 8-153</div> <div data-bbox="555 544 1001 600">[FTP]: “[Address Book List] ([New Registration])/[Edit] (FTP))” on page 8-154</div> <div data-bbox="555 608 1001 663">[SMB]: “[Address Book List] ([New Registration])/[Edit] (SMB))” on page 8-156</div> <div data-bbox="555 671 1001 738">[WebDAV]: “[Address Book List] ([New Registration])/[Edit] (WebDAV))” on page 8-158</div> <div data-bbox="555 746 1001 802">[Fax]: “[Address Book List] ([New Registration])/[Edit] (Fax))” on page 8-160</div> <div data-bbox="555 810 1001 858">[I-Fax]: “[Address Book List] ([New Registration])/[Edit] (I-Fax))” on page 8-161</div>
[Apply] button	<div data-bbox="555 871 1001 1011">Click to display the [Program Settings] page, and then specify detailed settings for the program destination. For details on the [Program Settings] page, refer to “[Program Settings]” on page 8-172.</div>

[Program (Address Book)]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Address Book

Group

Program

Program List

Subject

Text

Program (Address Book)

No.1

Name

Destination

Search by Number1-50

Search from IndexMain

Search from Function

No.	Function	Name
1	SMB	SMB
2	FTP	FTP

Apply

Clear

Cancel

In the [Address] - [Program] - [Program List] - [Program (Address Book)] page, specify information for the program destination after selecting [Address Book] as the communication method in the [New Registration] page.

Item		Description
[Program (Address Book)]		Specify the information for the program destination to be registered.
	[No.]	Specify the registration number of the destination.
	[Name]	Type in the destination name.
[Destination]		Specify detailed destination information.
	[Search by Number]	Select a range of registration numbers to display the list of destinations in the selected range.
	[Search from Index]	Select an index to display the list of destinations registered with the selected index.
	[Search from Function]	Select a function from the list to display the list of destinations registered with the selected function.
	Destinations list	Select the destinations to be added to the program.

Item	Description
[Apply] button	Click to display the [Program Settings] page, and then specify detailed settings for the program destination. For details on the [Program Settings] page, refer to "[Program Settings]" on page 8-172.

[Program (Group)]

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

Address Book

Group

Program

Program List

Subject

Text

Program (Group)

No. 2

Name

Destination

Search by Number 1-50

No.	Function	Name
<input type="radio"/> 1	Scan	gr-scan-001
<input type="radio"/> 2	Fax	gr-fax-01

Apply Clear Cancel

In the [Address] - [Program] - [Program List] - [Program] page, specify information for the program destination after selecting [Group] as the communication method in the [New Registration] page.

Item	Description
[Program (Group)]	Specify the information for the program destination to be registered.
[No.]	Specify the registration number of the destination.
[Name]	Type in the destination name.
[Destination Information]	Specify detailed destination information.
[Search by Number]	Select a range of registration numbers to display the list of destinations in the selected range.
Group list	Select the groups to be added to the program.

Item	Description
[Apply] button	Click to display the [Program Settings] page, and then specify detailed settings for the program destination. For details on the [Program Settings] page, refer to “[Program Settings]” on page 8-172.

[Program Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Address Book

Group

Program

Program List

Subject

Text

Program

Destination Settings

Program Settings

No.

2

Name

E-mail

Type

E-mail

E-mail Address

test1@xxxxxxxx.co.jp

Edit

Resolution

300x300

File Type

Compact PDF

Page Setting

Multi Page

Subject

Not Specified

Text

Not Specified

Simplex/Duplex

1-Sided

Original Type

Text/Photo

Auto Color

On

Monotone

Grayscale

Separate Scan

Off

Density

0

Background Removal

0

Sharpness

0

Scan Size

Letter

Standard Size

Letter

Custom Size

X

11.00 inches (1.18-14.00)

Y

8.50 inches (1.18-8.50)

Original Direction

Left

2-Sided Binding Direction

Auto

Apply






Clear






Cancel




The [Address] - [Program] - [Program List] - [Program Settings] page allows you to change program destination settings.













The page when [E-mail] was selected as the communication method for the program destination is shown.

Item		Description
[Destination Settings]		Displays detailed information for the destination.
	[Edit] button	Click to change the destination information.
[Program Settings]		Specify detailed settings for the program destination.
	[Resolution]	<p>Select the resolution used for scanning the original document.</p> <p> If [File Type] is set to [Compact PDF], [300x300] is selected, and the setting cannot be changed.</p> <p> When the program destination includes both G3 fax and Internet fax destinations, the document cannot be sent with the [400x400 (Super Fine)] Resolution setting (400 × 400 dpi).</p>
	[File Type]	<p>Select the file type for saving scanned data.</p> <p> This item does not appear if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</p>
	[Page Setting]	<p>Select whether to save all scanned pages in one file or divide the file into the specified number of pages when saving the data.</p> <p> This item does not appear if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</p> <p> If [File Type] is set to [JPEG], [Single Page] is selected, and the setting cannot be changed.</p>

Item		Description
	[Subject]	<p>Specify the subject of the e-mail message.</p> <p> <i>This item appears only if [E-mail] or [Group] (Scan) was selected as the communication method for the program destination.</i></p>
	[Text]	<p>Specify the body text of the e-mail message.</p> <p> <i>This item appears only if [E-mail] or [Group] (Scan) was selected as the communication method for the program destination.</i></p>
	[Simplex/ Duplex]	<p>Select whether to scan one side or both sides of the original document.</p> <p> <i>[Cover Sheet + 2-Sided] is available only if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</i></p> <p> <i>If [Long Original] is selected under [Special Original], [1-Sided] is selected, and the setting cannot be changed.</i></p>
	[Original Type]	<p>Select the document quality, such as text or photo.</p>
	[Auto Color]	<p>Select whether the color information for a document is automatically detected and the document is scanned with the appropriate setting.</p> <p> <i>This item does not appear if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</i></p>

Item		Description
	[Monotone]	Select the color setting for scanning in black and white.  <i>This item does not appear if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</i>
	[Separate Scan]	Select whether to divide the original document in order to scan it.  <i>If [Long Original] is selected under [Special Original], [Off] is selected, and the setting cannot be changed.</i>
	[Density]	Select the density.
	[Background Removal]	Adjust the density of the background.
	[Sharpness]	Adjust the sharpness.
	[Scan Size]	Select the paper size of the original document. If [Standard Size] is selected, select the size and the feed direction. If [Custom Size] is selected, specify the height and width.  <i>If [Fax] or [Group] (Fax) was selected as the communication method for the program destination, only the following paper sizes are available. [A4], [Legal], [Letter], [8 1/2x13 1/2]</i>

Item	Description
[E-mail Notification]	<p>Select whether an e-mail notification is to be sent to the destination URL when scan data is saved.</p> <p>In the [Address] box, type the e-mail address of the notification recipient.</p> <p> <i>This item appears only if any of the following settings were selected as the communication method for the program destination.</i> [FTP], [SMB], [WebDAV], [Group] (Scan)</p>
[Original Direction]	<p>Select the orientation of the original document.</p> <p> <i>If [File Type] is set to [TIFF] or [JPEG], [LEFT] is selected, and the setting cannot be changed.</i></p>
[2-Sided Binding Direction]	<p>Select the binding position of the original document.</p> <p> <i>If [File Type] is set to [TIFF] or [JPEG], [Left Bind] is selected, and the setting cannot be changed.</i></p>
[Special Original]	<p>If the document being sent is a long original, select the corresponding settings.</p> <p> <i>This item appears only if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</i></p>

Item		Description
	[Timer TX]	<p>Select whether to perform timer transmission. To perform timer transmission, specify the transmission time.</p> <p> <i>This item appears only if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</i></p> <p> <i>When the program destination includes both G3 fax and Internet fax destinations, the timer transmission function cannot be used.</i></p>
	[Password TX]	<p>Select whether to perform password transmission. To perform password transmission, enter the password.</p> <p> <i>This item appears only if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</i></p> <p> <i>Settings cannot be specified for this item if [F-code] is set to [Enable].</i></p>
	[F-Code]	<p>Select whether to use the F code for transmission. To use this function, specify settings for [SUB Address] and [Password].</p> <p> <i>This item appears only if [Fax] or [Group] (Fax) was selected as the communication method for the program destination.</i></p> <p> <i>Settings cannot be specified for this item if [Password TX] is set to [On].</i></p>
[Apply] button		Click to register the program destination and display the [Program List] page.

[Subject]

[Subject List]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Address Book

Group

Program

▼ Subject

► Subject List

Text

Subject List

No.	E-mail Default	Subject	Edit	Delete
1	<input type="radio"/>		Edit	Delete
2	<input type="radio"/>		Edit	Delete
3	<input type="radio"/>		Edit	Delete
4	<input type="radio"/>		Edit	Delete
5	<input type="radio"/>		Edit	Delete
6	<input type="radio"/>		Edit	Delete
7	<input type="radio"/>		Edit	Delete
8	<input type="radio"/>		Edit	Delete
9	<input type="radio"/>		Edit	Delete
10	<input type="radio"/>		Edit	Delete

Apply

Clear

The [Address] - [Subject] - [Subject List] page allows you to configure the following items.

Item	Description
[No.]	Displays the registration number.
[E-mail Default]	Select the e-mail subject to be used as the default.
[Subject]	Displays the name of the e-mail subject.
[Edit] button	Click to display the [Subject Registration] page in order to edit the registered e-mail subject.
[Delete] button	Click to delete the e-mail subject.

[Subject Registration]

Administrator

Ready

Ready

Log out

System

Security

Job

Print

Storage

Address

Network

Address Book

Group

Program

▼ Subject

► Subject List

Text

Subject Registration

No.1

Subject

Apply

Clear

Cancel

The [Address] - [Subject] - [Subject Registration] page allows you to configure the following items.

Item	Description
[No.]	Displays the registration number.
[Subject]	Register the subject of the e-mail message.

[Text]

[Text List]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

Address Book

Group

Program

Subject

Text

Text List

Text List

No.	E-mail Default	Text	Edit	Delete
1	<input type="radio"/>		Edit	Delete
2	<input type="radio"/>		Edit	Delete
3	<input type="radio"/>		Edit	Delete
4	<input type="radio"/>		Edit	Delete
5	<input type="radio"/>		Edit	Delete
6	<input type="radio"/>		Edit	Delete
7	<input type="radio"/>		Edit	Delete
8	<input type="radio"/>		Edit	Delete
9	<input type="radio"/>		Edit	Delete
10	<input type="radio"/>		Edit	Delete

Apply

Clear

The [Address] - [Text] - [Text List] page allows you to configure the following items.

Item	Description
[No.]	Displays the registration number.
[E-mail Default]	Select the e-mail body text to be used as the default.
[Subject]	Displays the name of the e-mail body text.
[Edit] button	Click to display the [Text Registration] page in order to edit the registered e-mail body text.
[Delete] button	Click to delete the e-mail body text.

[Text Registration]

Administrator

Ready

Ready

Log out

System

Security

Job

Print

Storage

Address

Network

Address Book

Group

Program

Subject

Text

Text List

Text Registration

No. 1

Text

Apply

Clear

Cancel

The [Address] - [Text] - [Text Registration] page allows you to configure the following items.

Item	Description
[No.]	Displays the registration number.
[Text]	Register the body of the e-mail message.

[Network] tab

This tab allows you to configure network settings. For more information on these protocols, refer to chapter 7, "Network Printing".



The [Network] tab appears only if the user has logged on to Administrator mode.

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

▼ General Settings

► Ethernet Settings

► Local Interface Settings

► TCP/IP Settings

► E-mail Settings

► LDAP Settings

► HTTP Settings

► IPP Settings

► FTP Settings

► SNMP Settings

► SMB Settings

► Web Service Settings

► Bonjour Settings

► NetWare Settings

► AppleTalk Settings

► Network Fax Settings

► WebDAV Settings

► OpenAPI Settings

► TCP Socket Settings

► LLTD Settings

Ethernet Settings

Speed/Duplex

Auto

MAC Address

00:20:6B:DB:6F:2B

Apply

Clear

[General Settings]

[Ethernet Settings] (shown above)

The [Network] - [General Settings] - [Ethernet Settings] page allows you to configure the following items.

Item	Description
[Speed/Duplex]	<p>Select the operating mode and speed for Ethernet.</p> <p>Choices: [Auto], [10Base-T (Half)], [10Base-T (Full)], [100Base-TX (Half)], [100Base-TX (Full)], [1000Base-T (Full)]</p> <p>Default: [Auto]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [Network Speed]</p>

Item	Description
[MAC Address]	Displays the Media Access Control (MAC) address of the Ethernet interface.

[Local Interface Settings]


The screenshot shows a web interface for configuring a printer. At the top, there is a status bar with 'Administrator' and 'Ready' indicators, and a 'Log out' button. Below this is a navigation menu with tabs for System, Security, Job, Print, Storage, Address, and Network. The 'Network' tab is selected, and the 'Local Interface Settings' page is displayed. The page shows a list of settings on the left, including General Settings, Ethernet Settings, Local Interface Settings (selected), TCP/IP Settings, E-mail Settings, LDAP Settings, HTTP Settings, IPP Settings, FTP Settings, SNMP Settings, SMB Settings, Web Service Settings, Bonjour Settings, NetWare Settings, AppleTalk Settings, Network Fax Settings, WebDAV Settings, OpenAPI Settings, TCP Socket Settings, and LLTD Settings. The main content area displays the 'Local Interface Settings' section, which includes the 'I/O Timeout' setting. The 'I/O Timeout' is currently set to 15 seconds, with a range of 5 to 300 seconds. There are 'Apply' and 'Clear' buttons at the bottom right of the settings area.

The [Network] - [General Settings] - [Local Interface Settings] page allows you to configure the following items.

Item	Description
[I/O Timeout]	Specify the reception timeout period. Range: 5 to 300 (seconds) Default: 15

[TCP/IP Settings]

[TCP/IP Settings]

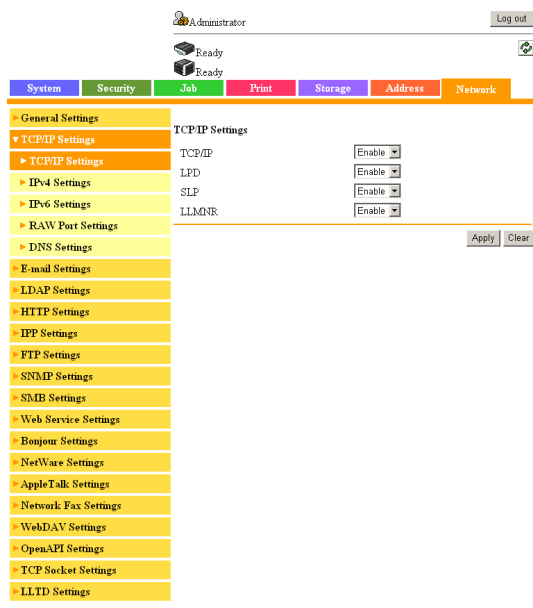

The [Network] - [TCP/IP Settings] - [TCP/IP Settings] page allows you to configure the following items. For more information on these TCP/IP settings, refer to chapter 7, "Network Printing"

Item	Description
[TCP/IP]	Select whether or not to make a connection via TCP/IP. Choices: [Enable], [Disable] Default: [Enable] Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [Enable]
[LPD]	Select whether or not LPD is used. Choices: [Enable], [Disable] Default: [Enable]

Item	Description
[SLP]	<p>Select whether or not SLP is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [SLP]</p>
[LLMNR]	<p>Select whether or not LLMNR is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>

[IPv4 Settings]

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

General Settings

TCP/IP Settings

TCP/IP Settings

IPv4 Settings

IPv6 Settings

RAW Port Settings

DNS Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

IPv4 Settings

IP Address Setting Method ☐ DHCP ☐ BOOTP ☐ ARP/PING

☒ Auto IP

IP Address 192.168.1.2

Subnet Mask 255.255.255.0




Default Gateway 192.168.1.10


Domain Name Automatic Acquisition ☐ Enable

DNS Server Automatic Acquisition ☐ Enable

Apply Clear

The [Network] - [TCP/IP Settings] - [IPv4 Settings] page allows you to configure the following items. For more information on these TCP/IP settings, refer to chapter 7, "Network Printing"

Item	Description
[IP Address Setting Method]	<p>Select the automatic assigning method for the machine IP address.</p> <p>Choices: [DHCP], [BootP], [ARP/PING]</p> <p> <i>The [Auto IP] check box is selected and cannot be cleared.</i></p> <p>Default: [DHCP]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [DHCP] / [BOOTP] / [ARP/Ping]</p>
[IP Address]*	<p>Specify the machine's IP address.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>Default: [0.0.0.0]</p> <p> <i>If the specified IP address is outside of the allowable range, the value is not changed, even after [Apply] is clicked. Instead, the setting returns to the previous value.</i></p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [IP Address]</p>
[Subnet Mask] *	<p>Specify the machine's subnet mask address.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>Default: [0.0.0.0]</p> <p> <i>If the specified subnet mask address is outside of the allowable range, the value is not changed, even after [Apply] is clicked. Instead, the setting returns to the previous value.</i></p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [Subnet Mask]</p>



Item	Description
[Default Gateway] *	<p>If a router is used on the network, specify the router's address.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>Default: [0.0.0.0]</p> <p> <i>If the specified router address is outside of the allowable range, the value is not changed, even after [Apply] is clicked. Instead, the setting returns to the previous value.</i></p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [Gateway]</p>
[Domain Name Automatic Acquisition]	<p>Select whether or not the default DNS domain name is automatically acquired from the DHCP server to overwrite the current setting.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
[DNS Server Automatic Acquisition]	<p>Select whether or not the DNS server address is automatically acquired from the DHCP server to overwrite the current setting.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
<p>*Always enter these addresses without leading zeros. For example, 131.011.010.001 should be entered as 131.11.10.1.</p>	

[IPv6 Settings]



The [Network] - [TCP/IP Settings] - [IPv6 Settings] page allows you to configure the following items. For more information on these TCP/IP settings, refer to chapter 7, "Network Printing"

Item	Description
[IPv6]	Select whether or not IPv6 is used. Choices: [Enable], [Disable] Default: [Enable] Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [IPv6]
[IPv6 Auto Setting]	Select whether or not the IPv6 auto setting is used. Choices: [Enable], [Disable] Default: [Enable] Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [IPv6] - [Auto Setting]
[IPv6 Link Local Address]	Displays the Ipv6 link-local address. Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [IPv6] - [Link Local]

Item	Description
[IPv6 Global Address]	<p>Specify the IPv6 global address.</p> <p>Range: Up to 43 characters</p> <p>Default: [::0]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [IPv6] - [Global Address]</p> <p> <i>When [Ipv6 Auto Setting] is set to [Enable], this item is not applied, even if the setting is changed.</i></p>
[IPv6 Gateway Address]	<p>Specify the IPv6 gateway address.</p> <p>Range: Up to 39 characters</p> <p>Default: [::]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [IPv6] - [Gateway Address]</p> <p> <i>When [IPv6 Auto Setting] is set to [Enable], this item is not applied, even if the setting is changed.</i></p>
[DHCPv6]	<p>Select whether or not DHCPv6 is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
[DNS Server Automatic Acquisition]	<p>Select whether or not the DNS server address is automatically acquired from the DHCPv6 server to overwrite the current setting.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
[Search Domain Name Automatic Acquisition]	<p>Select whether or not the default DNS search domain name is automatically acquired from the DHCPv6 server to overwrite the current setting.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>


Item	Description
[NTP Server Automatic Acquisition]	Select whether or not the NTP server address is automatically acquired from the DHCPv6 server to overwrite the current setting. Choices: [Enable], [Disable] Default: [Enable]

[RAW Port Settings]



The [Network] - [TCP/IP Settings] - [RAW Port Settings] page allows you to configure the following items. For more information on these TCP/IP settings, refer to chapter 7, "Network Printing"

Item	Description
[RAW Port]	Select whether or not a RAW port is used. Choices: [Enable], [Disable] Default: [Enable] Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [RAW Port]

Item	Description
[RAW Port Number]	<p>Specify the number of the printer's RAW port.</p> <p>Choices: 1 - 65535</p> <p>Default: [9100]</p> <p> <i>The currently used port number and numbers 80, 161, 427, 443, 515, 631 and 4567 cannot be specified.</i></p>
[RAW Port Bidirectional]	<p>Select whether or not RAW port bidirectional is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Disable]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [RAW Port] - [Bidirectional]</p>

[DNS Settings]



Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

General Settings

TCP/IP Settings

TCP/IP Settings

IPv4 Settings

IPv6 Settings

RAW Port Settings

DNS Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

DNS Settings

Host Name: BHC35-D86F2B

Domain Name:

DNS Server Address (IPv4): 0.0.0.0

DNS Server Address (IPv6): 0.0.0.0


DNS Server Address (IPv6):

Search Domain Name:

Dynamic DNS: Disable

Apply Clear

The [Network] - [TCP/IP Settings] - [DNS Settings] page allows you to configure the following items. For more information on these TCP/IP settings, refer to chapter 7, "Network Printing"

Item	Description
[Host Name]	<p>Specify the host name.</p> <p>Range: Up to 63 characters</p> <p>Default: [BHC35-xxxxxx]</p> <p> "xxxxxx" indicates the last six digits of the MAC address in hexadecimal values.</p>
[Domain Name]	<p>Specify the domain name.</p> <p>Range: Up to 63 characters</p> <p>Default: [Blank]</p>
[DNS Server Address (IPv4)]	<p>Specify the IPv4 DNS server address. Up to three can be registered.</p> <p>Default: [0.0.0.0]</p>
[DNS Server Address (IPv6)]	<p>Specify the IPv6 DNS server address. Up to three can be registered.</p> <p>Default: [::]</p>
[Search Domain Name]	<p>Specify the DNS search domain name. Up to three can be registered.</p> <p>Default: [Blank]</p>
[Dynamic DNS]	<p>Select whether or not Dynamic DNS is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Disable]</p>

[E-mail Settings]

[E-mail TX (SMTP)]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

E-mail TX (SMTP)

E-mail RX (POP)

S/MIME

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SDMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

E-mail TX (SMTP)

E-mail TX (SMTP)

Scan to E-mail

E-mail Notification

Total Counter Notification

SMTP Server Address

Port Number

SSL/TLS

Port Number (SSL)

Connection Timeout

Administrator E-mail Address

Device E-mail Address

Max Mail Size

Server Capacity

Binary Division

Divided Mail Size

POP Before SMTP

POP Before SMTP

POP Before SMTP Time

SMTP Authentication

SMTP Authentication

Account

Password

Domain Name

Enable

Enable

Enable

Enable

0 0 0 0

25 (1-65535)

Disable

405 (1-65535)

60 sec

No Limit

MB (1-100)

Off

200 KB (16-16000)

Disable

5 sec. (0-60)

Disable


Change Password



Apply

Clear

The [Network] - [E-mail Settings] - [E-mail TX (SMTP)] page allows you to configure the following items:

Item		Description
[Email TX (SMTP)]	[E-mail TX (SMTP)]	<p>If [Enable] is selected, e-mail messages can be sent.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [SMTP]</p>
	[Scan to E-mail]	<p>If [Enable] is selected, the Scan to E-mail operation is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>

Item			Description
		[E-mail Notification]	<p>If [Enable] is selected, e-mail notification is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
		[Total Counter Notification]	<p>If [Enable] is selected, total counter notification is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
	[SMTP Server Address]*		<p>Specify the SMTP server address.</p> <p>An Ipv4 address, Ipv6 address or FQDN (fully qualified domain name) can be specified.</p> <p>Range: Up to 64 characters</p> <p>Default: [0.0.0.0]</p> <p> <i>When specifying a setting for SMTP Server Address, also specify a setting for Device E-mail Address.</i></p>
	[Port Number]		<p>Specify number of the port for communicating with the SMTP server.</p> <p>Range: 1 to 65535</p> <p>Default: [25]</p>
	[SSL/TLS]		<p>Select whether or not SSL/TLS is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Disable]</p>
		[Port Number (SSL)]	<p>Specify the SSL port number.</p> <p>Range: 1 to 65535</p> <p>Default: [465]</p>

Item		Description
	[Connection Time-out]	<p>Select the length of time until the connection with the SMTP server times out.</p> <p>Choices: [30 sec.], [60 sec.], [90 sec.], [120 sec.], [150 sec.], [180 sec.], [210 sec.], [240 sec.], [270 sec.], [300 sec.]</p> <p>Default: [60 sec.]</p>
	[Administrator E-mail Address]	Displays the e-mail address of the administrator.
	[Device E-mail Address]	<p>Specify the e-mail address of the device.</p> <p>Default: [Blank]</p> <p> <i>In order to perform network scanning, be sure to specify an address for [Device E-mail Address].</i></p> <p> <i>If [E-mail TX (SMTP)] has been set to [Disable], this item is not available and no setting can be specified.</i></p>
	[Max Mail Size]	<p>Select whether to limit the size of e-mail messages being sent.</p> <p>Choices: [Limit], [No Limit]</p> <p>Default: [No Limit]</p>
	[Server Capacity]	<p>Specify the SMTP server capacity. A message that exceeds the maximum server capacity will be discarded.</p> <p>Range: 1 to 100</p> <p>Default: [Blank]</p>
	[Binary Division]	Select this check box to divide e-mail messages.
	[Divided Mail Size]	Specify the size of divided e-mail messages.

Item		Description
[POP Before SMTP]	[POP Before SMTP]	If [Enable] is selected, POP before SMTP is enabled. Choices: [Enable], [Disable] Default: [Disable]
	[POP Before SMTP Time]	Specify the length of time after logging on to the POP server that the SMTP server is accessed. Range: 0 to 60 (seconds) Default: 5
[SMTP Authentication]	[SMTP Authentication]	If [Enable] is selected, SMTP authentication is enabled. Choices: [Enable], [Disable] Default: [Disable]
	[Account]	Type in the account name used with SMTP authentication. Range: Up to 255 characters Default: [Blank]
	[Password]	Select [Change Password] to change the password. Type in the password used with SMTP authentication. Range: Up to 128 characters Default: [Blank]
	[Domain Name]	If [Digest-MD5] is selected as the SMTP authentication method, specify the realm. Range: Up to 255 characters Default: [Blank]
*Always enter these addresses without leading zeros. For example, 131.011.010.001 should be entered as 131.11.10.1.		

[E-mail RX (POP)]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

E-mail TX (SMTP)

E-mail RX (POP)

S/MIME

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

E-mail RX (POP)

E-mail RX (POP)

POP Server Address

Port Number

SSL/TLS

Port Number (SSL)

Login Name

Password

Connection Timeout

POP Authentication

Auto Check of Arrival

Polling Rate

Enable

192.168.1.4

110

(1-65535)

Disable

995

(1-65535)

☐ Change Password

60 sec.

Disable

Enable

1

min. (1-60)

Apply

Clear

The [Network] - [E-mail Settings] - [E-mail RX (POP)] page allows you to configure the following items.

Item	Description
[E-mail RX (POP)]	If [Enable] is selected, e-mail messages can be received. Choices: [Enable], [Disable] Default: [Enable]
[POP Server Address]	Specify the POP server address. An IPv4 address, IPv6 address or FQDN (fully qualified domain name) can be specified. Range: Up to 64 characters Default: [0.0.0.0]
[Port Number]	Specify number of the port for communicating with the POP server. Range: 1 to 65535 Default: [110]

Item	Description
[SSL/TLS]	Select whether or not SSL/TLS is used. Choices: [Enable], [Disable] Default: [Disable]
	[Port Number (SSL)] Specify the SSL port number. Range: 1 to 65535 Default: 995
[Login Name]	Type in the login name for the POP server. Range: Up to 63 characters Default: [Blank]
[Password]	Select [Change Password] to change the password. Type in the password for logging on to the POP server. Range: Up to 15 characters Default: [Blank]
[Connection Timeout]	Select the length of time until the connection with the POP server times out. Choices: [30 sec.], [60 sec.], [90 sec.], [120 sec.], [150 sec.], [180 sec.], [210 sec.], [240 sec.], [270 sec.], [300 sec.] Default: [60 sec.]
[APOP Authentication]	Select [Enable] to encrypt the login name and password when logging on to the POP server. The password is encrypted with MD5 when APOP is used to log on to the POP server. Before selecting [Enable], check whether the POP server supports APOP. If the POP server does not support APOP, an error will occur, resulting in communication failure. Choices: [Enable], [Disable] Default: [Disable]

Item	Description
[Auto Check of Arrival]	<p>Select whether or not automatic reception is performed.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Disable]</p>

[S/MIME]

The screenshot shows the printer's web interface. At the top, there's a status bar with 'Administrator', 'Ready', and a 'Log out' button. Below this is a navigation bar with tabs: System, Security, Job, Print, Storage, Address, and Network. The 'Network' tab is selected. On the left, a sidebar lists various settings categories, with 'S/MIME' highlighted. The main content area shows the 'S/MIME' settings. It includes a toggle for 'S/MIME' set to 'Enable'. Below this, there are three settings: 'Digital Signature' set to 'Do not add signature', 'E-mail Text Encryption Method' set to '3DES', and 'Digital Signature Type' set to 'SHA-1'. At the bottom right of the settings area are 'Apply' and 'Clear' buttons.


The [Network] - [E-mail Settings] - [S/MIME] page allows you to configure the following items.

Item	Description
[S/MIME]	<p>Select whether or not to use S/MIME.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
[Digital Signature]	<p>Select whether or not a digital signature is applied to e-mail messages.</p> <p>Choices: [Do not add signature], [Always add signature], [Select when sending]</p> <p>Default: [Do not add signature]</p>

[E-mail Text Encryption Method]	<p>Select the e-mail text encryption format.</p> <p>Choices: [RC2-40], [RC2-64], [RC2-128], [DES], [3DES], [AES-128], [AES-192], [AES-256]</p> <p>Default: [3DES]</p>
[Digital Signature Type]	<p>Select the type of digital signature applied.</p> <p>Choices: [SHA-1], [SHA-256]</p> <p>Default: [SHA-1]</p>

[LDAP Settings]

[LDAP Settings]

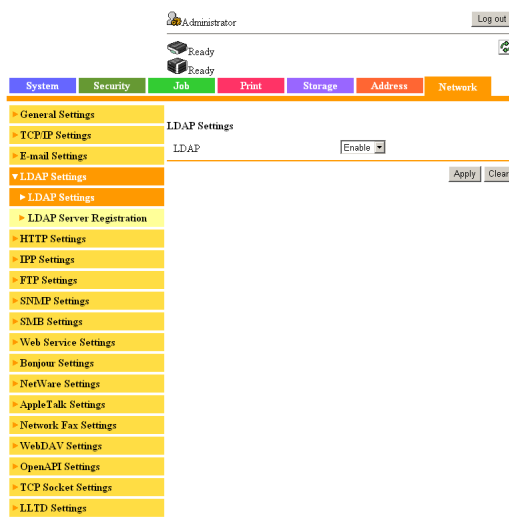

The [Network] - [LDAP Settings] - [LDAP Settings] page allows you to configure the following items.

Item	Description
[LDAP]	<p>Select whether or not the LDAP server is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Disable]</p>

[LDAP Server Registration]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

LDAP Settings

LDAP Server Registration

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

LDAP Server Registration

Server Address

Port Number

SSL/TLS

Port Number (SSL)

Search Base

Timeout

Max. Search Result

Authentication Method

Login Name

Password

Change Password

Domain Name

Use Referral

Search Condition Attributes

Initial Setting for Search Details

Name

E-mail

Fax

Last Name

First Name

City

Organization

Organizational Unit

0.0.0.0

389 (1-65535)

Disable

636 (1-65535)

60 sec. (5-300)

100 (5-100)

anonymous

☐ Change Password

On

Name

OR

OR

OR

OR

OR

OR

OR

OR

Apply

Clear

The [Network] - [LDAP Settings] - [LDAP Server Registration] page allows you to configure the following items.

Item		Description
[LDAP Server Registration]	[Server Address] *	Specify the address of the LDAP server. An IPv4 address, IPv6 address or FQDN (fully qualified domain name) can be specified. Range: Up to 64 characters Default: [0.0.0.0]
	[Port Number]	Specify the port number of the LDAP server. Range: 1 to 65535 Default: [389]


Item		Description
	[SSL/TLS]	Select whether or not SSL/TLS is used. Choices: [Enable], [Disable] Default: [Disable]
	[Port Number (SSL)]	Specify the SSL port number. Range: 1 to 65535 Default: [636]
	[Search Base]	Specify the starting point for searching directories in the LDAP server. Range: Up to 255 characters Default: [Blank]
	[Timeout]	Specify the length of time until the search times out. Range: 5 to 300 (seconds) Default: [60]
	[Max. Search Result]	Specify the maximum number of destinations displayed after a search. Range: 5 to 100 Default: [100]

Item		Description
	[Authentication Method]	<p>Select the authentication method used for logging on to the LDAP server.</p> <ul style="list-style-type: none"> ■ If [anonymous] is selected, a user name and password are not necessary. ■ If [Simple] is selected, a user name and password are necessary. ■ If [Digest-MD5] is selected, use a general LDAP server. This cannot be used with Active Directory. ■ If [GSS-SPNEGO] is selected, use Active Directory in Windows. <p>Choices: [anonymous], [Simple], [Digest-MD5], [GSS-SPNEGO], [NTLM v1], [NTLM v2]</p> <p>Default: [anonymous]</p>
	[Login Name]	<p>Specify the login name used when connecting to the LDAP server.</p> <p>Range: Up to 255 characters</p> <p>Default: [Blank]</p>
	[Password]	<p>Select [Change Password] to change the password.</p> <p>Specify the password used when connecting to the LDAP server.</p> <p>Range: Up to 128 characters</p> <p>Default: [Blank]</p>
	[Domain Name]	<p>Specify the necessary domain name used when connecting to the LDAP server.</p> <p>Range: Up to 64 characters</p> <p>Default: [Blank]</p>



Item		Description
	[User Referral]	<p>Select whether to use the referral function.</p> <p>Select the appropriate setting for the LDAP server environment.</p> <p>Choices: [On], [Off]</p> <p>Default: [On]</p>
	[Search Condition Attributes]	<p>Select the name attribute used for LDAP searches.</p> <p>Choices: [Name], [Nickname]</p> <p>Default: [Name]</p>
[Initial Setting for Search Details]		<p>Select the LDAP search conditions.</p> <p>Choices: [OR], [AND], [STARTS WITH], [ENDS WITH]</p> <p>Default: [OR]</p>
<p>*Always enter these addresses without leading zeros. For example, 131.011.010.001 should be entered as 131.11.10.1.</p>		

[HTTP Settings]

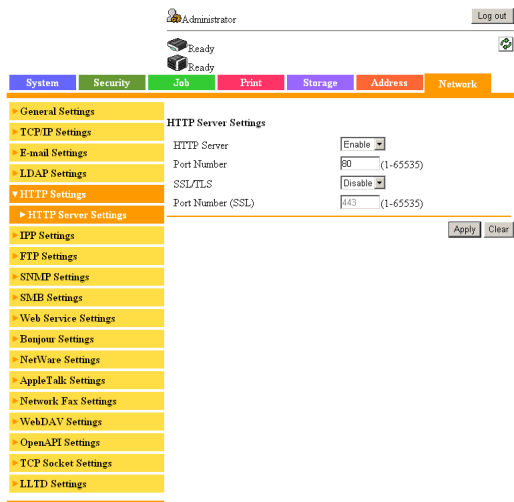[HTTP Server Settings]



The [Network] - [HTTP Settings] - [HTTP Server Settings] page allows you to configure the following items.

Item	Description
[HTTP Server]	Select whether or not the HTTP server is used. Choices: [Enable], [Disable] Default: [Enable]
[Port Number]	Specify the port number of the HTTP server. Range: 1 to 65535 Default: [80]  Do not set the port number to [25], otherwise a connection cannot be established with PageScope Web Connection.  The currently used port number cannot be specified

Item	Description
[SSL/TLS]	Select whether or not SSL/TLS is used. Choices: [Enable], [Disable] Default: [Disable]
[Port Number (SSL)]	Specify the SSL port number. Range: 1 to 65535 Default: [443]

[IPP Settings]

[IPP Settings]

Administrator Log out

Ready Refresh


Ready Refresh


System Security **Job** Print Storage Address Network

> General Settings
 > TCP/IP Settings
 > E-mail Settings
 > LDAP Settings
 > HTTP Settings
 ▼ IPP Settings
 > IPP Settings
 > FTP Settings
 > SNMP Settings
 > SMB Settings
 > Web Service Settings
 > Bonjour Settings
 > NetWare Settings
 > AppleTalk Settings
 > Network Fax Settings
 > WebDAV Settings
 > OpenAPI Settings
 > TCP Socket Settings
 > LLTD Settings

IPP Settings
 IPP Print
 Accept IPP Job
 Printer Name
 Printer Location
 Printer Information
 Printer URI
 http://EHC35-DB6F2B/ipp
 ipp://192.168.1.2/ipp
 ipp://EHC35-DB6F2B/ipp
 Operational Support
☒ Print Job
☒ Validate Job
☒ Cancel Job
☒ Get Job Attributes
☒ Get Jobs
☒ Get Print Attributes
 IPP Authentication
 User Name
 Password
☐ Change Password
 Realm
Apply Clear

The [Network] - [IPP Settings] - [IPP Settings] page allows you to configure the following items. For details on IPP settings, refer to chapter 7, "Network Printing" In order to apply the settings, the printer must be turned off, then on again after the settings have been specified.


Item	Description
[IPP Print]	<p>Select whether or not to use IPP.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [IPP]</p>
[Accept IPP Job]	<p>Select whether or not to accept IPP jobs.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
[Printer Name]	<p>Specify the printer's name.</p> <p>Range: Up to 127 characters</p> <p>Default: KONICA MINOLTA bizhub C35(xx:xx:xx)</p>
[Printer Location]	<p>Specify the printer's location.</p> <p>Range: Up to 127 characters</p> <p>Default: [Blank]</p>
[Printer Information]	<p>Specify the printer information.</p> <p>Range: Up to 127 characters</p> <p>Default: [Blank]</p> <p> Specify the settings from the [System] - [Machine Settings] page.</p>

Item		Description
[Printer URI]		<p>Displays the printer's Uniform Resource Identifier (URI).</p> <ul style="list-style-type: none"> ■ http://<IP_address>/ipp ■ http://<FQDN>/ipp ■ ipp://<IP_address>/ipp ■ ipp://<FQDN>/ipp ■ https://<IP_address>/ipp ■ https://<FQDN>/ipp <p> <i>"https://<IP_address>/ipp" and "https://<FQDN>/ipp" appear only if SSL/TLS is enabled.</i></p>
[Operational Support]	[Print Job]	<p>If this check box is selected, the Print Job command is enabled.</p> <p>Default: Checked</p>
	[Validate Job]	<p>If this check box is selected, the Validate Job command is enabled.</p> <p>Default: Checked</p>
	[Cancel Job]	<p>If this check box is selected, the Cancel Job command is enabled.</p> <p>Default: Checked</p>
	[Get Job Attributes]	<p>If this check box is selected, the Get Job Attribute command is enabled.</p> <p>Default: Checked</p>
	[Get Jobs]	<p>If this check box is selected, the Get Job command is enabled.</p> <p>Default: Checked</p>
	[Get Print Attributes]	<p>If this check box is selected, the Get Printer Attribute command is enabled.</p> <p>Default: Checked</p>


Item	Description
[IPP Authentication]	<p>Select the authentication method for IPP connections.</p> <p>Choices: [Disable], [Requesting-user-name], [Basic], [Digest]</p> <p>Default: [Requesting-user-name]</p>
[User Name]	<p>Specify the user name used with Basic or Digest authentication.</p> <p>Range: Up to 20 characters</p> <p>Default: [user]</p>
[Password]	<p>Select [Change Password] to change the password.</p> <p>Specify the password used with Basic or Digest authentication.</p> <p>Range: Up to 20 characters</p> <p>Default: [pass]</p>
[Realm]	<p>Specify the realm used with Basic or Digest authentication.</p> <p>Range: Up to 127 characters</p> <p>Default: [IPP]</p>

[FTP Settings]

[FTP Server Settings]

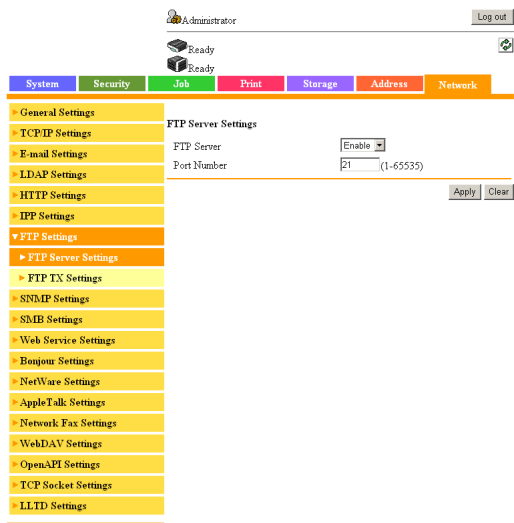

The [Network] - [FTP Settings] - [FTP Server Settings] page allows you to configure the following items.

Item	Description
[FTP Server]	Select whether or not the FTP server is used. Choices: [Enable], [Disable] Default: [Enable] Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [FTP]
[Port Number]	Specify the port number of the FTP server. Range: 1 to 65535 Default: [21]  <i>The currently used port number cannot be specified</i>

[FTP TX Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

FTP Server Settings

FTP TX Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

FTP TX Settings

FTP TX

Enable

Connection Timeout

60

sec. (5-300)

Proxy Server Address

0.0.0.0

Proxy Server Port Number

21

(1-65535)

Apply

Clear

The [Network] - [FTP Settings] - [FTP TX Settings] page allows you to configure the following items.

Item	Description
[FTP TX]	If [Enable] is selected, FTP transmission is enabled. Choices: [Enable], [Disable] Default: [Enable]
[Connection Timeout]	Select the length of time (in seconds) until the connection with the FTP server times out. Range: 5 to 300 (seconds) Default: [60]
[Proxy Server Address]	Specify the address when using a proxy server. An IPv4 address, IPv6 address or FQDN (fully qualified domain name) can be specified. Range: Up to 64 characters Default: [0.0.0.0]

[Proxy Server Port Number]	Specify the port number for the proxy server. Range: 1 to 65535 Default: [21]
----------------------------	---

[SNMP Settings]

[SNMP Settings]

Administrator Log out

Ready Ready

System Security **Job** Print Storage Address Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SNMP Settings

SNMP

SNMP v1/v2c(IP)

SNMP v3(IP)

SNMP v1(IPX)

UDP Port

161 (1-65535)

SNMP v1/v2c Settings

Read Community Name

public

Write

Enable

Write Community Name

private

SNMP v3 Settings

Context Name

Discovery

Enable

Discovery User Name

public

Read User Name

Initial

Security Level

Auth-password/Priv-password

auth-password

Change Password

priv-password

Change Password

Write User Name

restrict

Security Level

Auth-password/Priv-password

auth-password

Change Password

priv-password

Change Password

Encryption Algorithm

DES

Authentication Method

MD5

Trap Settings

Allow Setting



Enable

Trap Setting When Authentication Fails


Disable


Apply Clear

The [Network] - [SNMP Settings] - [SNMP Settings] page allows you to configure the following items.

Item		Description
[SNMP Settings]	[SNMP]	<p>If [Enable] is selected, SNMP is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p> <p>Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [SNMP]</p>
	[SNMP v1/v2c(IP)]	<p>If [Enable] is selected, SNMPv1/v2c (IP) is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
	[SNMP v3(IP)]	<p>If [Enable] is selected, SNMPv3 (IP) is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
	[SNMP v1(IPX)]	<p>If [Enable] is selected, SNMPv1 (IPX) is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p> <p> <i>This item is available only if [IPX/SPX] in the [Network] - [NetWare Settings] - [NetWare Settings] page is set to [Enable].</i></p>
	[UDP Port]	<p>Specify the UDP port number.</p> <p>Range: 1 to 65535</p> <p>Default: [161]</p> <p> <i>The numbers 427 and 500 cannot be specified.</i></p>

Item		Description
[SNMP v1/ v2c Settings]	[Read Community Name]	Specify the community name to be used for scanning. Range: Up to 15 characters Default: [public]
	[Write]	If [Enable] is selected, the Write function is enabled. Choices: [Enable], [Disable] Default: [Enable]
	[Write Community Name]	Specify the community name to be used for reading and writing. Range: Up to 15 characters Default: [private]

Item		Description
[SNMP v3 Settings]	[Context Name]	Specify the context name. Range: Up to 63 characters Default: [Blank]
	[Discovery]	If [Enable] is selected, the Discovery function is enabled. Choices: [Enable], [Disable] Default: [Enable]
	[Discovery User Name]	Specify the user name for detection. Range: Up to 32 characters Default: [public]
	[Read User Name]	Specify the name of the read-only user. Range: Up to 32 characters Default: [initial]  <i>The same name as those specified for [Discovery User Name] and [Write User Name] cannot be used.</i>
	[Security Level]	Select the security level for the read-only user. Choices: [None], [Auth-password], [Auth-password/Priv-password] Default: [Auth-password/Priv-password]
	[auth-password]	Select [Change Password] to change the password. Specify the read-only user password to be used for authentication. Range: 8 to 32 characters Default: [AuthPassword]

Item			Description
		[priv-password]	<p>Select [Change Password] to change the password.</p> <p>Specify the read-only user password to be used for privacy (encryption).</p> <p>Range: 8 to 32 characters</p> <p>Default: [PrivPassword]</p>
	[Write User Name]		<p>Specify the reading/writing user name.</p> <p>Range: Up to 32 characters</p> <p>Default: [restrict]</p> <p> <i>The same name cannot be set for [Discovery User Name] and [Write User Name].</i></p>
		[Security Level]	<p>Select the security level for a reading/writing user.</p> <p>Choices: [None], [Auth-password], [Auth-password/Priv-password]</p> <p>Default: [Auth-password/Priv-password]</p>
		[auth-password]	<p>Select [Change Password] to change the password.</p> <p>Specify the reading/writing user password to be used for authentication.</p> <p>Range: 8 to 32 characters</p> <p>Default: <Mac address> (excluding colons)</p>
		[priv-password]	<p>Select [Change Password] to change the password.</p> <p>Specify the reading/writing user password to be used for privacy (encryption).</p> <p>Range: 8 to 32 characters</p> <p>Default: <Mac address> (excluding colons)</p>

Item		Description
	[Encryption Algorithm]	Select an encryption algorithm. Choices: [DES], [AES-128] Default: [DES]
	[Authentication Method]	Select an authentication method. Choices: [MD-5], [SHA-1] Default: [MD-5]
[Trap Settings]	[Allow Setting]	Select whether or not to permit the Trap settings Choices: [Enable], [Disable] Default: [Enable]
	[Trap Setting When Authentication Fails]	Select whether or not to enable the Trap settings if authentication fails. Choices: [Enable], [Disable] Default: [Disable]

[SMB Settings]

[WINS Settings]

Administrator Log out

Ready Ready

System Security Job Print Storage Address Network

General Settings
TCP/IP Settings
E-mail Settings
LDAP Settings
HTTP Settings
IPP Settings
FTP Settings
SNMP Settings
▼ SMB Settings
► WINS Settings
► SMB Client Settings
► Direct Hosting Settings
Web Service Settings
Bonjour Settings
NetWare Settings
AppleTalk Settings
Network Fax Settings
WebDAV Settings
OpenAPI Settings
TCP Socket Settings
LLTD Settings

WINS Settings

WINS Enable

WINS Automatic Retrieval Enable

WINS Server Address 1

WINS Server Address 2


Node Type H Node

Apply Clear

The [Network] - [SMB Settings] - [WINS Settings] page allows you to configure the following items.

Item	Description
[WINS]	<p>If [Enable] is selected, the WINS server function is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
[WINS Automatic Retrieval]	<p>To automatically obtain the WINS server address, select [Enable].</p> <p>A setting must be specified if DHCP is enabled.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
[WINS Server Address 1]/[WINS Server Address 2]	<p>Type in the WINS server address.</p> <p>Format: *.*.* (The asterisks (*) indicate numbers between 0 and 255.)</p> <p>Default: [0.0.0.0]</p>
[Node Type]	<p>Select the name resolution method.</p> <ul style="list-style-type: none">■ [B Node]: Select this setting to query by broadcast.■ [P Node]: Select this setting to query the WINS server.■ [M Node]: Select this setting to query by broadcast, then query the WINS server.■ [H Node]: Select this setting to query the WINS server, then query by broadcast. <p>Default: [H Node]</p>

[SMB Client Settings]

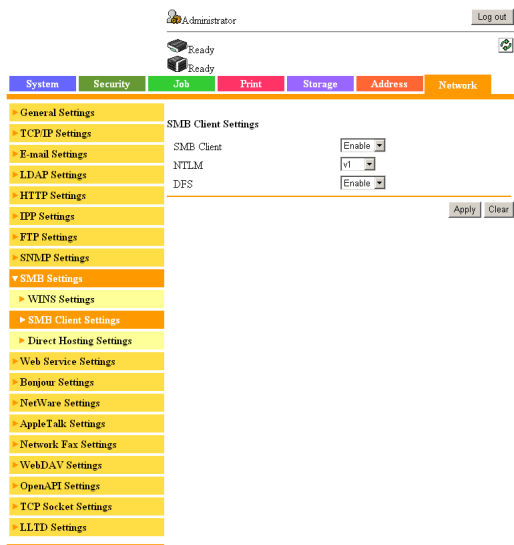

The [Network] - [SMB Settings] - [SMB Client Settings] page allows you to configure the following items.

Item	Description
[SMB Client]	If [Enable] is selected, the SMB client function is enabled. Choices: [Enable], [Disable] Default: [Enable]
[NTLM]	Select the NTLM version. Choices: [v1], [v2], [v1/v2] Default: [v1]
[DFS]	To perform SMB transmission in a distributed file system (DFS) environment, select [Enable]. Choices: [Enable], [Disable] Default: [Enable]

[Direct Hosting Settings]



The [Network] - [SMB Settings] - [Direct Hosting Settings] page allows you to configure the following items.

Item	Description
[Direct Hosting]	To use IPv6 addresses for communication, select [Enable]. Choices: [Enable], [Disable] Default: [Enable]

[Web Service Settings]

[Common Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Common Settings

Printer Settings

Scanner Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

Web Service Common Settings

Friendly Name

KONICA MINOLTA bizhub C35(DB 6F 2E)

Secure Mode

Disable

Apply

Clear

The [Network] - [Web Service Settings] - [Common Settings] page allows you to configure the following items.

Item		Description
[Web Service Common Settings]		Specify common Web Service settings.
	[Friendly Name]	Type in a friendly name. Range: Up to 62 characters Default: [KONICA MINOLTA bizhub C35(DB 6F 2E)]
	[Secure Mode]	If [Enable] is selected, SSL is enabled. Choices: [Enable], [Disable] Default: [Disable]

[Printer Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SNB Settings

Web Service Settings

Common Settings

Printer Settings

Scanner Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

Web Service Printer Settings

Print Function

Printer Name

Printer Location

Printer Information

Enable

KONICA MINOLTA bizhub C35(DB:6F:2E)

Apply

Clear

The [Network] - [Web Service Settings] - [Web Service Printer Settings] page allows you to configure the following items.

Item		Description
[Web Service Printer Settings]		Specify settings for printing using Web Service.
	[Print Function]	If [Enable] is selected, the WSD print function is enabled. Choices: [Enable], [Disable] Default: [Enable]
	[Printer Name]	Type in a printer name. Range: Up to 63 characters (excluding ! \ and ,) Default: [KONICA MINOLTA bizhub C35(XX:XX:XX)]
	[Printer Location]	Specify the printer location. Range: Up to 63 characters Default: [Blank]

Item	Description
[Printer Information]	Specify the printer information. Range: Up to 63 characters Default: [Blank]

[Scanner Settings]


The [Network] - [Web Service Settings] - [Web Service Scanner Settings] page allows you to configure the following items.

Item	Description
[Web Service Scanner Settings]	Specify settings for scanning using Web Service.
[Scan Function]	If [Enable] is selected, the WSD scan function is enabled. Choices: [Enable], [Disable] Default: [Enable]

Item	Description
[Scanner Name]	Type in a scanner name. Range: Up to 63 characters (excluding ! \ and ,) Default: [KONICA MINOLTA bizhub C35(XX:XX:XX)]
[Scanner Location]	Specify the scanner location. Range: Up to 63 characters Default: [-]
[Scanner Information]	Specify the scanner information. Range: Up to 63 characters Default: [-]
[Connection Timeout]	Select the length of time until the connection times out. Range: 30 to 300 (seconds) Default: [120]

[Bonjour Settings]

[Bonjour Settings]

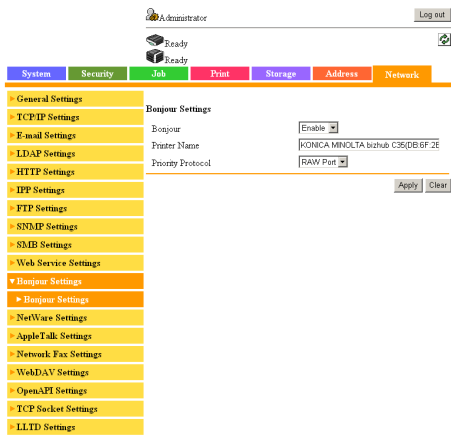

The [Network] - [Bonjour Settings] - [Bonjour Settings] page allows you to configure the following items.

Item	Description
[Bonjour]	Select whether or not to enable the Bonjour function. Choices: [Enable], [Disable] Default: [Enable] Configuration menu equivalent: [Admin Settings] - [Ethernet] - [TCP/IP] - [Bonjour]
[Printer Name]	Type in a printer name. Range: Up to 63 characters Default: [KONICA MINOLTA bizhub C35(XX:XX:XX)]
[Priority Protocol]	Select the connection protocol given priority with Bonjour. Choices: [LPD], [RAW Port], [IPP] Default: [RAW Port]

[NetWare Settings]

[NetWare Settings]

Administrator Log out

Ready

Ready

SystemSecurityJobPrintStorageAddressNetwork

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

NetWare Status

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

NetWare Settings

IPX/SPX

Ethernet Frame Type

NetWare Print Mode

PServer Settings

Print Server Name

Print Server Password

Change Password

Print Queue Scan Rate

Bindery/NDS

Preferred File Server

Preferred NDS Context Name

Preferred NDS Tree Name


NPrinter/RPrinter Settings


Printer Name

Printer Number


The [Network] - [NetWare Settings] - [NetWare Settings] page allows you to configure the following items.

Item		Description
[NetWare Settings]	[IPX/SPX]	If [Enable] is selected, the IPX/SPX function is enabled. Choices: [Enable], [Disable] Default: [Disable]
	[Ethernet Frame Type]	Select the frame type. Choices: [Auto], [Ethernet802.2], [Ethernet802.3], [Ethernet II], [Ethernet SNAP] Default: [Auto]
	[NetWare Print Mode]	Select the NetWare configuration mode. Choices: [Disable], [PServer], [NPrinter/RPrinter] Default: [Disable]

Item		Description
[PServer Settings]	[Print Server Name]	<p>Specify the print server name for the printer.</p> <p>Range: Up to 63 characters</p> <p>Default: [BHC35-xxxxxx]</p> <p> "xxxxxx" indicates the last six digits of the MAC address in hexadecimal values.</p>
	[Print Server Password]	<p>Select [Change Password] to change the password.</p> <p>Specify the print server password.</p> <p>Range: Up to 63 characters</p> <p>Default: [Blank]</p>
	[Print Queue Scan Rate]	<p>Specify the length of the queue scan interval.</p> <p>Range: 1 to 65535 (seconds)</p> <p>Default: 1</p>
	[Bindery/NDS]	<p>Select the bindery options.</p> <p>Choices: [NDS], [Bindery/NDS], [Bindery]</p> <p>Default: [NDS]</p>
	[Preferred File Server]	<p>Specify the preferred file server for the printer.</p> <p>Range: Up to 47 characters</p> <p>Default: [Blank]</p>
	[Preferred NDS Context Name]	<p>Specify the preferred NDS context for the printer.</p> <p>Range: Up to 191 characters</p> <p>Default: [Blank]</p>
	[Preferred NDS Tree Name]	<p>Specify the preferred NDS tree for the printer.</p> <p>Range: Up to 63 characters</p> <p>Default: [Blank]</p>

Item		Description
[NPrinter/ RPrinter Set- tings]	[Printer Name]	Specify the printer name. Range: Up to 63 characters Default: [BHC35-xxxxxx]  "xxxxxx" indicates the last six digits of the MAC address in hexadecimal values.
	[Printer Number]	Specify the printer number. Range: 0 to 255 Default: [255]

[NetWare Status]

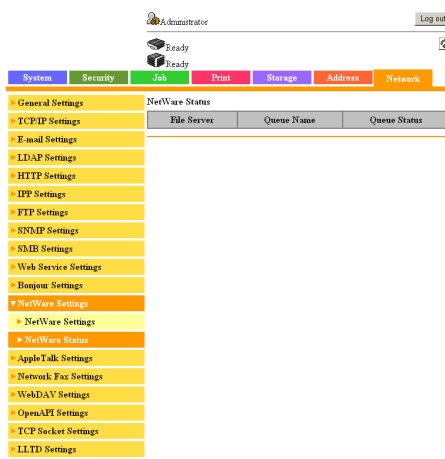

The [Network] - [NetWare Settings] - [NetWare Status] page provides the following information.

Item	Description
[File Server]	Displays the current NetWare file server.
[Queue Name]	Displays the current NetWare queue name.
[Queue Status]	Displays the current NetWare status.

[AppleTalk Settings]

[AppleTalk Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

AppleTalk Settings

AppleTalk

Printer Name

Zone Name

Current Zone Name

Enable


BHC35-0B6F2B

*

Apply

Clear

The [Network] - [AppleTalk Settings] - [AppleTalk Settings] page allows you to configure the following items.

Item	Description
[AppleTalk]	If [Enable] is selected, AppleTalk is enabled. Choices: [Enable], [Disable] Default: [Enable] Configuration menu equivalent: [Admin Settings] - [Ethernet] - [AppleTalk]
[Printer Name]	Specify the printer name. Range: Up to 31 characters Default: [BHC35-xxxxxx]  "xxxxxx" indicates the last six digits of the MAC address in hexadecimal values.
[Zone Name]	Specify the zone name. Range: Up to 31 characters Default: [*]

Item	Description
[Current Zone Name]	Displays the current zone name.

[Network Fax Settings]

[Network Fax Function Settings]

The screenshot shows a web interface for configuring a printer. At the top, there is a user bar for 'Administrator' with a 'Log out' button. Below this is a status bar showing 'Ready' and a refresh icon. A navigation menu includes tabs for System, Security, Job, Print, Storage, Address, and Network. The 'Network' tab is selected. On the left, a list of settings categories is shown, with 'Network Fax Settings' expanded to show 'Network Fax Function Settings'. The main content area is titled 'Network Fax Function Settings' and contains a single setting: 'I-Fax' with a dropdown menu currently set to 'Enable'. At the bottom right of the settings area are 'Apply' and 'Clear' buttons.

The [Network] - [Network Fax Settings] - [Network Fax Function Settings] page allows you to configure the following items.

Item	Description
[I-Fax]	<p>Select whether or not the I-Fax is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>

[WebDAV Settings]

[WebDAV Client Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

WebDAV Client Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

WebDAV Client Settings

WebDAV Client

Proxy Server Address

Proxy Server Port Number

Proxy Server User Name

Proxy Server Password

Connection Timeout

Enable

0.0.0.0

8080 (1-65535)

☐ Change Password

60 sec. (5-300)

Apply

Clear

The [Network] - [WebDAV Settings] - [WebDAV Client Settings] page allows you to configure the following items.

Item	Description
[WebDAV Client]	Select whether or not the WebDAV client is used.
[Proxy Server Address]	<p>To perform transmissions via a proxy server, enter its address.</p> <p>An IPv4 address, IPv6 address or FQDN (fully qualified domain name) can be specified.</p> <p>Range: Up to 255 characters</p> <p>Default: [0.0.0.0]</p>
[Proxy Server Port Number]	<p>Specify the port number of the proxy server.</p> <p>Range: 1 to 65535</p> <p>Default: [8080]</p>
[Proxy Server User Name]	<p>Type in the user name for logging on to the proxy server.</p> <p>Range: Up to 63 characters</p> <p>Default: [Blank]</p>

Item	Description
[Proxy Server Password]	<p>Select [Change Password] to change the password.</p> <p>Type in the password for logging on to the proxy server.</p> <p>Range: Up to 63 characters</p> <p>Default: [Blank]</p>
[Connection Timeout]	<p>Specify the length of time until communication with a server times out.</p> <p>Range: 5 to 300</p> <p>Default: [60]</p>

[OpenAPI Settings]

[OpenAPI Settings]

Administrator Log out

Ready

Ready

System Security Job Print Storage Address Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

OpenAPI Settings

TCP Socket Settings

LLTD Settings

OpenAPI Settings

OpenAPI

Enable

Port Number

6001 (1-65535)

SSL/TLS

Non-SSL Only

Port Number (SSL/TLS)

6003 (1-65535)

Authentication

Off



Login Name

Password

Change Password

Apply Clear

The [Network] - [OpenAPI Settings] - [OpenAPI Settings] page allows you to configure the following items.

Item	Description
[OpenAPI]	<p>Select whether or not OpenAPI is used.</p> <p>Choices: [Enable], [Disable]</p> <p>Default: [Enable]</p>
[Port Number]	<p>Specify the port number.</p> <p>Range: 1 to 65535</p> <p>Default: [50001]</p> <p> <i>The currently used port number cannot be specified.</i></p>
[SSL/TLS]	<p>Select whether or not SSL/TLS is used.</p> <p>Choices: [Non-SSL Only], [SSL Only], [SSL/Non-SSL]</p> <p>Default: [Non-SSL Only]</p>
[Port Number (SSL/TLS)]	<p>Specify the SSL port number.</p> <p>Range: 1 to 65535</p> <p>Default: [50003]</p> <p> <i>The currently used port number cannot be specified.</i></p>
[Authentication]	<p>Select whether or not to perform OpenAPI authentication.</p> <p>Choices: [On], [Off]</p> <p>Default: [Off]</p>
	<p>[Login Name] Type in the login name used with OpenAPI authentication.</p> <p>Default: [Blank]</p>
	<p>[Password] Select [Change Password] to change the password.</p> <p>Type in the password used with OpenAPI authentication.</p> <p>Default: [Blank]</p>

[TCP Socket Settings]

[TCP Socket Settings]

Administrator

Log out

Ready

Ready

System

Security

Job

Print

Storage

Address

Network

General Settings

TCP/IP Settings

E-mail Settings

LDAP Settings

HTTP Settings

IPP Settings

FTP Settings

SNMP Settings

SMB Settings

Web Service Settings

Bonjour Settings

NetWare Settings

AppleTalk Settings

Network Fax Settings

WebDAV Settings

OpenAPI Settings

TCP Socket Settings

TCP Socket Settings

LLTD Settings

TCP Socket Settings

TCP Socket

Port Number

SSL/TLS

Port Number (SSL/TLS)

Enable

59158

(1-65535)

SSL Only


59158


(1-65535)

Apply

Clear


The [Network] - [TCP Socket Settings] - [TCP Socket Settings] page allows you to configure the following items.

Item	Description
[TCP Socket]	Select whether or not the TCP socket is used. Choices: [Enable], [Disable] Default: [Enable]
[Port Number]	Specify the port number. Range: 1 to 65535 Default: [59158]  <i>The currently used port number cannot be specified.</i>
[SSL/TLS]	Select whether or not SSL/TLS is used. Choices: [Non-SSL Only], [SSL Only] Default: [Non-SSL Only]

Item	Description
[Port Number (SSL/TLS)]	Specify the SSL port number. Range: 1 to 65535 Default: [59159]  <i>The currently used port number cannot be specified.</i>

[LLTD Settings]

[LLTD Settings]

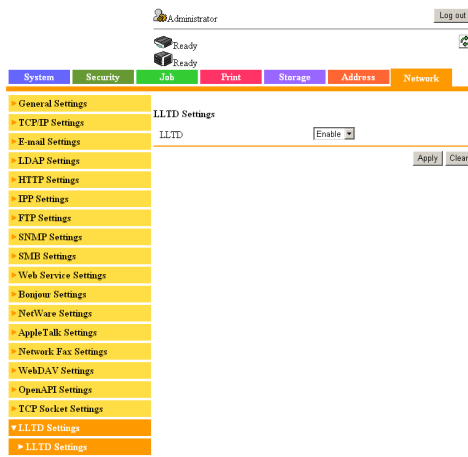

The [Network] - [LLTD Settings] - [LLTD Settings] page allows you to configure the following items.

Item	Description
[LLTD]	Select whether or not LLTD is used. Choices: [Enable], [Disable] Default: [Enable]

Appendix **A**

A

Account Mode	8-9
Account Mode, PageScope Web	
Connection	8-9
Active Directory	6-10
Address, PageScope Web	
Connection	8-151
Address Book	8-151
Communication List	8-106
Group	8-162
Program	8-166
Subject	8-178
Text	8-180
Administrator Mode	8-9
Administrator Mode, PageScope Web	
Connection	8-9
AppleTalk	1-12, 1-28, 1-39, 1-53, 7-6, 8-229
Authentication Device	8-57
Authentication method	6-3, 6-11, 6-18, 6-23, 6-32

B

Bonjour	1-37, 7-6, 8-225
BOOTP	7-7

C

Clear settings, PageScope Web	
Connection	8-36
Color Profile	1-103
Color profile, PageScope Web	
Connection	8-142
Configuration	
Network settings	5-2
Printer, via PageScope Web	
Connection	8-13

D

Date/Time, PageScope Web	
Connection	8-29
DDNS	7-7
Device Certificate	8-57, 8-62
DHCP	7-3, 7-7
Download Manager	1-103

Download Manager Utility	4-2
Driver Packaging Utility	4-2

E

Ethernet	5-2
Ethernet interface	7-3
Ethernet menu	
Network settings	5-3
Overview	5-2
External Certificate	8-79

F

Form overlay, PageScope Web	
Connection	8-141
FTP	7-7, 8-210

G

Gateway	7-3
Manual setting	7-4
General settings (Print),	
PageScope Web	
Connection	8-110

H

Host table	8-4
HTTP	7-7, 8-205

I

ID & Print	8-56
IEEE802.1X	7-8, 8-91
Installing	
Download manager utility	4-2
Driver Packaging Utility	4-2
PageScope Data	
Administrator	4-2
PageScope Direct Print	4-2
PageScope Net Care Device	
Manager	4-2
PPD File	2-2, 2-3
Printer driver	1-3, 2-2
Printer Management Utilities	4-2
Scanner driver	1-111
IP address	7-3

Manual setting	7-4
IPP	1-20, 7-8, 8-206
Printing via	7-11
IPsec	7-8
IPv6	7-8
IPX/SPX	7-8

J

Job log	8-26
Job, PageScope Web	
Connection	8-97

L

LDAP	6-31, 8-200
Linux	
Adding the printer	2-3
Checking print jobs	2-19
PPD file, installing	2-2
Print settings	2-17
Printer driver settings	2-11
System requirements	2-2
Troubleshooting	2-20
LLMNR	7-8
LLTD	7-9, 8-235
LPD/LPR	7-9

M

Mac OS X	
Options	1-60
Page setup settings	1-64
Print Options	1-60
Print settings	1-68, 1-86
Printer driver, installing	1-3
Printer Setup Utility	1-35
Scanner driver, installing	1-111
Scanning	1-117
System requirements	1-2, 1-110
Troubleshooting	1-119

N

NDS	6-22, 6-27
NetWare	3-2, 8-226, 8-230
Network connection	6-2, 7-2
Address setting	7-4

Ethernet interface	7-3
Making connections	7-3
Theory	7-2
Using DHCP	7-3
Network printing	7-6
Network settings	5-2

Network, PageScope Web

Connection	8-182
AppleTalk Settings	8-229
Bonjour Settings	8-225
E-mail Settings	8-193
FTP Settings	8-210
General Settings	8-182
HTTP Settings	8-205
IPP Settings	8-206
LDAP Settings	8-200
LLTD Settings	8-235
NetWare Settings	8-226
Network Fax Settings	8-230
OpenAPI Settings	8-232
SMB Settings	8-217
SNMP Settings	8-212
TCP Socket Settings	8-234
TCP/IP Settings	8-184
Web Service Settings	8-221
WebDAV Settings	8-231
NTLM	6-16

O

OpenAPI	8-232
----------------------	-------

P

Page setup settings	1-64
Custom paper size options	1-66
Page attributes options	1-65
PageScope Data	
Administrator	4-2
PageScope Direct Print	4-2
PageScope Net Care Device	
Manager	4-2
PageScope Web Connection	8-2
Address Book	8-151
Administrator Mode	8-12
Administrator Password	8-96
AppleTalk Settings	8-229

Authentication	6-2, 6-10, 6-16, 6-22, 6-27, 6-28, 6-31, 8-43
Auto Logout	8-95
Bonjour Settings	8-225
Clear settings	8-36
Color profile	8-142
Communication List	8-106
Consumables	8-21
Counter	8-22
Current Jobs	8-97
Current status	8-8
Date/Time Settings	8-29
Device information	8-14
Direct Print	8-145
Display language	8-2
E-mail Settings	8-193
Form overlay	8-141
FTP Settings	8-210
General settings	8-110
General Settings (Network)	8-182
Group	8-162
HTTP Settings	8-205
IEEE802.1X	8-91
Import/Export	8-26
Interface information	8-18
IP Address Filtering	8-88
IPP Settings	8-206
IPsec	8-83
Job History	8-101
Job log	8-14
LDAP Settings	8-200
Limiting Access to	
Destination	8-94
LLTD Settings	8-235
Login page	8-9
Machine Settings	8-33
Maintenance	8-36
Navigation	8-8
NetWare Settings	8-226
Network Fax Settings	8-230
Notification Settings	8-38
Online assistance	8-24
OpenAPI Settings	8-232
Output tray	8-14
Paper source	8-14
Paper source settings	8-114
PC-Fax	8-149

PCL settings	8-120
PKI Settings	8-62
Print quality settings	8-132
Printer configuration	8-13
Program	8-166
PS font	8-140
PS settings	8-124
Public User Mode	8-9
Registered User Mode	8-9
Report Types	8-144
Requirements	8-2
Reset printer	8-37
ROM version	8-35
Scan to HDD	8-146
SMB Settings	8-217
SNMP Settings	8-212
Status notification settings	8-38
Storage	8-17
Subject	8-178
Summary	8-14
TCP Socket Settings	8-234
TCP/IP Settings	8-184
Text	8-180
Time adjustment settings	8-31
Tray mapping settings	8-118
User information	8-27
Web Service Settings	8-221
WebDAV Settings	8-231
Window	8-7
XPS settings	8-131
Paper source settings,	
PageScope Web	
Connection	8-114
PCL settings, PageScope Web	
Connection	8-120
Port 9100	7-10
PPD File	2-2, 2-3
Print Center	
AppleTalk	1-12
IP IPP	1-20
IP Printing	1-17
Network Connection	1-12
Port 9100	1-12, 1-23
Rendezvous	1-14
USB Connection	1-10
Print jobs	
Checking	2-19

Print quality settings, PageScope Web Connection	8-132
Print, PageScope Web Connection	8-110
Color profile	8-142
Direct Print	8-145
Form overlay	8-141
General settings	8-110
Paper source settings	8-114
PCL settings	8-120
Print quality settings	8-132
PS font	8-140
PS settings	8-124
Report Types	8-144
Tray mapping settings	8-118
XPS settings	8-131
Printer name	8-4
Printer Settings	1-46
AppleTalk	1-53
Bonjour	1-50
IP Printing	1-56
IPP	1-56
Network Connection	1-50
Port 9100	1-56
USB Connection	1-46
Printer Setup Utility	1-26, 1-35
AppleTalk	1-28, 1-39
Bonjour	1-37
IP printing setting	1-31, 1-42
Network Connection	1-28, 1-37
Rendezvous	1-30
USB Connection	1-26, 1-35
Printing with NetWare	3-2
Protocols, network	
BOOTP	7-7
DHCP	7-7
FTP	7-7
HTTP	7-7
IPP	7-8
IPv6	7-8
IPX/SPX	7-8
LLMNR	7-8
LLTD	7-9
LPD/LPR	7-9
SLP	7-9
SMTP	7-10

SNMP	7-10
PS font, PageScope Web Connection	8-140
PS settings, PageScope Web Connection	8-124
Public User Mode, PageScope Web Connection	8-9

R

Registered User Mode, PageScope Web Connection	8-9
Rendezvous	1-14, 1-30
Reset printer, PageScope Web Connection	8-37
ROM version, PageScope Web Connection	8-35

S

Scanning	1-117
Security, PageScope Web Connection	8-43
Administrator Password	8-96
Authentication	8-43
Auto Logout	8-95
IEEE802.1X	8-91
IP Address Filtering	8-88
IPsec	8-83
Limiting Access to Destination	8-94
PKI Settings	8-62
SLP	7-9
SMB	8-217
SMTP	7-10, 8-193
SNMP	7-10, 8-212
Specifying	1-64
SSL/TLS	8-67
Storage, PageScope Web Connection	8-146
PC-Fax	8-149
Scan to HDD	8-146
Subnet mask	7-3
Manual setting	7-4
System Preference	
AppleTalk	1-53

System requirements	
Linux	2-2
Mac OS X	1-2, 1-110
System, PageScope Web	
Connection	8-13
Clear settings	8-36
Counter	8-22
Date/Time	8-29
Machine Settings	8-33
Maintenance	8-36
Notification Settings	8-38
Reset printer	8-37
ROM version	8-35
Status notification settings	8-38
Time adjustment settings	8-31

T

Time adjustment settings, PageScope Web	
Connection	8-31
Tray mapping settings, PageScope Web	
Connection	8-118
Troubleshooting	
Linux	2-20
Mac OS X	1-119

U

Uninstalling	
Printer driver	1-8
Scanner driver	1-115
User authentication	6-2, 6-10, 6-16, 6-22, 6-27, 6-28, 6-31, 8-43
Active Directory	6-10
Device	6-2
LDAP	6-31
LDAP over SSL	6-31
NDS over IPX/SPX	6-22
NDS over TCP/IP	6-27
NetWare	6-22
NTLM	6-16
TCP/IP	6-27
Windows Domain or Workgroup	6-16

W

Web page, printer	8-4
Browser	8-4
Printer name	8-4
Web Service Print	7-10
WebDAV	8-231
WSD	8-221
Printing via	7-22
WSD, print	7-10

X

XPS settings, PageScope Web	
Connection	8-131



KONICA MINOLTA

<http://konicaminolta.com>

Copyright

A121-9563-14A

2009 KONICA MINOLTA BUSINESS TECHNOLOGIES, INC.

2011. 1