

bizhub 4750/4050

User's Guide: Print Functions



Table of contents

	1.1	Overview of printer functions	1-2
	1.2	System requirements	
		For Windows	1-3
		For Mac OS	1-3
	1.3	Cable connection ports of this machine	1-4
2	Printi	ng in the Windows Environment	
	2.1	Preparation for printing (network connection)	2-2
	2.1.1	Overview	2-2
	2.1.2	Before installing the printer driver (for administrators)	2-2
		Checking a LAN cable for connection	
		Checking the network settings	
		Configuring the network printing environment	
	2.1.3	Easy installation of the printer driver	
	2.1.3	Preparing CD-ROM disks for the printer driver	
		Checking the printer driver type	
		Checking the operating systems supported by the printer driver	2-5
		Installation procedure	2-6
	2.1.4	Initializing the printer driver	
		Configuring the optional environment of this machine	
		Change the default print settings	
	2.2	Preparation for printing (USB connection)	
	2.2.1	Overview	
	2.2.2	Easy installation of the printer driver	
		Preparing the printer driver CD-ROM	
		Checking the operating systems supported by the printer driver	
		Changing the installation settings (Windows 7/8/8.1/Server 2008 R2/Server 2012/	
		Server 2012 R2)	2-11
		Installation procedure	2-12
	2.2.3	Initializing the printer driver	2-13
		Configuring the optional environment of this machine	
		Change the default print settings	
	2.3	How to print	
	2.3.1	Printing operation flow	2-15
	2.3.2	Easily recalling frequently used print settings	
		Registering the frequently used setting	
		Customizing the setting window	
	2.4	Useful printing functions	
	2.4.1	Changing the paper size or type	2-18
		Enlarging or reducing to the paper size ([raper size]) Enlarging or reducing by the desired zoom ratio ([Zoom])	
		Printing on paper of a special size ([Original Size])	
		Specifying the paper type ([Paper Type])	
		Specifying the paper tray ([Paper Tray])	2-20
	2.4.2	Printing multiple sets of copies	2-20
		Specifying the number of copies ([Copies])	
		Printing on a set basis ([Collate])	
	2.4.3	Saving the number of printed sheets	
		Printing multiple pages on the same side of a single sheet ([Combination])	
		Copying on both sides of paper ([2-Sided])	
		Chipping Staint pages ([Chip Diant ages])	20

2.4.4	Adjusting the layout	
	Printing in a booklet format ([Booklet])	2-24
	Adding a margin on pages ([Binding Margin])	2-25
	Printing a poster-sized image ([Combination])	2-26
	Rotating the image 180 degrees ([Rotate 180])	2-26
	Fine-tuning the print position ([Image Shift])	2-27
2.4.5	Stapling printed materials	2-28
2	Stapling ([Staple])	
0.4.0		
2.4.6	Adding a text or image to the original	
	Adding a water mark ([Watermark])	
	Registering or editing a watermark	
	Composing an overlay image ([Print in Overlay])	
	Creating an overlay image on the computer	
	Adding distribution control numbers ([Distribution Control Number])	
	Adding a date and time ([Date/Time])	
	Adding page numbers ([Page Number])	
2.4.7	Deterring unauthorized copying	
	Printing a concealed security watermark ([Copy Protect])	
	Configuring the print settings for Copy Protect	2-33
2.4.8	Inserting paper into the original	2-34
	Inserting a front or back cover ([Front Cover] / [Back Cover])	2-34
	Inserting a separator page ([Separator Page])	
2.4.9	Specifying the image quality level for printing	2 25
2.4.9	Selecting the appropriate image quality level for the original	∠-აა
	([Quick Settings])	2-35
	Specifying the printing resolution ([Resolution])	
	Fine-tuning the image quality according to the original ([Quality Adjustment])	
	Specifying the density of a graphic pattern ([Pattern])	
	Saving the tensity of a graphic pattern ([rattern])	
	Sharpening the border between texts ([Edge Strength])	
	Specifying the font processing method ([Font Settings])	
2.4.10	Printing Microsoft Excel/PowerPoint data	
	Printing multiple Excel sheets at one time	
	Composing and printing an image correctly in PowerPoint	
	Preventing failure in printing thin lines ([Thin Line Support])	2-39
2.5	Printing options	2-40
2.5.1	Making a trial printing for only one copy ([Proof then Print])	2-40
	Proof then Print	
	How to print from the computer	2-40
	Operations on this machine	2-40
2.5.2	Printing highly confidential documents ([Secured Job])	2-41
2.0.2	Secured Job.	
	How to print from the computer	
	Operations on this machine	
2.5.3	·	
2.5.3	Saving an original on the HDD of this machine ([Store Job] / [Print and Hold]) Store Job	
	How to print from the computer	
	Using the saved data	
2.5.4	Attaching authentication information	
	Printing when authentication is set	
	Operations required to use this function	
	How to print from the computer	
2.5.5	Printing at the same time as authentication (ID & Print)	
	ID & Print	
	How to print from the computer	
	Operations on this machine (Printing simultaneously with login)	
	Operations on this machine (Printing only specific data)	2-48
2.6	Printer driver setting items	2-50
2.6.1		
	-	
2.0.1	[Properties] window of the printer driver	2-50
2.0.1	[Properties] window of the printer driver	2-50 2-50
2.6.2	[Properties] window of the printer driver	2-50 2-50 2-52

	2.6.3	Available operations in the [Settings] tab	2-53
	2.6.4	[Printing Preferences] window of the printer driver	
		How to display the [Printing Preferences] window	
		Items common to each tab	
	2.6.5	Available operations in [Advanced]	2-57
	2.6.6	Available operations in [My Tab]	2-57
	2.6.7	Available operations in [Basic]	2-58
	2.6.8	Available operations in the [Layout] tab	2-59
	2.6.9	Available operations in the [Finish] tab	2-60
	2.6.10	Available operations in the [Cover Mode] tab	2-60
	2.6.11	Available operations in the [Stamp/Composition] tab	2-61
	2.6.12	Available operations in the [Quality] tab	
	2.6.13	Available operations in the [Other] tab	
	2.7	Uninstalling the printer driver	
		Using the deletion program	
		Uninstall using the installer	2-63
3	Printin	g in the Mac OS Environment	
	3.1	Preparation for printing (Bonjour connection)	3-2
	3.1.1	Overview	3-2
	3.1.2	Before setting up the computer (for administrators)	3-2
		Checking a LAN cable for connection	
		Configuring the Bonjour settings	3-2
	3.1.3	Setting up the computer	3-3
		Preparing the printer driver CD-ROM	
		Checking the operating systems supported by the printer driver	
		Installing the printer driver	
		Configuring connection using Bonjour (Mac OS X 10.4 of later)	
	3.1.4	Initializing the printer driver	3-6
		Configuring the optional environment of this machine	
		Changing the default print settings	3-7
	3.2	Preparation for printing (USB connection)	3-8
	3.2.1	Overview	3-8
	3.2.2	Setting up the computer	
		Preparing the printer driver CD-ROM	
		Checking the operating systems supported by the printer driver	
		Installing the printer driver	
		Configuring USB connection settings (Mac OS X 10.5 or later)	
		Configuring USB connection settings (Mac OS X 10.4)	
	2.0.2	Initializing the printer driver	
	3.2.3	Configuring the optional environment of this machine	
		Change the default print settings	
	3.3	How to print	
	3.3.1	Printing operation flow	
	3.3.2	Registering frequently used print settings	
	3.4	Useful printing functions	
	3.4.1	Changing the paper size or type	
	0.1.1	Enlarging or reducing by the desired zoom ratio ([Scale:])	
		Printing on custom size paper ([Page Setup])	3-15
		Specifying the paper type ([Paper Type:])	
		Specifying the paper tray ([Paper Feed])	
		Enlarging or reducing to the nearest page size ([Nearest Size and Scale])	
	3.4.2	Printing multiple sets of copies	
		Specifying the number of copies ([Copies:])	
		Printing on a set basis ([Collate])	
	3.4.3	Saving the number of printed sheets	
		Copying on both sides of paper ([2-Sided])	

	([Pages per Sheet:])	3-17
3.4.4	Adjusting the layout	
0	Reversing the left and right sides ([Flip horizontally])	3-18
	Rotating a print image 180 degrees ([Reverse page orientation])	3-18
3.4.5	Stapling printed materials	
	Stapling ([Staple:])	
3.4.6	Inserting a front cover	
	Printing a message on a cover page ([Cover Page])	
3.4.7	Specifying the image quality level for printing	
0.1.7	Specifying the printing resolution ([Resolution:])	
	Fine-tuning the brightness to fit the original ([Brightness:])	
	Specifying screen properties ([Halftone])	
	Saving the toner consumption ([Toner Save])	
3.5	Printing options	
3.5.1	Making a trial printing for only one copy ([Proof then Print])	
0.0.1	Proof then Print	
	How to print from the computer	
	Operations on this machine	
3.5.2	Printing a highly confidential original ([Secured Job])	
	Secured Job How to print from the computer	
	Operations on this machine	
3.5.3	Attaching authentication information	
0.0.0	Printing when authentication is set	
	How to print from the computer	3-25
3.5.4	Printing at the same time as authentication ([ID & Print])	
	ID & Print How to print from the computer	
	Operations on this machine (Printing simultaneously with login)	
	Operations on this machine (Printing only specific data)	
3.6	Printer driver setting items	3-29
3.6.1	[Page Setup] window of the printer driver	3-29
	How to display the [Page Setup] window	
	Available operations in [Page Attributes]	
3.6.2	[Print] window of the printer driver	
	How to display the [Print] window	
3.6.3	Available operations in [Layout]	
3.6.4	Available operations in [Scheduler]	
3.6.5	Available operations in [Paper Handling]	
3.6.6	Available operations in [ColorSync]	
3.6.7	Available operations in [Color Matching]	
3.6.8	Available operations in [Cover Page]	3-32
3.6.9	Available operations in [Error Handling]	3-32
3.6.10	Available operations in [Paper Feed]	3-33
3.6.11	Available operations in [Quick Settings]	3-33
3.6.12	Available operations in [Security]	
3.6.13	Available operations in [Printer Features]	
3.6.14	Available operations in [Supply Levels]	
3.6.15	Available operations in [Summary]	
3.7	Uninstalling the printer driver	3-35
Duintin	without Hainer the Drinter Driver	
rinting	without Using the Printer Driver	
4.1	Directly printing from the computer (Direct Print)	
	Direct Print How to use Direct Print	
	13 233 5	

4

4.2	Printing directly from a USB memory device	
	Printing from a USB memory device	
	Supported USB memory devices	4-3
	Printing procedure	4-4
4.3	Printing from an AirPrint-compatible terminal (AirPrint)	
	AirPrint	
	Operations Required to Use this Function (For the Administrator)	4-5
	Using an iOS terminal for printing	4-5
	Using Mac for printing	
4.4	Printing from an Android terminal (Mopria print)	4-7
	the Mopria Print Function	4-7
	Operations Required to Use this Function (For the Administrator)	
	How to Print	
4.5	Using Wi-Fi Direct for printing	4-8
	Wi-Fi Direct	
	Machine side: Steps required to use this function (for the administrator)	
	Terminal side: Operations required to use this function	
	Using a mobile terminal for printing	
	Using a computer for printing	4-8

5 Index

Printer Functions

1 Printer Functions

1.1 Overview of printer functions

The printer driver is software that specifies how to use the printing functions of this machine from other application software. When you install the printer driver on your computer, you can use a variety of this machine's printing functions. Furthermore, the printer driver supports a wide range of connection methods and provides flexibility in various environments.

It also supports direct printing, a printing method that does not use the printer driver, and printing from a USB memory device.

1.2 System requirements

For Windows

Item	Specifications	
Operating system	The supported versions of the operating system vary depending on the installed printer driver. For details, refer to page 2-5.	
CPU	Any processor of the same or higher specifications as recommended for your operating system	
Memory	Memory capacity as recommended for your operating system The memory space must be enough for the OS and applications used.	
Drive	CD-ROM drive	

For Mac OS


Item	Specifications
Operating system	Mac OS X (10.3.x, 10.4.x, 10.5.x, 10.6.x, 10.7.x, 10.8.x, 10.9.x, 10.10.x)
CPU	PowerPC, Intel Processor
Memory	Memory capacity as recommended for your operating system
Drive	CD-ROM drive



For details on how to use the Linux printer driver, refer to Chapter 5 "Printing in the Linux Environment" in [User's Guide: Applied Functions].

1.3 Cable connection ports of this machine

The printer cables are connected to each port on this machine.

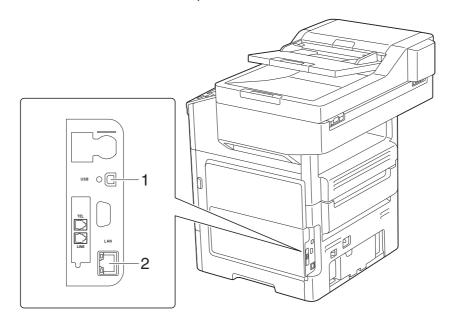

No.	Port	Description
1	USB port	Use a USB interface cable for USB connection. Use a type A (4-pin, male) to type B (4-pin, male) USB cable. A USB cable measuring three meters or less is recommended.
2	Ethernet (LAN) Port (1000Base-T/100Base- TX/10Base-T)	Use the LAN cable to connect this machine to the network. This machine supports the 1000Base-T, 100Base-TX and 10Base-T protocols. The TCP/IP (LPD/LPR, IPP) protocols and Web services are supported.

Printing in the Windows Environment

2 Printing in the Windows Environment

2.1 Preparation for printing (network connection)

2.1.1 Overview

2.1

Before using this machine as a printer, you need to install the printer driver on your computer.

This section describes preparatory steps for printing from this machine using the installer that are supplied with this machine.

2.1.2 Before installing the printer driver (for administrators)

Connecting this machine to the network

- Checking a LAN cable for connection
- Checking the network settings
 - → Check that an IP address is assigned to this machine.



Configuring the network printing environment

- When using the Normal Printing (at Port 9100)
 - → Make sure that the RAW port number has been set. (Usually, you can use the default settings.) Use Normal Printing (Port 9100) unless otherwise specified.
- When using the Internet Printing (IPP)
 - → Check the IPP operating environment. (Usually, you can use the default settings.)
- When using the Secure Printing (IPPS)
 - → Set up the IPPS operating environment. Establish the communication with SSL encryption between this machine and the computer.



Preparation finished

Checking a LAN cable for connection

Check that a LAN cable is connected to the LAN port of this machine.

For details on the cable connection port, refer to page 1-4.

Checking the network settings

Print out the Configuration Page, then check that an IP address is assigned to this machine.

To print out the Configuration Page, select [Utility] - [User Settings] - [Printer Settings] - [Print Reports] - [Configuration Page].



If no IP address is displayed, you need to set up the network. For details, refer to [Quick Start Guide].

Configuring the network printing environment

Set up the operating environment to suit the printing method.

If the printing method is not specified before installation, Normal Printing (Port 9100) is selected for printing. Use Normal Printing (Port 9100) unless otherwise specified.

For details on how to configure settings, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

Printing method	Description	
Normal Printing (Port 9100)	Make sure that the RAW port number has been set. (Usually, you can use the default settings.)	
Internet Printing (IPP)	Check the IPP operating environment. (Usually, you can use the default settings.)	
Secure Printing (IPPS)	Set up the IPPS operating environment. Establish the communication with SSL encryption between this machine and the computer.	



- If you are using Windows Vista/7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2, you cannot set up the Secure Print (IPPS) using the installer.
- If you are using Windows Server 2003 in an IPv6 environment, you cannot set up the Secure Printing
 using the installer.
- Internet Printing (IPP) is not supported in the IPv6 environment.

Allowing device information to be acquired from the printer driver

Disable the OpenAPI authentication function. (Usually, you can use the default settings.)

When you allow acquisition of device information from the printer driver, the printer driver automatically obtains information such as what options are installed on this machine and whether or not authentication settings have been configured.

For details on how to configure settings, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

2.1.3 Easy installation of the printer driver

Preparing the printer driver

- Preparing the printer driver CD-ROM
 - → For the CD-ROM, contact the administrator of this machine.
- Checking the printer driver type
 - → Three printer drivers for different purposes are available. Select the printer driver that meets your printing objectives.
- Checking the operating systems supported by the printer driver
 - → Check that your computer meets the operating environment requirements of the printer driver.



Installing the printer driver to the computer

- Installing the printer driver using the installer
 - → Insert the printer driver CD-ROM into the drive, and install the software by following the on-screen instructions.
- Performing a test print
 - → If necessary, make a test print, then check that it is acceptable.



Preparation finished

2.1

Preparing CD-ROM disks for the printer driver

The following CD-ROMs are supplied with this machine: The printer driver is included on the **Driver & Utilities CD-ROM**.

CD-ROM	Description	
Driver & Utilities CD-ROM	Contains Windows printer driver (PCL/PS/XPS), Mac OS printer driver, Linux printer driver, and TWAIN driver. This also contains the page for downloading utility software.	
User's Guide CD-ROM	Contains user's guides.	

Checking the printer driver type

The following types of printer drivers are available. Select the printer driver that meets your printing aims.

Printer driver	Page description lan- guage	Description
PCL driver	PCL6	This is a standard driver for printing general office originals. Among the three drivers, this driver provides the fastest printing speed.
PS driver	PostScript 3 Emulation	This driver is effective for high-definition printing of data created in PostScript-supporting application software from Adobe or other vendors. This driver is often used in graphics and light printing applications where good color reproducibility is important.
XPS driver	XPS	Developed after Windows Vista, this driver supports XML Paper Specification (XPS). This driver has several advantages, including high-quality reproduction of translucence.

2.1

Checking the operating systems supported by the printer driver

The following lists the printer drivers included on the CD-ROMs supplied with this machine and the supported operating systems.

Printer driver	Supported operating systems
PCL driver PS driver	Windows Server 2003, Standard Edition (Service Pack 2 or later) Windows Server 2003, Enterprise Edition (Service Pack 2 or later) Windows Server 2003 R2 Standard Edition Windows Server 2003 R2 Enterprise Edition Windows Server 2003, Standard ×64 Edition Windows Server 2003, Enterprise ×64 Edition Windows Server 2003 R2, Standard ×64 Edition Windows Server 2003 R2, Enterprise ×64 Edition Windows Vista Business (Service Pack 2 or later) Windows Vista Enterprise (Service Pack 2 or later) Windows Vista Home Basic (Service Pack 2 or later) Windows Vista Home Premium (Service Pack 2 or later) Windows Vista Ultimate (Service Pack 2 or later) Windows Server 2008 Standard (Service Pack 2 or later) Windows Server 2008 Enterprise (Service Pack 2 or later) Windows Server 2008 R2 Enterprise (Service Pack 2 or later) Windows Server 2008 R2 Enterprise Windows 7 Home Basic Windows 7 Home Premium Windows 7 Professional Windows 7 Professional Windows 8 Pro / Windows 8.1 Pro Windows 8 Pro / Windows 8.1 Pro Windows Server 2012 Datacenter Windows Server 2012 R2 Datacenter
XPS driver	Windows Vista Business (Service Pack 2 or later)* Windows Vista Enterprise (Service Pack 2 or later)* Windows Vista Home Basic (Service Pack 2 or later)* Windows Vista Home Premium (Service Pack 2 or later)* Windows Vista Ultimate (Service Pack 2 or later)* Windows Server 2008 Standard (Service Pack 2 or later)* Windows Server 2008 Enterprise (Service Pack 2 or later)* Windows Server 2008 R2 Standard Windows Server 2008 R2 Enterprise Windows 7 Home Basic Windows 7 Home Premium* Windows 7 Forfessional* Windows 7 Enterprise* Windows 7 Ultimate* Windows 8 'Windows 8.1 Pro* Windows 8 Pro*/Windows 8.1 Pro* Windows 8 Enterprise /Windows 8.1 Enterprise* Windows Server 2012 Datacenter Windows Server 2012 R2 Datacenter Windows Server 2012 R2 Standard

^{*} Supports 32-bit (×86)/64-bit (×64) environment.

Installation procedure


2.1

Install the printer driver using the installer.

- Administrator privileges are required to perform this task.
- Use the Driver & Utilities CD-ROM.
- 1 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
 - → Make sure that the installer starts, then proceed to Step 2.
 - → If the installer does not start, open the printer driver folder on the CD-ROM, double-click [Set-up.exe], then go to Step 3.
 - → If the [User Account Control] window appears, click [Continue] or [Yes].
- 2 Click [Printer/FAX].
- 3 Read the license agreement, then click [AGREE].
- 4 Check the contents of the [Readme] window, then click [Next].
- 5 Select [Install printers/MFPs], then click [Next].

Connected printers are detected.

- → For Windows Vista/7/8/8.1/Server 2008/Server 2008 R2/Server 2012/Server 2012 R2, you can select [Preference for IPv4] or [Preference for IPv6]. The address has the preference when detected in both IPv4 and IPv6.
- 6 Select this machine, then click [Next].
 - → If this machine is not detected, restart it.
 - → You do not need to change the printing method from [Normal Printing] (Port 9100) unless otherwise specified by the administrator.
 - → As the printing method, you can select [Normal Printing], [Internet Printing] (IPP), or [Secure Printing] (IPPS).
 - → Among the connected printers, only the target model is automatically detected and displayed. If multiple target models are displayed, check the IP addresses.
 - → If the connection to this machine cannot be recognized, it is not displayed in the list. In such a case, select [Specify the Printer/MFP Except for the Above. Select (IP Address, Host Name...)], then manually specify the IP address and host name of this machine.

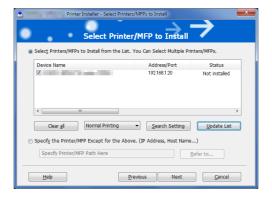

- Select the check box of the printer driver you want to install, then click [Next].
 - → For features of each printer driver, refer to page 2-4.



- 8 Check the components to be installed, then click [Install].
- If necessary, change the printer name or print a test page, then click [Finish].
 Installation of the printer driver is then completed.

Settings	Description
[Review]	Displays the installed components for checking.
[Rename Printer]	Changes this machine name, if necessary.
[Property]	Sets the optional operating environment of this machine. For details, refer to page 2-8.
[Print Setting]	Changes the default print settings of this machine, if necessary. For details, refer to page 2-8.
[Print Test page]	If necessary, print a test page to check that printing process works correctly.

Reference


When you finish installing the printer driver, configure the default settings of the printer driver. For details, refer to page 2-8.

2.1.4 Initializing the printer driver

Configuring the optional environment of this machine

When you use this machine for the first time, check that information such as what options are installed on this machine and whether or not authentication settings have been configured is correctly reflected to the printer driver.

- Display the [Properties] window of the printer driver.
 - → For information on how to display the [Properties] window, refer to page 2-50.
- In the [Configure] tab, check the information such as what options are installed on this machine and whether or not authentication settings have been configured.
 - → By default, [Auto] in [Acquire Settings...] is enabled. The information on this machine is automatically obtained and reflected to [Device Option].
 - → When [Auto] in [Acquire Settings...] is disabled, clicking [Acquire Device Information], obtains and reflects the information on this machine to [Device Option].
 - → If you cannot establish communication with this machine, manually set this information in [Device Option]. Select the item to change from the list, and set a value in [Setting].

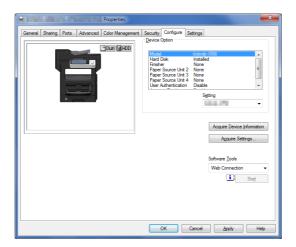

3 Click [OK].

Change the default print settings

If necessary, you can change the default print settings of the printer driver.

- Display the [Printing Preferences] window of the printer driver.
 - → For information on how to display the [Printing Preferences] window, refer to page 2-54.
- 2 Change the print settings, and click [OK].

The changed settings are applied when printing is performed from any application software.

Reference

The printer driver contains a function to save favorite settings. This is useful to register frequently used print settings as favorite settings. For details, refer to page 2-15.

2.2 Preparation for printing (USB connection)

2.2.1 Overview

Before using this machine as a printer, you need to install the printer driver on your computer.

This section describes preparatory steps for printing from this machine using the installer that are supplied with this machine.

2.2.2 Easy installation of the printer driver

Preparing the printer driver

- Preparing the printer driver CD-ROM
 - → For the CD-ROM, contact the administrator of this machine.
- Checking the printer driver type
 - → Three printer drivers for different purposes are available. Select the printer driver that meets your printing objectives.
- Checking the operating systems supported by the printer driver
 - → Check that your computer meets the operating environment requirements of the printer driver.



Installing the printer driver to the computer

- Configuring the installation settings on the computer
 - → If you are using Windows 7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2, you need to change the PC settings in advance.
- Installing the printer driver using the installer
 - → Connect the USB printer cable, insert the print driver CD-ROM into the drive, and install the software by following the on-screen instructions.
- Performing a test print
 - → If necessary, make a test print, then check that it is acceptable.



Preparation finished

Preparing the printer driver CD-ROM

The following CD-ROMs are supplied with this machine: The printer driver is included on the **Driver & Utilities CD-ROM**.

CD-ROM	Description
Driver & Utilities CD-ROM	Contains Windows printer driver (PCL/PS/XPS), Mac OS printer driver, Linux printer driver, and TWAIN driver. This also contains the page for downloading utility software.
User's Guide CD-ROM	Contains user's guides.

2

Checking the printer driver type

The following types of printer drivers are available. Select the printer driver that meets your printing aims.

Printer driver	Page description lan- guage	Description
PCL driver	PCL6	This is a standard driver for printing general office originals. Among the three drivers, this driver provides the fastest printing speed.
PS driver	PostScript 3 Emulation	This driver is effective for high-definition printing of data created in PostScript-supporting application software from Adobe or other vendors. This driver is often used in graphics and light printing applications where good color reproducibility is important.
XPS driver	XPS	Developed after Windows Vista, this driver supports XML Paper Specification (XPS). This driver has several advantages, including high-quality reproduction of translucence.

Checking the operating systems supported by the printer driver

The following lists the printer drivers included on the CD-ROMs supplied with this machine and the supported operating systems.

Printer driver	Supported operating systems
PCL driver PS driver	Windows Server 2003, Standard Edition (Service Pack 2 or later) Windows Server 2003, Enterprise Edition (Service Pack 2 or later) Windows Server 2003 R2 Standard Edition Windows Server 2003 R2 Enterprise Edition Windows Server 2003, Standard ×64 Edition Windows Server 2003, Enterprise ×64 Edition Windows Server 2003 R2, Standard ×64 Edition Windows Server 2003 R2, Enterprise ×64 Edition Windows Vista Business (Service Pack 2 or later) Windows Vista Enterprise (Service Pack 2 or later) Windows Vista Home Basic (Service Pack 2 or later) Windows Vista Home Premium (Service Pack 2 or later) Windows Vista Ultimate (Service Pack 2 or later) Windows Server 2008 Standard (Service Pack 2 or later) Windows Server 2008 Enterprise (Service Pack 2 or later) Windows Server 2008 R2 Standard Windows Server 2008 R2 Enterprise Windows 7 Home Basic Windows 7 Professional Windows 7 Enterprise Windows 7 Ultimate Windows 8*/Windows 8.1*
	Windows 8 Pro /Windows 8.1 Pro Windows 8 Enterprise /Windows 8.1 Enterprise Windows Server 2012 Datacenter Windows Server 2012 Standard Windows Server 2012 R2 Datacenter Windows Server 2012 R2 Standard


Printer driver	Supported operating systems
XPS driver	Windows Vista Business (Service Pack 2 or later)* Windows Vista Enterprise (Service Pack 2 or later)* Windows Vista Home Basic (Service Pack 2 or later)* Windows Vista Home Premium (Service Pack 2 or later)* Windows Vista Ultimate (Service Pack 2 or later)* Windows Server 2008 Standard (Service Pack 2 or later)* Windows Server 2008 Enterprise (Service Pack 2 or later)* Windows Server 2008 R2 Standard Windows Server 2008 R2 Enterprise Windows 7 Home Basic Windows 7 Home Premium* Windows 7 Forfessional* Windows 7 Enterprise* Windows 7 Ultimate* Windows 8 Pro*/Windows 8.1 Pro* Windows 8 Pro*/Windows 8.1 Enterprise* Windows Server 2012 Datacenter Windows Server 2012 Standard Windows Server 2012 R2 Datacenter Windows Server 2012 R2 Standard

^{*} Supports 32-bit (×86)/64-bit (×64) environment.


Changing the installation settings (Windows 7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2)

If you are using Windows 7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2, change the PC settings before installing the printer driver.

- 1 Open the [Control Panel] window.
 - → In Windows 8.1, click [�] in the Start window, then click [Control Panel] [Hardware and Sound] [View devices and printers].
 - → In Windows 8, right-click the Start window, then click [All apps] [Control Panel].
 - → In Windows Server 2012/Server 2012 R2, click [Control Panel] in the Start window.
 - → In Windows 7/Server 2008 R2, open the Start menu, then click [Control Panel].
- Click [System and Security] [System].
- 3 Click [Advanced system settings] on the menu in the left-hand pane.
 The [System Properties] window appears.
- 4 In the [Hardware] tab, click [Device Installation Settings].

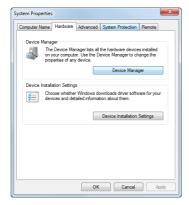

- 5 Select [No, let me choose what to do], select [Never install driver software from Windows Update.], then click [Save Changes].
 - → After you have installed the printer driver, change the setting back to [Yes, do this automatically (recommended)].

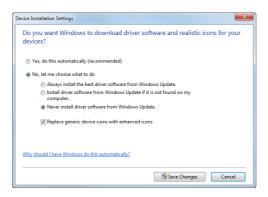

6 Click [OK] to close the [System Properties] window.


Installation procedure

Install the printer driver using the installer.

- ✔ Administrator privileges are required to perform this task.
- ✓ Use the Driver & Utilities CD-ROM.
- Connect a USB cable to the USB port of this machine.
 - → For details on the cable connection port, refer to page 1-4.
 - → If a wizard window for adding new hardware opens, click [Cancel].
- 2 Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
 - → Make sure that the installer starts, then go to Step 3.
 - → If the installer does not start, open the printer driver folder on the CD-ROM, double-click [Set-up.exe], then go to Step 4.
 - → If the [User Account Control] window appears, click [Continue] or [Yes].
- 3 Click [Printer/FAX].
- 4 Read the license agreement, then click [AGREE].
- 5 Check the contents of the [Readme] window, then click [Next].
- Select [Install printers/MFPs], then click [Next].
 USB-connected printers are detected.
- 7 Select this machine, then click [Next].



- Select the check box of the printer driver you want to install, then click [Next].
 - → For features of each printer driver, refer to page 2-4.

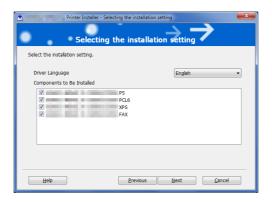

- 9 Check the components to be installed, then click [Install].
- 10 If necessary, change the printer name or print a test page, then click [Finish]. Installation of the printer driver is then completed.

Settings	Description
[Review]	Displays the installed components for checking.
[Rename Printer]	Changes this machine name, if necessary.
[Property]	Sets the optional operating environment of this machine. For details, refer to page 2-8.
[Print Setting]	Changes the default print settings of this machine, if necessary. For details, refer to page 2-8.
[Print Test page]	If necessary, print a test page to check that printing process works correctly.

Reference

When you finish installing the printer driver, configure the default settings of the printer driver. For details, refer to page 2-13.


2.2.3 Initializing the printer driver

Configuring the optional environment of this machine

When you use this machine for the first time, configure the printer driver so that it contains information such as what options are installed on this machine and whether or not authentication settings have been configured.

- 1 Display the [Properties] window of the printer driver.
 - → For information on how to display the [Properties] window, refer to page 2-50.

- In the [Configure] tab, configure the information such as what options are installed on this machine and whether or not authentication settings have been configured.
 - → If you are using Windows Vista/7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2, [Auto] under [Acquire Settings...] is enabled by default. Thus, the information of this machine is automatically obtained and applied for [Device Option].
 - → When [Auto] in [Acquire Settings...] is disabled, clicking [Acquire Device Information], obtains and reflects the information on this machine to [Device Option].
 - → If you are using Windows Server 2003, set the option manually using [Device Option]. Select the item to change from the list, and set a value in [Setting].

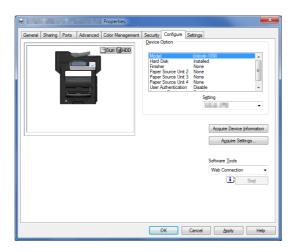

3 Click [OK].

Change the default print settings

If necessary, you can change the default print settings of the printer driver.

- Display the [Printing Preferences] window of the printer driver.
 - → For information on how to display the [Printing Preferences] window, refer to page 2-54.
- Change the print settings, and click [OK].
 The changed settings are applied when printing is performed from any application software.

Reference

The printer driver contains a function to save favorite settings. For details, refer to page 2-15.

2.3 How to print

2.3.1 Printing operation flow

- Open data of the original using the application software. From the [File] menu, select [Print].
- In [Printer Name] (or [Select Printer]), make sure that the desired printer has been selected.
 - → The [Print] dialog box varies depending on the application software.



- 3 Specify the print range and the number of copies to print.
- 4 Click [Properties] (or [Preferences]) to change the print settings of the printer driver, if necessary.
 - → The print settings you have changed here return to the default values when you exit the application software. For information on how to change the default values of print settings, refer to page 2-8.
 - → The printer driver contains a function to easily recall frequently used print settings. For details, refer to page 2-15.
- Click [Print].Printing is executed.

2.3.2 Easily recalling frequently used print settings

Registering the frequently used setting

You can register the current print settings as a favorite and recall it when executing printing.


When you register a frequently used combination of print settings as a favorite, you can easily apply all of those settings just by selecting the combination from the Favorite Setting list, even if the combination is complicated as it contains settings on multiple tabs.

The following explains the procedure of favorite print setting.

In the [Printing Preferences] window, set the print conditions you want to register as a favorite.

2 Click [Add...].

→ When you edit an existing setting, select its name from the [Favorite Setting], then click [Edit] In the Edit dialog box, you can select functions to be recalled with a favorite setting or import and export a favorite setting.

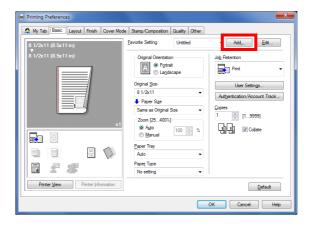

- 3 Enter names of the favorites to be registered.
 - → Set an icon, a comment and call options for the favorite settings, if necessary.



Settings	Description
[Name]	Enter names of the favorites to be registered. Use names that can easily be identified.
[lcon]	Assign an icon to the favorite settings, if necessary.
[Sharing]	Select this check box to share the favorite settings with other users.
[Comment]	Enter a comment to the favorite setting, if necessary. The comment is displayed when you place the mouse cursor over the favorite in the Favorite Setting list.

4 Click [OK].

The print settings are registered as a favorite. When starting printing, you can select the registered setting from [Favorite Setting].

2


Customizing the setting window

You can gather setting items from difference tabs and place them in [My Tab].


Registering frequently used setting items in [My Tab] allows you to change settings in one tab, without switching among multiple tabs.

This section describes how to edit [My Tab].

- 1 Click [My Tab] [Edit My Tab...].
 - → You can also register a function in [My Tab] by selecting [to the LEFT] or [to the RIGHT] from the [My Tab] menu that is displayed by right-clicking the function.

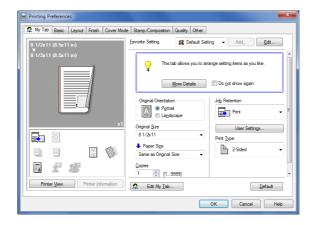

- 2 From [Setting Item List], select the function you want to register in [My Tab], then click [to the LEFT] or [to the RIGHT].
 - → Clicking [to the LEFT] places the selected function in the area to the left of [My Tab] and clicking [to the RIGHT] places it in the area to the right of [My Tab].
 - → An icon appears to the left of each function that is registered in [My Tab].

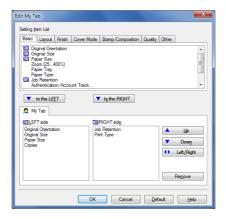

- 3 If necessary, move or delete the registered functions.
 - → To move a function, select the function and click [Up], [Down], or [Left/Right].
 - → To delete a function from [My Tab], select the function and click [Remove].
- 4 Click [OK].

Editing [My Tab] is then completed.

2.4 Useful printing functions


2.4.1 Changing the paper size or type

Enlarging or reducing to the paper size ([Paper Size])

To make prints, enlarge or reduce the original with the zoom ratio that is automatically determined from the original size and paper size.

If you select a paper size larger than the original size, the original is enlarged to the paper size. If you select a paper size smaller than the original size, the original is reduced to the paper size.

In [Paper Size] of the [Basic] tab, select the size of paper for printing. The zoom ratio is automatically determined by the paper sizes selected in [Original Size] and [Paper Size].

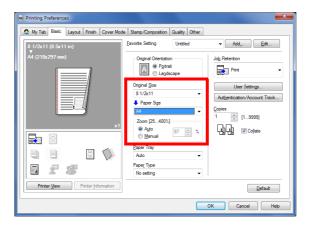



This function is enabled when [Zoom] is set to [Auto].

Enlarging or reducing by the desired zoom ratio ([Zoom])

You can print the original image after it has been enlarged or reduced by the desired zoom ratio. The zoom ratio can be specified between 25% and 400% (in increments of 1%).

In [Zoom] of the [Basic] tab, specify the zoom ratio.



2

Printing on paper of a special size ([Original Size])

A special sized original is printed on custom sized paper loaded in the Manual Feed Tray.

- In [Original Size] of the [Basic] tab, select [Custom Size].
 - → In [Paper Size], select [Same as Original Size].
- 2 Specify the width and length as desired, then click [OK].




Reference

Load the custom sized paper in the **Manual Feed Tray**. For details on how to load paper into the **Manual Feed Tray**, refer to Chapter 6 "Loading Paper" in [User's Guide: Introduction].

When you are using the PCL driver, you can pre-register a custom size in the [Settings] tab. For details in the [Settings] tab, refer to page 2-53.

Specifying the paper type ([Paper Type])

In [Paper Type] of the [Basic] tab, select the type of paper for printing.

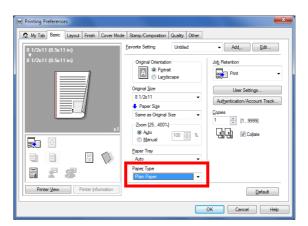




If [Letterhead duplex print permission settings] is set to [Restrict](default) on this machine, printing is executed on one side of the sheet even if [Letterhead] is selected for [Paper Type] to print on both sides.

Specifying the paper tray ([Paper Tray])

In [Paper Tray] of the [Basic] tab, select the paper tray for printing.

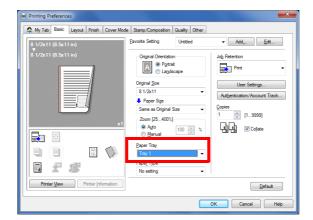




If you select [Auto], the paper tray for the paper you have selected in [Paper Size] is automatically selected.

2.4.2 Printing multiple sets of copies

Specifying the number of copies ([Copies])

In [Copies] of the [Basic] tab, specify the number of copies you want to print.

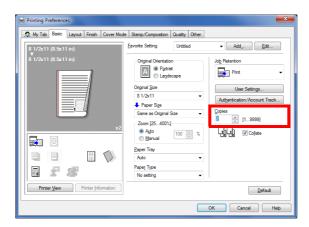


Reference

When you print a large number of copies, use of the Proof then Print function will prevent a large number of misprints being created, reducing the amount of waste paper generated. For details, refer to page 2-40.



Printing on a set basis ([Collate])

When the [Collate] check box on the [Basic] tab is selected, copies are output separately in a set-by-set manner, for example, "Pages 1, 2, 3, 4, and 5", "Pages 1, 2, 3, 4, and 5", and then "Pages 1, 2, 3, 4, and 5".

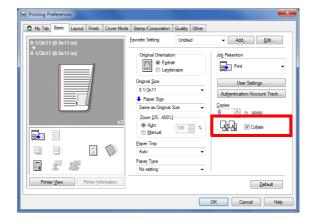


2.4.3 Saving the number of printed sheets


Printing multiple pages on the same side of a single sheet ([Combination])

You can print multiple reduced size pages on the same side of a single sheet to reduce the number of pages to be printed.

In [Combination] of the [Layout] tab, select "N in 1". For example, when you select [9 in 1], the size of every set of nine pages is reduced and printed on the same side of one sheet.

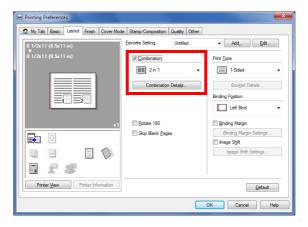

If necessary, click [Combination Details...] to set the page layout order and whether or not to input border lines between pages.

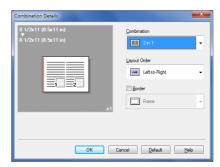


Settings	Description
[Layout Order]	Select the page layout order.
[Border]	Select this check box to draw border lines between pages. In addition, select the type of border lines from [Frame] and [Line].



Copying on both sides of paper ([2-Sided])

By using both sides of paper for printing, you can halve paper consumption.


In [Print Type] of the [Layout] tab, select [2-Sided]. [2-Sided] is specified by default.

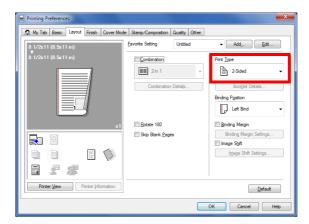

Skipping blank pages ([Skip Blank Pages])

Skip blank pages contained in the original when printing the original. You can reduce the number of printed sheets.

In the [Layout] tab, select the [Skip Blank Pages] check box.

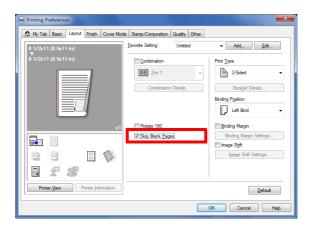




- For some originals, blank pages are also printed.
- This function is only available for the Windows printer driver (PCL/XPS).

2.4.4 Adjusting the layout


Printing in a booklet format ([Booklet])

Sort pages of the original in booklet format to perform 2-sided printing in two-page spread. When the printed sheets are collectively folded in two, they are arranged in the page order like a book.

In [Print Type] of the [Layout] tab, select [Booklet].

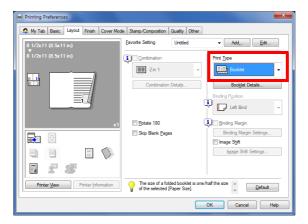

If necessary, click [Booklet Details...], then specify the binding position and whether or not to insert a border line between pages.

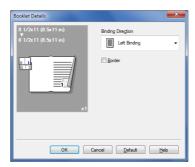


_	Settings	Description
_	[Binding Direction]	Select the binding position in booklet format.
_	[Border]	Select this check box to draw border lines between pages.



Adding a margin on pages ([Binding Margin])

You can add a binding margin to each page to bind the printed sheets.

- In the [Layout] tab, select the [Binding Margin] check box.
 - → In [Binding Position] of the [Layout] tab, specify the margin position.

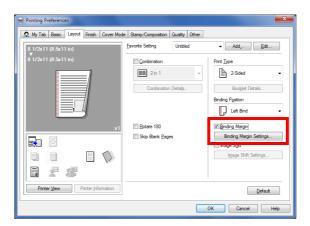

- 2 Click [Binding Margin Settings...].
- 3 Adjust the size of margin, then click [OK].



Settings	Description
[Shift Mode]	Select how the images are shifted for creating the margin.
[Front Side]/[Back Side]	Specify the size of the margin on the front side. When you print on both sides, specify the size of the margin on the back side. When the [Same value for front and back sides] check box is selected, a margin of the same size is created on both the front and back sides.




This function is only available for the Windows printer driver.



Printing a poster-sized image ([Combination])

Enlarge an original image and divide it into multiple sheets to make prints. When you join the printed sheets together, a large poster is created.

In [Combination] of the [Layout] tab, select " $N \times N$ ". For example, when you select [2 \times 2], one page of the original image is enlarged, divided, and printed on four sheets.

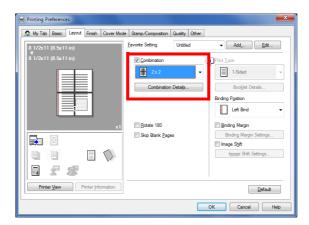

If necessary, click [Combination Details...] to select whether or not to create overlap margins.






This function is available only for the PCL driver.

Rotating the image 180 degrees ([Rotate 180])

Print an image upside down. This function is available when printing on envelopes of which the loading direction cannot be changed.

In the [Layout] tab, select the [Rotate 180] check box.

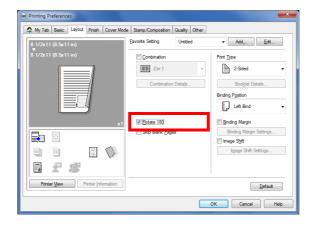


2

Fine-tuning the print position ([Image Shift])


Fine-tune the print position of an image upward, downward, rightward, and leftward with respect to the paper. When performing 2-sided printing, you can also fine-tune the print position of an image on the back side.

This function is available when a fine adjustment is required to slightly adjust the print position or change the print position between the front and back sides.

1 In the [Layout] tab, select the [Image Shift] check box.

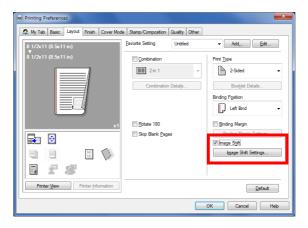

- 2 Click [Image Shift Settings...].
- 3 Adjust the upward/downward and rightward/leftward shift distances, and click [OK].

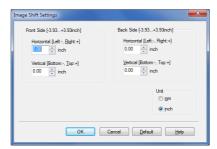




This function is available only for the PCL driver.

2.4.5 Stapling printed materials

Stapling ([Staple])

Staple each set of printed sheets of paper before feeding them out. This function is useful when preparing a project proposal or other booklet materials.

In the [Finish] tab, select the [Staple] check box. Also, specify the binding position.

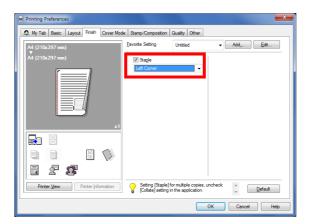



To use the staple function, the optional **Finisher** is required.


2.4.6 Adding a text or image to the original

Adding a water mark ([Watermark])

Print a text such as "NO REPRODUCTION" and "INTERNAL USE" on the center of all pages in a tint color.

By printing a watermark, you can specify the handling policy of copied originals.

In the [Stamp/Composition] tab, select the [Watermark] check box. In addition, select the watermark you want to print.

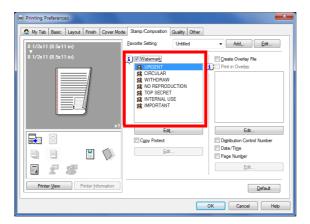




This function is only available for the Windows printer driver.



Registering or editing a watermark

This machine has several factory-set watermarks. However, you can register new watermarks or edit existing watermarks, if necessary.

- In the [Stamp/Composition] tab, select the [Watermark] check box, and click [Edit].
- Click [Add] and register the watermark data.
 - → To edit a registered watermark, select the watermark from the [Current Watermark] list, and edit the data
 - → To delete a registered watermark, select the watermark from the [Current Watermark] list, and click [Delete].

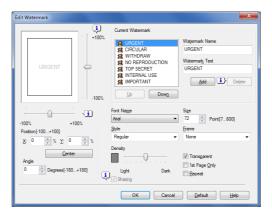

Settings	Description
[Watermark Name]	Enter the name to be displayed in the watermark list (using up to 30 characters).
[Watermark Text]	Enter the text to be displayed as a watermark (using up to 30 characters).
[Up]/[Down]	Click these buttons to reorder items in the list. You can move frequently used watermarks to upper positions.
[Position]	 Specify the print position for the watermark. [X]/[Y]: Adjust the horizontal and vertical positions of the watermark. The values change as you move the slide bar. [Center]: Click this button to reset the watermark position to the center. [Angle]: Adjust the angle of the watermark.
[Font Name]	Select the font for the watermark.
[Size]	Specify the font size for the watermark.
[Style]	Select the font style for the watermark.
[Frame]	Select the frame for the watermark.
[Density]	Select the density for the watermark.
[Transparent]	Select this check box to print the watermark in a translucent tone. When this check box is cleared, the printed watermark obscures the background.
[1st Page Only]	Select this check box to print the watermark only on the first page of the original.
[Repeat]	Select this check box to repeatedly print the watermark on each page.
[Sharing]	Select this check box to share the watermark with other users.


3 Click [OK].



Composing an overlay image ([Print in Overlay])

You can recall an overlay image registered on the computer to print it on the original as a composite image. For details on how to register an overlay image on your computer, refer to page 2-31.

In the [Stamp/Composition] tab, select the [Print in Overlay] check box, then select the overlay image to be composed on the original from the list.

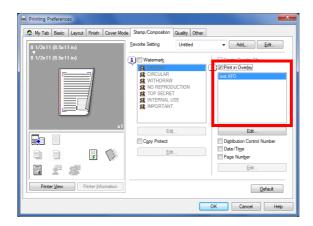

If necessary, click [Edit...] to add or delete overlay images. Alternatively, change the method of composing an overlay image.

When using the PCL/XPS driver:

Settings		Description
[Select Overlay File]		Add or delete an overlay image.
	[Browse Files]	Add an overlay image to the list.
	[Delete]	Delete the selected overlay image from the list.
	[File Information]	Displays information on the selected overlay image.
[Overlay Print Setting]		Change the method to compose an overlay image, if necessary.
	[Pages]	Select the range of pages to compose an overlay image on.
	[Overwrite]	Select whether or not to overwrite an overlay image on the front side of the original or to compose an overlay image on the back side of the original.

When using the PS driver:

Settings		Description
[Select Overlay File]		Add or delete an overlay image.
	[Manage Form File]	Manage an overlay image.
	[Delete]	Delete the selected overlay image from the list.
	[Download Manag- er]	Download an overlay image to the printer. This option is available when the Download Manager is installed on this machine.
[Overlay Print Setting]		Change the method to compose an overlay image, if necessary.
	[Pages]	Select the range of pages to compose an overlay image on.




- This function is only available for the Windows printer driver.
- When the PS driver is used, you need to download a target overlay image to this machine in advance.



Creating an overlay image on the computer

In the [Stamp/Composition] tab, select the [Create Overlay File] check box, then print data to be registered as an overlay image to create an overlay file on the computer.

- 1 Create an original to be registered in an overlay image using application software.
- 2 In the [Stamp/Composition] tab, select the [Create Overlay File] check box.

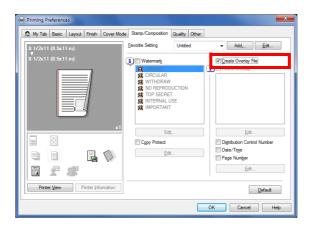

- In the application software, execute printing.
 The [Create Overlay File] window appears.
- 4 Enter the file name to save the file.

The overlay file is saved on the computer. The saved overlay file is displayed on the [Stamp/Composition] tab, and it can be used for overlay printing.




This function is only available for the Windows printer driver (PCL/XPS).

Adding distribution control numbers ([Distribution Control Number])

When printing multiple sets of copies, add distribution control numbers to make prints.

In the [Stamp/Composition] tab, select the [Distribution Control Number] check box.

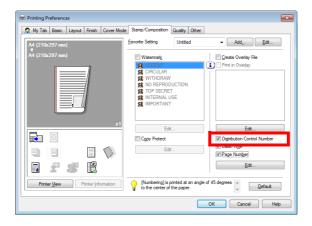

If necessary, click [Edit...] to change the format of the text.

Settings	Description
[Print start number]	Enter the starting number of distribution control numbers.
[Depth]	Select the density of the text to be printed.
[Size of the text]	Specify the size of the text to be printed.






This function is only available for the Windows printer driver.

Adding a date and time ([Date/Time])

Add a date and time to make prints.

In the [Stamp/Composition] tab, select the [Date/Time] check box.

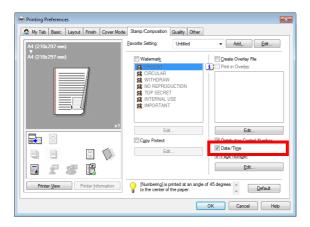

If necessary, click [Edit...] to change the format of the text.

Settings	Description
[Format]	If necessary, click [Edit] to specify the format of the date and time or specify whether to print out the time.
[Print Position]	Specify the position to print the date and time.




This function is only available for the Windows printer driver.

Adding page numbers ([Page Number])

Add page numbers to make prints.

In the [Stamp/Composition] tab, select the [Page Number] check box.

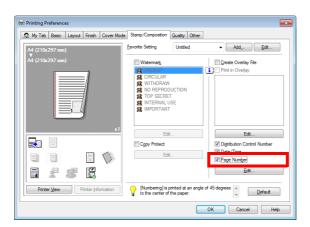

If necessary, click [Edit...] to change the format of the text.

Settings	Description
[Starting Page Number]	Enter the starting page number to be printed on the first page.
[Print Position]	Specify the position to print page numbers.





This function is only available for the Windows printer driver.

2.4.7 Deterring unauthorized copying


Printing a concealed security watermark ([Copy Protect])

Print a text such as "Copy" or "INTERNAL USE" in the background pattern as concealed text. This function is called the Copy Protect function.

When a copy-protected original is copied, the concealed security watermark appears on the entire page, thereby indicating that it is an unauthorized copy.

In the [Stamp/Composition] tab, select the [Copy Protect] check box.

If necessary, click [Edit...] to specify the text to be printed and the format of the text. For details, refer to page 2-33.

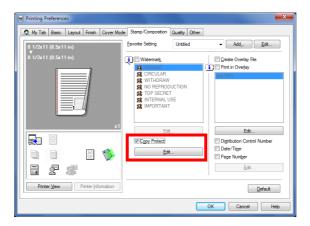



This function is only available for the Windows printer driver (PCL).

Configuring the print settings for Copy Protect

When printing a copy protect pattern on sheets, you can set the text to be printed and the format of the text, if necessary.

In the [Stamp/Composition] tab, select the [Copy Protect] check box, then click [Edit...].

Settings	Description
[Pattern]	Select whether or not the text pattern is to be embossed or outlined when the original is subjected to unauthorized copying.
[Pattern Overwrite]	Select whether or not to compose a copy protect pattern on the front or back side of the original.
[Background Pattern]	Select the copy protect pattern from the background patterns registered on this machine.
[Characters]	Select the text to be printed. Selecting [Custom] can specify any text.
[Font Name]	Select the font of the text to be printed.
[Text Size]	Select the size of the text to be printed.


2.4.8 Inserting paper into the original

Inserting a front or back cover ([Front Cover] / [Back Cover])

Insert a cover sheet different from text sheets into the head and end of the original.

You can select a sheet that is different from text sheets (colored paper or thick paper) as a front cover, and collectively print the front cover with text pages.


- In [Paper Tray] of the [Basic] tab, select the paper tray for printing text pages.
- 2 In the [Cover Mode] tab, select the [Front Cover] or [Back Cover] check box.
 - → If necessary, you can select whether or not to print the original on the inserted sheets or to leave them blank. When the PS driver is used, you cannot print an original on the inserted sheets.
 - → In [Front Cover Tray] or [Back Cover Tray], select the paper tray for the paper to be used as the front cover or the back cover.

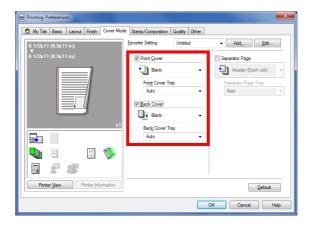

Inserting a separator page ([Separator Page])

You can insert a sheet that is different from text sheets as a separator page on a job or copy basis.

- In [Paper Tray] of the [Basic] tab, select the paper tray for printing text pages.
- In the [Cover Mode] tab, select the [Separator Page] check box, then specify the position to insert a separator page.
 - → In [Separator Page Tray], select a paper tray to load sheets to be used as separator pages.

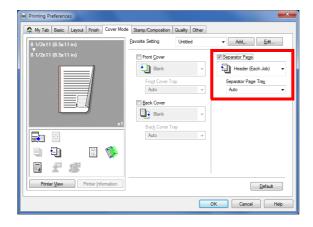


2.4.9 Specifying the image quality level for printing

Selecting the appropriate image quality level for the original ([Quick Settings])

Select the optimum settings for an original such as photos or presentation materials to print it at the optimum image quality level.

In [Quick Settings] of the [Quality] tab, select the optimum quality mode to fit the original.

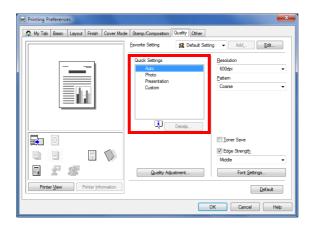

You can specify the quality mode for each object (image, text, or graphics) in an original in detail, if necessary.


- In [Quick Settings], select [Custom], then click [Details...].
- 2 Specify the quality mode for each of the image, text, and graphics categories.

Settings	Description
[Image] [Text] [Graphics]	 Configure a quality setting for each of the image, text, and graphics categories. [Halftone]: Specify the screen property for the printer. [Edge Enhancement]: Specify whether or not to enhance the edge part.

3 Click [OK].

Specifying the printing resolution ([Resolution])

In [Resolution] of the [Quality] tab, select the printing resolution.

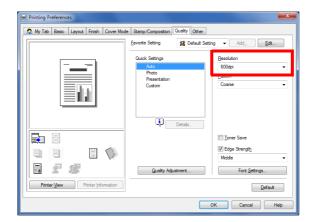



This function is available only for the PCL/PS driver.




Fine-tuning the image quality according to the original ([Quality Adjustment])

The image quality level can be finely adjusted to fit the original.

1 In the [Quality] tab, click [Quality Adjustment].




- 2 Adjust the brightness, contrast and density to fit the original.
 - → When the PS/XPS driver is used, you can adjust only the brightness and density.

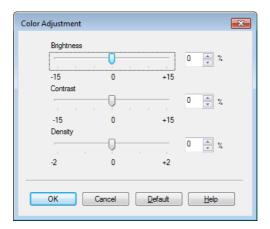

3 Click [OK].

Specifying the density of a graphic pattern ([Pattern])

In [Pattern] of the [Quality] tab, select the density of a graphic pattern.

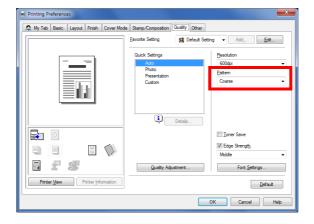




This function is only available for the Windows printer driver (PCL/XPS).



Saving the toner consumption ([Toner Save])

Selecting the [Toner Save] check box in the [Quality] tab adjusts the printing density in order to reduce the amount of toner consumed.

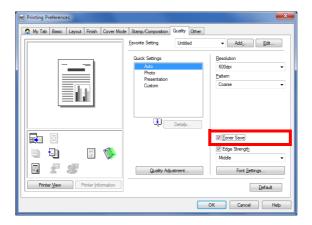

Sharpening the border between texts ([Edge Strength])


Sharpen the edges of images such as text in the table and graphics to improve legibility. In the [Quality] tab, select the [Edge Strength] check box, then select the emphasis level.



Specifying the font processing method ([Font Settings])

Specify how the fonts are processed for printing.

1 In the [Quality] tab, click [Font Settings].

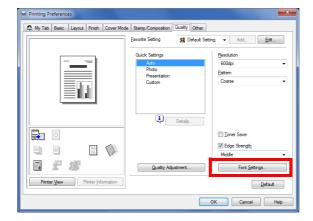

2 Change how the fonts are processed for printing.



Settings	Description
[Download Font For- mat]	Select a type of font to be downloaded from the computer to this machine.
[Use Printer Fonts]	Select this check box to replace TrueType fonts with printer fonts during printing. Use of printer fonts increases the printing speed. In normal printing operations, we recommend that you select this check box.
[TrueType Font Substitution Table] (PCL only)	Set this table when you want to specify the printer fonts that replace TrueType fonts. From the list, select the TrueType font, then in [Printer Font to Use], select the printer font with which you want to replace the TrueType font.

3 Click [OK].




- If characters are garbled in an environment where the PCL driver is used, we recommend that you select [Bitmap] in [Download Font Format] and clear the [Use Printer Fonts] check box.
- This function is available only for the Windows printer driver (PCL/PS).

2.4.10 Printing Microsoft Excel/PowerPoint data

Printing multiple Excel sheets at one time

When multiple Microsoft Excel sheets with different print settings are printed at one time, this function prevents the sheets from being printed separately.

In the [Other] tab, select the [Excel Job Control] check box.

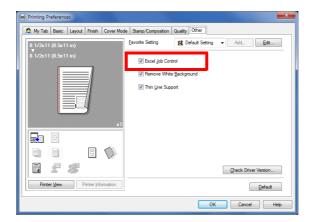




This function is only available for the Windows printer driver. However, this function may not be available depending on a specific environment or application software.



Composing and printing an image correctly in PowerPoint

The process executed when an overlay image is printed on a PowerPoint original where a white background is optimized. This function prevents the overlay image from being overwritten by the white background of the PowerPoint original.

In the [Other] tab, select the [Remove White Background] check box.

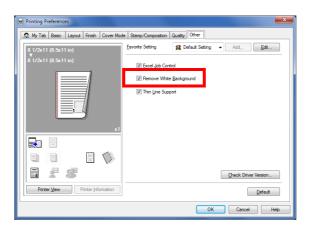




This function is only available for the Windows printer driver (PCL/XPS). However, this function may not be available depending on a specific environment or application software.

Preventing failure in printing thin lines ([Thin Line Support])

You can prevent thin lines from disappearing in reduced-size printing.

In the [Other] tab, select the [Thin Line Support] check box.

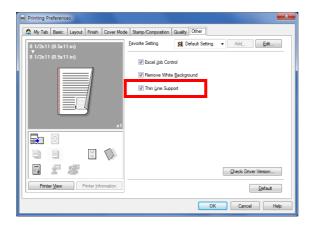



- This is effective for thin lines such as table borders created in Excel, but not for thin lines used in illustrations.
- This function is only available for the Windows printer driver (PCL).

2.5 Printing options

2.5.1 Making a trial printing for only one copy ([Proof then Print])


Proof then Print

Proof then Print is a function that makes prints by only one copy and holds the remaining copies when printing multiple copies.

Because you can check the print result before starting to print the remaining copies from the **Control Panel**, this function is useful for preventing printing of a large number of misprints.

How to print from the computer

1 In [Job Retention] of the [Basic] tab, select [Proof then Print].

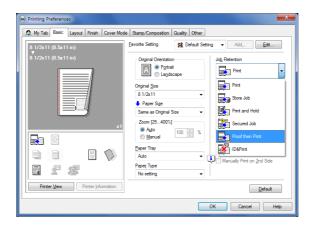


Specify the number of copies, then execute printing.Only one copy is printed. Continue to "Operations on this machine".

Operations on this machine

1 Tap [Document Print/Delete].



2 Tap [Documents to Print].

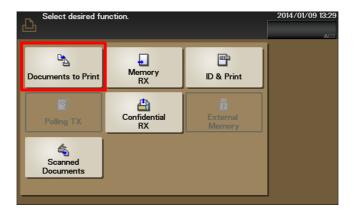

- 3 Select the desired user, then tap [Open].
- 4 Select a job to print, then tap [Print].
 - → To delete a job, tap [Delete].
- 5 If necessary, change the number of copies, then tap [OK].

2.5.2 Printing highly confidential documents ([Secured Job])


Secured Job

Secured Job is a function that saves print data with a password on the HDD of this machine. Because the data is not printed straight away, this function prevents printed materials from going missing or being left unattended.

To print data from the HDD, you need to enter the password; this function is particularly suitable for safely printing highly confidential documents.

How to print from the computer

In [Job Retention] of the [Basic] tab, select [Secured Job].

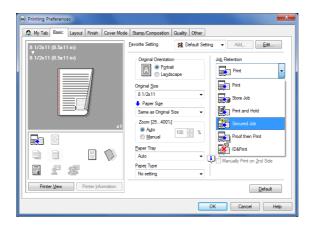

2 Enter the password, then click [OK].



3 Execute printing.

Print data is saved on the HDD of this machine. Continue to "Operations on this machine".


Operations on this machine

To print the saved data, you need to enter the password specified in the printer driver.

1 Tap [Document Print/Delete].



2 Tap [Documents to Print].

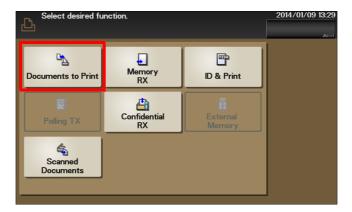

- 3 Select the desired user, then tap [Open].
- 4 Select a job to print, then tap [Print].
 - → To delete a job, tap [Delete].
- 5 Enter the password specified when printing data from the computer.
- 6 If necessary, change the number of copies, then tap [OK].


2.5.3 Saving an original on the HDD of this machine ([Store Job] / [Print and Hold])

Store Job

Store Job is a function that saves print data on the HDD of this machine. Using the Print and Hold function, you can print data while simultaneously saving it on the HDD.

How to print from the computer

- In [Job Retention] of the [Basic] tab, select [Store Job].
 - → To print data while simultaneously saving it on the HDD, select [Print and Hold].

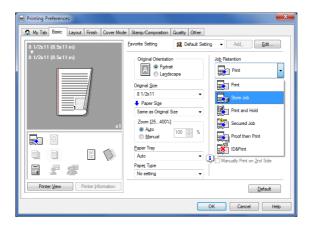

2 Execute printing.


Print data is saved on the HDD of this machine.

Using the saved data

1 Tap [Document Print/Delete].



2 Tap [Documents to Print].

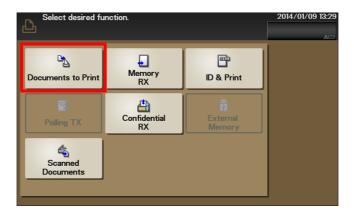

- 3 Select the desired user, then tap [Open].
- 4 Select a job to print, then tap [Print].
 - → To delete a job, tap [Delete].
- 5 If necessary, change the number of copies, then tap [OK].

2.5.4 Attaching authentication information

Printing when authentication is set

When printing a document in an environment where user authentication or account track is employed, you need to send the authentication information (user name and password) to this machine to execute printing. This requirement limits the users who can use this machine, preventing unauthorized use by a third party.

When this machine receives a print job from a user who is not permitted to print, or a print job that does not contain authentication information, this machine automatically discards the job.



- A print job that does not contain authentication information is a print job that is sent without correctly configuring the User Authentication/Account Track setting using the printer driver even though the User Authentication/Account Track setting is configured on this machine.
 - The status in which the User Authentication/Account Track setting is not configured correctly means that the [Auto] check box of [Acquire Settings...] is cleared and [User Authentication]/[Account Track] of [Device Option] is set to [None] in the [Configure] tab of the [Properties] windows of the printer driver. In this status, if you select [Print] in [Job Retention] of the [Basic] tab at the time of printing to execute a print job, it is handled as a print job that does not contain authentication information.
- If [ID & Print] is set to [Enable] on [Security] [ID & Print Settings] of **Web Connection**, an ordinary print job is handled as an ID & Print job (default: [Disable]). For details on the ID & Print function, refer to page 2-46.

Reference


When printing a highly confidential document in an environment where user authentication or account track is employed, using the ID & Print function enables high security printing. For details, refer to page 2-46.

2

Operations required to use this function

In the [Configure] tab of the printer driver, check that the User Authentication/Account Track setting is correctly configured.


- Display the [Properties] window of the printer driver.
 - → For information on how to display the [Properties] window, refer to page 2-50.
- In [Device Option] of the [Configure] tab, check that the User Authentication/Account Track setting is correctly configured for your operating environment.
 - → If it is not configured correctly, select [User Authentication] or [Account Track] from the list, then change the relevant setting in [Setting].

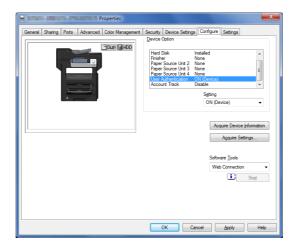

3 Click [OK].

How to print from the computer

In the [Basic] tab, click [Authentication/Account Track...]

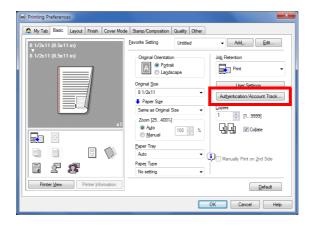

- When user authentication is enabled, select [Recipient User], then enter the user name and password.
 - → If access to this machine by public users (unregistered users) is allowed, you can select [Public User] and print data without entering the user name and password.
 - → When an external authentication server is used, click [Server Setting...] and select the authentication server



If Account Track is enabled, enter the account name and password in addition to the user name and password.



- 4 Click [OK].
 - → If a communication with this machine is established, you can click [Verify] to check the entered authentication information. Also, you can check the authentication information for errors before printing it.
- 5 Execute printing.

Printing starts successfully when the authentication information is judged correct.

2.5.5 Printing at the same time as authentication (ID & Print)

ID & Print

ID & Print is a function that saves print data to the HDD of this machine when user authentication is installed. Because the data is not printed straight away, this function prevents printed materials from going missing or being left unattended.

To print data from the HDD, you need to perform user authentication on this machine; this function is particularly suitable for safely printing highly confidential documents. When you are successfully authenticated, the print data of the login user is automatically printed. This enhances security as well as ensures smooth operation.


Reference

User Authentication/Account Track can only be configured using **Web Connection**. For details, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

To enable the ID & Print function, select [Security] - [ID & Print Settings] in the **Web Connection** administrator mode, then set [ID & Print] to [Enable]. For details, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

How to print from the computer

In [Job Retention], select [ID & Print].

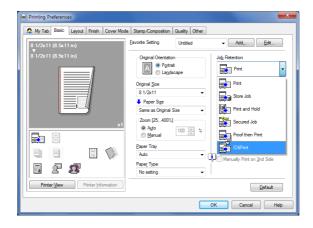


- In [Authentication/Account Track...] of the [Basic] tab, enter authentication information, then click [OK].
 - → For details, refer to page 2-44.
- 3 Execute printing.

Print data is saved on the HDD of this machine. Continue to "Operations on this machine".

Operations on this machine (Printing simultaneously with login)

Print all data saved by the ID & Print function simultaneously when performing authentication on this machine.

- 1 Enter the user name and password.
- Check that [ID & Print/MFP Access] is selected in [ID & Print], then tap [Login].
 - → When an optional **Authentication Unit** is used, you can switch [ID & PW] and [Authentication Device] in [Authentication Method].

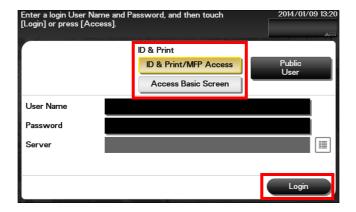


After data has been printed, do not log in to the machine.

- → After data printing has been completed, you do not need to log in to this machine.
- → To change the default settings of [ID & Print] (default: [ID & Print/MFP Access]), select [Security] [ID & Print Settings] [Default Operation Selection] in the **Web Connection** administrator mode.

Operations on this machine (Printing only specific data)

To print only specific data, log in to this machine, then specify data to be printed.


- 1 Enter the user name and password.
- 2 In [ID & Print], select [Access Basic Screen], then tap [Login].

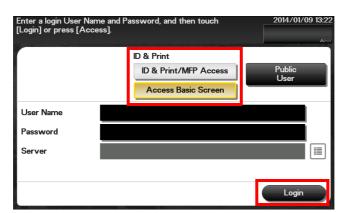

3 Tap [Document Print/Delete].



4 Tap [ID & Print].

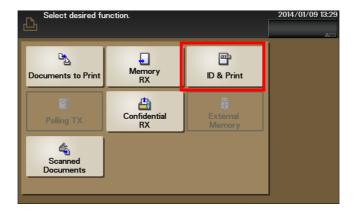

5 Tap [Login User].



- 6 Select data to be printed, then tap [Print].
 - → To delete data, tap [Delete].

 The printed data is deleted from the HDD.

2.6 Printer driver setting items


2.6.1 [Properties] window of the printer driver

How to display the [Properties] window


The printer driver has two windows for configuring settings: the [Properties] window and the [Printing Preferences] window. This section describes the [Properties] window.

In the [Properties] window, you can configure settings for the optional environment of this machine or Windows functions. To display the [Properties] window, take the following steps:

- 1 Display the printer window.
 - → In Windows 8.1, click [�] in the Start window, then click [Control Panel] [Hardware and Sound] [View devices and printers].
 - → In Windows 8, right-click the Start window, then click [All apps] [Control Panel] [Hardware and Sound] [View devices and printers].
 - → In Windows Server 2012/Server 2012 R2, open the Start window, then click [Control Panel] [Hardware] [View devices and printers].

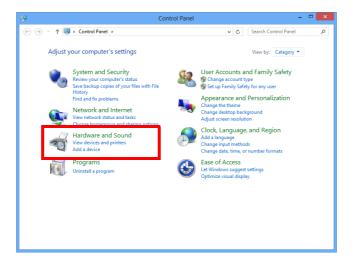


→ In Windows 7/Server 2008 R2, open the Start menu, then click [Devices and Printers].
If [Devices and Printers] is not displayed, select [Control Panel] - [Hardware and Sound], and click [View devices and printers].

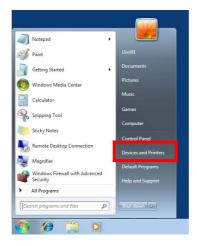

→ In Windows Vista/Server 2008, click the Start menu, and select [Control Panel] - [Hardware and Sound] - [Printers].


When [Control Panel] is displayed in Classic View, double-click [Printers].

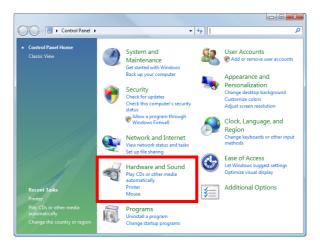


→ In Windows Server 2003, click the Start menu, then select [Printers and Faxes].

If [Printers and Faxes] is not displayed, select [Control Panel] - [Printers and Other Hardware] - [Printers and Faxes]. When [Control Panel] is displayed in Classic View, double-click [Printers].

- 2 Open the printer properties.
 - → In Windows 7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2, right-click the icon of the installed printer, and from [Printer properties], click the displayed printer name.

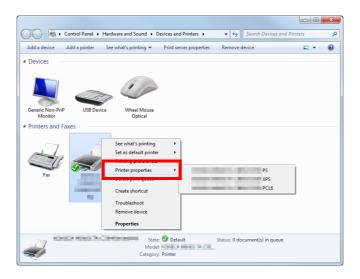

→ In Windows Vista/Server 2003/Server 2008, right-click the icon of the installed printer, then click [Properties].

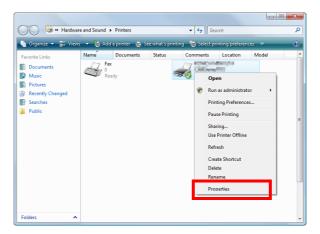

The [Properties] window appears.

Tabs provided by Windows

The [General], [Sharing], [Port], [Advanced], [Color Management], and [Security] tabs are provided by Windows.

You can print a test page, configure printer sharing, configure printer ports, etc. For details, refer to the Windows manuals.

2.6.2 Available operations in the [Configure] tab

You can specify which optional devices are installed on this machine using the [Configure] tab. You can automatically obtain information of this machine to manually configure settings.

Settings	Description
[Device Option]	The model name, options installed on this machine, and authentication settings of this machine are displayed. When the settings of this machine cannot be obtained, you need to manually change the settings. Select the item to change from the list, and set a value in [Setting].
[Acquire Device Information]	Obtains information about which optional devices are installed on this machine by communicating with this machine. In [Acquire Settings], set the method of obtaining the information on this machine.
[Acquire Settings]	Configure the settings to obtain the information of this machine.
[Auto]	Select this check box to automatically obtain the information of this machine.
[Destination Settings]	Set the communication method to get information from this machine. • [Device which Connect with Printer Port]: Information is obtained from the printing port specified in the [Port] tab in the printer driver. • [Specify IP Address or Printer Name]: Information is obtained by connecting to a device with the entered IP address or printer name.
[Software Tools]	You can start up the software tools such as Web Connection.



- When [Auto] in [Acquire Settings...] is enabled and the computer is unable to communicate with this machine, the computer takes a long time to display the [Properties] window or the [Printing Preferences] window.
- If you are using the machine from a Windows Server 2003 computer via USB connection, [Acquire Device Information] cannot be used.

2.6.3 Available operations in the [Settings] tab

In the [Settings] tab, you can change the default settings for how confirmation messages are displayed as well as the window for inputting authentication information.

Settings	Description
[EMF Spool]	Select this check box when meta file (EMF) spooling is required in your own system environment.
[Display Constraint Message]	Select this check box to display a message indicating that you have selected printer driver functions that cannot be used together.
[Display paper set in Print Server Properties]	Select this check box when using the paper added in [Server Properties] in the printer window.
[Verify Authentication settings before printing]	Select this check box to enable the [Verify] button in the [User Authentication/Account Track] dialog box.
[Popup Authentication Dialog when printing]	Select this check box to display the [User Authentication/Account Track] dialog box for printing. This option reminds you to enter the user name and password.
[Save Custom Size]	If you print on odd size paper, specify the size to register the paper. The registered paper size can be selected from [Original Size] in the [Basic] tab.



- [EMF Spool] is a function of the PCL driver.
- [Save Custom Size...] is a function of the PCL driver.
- The procedure for opening [Server Properties] is as follows:
 If Windows 7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2 is running, select a printer, then click [Print Server Properties] on the toolbar.

If Windows Vista or Windows Server 2008 is running, place the cursor pointer in an empty area of the [Printers] window, then click the mouse right button. From the shortcut menu, select [Run as administrator] - [Server Properties].

If Windows Server 2003 is running, click the [File] menu and select [Server Properties].


2.6.4 [Printing Preferences] window of the printer driver

How to display the [Printing Preferences] window

The printer driver has two windows for configuring settings: the [Properties] window and the [Printing Preferences] window. This section describes the [Printing Preferences] window.


The [Printing Preferences] window has multiple tabs on each of which related functions are grouped to enable you to configure print functions unique to this machine. To display the [Printing Preferences] window, take the following steps:

- 1 Display the printer window.
 - → In Windows 8.1, click [] in the Start window, then click [Control Panel] [Hardware and Sound] [View devices and printers].
 - → In Windows 8, right-click the Start window, then click [All apps] [Control Panel] [Hardware and Sound] [View devices and printers].
 - → In Windows Server 2012/Server 2012 R2, open the Start window, then click [Control Panel] [Hardware] [View devices and printers].

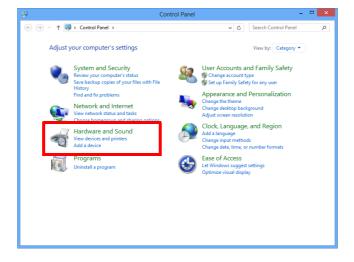


→ In Windows 7/Server 2008 R2, open the Start menu, then click [Devices and Printers].

If [Devices and Printers] is not displayed, select [Control Panel] - [Hardware and Sound], and click [View devices and printers].

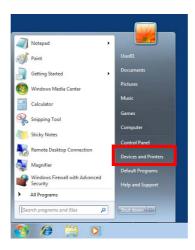


→ In Windows Vista/Server 2008, click the Start menu, and select [Control Panel] - [Hardware and Sound] - [Printers].
When [Control Panel] is displayed in Classic View, double-click [Printers].

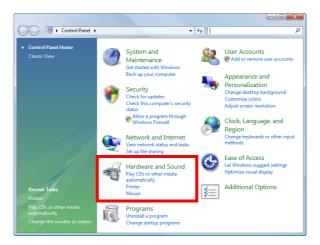


→ In Windows Server 2003, click the Start menu, then select [Printers and Faxes].

If [Printers and Faxes] is not displayed, select [Control Panel] - [Printers and Other Hardware] - [Printers and Faxes]. When [Control Panel] is displayed in Classic View, double-click [Printers].

- 2 Open [Printing preferences].
 - → In Windows 7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2, right-click the icon of the installed printer, and from [Printing Preferences], click the displayed printer name.

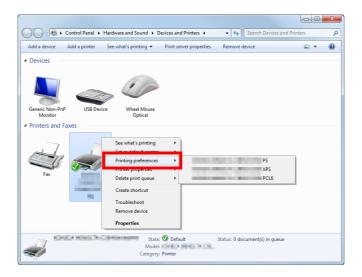

→ In Windows Vista/Server 2003/Server 2008, right-click the icon of the installed printer, and click [Printing Preferences...].

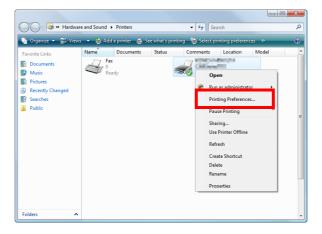

The [Printing preferences] window of the printer appears.



The print settings changed here are registered as default values. When you want to temporarily change settings to print from application software, click [Properties] (or [Preferences]) in the [Print] window to open the [Printing preferences] window.

Items common to each tab

The following explains the commonly used settings and buttons in each tab.

Settings	Description
[Favorite Setting]	You can register the current print settings as a favorite and recall it when executing printing. For details on the [Favorite Setting], refer to page 2-15.
View	Selecting [Paper View] displays a sample page layout based on the current settings for checking the output result image. Selecting [Printer View] displays a printer figure showing the options, such as paper trays, installed in the machine.
[Printer Information]	Click this button to start Web Connection and check the printer information. This button is enabled only when your computer can communicate with this machine.
[OK]	Applies the changes made to the settings and closes the setting window.
[Cancel]	Discards (or cancels) the current changes and closes the setting window.
[Help]	Displays the help for each item in the window.
[Default]	Initializes the current settings.

2.6.5 Available operations in [Advanced]

[Advanced] is a tab to configure detailed settings for PostScript. This function is only available for the PS driver.

Settings	Description
[Advanced Printing Features:]	Select whether or not to enable the booklet print setting.
[PostScript Options]	Configure the PostScript option setting. [PostScript Output Option]: Select the method to output a PostScript file. [Send PostScript Error Handler]: Select whether or not to print a report when a PostScript error has occurred. [Mirrored Output]: Select whether or not to print an image in mirror-reversed mode.
[PostScript Pass through]	Select whether or not to allow the application to print data directly without using the printer driver.



[Advanced Printing Features:] is displayed when the [Enable advanced printing features] check box is selected in the [Advanced] tab of the [Properties] window.

2.6.6 Available operations in [My Tab]

[My Tab] allows you to customize the display contents.

You can gather setting items from difference tabs and place them in [My Tab]. Registering frequently used setting items in [My Tab] allows you to change settings in one tab, without switching among multiple tabs.

For details on how to edit [My Tab], refer to page 2-17.

Settings	Description
[More Details]	Click this button to display the Help of [My Tab].
[Do not show again]	Select this check box if you do not want to display the comment field containing [More Details].
[Edit My Tab]	Click this button to register or delete the functions displayed in [My Tab].

2.6.7 Available operations in [Basic]

In the [Basic] tab, you can configure basic settings about paper or printing. Functions that are frequently used in normal printing are placed in this tab.

Settings	Description
[Original Orientation]	Specify the orientation of the original created in application software. If the setting in the printer driver differs from the one specified in the application software, correct the setting.
[Original Size]	Select the size of the original created in application software. If the setting in the printer driver differs from the one specified in the application software, correct the setting. To print on custom sized paper, select [Custom Size] and specify the width and length. For details, refer to page 2-19.
[Paper Size]	Select the size of paper for printing. If the size of the paper is different from that of the original size, and if [Zoom] is set to [Auto], the original is sent by enlarging or reducing it according to the selected paper size. To print on custom sized paper, select [Custom Size] and specify the width and length. For details, refer to page 2-19.
[Zoom]	 Select how the print image is enlarged or reduced. [Auto]: The image is enlarged or reduced according to the size of the paper specified in [Paper Size]. [Manual]: The image is enlarged or reduced by the specified ratio (25 to 400%).
[Paper Tray]	Select the paper tray for the printing paper. When you select [Auto], the tray containing the paper selected in [Paper Size] is automatically used.
[Paper Type]	When you have selected [No setting] in [Paper Tray], select the paper type for printing. Selecting [No setting] applies the paper type specified on [Utility] - [User Settings] - [Printer Setting] - [Paper Setting] - [Paper Tray Setting] on the Control Panel .
[Job Retention]	Select the method to use to print the original from this machine.
[Print]	Select this option to print normally.
[Store Job]	Select this option to save the original on the HDD of this machine. For details, refer to page 2-43.
[Print and Hold]	Select this option to save the original on the HDD of this machine and simultaneously execute a print job. For details, refer to page 2-43.
[Secured Job]	Select this option to print highly confidential documents. Printing is carried out when the password is entered on this machine. For details, refer to page 2-41.
[Proof then Print]	Select this option to print a large number of copies. This machine prints only one copy and waits for the user's command before printing the remaining copies. For details, refer to page 2-40.
[ID & Print]	Select this option to print highly confidential documents in an environment where user authentication is employed. Printing is allowed when the user is authenticated to use this machine. For details, refer to page 2-46.
[User Settings]	Enter the required information when [Secured Job] is selected in [Job Retention].
[Authentication/Ac- count Track]	When user authentication or account track is employed, enter the user name or account name and the password. For details, refer to page 2-44.
[Copies]	When printing multiple sets of copies, specify the number of sets.
[Collate]	When printing multiple sets of copies, select this check box to output sets of copies one by one. When this check box is cleared, the first page of the original is printed on as many sheets as the number specified in [Copies], and then each of the subsequent pages is printed in this manner.

2.6.8 Available operations in the [Layout] tab

In the [Layout] tab, you can configure layout settings for printing. You can combine pages or adjust print positions.

Settings	Description
[Combination]	 Select how the original pages are combined on sheets. [2 in 1]/[4 in 1]/[6 in 1]/[9 in 1]/[16 in 1]: Multiple pages are reduced and printed on the same side of one sheet. For example, when you select [9 in 1], the size of every set of nine pages is reduced and printed on the same side of one sheet. [2 × 2]/[3 × 3]/[4 × 4] (PCL only): The original image is enlarged, divided and printed on multiple sheets. For example, when you select [2 × 2], one page of the original is divided and printed on four sheets. When you join the printed sheets together, a large poster is created. If necessary, click [Combination Details] to configure detailed settings about page combination. [Combination]: Select the page combination. [Layout Order]: When you have selected "N in 1" in [Combination], select the order of pages in the layout. [Border]: When you have selected "N in 1" in [Combination], select the type of border lines. [Overlap width line]: When you have selected "N × N" in [Combination], select this check box if you want to create overlap margins.
[Rotate 180]	Select this check box to rotate the original 180 degrees and print it.
[Skip Blank Pages]	Select this check box to exclude blank pages in the original from the pages to be printed.
[Print Type]	 Select the print sides of paper. [1-Sided]: The original is printed on one side of a sheet of paper. [2-Sided]: The original is printed on both sides of a sheet of paper. [Booklet]: The original is printed in booklet format. Original pages are sorted and printed on both sides of sheets in two-page spread mode. When the printed sheets are collectively folded in two, they are arranged in the page order like a book. If necessary, click [Booklet Details], then specify the binding position and whether or not to draw border lines.
[Binding Position]	Select the binding position.
[Binding Margin]	 Select this check box to provide a margin on printed sheets. Click [Binding Margin Settings] to specify the size of the margin in detail. [Shift Mode]: Select how the images are shifted for creating the margin. [Front Side]: Specify the size of the margin on the front side. [Back Side]: When you print on both sides, specify the size of the margin on the back side. When the [Same value for front and back sides] check box is selected, a margin of the same size is created on both the front and back sides.
[Image Shift]	Select this check box to fine-tune (shift) the print position of the image with respect to the paper. Click [Image Shift Settings] to specify the print position in detail. • [Front Side]: Specify the upward/downward and rightward/leftward shift distances for the front side. • [Back Side]: When you print on both sides, specify the upward/downward and rightward/leftward shift distances for the back side.

2.6.9 Available operations in the [Finish] tab

The [Finish] tab allows you to configure a setting for finishing printed materials.

Settings	Description
[Staple]	Select this check box to staple printed sheets of paper. Select the staple position from the left or right corner.



To use the staple function, the optional **Finisher** is required.

2.6.10 Available operations in the [Cover Mode] tab

In the [Cover Mode] tab, you can insert covers and pages.

Settings	Description
[Front Cover]	Select this check box to insert and print on a front cover. In [Front Cover Tray], select the paper tray for the front cover. Then, select whether or not to print on the inserted front cover. • [Blank]: Nothing is printed on the inserted front cover. • [Printed (1-Sided)]: Select this option to print on one side of the sheet that is inserted as a front cover. • [Printed (2-Sided)]: Select this option to print on both sides of the sheet that is inserted as a front cover. You can set this option when you have selected anything other than [Auto] in [Paper Tray] in the [Basic] tab.
[Back Cover]	Select this check box to insert and print on a back cover. In [Back Cover Tray], select the paper tray for the back cover. Then, select whether or not to print on the inserted back cover. • [Blank]: Nothing is printed on the inserted back cover. • [Printed (1-Sided)]: Select this option to print on one side of the sheet that is inserted as a back cover. • [Printed (2-Sided)]: Select this option to print on both sides of the sheet that is inserted as a back cover. You can set this option when you have selected anything other than [Auto] in [Paper Tray] in the [Basic] tab.
[Separator Page]	Select this check box when inserting a separator sheet for each job or copy to make prints. Then, select the position to insert a separator page from [Header (Each Job)], [Header (Each Copy)], and [Trailer (Each Copy)]. In [Separator Page Tray], select a paper tray to load sheets to be used as separator pages. You can set this option when you have selected anything other than [Auto] in [Paper Tray] in the [Basic] tab.

2.6.11 Available operations in the [Stamp/Composition] tab

In the [Stamp/Composition] tab, you can configure settings for adding text or an image to the original.

Settings	Description
[Watermark]	Select this check box to print a watermark (text stamp) on the original. In addition, from the list, select the watermark you want to print. Clicking [Edit] allows you to register or edit a watermark. For details, refer to page 2-29.
[Copy Protect] (PCL only)	Select this check box to print a text such as "Copy" or "INTERNAL USE" in the background pattern as concealed text. When you click [Edit], you can configure detailed settings such as Copy Protect printing items or the printing method. For details, refer to page 2-33.
[Create Overlay File] (PCL/XPS)	Select this check box to save data created in application software on the computer as an overlay image to be composed on the original. For details, refer to page 2-31.
[Print in Overlay]	Select this check box to compose the created overlay image on the original when printing. For details, refer to page 2-30.
[Distribution Control Number]	Select this check box to add distribution control numbers to the original. When you click [Edit], you can change the format of the text. For details, refer to page 2-31.
[Date/Time]	Select this check box to add a printing date and time to the original. When you click [Edit], you can change the format of the text. For details, refer to page 2-32.
[Page Number]	Select this check box to add page numbers to the original. When you click [Edit], you can change the format of the text. For details, refer to page 2-32.

2.6.12 Available operations in the [Quality] tab

In the [Quality] tab, you can configure settings for the image quality of the original. You can specify image or font processing.

Items that can be specified vary depending on your printer driver.

Settings	Description
[Quick Settings]	 Select the optimum quality mode to fit the original. [Auto]: The setting suitable for originals is applied automatically. [Photo]: The setting that prioritizes the image quality is applied. [Presentation]: The setting suitable for originals containing both text and figures is applied. [Custom]: Manually configure the quality setting for each object (image, text, or graphics) in the original. For details, refer to page 2-35.
[Quality Adjustment]	Adjust the brightness, contrast and density to fit the original.
[Resolution] (PCL/PS)	Select the print resolution.
[Pattern] (PCL/XPS)	Select the pattern density.
[Toner Save]	Select this check box to save the amount of toner consumed. The printing density is reduced.
[Edge Strength]	Select this check box to sharpen small or faint characters, then specify the strength level.
[Font Settings] (PCL/PS)	Specify how to process texts. Select a type of font to be downloaded from the computer to this machine. Also specify whether or not replace the TrueType fonts by printer fonts when printing. If characters are garbled in an environment where the PCL driver is used, we recommend that you select [Bitmap] in [Download Font Format] and clear the [Use Printer Fonts] check box.

2.6.13 Available operations in the [Other] tab

In the [Other] tab, you can check the driver version and configure print settings for application software.

Settings	Description
[Excel Job Control]	Select this check box to print multiple Microsoft Excel sheets with different page settings at one time. When multiple sheets with different page settings are printed at one time, the sheets may be separated into single-sheet jobs depending on the data contained. This function avoids job separation as much as possible.
[Remove White Back- ground] (PCL/XPS)	Select this check box to superimpose an overlay image on Microsoft Power-Point data. White areas are removed so that the white background of the PowerPoint data does not hide the overlay image. Clear this check box to print the original as is without removing the background.
[Thin Line Support] (PCL only)	Select this check box to perform reduced-size printing. This function prevents thin lines from disappearing. This is effective for thin lines such as table borders created in Excel, but not for thin lines used in illustrations.
[Check Driver Version]	The version of the printer driver is displayed.



- [Excel Job Control] and [Remove White Background] are not available depending on a specific environment or application software.
- You can change the [Excel Job Control] setting only when the printer driver setting dialog box is displayed on the [Printers] ([Devices and Printers] in Windows 7/8/8.1/Server 2008 R2/Server 2012/Server 2012 R2 and [Printers and Faxes] in Windows Server 2003) window.

2.7 Uninstalling the printer driver

Using the deletion program

If the printer driver was installed using the installer, the uninstallation function for the printer driver is also installed.

- ✓ Administrator privileges are required to perform this task.
- Start the deletion program.
 - → From the Start menu, click [All Programs] (or [Programs]) [KONICA MINOLTA] model name of this machine [Uninstall Printer Driver].
 - → In Windows 8.1, click [] in the Start window, select [Control Panel] [Programs], then click [Uninstall a program]. Double-click the driver to be uninstalled in the list.
 - → In Windows 8, right-click the Start window, select [All apps] [Control Panel] [Programs], then click [Uninstall a program]. Double-click the driver to be uninstalled in the list.
 - → In Windows Server 2012/Server 2012 R2, open the Start window, then click [Control Panel] [Programs] [Uninstall a program]. Double-click the driver to be uninstalled in the list.
- Select the printer driver you want to uninstall, then click [Uninstall].
 - → Follow the subsequent on-screen instructions.
- If the dialog box prompting to restart the computer appears, click [OK].
 Uninstallation of the printer driver is then completed.

Uninstall using the installer

If you have installed the driver using the installer, you can use the installer to uninstall the driver.

- ✓ Administrator privileges are required to perform this task.
- Insert the printer driver CD-ROM into the CD-ROM drive of the computer.
 - → Make sure that the installer starts, then proceed to Step 2.
 - → If the installer does not start, open the printer driver folder on the CD-ROM, double-click [Set-up.exe], then go to Step 3.
- 2 Click [Printer/FAX].

The printer driver installer starts.

- 3 Click [AGREE] in the license agreement window.
- 4 Check the contents of the [Readme] window, then click [Next].
- 5 Select [Uninstall Printer Driver], then click [Next].
- Select the printer driver you want to uninstall, then click [Uninstall].
 - → Follow the subsequent on-screen instructions.
- If a dialog box prompting you to restart the computer appears, click [OK] to restart the computer.

 Uninstallation of the printer driver is then completed.

Printing in the Mac OS Environment

3 Printing in the Mac OS Environment

3.1 Preparation for printing (Bonjour connection)

3.1.1 Overview

3.1

Before using this machine as a printer, you need to install the printer driver on your computer and add the printer to your computer.

This section describes preparations required to carry out printing on this machine by Bonjour (Rendezvous) connection that is supported in Mac OS X 10.3 or later.



- The Bonjour technology enables you to configure the network settings for networked devices and find and use services without the need for configuring special settings.
- In Mac OS X 10.3, Bonjour is called Rendezvous.

3.1.2 Before setting up the computer (for administrators)

Connecting this machine to the network

■ Checking a LAN cable for connection



Configuring the Bonjour settings

- **■** Enabling Bonjour
- Setting a printer name (Bonjour name)
 - → Enter the name of this machine to be displayed as the name of a connected device.



Preparation finished

Checking a LAN cable for connection

Check that a LAN cable is connected to the LAN port of this machine.

For details on the cable connection port, refer to page 1-4.

Configuring the Bonjour settings

Enable Bonjour. (You can use this function with the default settings unless otherwise requested.) In addition, enter the name of this machine (Bonjour name) to be displayed as the name of a connected device.

For details on how to configure settings, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

3.1.3 Setting up the computer

Preparing the printer driver

- Preparing the printer driver CD-ROM
 - → For the CD-ROM, contact the administrator of this machine.
- Checking the operating systems supported by the printer driver
 - → Check that your computer meets the operating environment requirements of the printer driver.



Installing the printer driver to the computer

- Installing the printer driver using the installer
 - → Insert the **Driver & Utilities CD-ROM** into the drive, and install the software by following the onscreen instructions.
- Adding the printer
 - → Add the printer automatically detected by Bonjour to the computer.



Preparation finished

Preparing the printer driver CD-ROM

The following CD-ROMs are supplied with this machine: The printer driver is included on the **Driver & Utilities CD-ROM**.

CD-ROM	Description
Driver & Utilities CD-ROM	Contains Windows printer driver (PCL/PS/XPS), Mac OS printer driver, Linux printer driver, and TWAIN driver. This also contains the page for downloading utility software.
User's Guide CD-ROM	Contains user's guides.

Checking the operating systems supported by the printer driver

The following lists the printer drivers included on the CD-ROMs supplied with this machine and the supported operating systems.

Printer driver	Page description language	Supported operating systems
PostScript PPD driver (PS-PPD)	PostScript 3 Emulation	Mac OS X (10.3.x, 10.4.x, 10.5.x, 10.6.x, 10.7.x, 10.8.x, 10.9.x, 10.10.x)

Installing the printer driver

Install the printer driver using the installer.

- Before installation, exit all application software programs that are running.
- Insert the Driver & Utilities CD-ROM disk into the CD-ROM drive of the computer.
- Open the folder on the CD-ROM that contains the desired printer driver.
 - → Select the folder according to the printer driver, operating system, and language to be used.

- 3 Copy the driver file onto the desktop according to the Mac OS X version.
 - → Mac OS X 10.3: model name of this machine_103104.pkg
 - → Mac OS X 10.4: model name of this machine_103104.pkg
 - → Mac OS X 10.5: model name of this machine_105.pkg
 - → Mac OS X 10.6: model name of this machine_106.pkg
 - → Mac OS X 10.7: model name of this machine_106.pkg
 - → Mac OS X 10.8: model name of this machine_106.pkg
 - → Mac OS X 10.9: Model name of this machine_106.pkg
 - → Mac OS X 10.10: model name of this machine_106.pkg
 - → In Mac OS X 10.5 or later, the driver folder varies depending on the paper size. Select the appropriate folder to suit your environment.

To mainly use the metric-based paper size such as A4 size: "WW_A4" folder To mainly use the inch-based paper size such as letter size or $8.1/2 \times 11$: "WW_Letter" folder

4 Double-click the file copied onto the desktop.

The printer driver installer starts.

- 5 Click [Continue] following the instructions on the pages that follow until the [Install] page appears.
 - → When the name and password prompt appears during the procedure, enter the administrator name and password.
- 6 Click [Install].

The printer driver is installed on the computer.

7 Click [Close].

Installation of the printer driver is then completed. Then, add the printer to the computer.

Configuring connection using Bonjour (Mac OS X 10.4 or later)


Add the printer automatically detected by Bonjour to the computer.

- 1 Select [System Preferences...] in the Apple menu.
- 2 Click the [Print & Fax] icon.
 - → In Mac OS X 10.7/10.8, click the [Print & Scan] icon. In Mac OS X 10.9/10.10, click the [Printer & Scanner] icon.
- Click [+] in the lower left of the screen.
 - → In Mac OS X 10.4/10.5/10.6, go to Step 4.
 - → In Mac OS X 10.7/10.8/10.9/10.10, if a target printer name is found in the list displayed by clicking [+], select it. When a printer driver is selected automatically, the printer addition is completed. If a target printer name is not found, select [Add Other Printer or Scanner...] or [Add Printer or Scanner...], and go to Step 4.
- 4 Click [Default].

Connected printers are detected.

→ If no printers are detected, restart this machine.

- 5 From the [Printer Name] list, select the desired printer for a Bonjour connection.
 - → To check the printer name, select [Network] [Bonjour Setting] in the administrator mode of **Web** Connection.
 - → By default, () at the end of the printer name corresponds to the last three bytes of the MAC address.

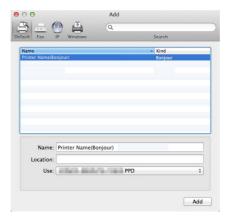

The printer driver for the selected printer is displayed in [Print Using:].

- → When the printer driver is displayed, go to Step 7.
- → When the printer driver is not correctly displayed, go to Step 6.
- 6 Manually select the printer driver.
 - → In Mac OS X 10.9/10.10, select [Select Software...] from [Print Using:], then click the driver of the desired printer from the list that is displayed in another window.
 - → In Mac OS X 10.6/10.7/10.8, select [Select Printer Software...] from [Print Using:], then click the driver of the desired printer from the list that is displayed in another window.
 - → In Mac OS X 10.5, select [Select a driver to use...] in [Print Using:], then click the driver of the desired printer from the list.
 - → In Mac OS X 10.4, select [KONICA MINOLTA] in [Print Using:], and then click the driver of the desired printer from the list.
- 7 Click [Add].

The addition process of the printer is then completed. Then, proceed to the [Installable Options] window to configure the optional environment for this machine. For details, refer to page 3-6.

Configuring connection using Rendezvous (Mac OS X 10.3)

Add the printer automatically detected by Rendezvous to the PC.

- Select [Macintosh HD] (hard disk of the system) [Applications] [Utilities], then double-click [Printer Setup Utility] to open the dialog box.
- When the [You have no printers available.] window appears, click [Add]. When the [Printer List] appears, click [Add].
 - → If available printers have already been specified, the [You have no printers available.] window does not appear.
- 3 Select [Rendezvous] as the connection method.

Connected printers are detected.

- → If no printers are detected, restart this machine.
- 4 From the [Name] list, select the desired printer for Rendezvous connection.
 - → To check the printer name, select [Network] [Bonjour Setting] in the administrator mode of **Web** Connection.
 - → By default, () at the end of the printer name corresponds to the last three bytes of the MAC address.

- 5 Manually select the printer driver.
 - → In [Printer Model:], select [KONICA MINOLTA], then click the driver of the desired printer from the model list.



6 Click [Add].

The addition process of the printer is then completed. Then, proceed to the [Installable Options] window to configure the optional environment for this machine. For details, refer to page 3-6.

3.1.4 Initializing the printer driver

Configuring the optional environment of this machine

When you use this machine for the first time, properly configure the printer driver so that it contains information such as the options installed on this machine.

- 1 Open [System Preferences...] in the Apple menu, then click the [Print & Fax] icon.
 - → In Mac OS X 10.7/10.8, click the [Print & Scan] icon. In Mac OS X 10.9/10.10, click the [Printer & Scanner] icon.
 - → In Mac OS X 10.3, select [Macintosh HD] (system hard disk) [Applications] [Utilities], then double-click [Printer Setup Utility] to open it.
- Display the [Printer Information] window.
 - → In Mac OS X 10.5/10.6/10.7/10.8/10.9/10.10, click [Options & Supplies...]. In Mac OS X 10.4, click the [Printer Setup...] icon.
 - → For the [Printer Setup Utility] window, click [Show Info] of the [Printer] menu.
- 3 Display the [Installable Options] window.
 - → In Mac OS X 10.9/10.10, click [Options].
 - → In Mac OS X 10.5/10.6/10.7/10.8, click [Driver].
 - → In Mac OS X 10.3/10.4, select [Installable Options].
- 4 Change the settings according to the options installed on this machine.




5 Click [OK] or [Apply Changes] to close the [Printer Information] window.

Changing the default print settings

In the [Page Setup] window of the printer driver, you can change the default settings for paper and zoom ratio.

- Display the [Page Setup] window of the printer driver.
 - → For information on how to display the [Page Setup] window, refer to page 3-29.
- 2 Change the settings, and select [Save As Default] from [Settings:].

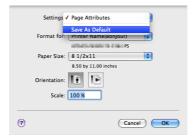

3.2 Preparation for printing (USB connection)

3.2.1 Overview

Before using this machine as a printer, you need to install the printer driver on your computer and add the printer to your computer.

This section describes preparations required to carry out printing on this machine by USB connection.

3.2.2 Setting up the computer

Preparing the printer driver

- Preparing the printer driver CD-ROM
 - → For the CD-ROM, contact the administrator of this machine.
- Checking the operating systems supported by the printer driver
 - → Check that your computer meets the operating environment requirements of the printer driver.



Installing the printer driver to the computer

- Installing the printer driver using the installer
 - → Insert the **Driver & Utilities CD-ROM** into the drive, and install the software by following the onscreen instructions.
- Adding the printer
 - → Add the printer that is automatically detected by USB connection to the computer.



Preparation finished

Preparing the printer driver CD-ROM

The following CD-ROMs are supplied with this machine: The printer driver is included on the **Driver & Utilities CD-ROM**.

CD-ROM	Description
Driver & Utilities CD-ROM	Contains Windows printer driver (PCL/PS/XPS), Mac OS printer driver, Linux printer driver, and TWAIN driver. This also contains the page for downloading utility software.
User's Guide CD-ROM	Contains user's guides.

Checking the operating systems supported by the printer driver

The following lists the printer drivers included on the CD-ROMs supplied with this machine and the supported operating systems.

Printer driver	Page description language	Supported operating systems
PostScript PPD driver (PS-PPD)	PostScript 3 Emulation	Mac OS X (10.3.x, 10.4.x, 10.5.x, 10.6.x, 10.7.x, 10.8.x, 10.9.x, 10.10.x)

3.2

Installing the printer driver

Install the printer driver using the installer.

- Before installation, exit all application software programs that are running.
- 1 Insert the **Driver & Utilities CD-ROM** disk into the CD-ROM drive of the computer.
- Open the folder on the CD-ROM that contains the desired printer driver.
 - → Select the folder according to the printer driver, operating system, and language to be used.
- 3 Copy the driver file onto the desktop according to the Mac OS X version.
 - → Mac OS X 10.3: model name of this machine_103104.pkg
 - → Mac OS X 10.4: model name of this machine_103104.pkg
 - → Mac OS X 10.5: model name of this machine_105.pkg
 - → Mac OS X 10.6: model name of this machine_106.pkg
 - → Mac OS X 10.7: model name of this machine_106.pkg
 - → Mac OS X 10.8: model name of this machine_106.pkg
 - → Mac OS X 10.9: Model name of this machine_106.pkg
 - → Mac OS X 10.10: model name of this machine_106.pkg
 - → In Mac OS X 10.5 or later, the driver folder varies depending on the paper size. Select the appropriate folder to suit your environment.
 - To mainly use the metric-based paper size such as A4 size: "WW_A4" folder
 To mainly use the inch-based paper size such as letter size or 8 1/2 × 11: "WW_Letter" folder
- 4 Double-click the file copied onto the desktop.

The printer driver installer starts.

- 5 Click [Continue] following the instructions on the pages that follow until the [Install] page appears.
 - → When the name and password prompt appears during the procedure, enter the administrator name and password.
- 6 Click [Install].

The printer driver is installed on the computer.

7 Click [Close].

Installation of the printer driver is then completed. Then, add the printer to the computer.

Configuring USB connection settings (Mac OS X 10.5 or later)

Add the printer that is automatically detected by USB connection to the computer.

- Connect a USB cable to the USB port of this machine.
 - → For details on the cable connection port, refer to page 1-4.
- Select [System Preferences...] in the Apple menu.
- 3 Click the [Print & Fax] icon.
 - → In Mac OS X 10.7/10.8, click the [Print & Scan] icon. In Mac OS X 10.9/10.10, click the [Printer & Scanner] icon.
- 4 Click [+] in the lower left of the screen.
 - → In Mac OS X 10.4/10.5/10.6, go to Step 4.
 - → In Mac OS X 10.7/10.8/10.9/10.10, if a target printer name is found in the list displayed by clicking [+], select it. When a printer driver is selected automatically, the printer addition is completed. If a target printer name is not found, select [Add Other Printer or Scanner...] or [Add Printer or Scanner...], and go to Step 4.

5 Click [Default].

Connected printers are detected.

- → If no printer is detected, check that this machine is turned on and the USB cable is connected, then restart the computer.
- From the [Printer Name] list, select the desired printer that is connected via the USB port.



The printer driver for the selected printer is displayed in [Print Using:].

7 Click [Add].

The addition process of the printer is then completed. Then, proceed to the [Installable Options] window to configure the optional environment for this machine. For details, refer to page 3-6.

Configuring USB connection settings (Mac OS X 10.4)

- 1 Connect a USB cable to the USB port of this machine.
 - → For details on the cable connection port, refer to page 1-4.
- Select [Macintosh HD] (hard disk of the system) [Applications] [Utilities], then double-click [Printer Setup Utility] to open the dialog box.
- In the [Printer List] window, click [Add].

Connected printers are detected.

- → If no printer is detected, check that this machine is turned on and the USB cable is connected, then restart the computer.
- From the list, select the desired printer that is connected via the USB port.

The printer driver for the selected printer is displayed in [Print Using:].

Click [Add].

The addition process of the printer is then completed. Then, proceed to the [Installable Options] window to configure the optional environment for this machine. For details, refer to page 3-6.

Configuring USB connection settings (Mac OS X 10.3)

- 1 Connect a USB cable to the USB port of this machine.
 - → For details on the cable connection port, refer to page 1-4.
- Select [Macintosh HD] (hard disk of the system) [Applications] [Utilities], then double-click [Printer Setup Utility] to open the dialog box.
- In the [Printer List] window, click [Add].
- 4 Select [USB] as the connection method.

Connected printers are detected.

- → If no printer is detected, check that this machine is turned on and the USB cable is connected, then restart the computer.
- 5 From the list, select the desired printer that is connected via the USB port.

The printer driver for the selected printer is displayed in [Print Using:].

6 Click [Add].

The addition process of the printer is then completed. Then, proceed to the [Installable Options] window to configure the optional environment for this machine. For details, refer to page 3-6.

3.2.3 Initializing the printer driver

Configuring the optional environment of this machine

When you use this machine for the first time, properly configure the printer driver so that it contains information such as the options installed on this machine.

- Open [System Preferences...] in the Apple menu, then click the [Print & Fax] icon.
 - → In Mac OS X 10.7/10.8, click the [Print & Scan] icon. In Mac OS X 10.9/10.10, click the [Printer & Scanner] icon.
 - → In Mac OS X 10.3, select [Macintosh HD] (system hard disk) [Applications] [Utilities], then double-click [Printer Setup Utility] to open it.
- Display the [Printer Information] window.
 - → In Mac OS X 10.5/10.6/10.7/10.8/10.9/10.10, click [Options & Supplies...]. In Mac OS X 10.4, click the [Printer Setup...] icon.
 - → For the [Printer Setup Utility] window, click [Show Info] of the [Printer] menu.
- 3 Display the [Installable Options] window.
 - → In Mac OS X 10.9/10.10, click [Options].
 - → In Mac OS X 10.5/10.6/10.7/10.8, click [Driver].
 - → In Mac OS X 10.3/10.4, select [Installable Options].
- 4 Change the settings according to the options installed on this machine.



5 Click [OK] or [Apply Changes] to close the [Printer Information] window.

Change the default print settings

In the [Page Setup] window of the printer driver, you can change the default settings for paper and zoom ratio.

- 1 Display the [Page Setup] window of the printer driver.
 - → For information on how to display the [Page Setup] window, refer to page 3-29.
- 2 Change the settings, and select [Save As Default] from [Settings:].




3.3 How to print

3

3.3 How to print

3.3.1 Printing operation flow

- 1 Open data of the original using the application software. From the [File] menu, select [Print].
- 2 Check that the desired printer is selected in [Printer:].
 - → The [Print] dialog box varies depending on the application software.
- 3 Specify the print range and the number of copies to print.
 - → In Mac OS X 10.7/10.8/10.9/10.10, if the setting items (1) are not displayed, click [Show Details].
 - → In Mac OS X 10.5/10.6, if the setting items (1) are not displayed, click no the right side of [Printer:].

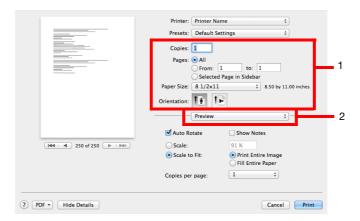

- 4 If necessary, switch the menu of application names (2) and change the print settings.
 - → The print settings you have changed here return to the default values when you exit the application software. This is useful to register frequently used print settings as presets. For details, refer to page 3-14.
- 5 Click [Print].

Printing is executed.

3.3 How to print


3

3.3.2 Registering frequently used print settings

You can register the current print settings as a preset and recall it when executing printing.

When you register a frequently used combination of print settings as a preset, you can easily apply all of those settings just by selecting the combination from the presets, even if the combination is complicated as it contains settings on multiple menus.

- 1 Display the [Print] window of the printer driver.
 - → For information on how to display the [Print] window, refer to page 3-30.
- 2 Change the print settings, and select [Save As...] or [Current Print Settings as Preset] from [Presets:].

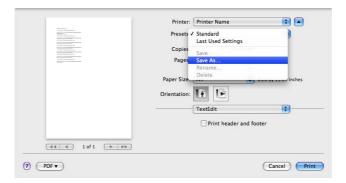

3 Enter the name of the print setting.

The saved setting can be recalled from [Presets:]. Use a name that helps you easily identify the preset.

3.4 Useful printing functions

3.4.1 Changing the paper size or type

Enlarging or reducing by the desired zoom ratio ([Scale:])

You can print the original image after it has been enlarged or reduced by the desired zoom ratio. In [Scale:] of [Page Attributes], specify the zoom ratio.




Printing on custom size paper ([Page Setup])

A special sized original is printed on custom sized paper loaded in the Manual Feed Tray.

In [Page Attributes] under [Paper Size:], select [Manage Custom Sizes...], and specify the desired width and length.

- 1 From the [File] menu, click [Page Setup] (or [Paper Setup]).
 - → In Mac OS X 10.5 or later, you can configure the same setting in [Paper Size:] in the [Print] window.
- Open the window for registering a custom size.
 - → In Mac OS X 10.4 or later, select [Manage Custom Sizes...] from the Paper Size list.
 - → In Mac OS X 10.3, select [Custom Paper Size] from [Settings:].
- 3 Click [+] (Mac OS X 10.4 or later) or [Add] (Mac OS X 10.3).
- 4 Enter the name of the paper size you are registering.
 - → Be sure to use paper size names other than existing names, such as A4 and Custom.
- Specify the width and length as desired.
 - → If necessary, set the top, bottom, right, and left margins of the paper in [Non-Printable Area:] or [Printer Margins:].

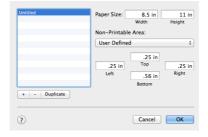

6 Click [OK] (Mac OS X 10.4 or later) or [Save] (Mac OS X 10.3).


This saves the custom paper size, which can be selected from the [Paper Size:] drop-down list in [Page Attributes].

Reference

To print on custom sized paper, use **Manual Feed Tray**. For details on how to load paper into the **Manual Feed Tray**, refer to Chapter 6 "Loading Paper" in [User's Guide: Introduction].

Specifying the paper type ([Paper Type:])

In [Paper Type:] of the [Basic] menu for [Printer Features], select the paper type for printing.

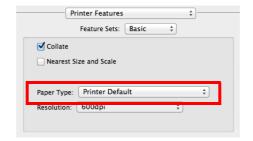



If [Letterhead duplex print permission settings] is set to [Restrict](default) on this machine, printing is executed on one side of the sheet even if [Letterhead] is selected for [Paper Type] to print on both sides.

Specifying the paper tray ([Paper Feed])


In [All Pages From:] of [Paper Feed], select the paper tray that contains paper to be printed.



Enlarging or reducing to the nearest page size ([Nearest Size and Scale])

If the size of sheets loaded in the paper tray does not match that of the original data, the page size is automatically enlarged or reduced to be printed on sheets of the next nearest size.


Select [Printer Features] - [Basic], then select the [Nearest Size and Scale] check box.

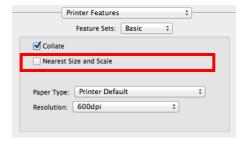

3.4.2 Printing multiple sets of copies

Specifying the number of copies ([Copies:])

In [Copies:] of the [Print] window, specify the number of copies you want to print.






In Mac OS X 10.3/10.4, specify the number of copies in [Copies & Pages].

Reference

When you print a large number of copies, use of the Proof then Print function will prevent a large number of misprints being created, reducing the amount of waste paper generated. For details, refer to page 3-22.

Printing on a set basis ([Collate])

When the [Collate] check box is selected on the [Basic] menu of [Printer Features], copies are output separately in a set-by-set manner, for example, "Pages 1, 2, 3, 4, and 5", "Pages 1, 2, 3, 4, and 5", and then "Pages 1, 2, 3, 4, and 5".

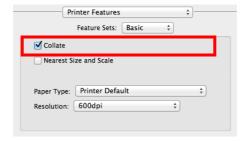


3.4.3 Saving the number of printed sheets

Copying on both sides of paper ([2-Sided])

By using both sides of paper for printing, you can halve paper consumption.

In [Print Type:] of the [Layout] menu for [Printer Features], select [2-Sided]. Also, in [Binding Position:], select the binding position. [2-Sided] is specified by default.




Printing multiple pages on the same side of a single sheet ([Pages per Sheet:])

You can print multiple reduced size pages on the same side of a single sheet to reduce the number of pages to be printed.

In [Pages per Sheet:] of [Layout], specify how many pages are to be printed on the same side of one sheet. For example, when you select [9], every set of nine pages is reduced and printed on the same side of one sheet.

If necessary, specify the paging order in [Layout Direction:], then select whether or not to insert a border line between pages in [Border:].

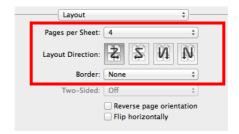


3.4.4 Adjusting the layout

Reversing the left and right sides ([Flip horizontally])

Reverse the left and right sides of a print image to make prints.

In [Layout], select the [Flip horizontally] check box.

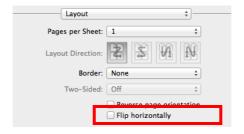




This function is only available for Mac OS X 10.6/10.7/10.8/10.9/10.10.

Rotating a print image 180 degrees ([Reverse page orientation])

Print an image upside down. This function is available when printing on envelopes of which the loading direction cannot be changed.

In [Layout], select the [Reverse page orientation] check box.

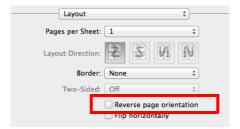




This function is only available for Mac OS X 10.5/10.6/10.7/10.8/10.9/10.10.

3.4.5 Stapling printed materials

Stapling ([Staple:])

Staple each set of printed sheets of paper before feeding them out. This function is useful when preparing a project proposal or other booklet materials.

In the [Finish] menu of [Printer Features], select [Staple:], then specify the staple position.

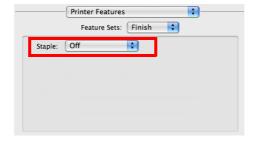



To use the staple function, the optional **Finisher** is required.

3.4.6 Inserting a front cover

Inserting a front cover ([Paper Feed])

Insert a cover sheet that is different from text sheets into the head of the original.

You can select a sheet that is different from text sheets (colored paper or thick paper) as a front cover, and collectively print the front cover with text pages.

In [First Page From:] of [Paper Feed], select the paper tray to load a sheet to be used as a front cover. Also, in [Remaining From:], select the paper tray to load text sheets.




Printing a message on a cover page ([Cover Page])

Print a message such as [Confidential] or [Secret] on a cover page.

In [Print Cover Page:] of [Cover Page], select whether or not to print a cover page at the head or end of the document, then specify the type of the message to be printed in [Cover Page Type:].


To print billing information, enter the information to be printed in [Billing Info:].



3.4.7 Specifying the image quality level for printing

Specifying the printing resolution ([Resolution:])


In [Resolution:] of the [Basic] menu for [Printer Features], select the printing resolution.

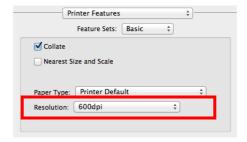




Fine-tuning the brightness to fit the original ([Brightness:])

In [Brightness:] of [Quick Settings], fine-tune the brightness to fit the original.

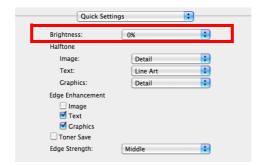


Specifying screen properties ([Halftone])

Select [Quick Settings] - [Halftone], then specify the screen property for each of the image, text, and graphics categories.

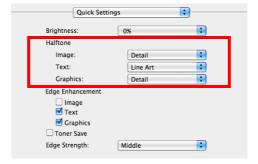


Saving the toner consumption ([Toner Save])

Selecting the [Toner Save] check box in [Quick Settings] adjusts the printing density in order to reduce the amount of toner consumed.

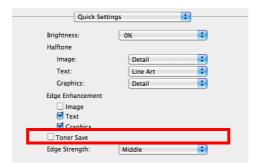

Increasing the legibility of small or faint text ([Edge Strength:])

Sharpen the edges of images such as text in the table and graphics to improve legibility. In [Edge Strength:] of [Quick Settings], select the strength level.

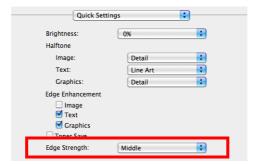

3.5 Printing options

3.5.1 Making a trial printing for only one copy ([Proof then Print])


Proof then Print

Proof then Print is a function that makes prints by only one copy and holds the remaining copies when printing multiple copies.

Because you can check the print result before starting to print the remaining copies from the **Control Panel**, this function is useful for preventing printing of a large number of misprints.

How to print from the computer

In [Job Retention:] of the [Security] window, select [Proof then Print].

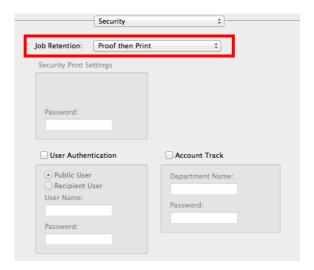


Specify the number of copies, then execute printing.
Only one copy is printed. Continue to "Operations on this machine".

Operations on this machine

Tap [Document Print/Delete].



2 Tap [Documents to Print].

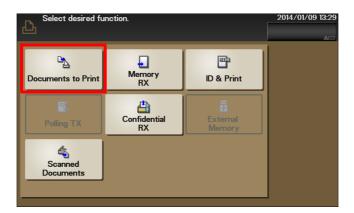

- 3 Select the desired user, then tap [Open].
- 4 Select a job to print, then tap [Print].
 - → To delete a job, tap [Delete].
- 5 If necessary, change the number of copies, then tap [OK].

3.5.2 Printing a highly confidential original ([Secured Job])


Secured Job

Secured Job is a function that saves print data with a password on the HDD of this machine. Because the data is not printed straight away, this function prevents printed materials from going missing or being left unattended.

To print data from the HDD, you need to enter the password; this function is particularly suitable for safely printing highly confidential documents.

How to print from the computer

In [Job Retention:] of the [Security] window, select [Secured Job].

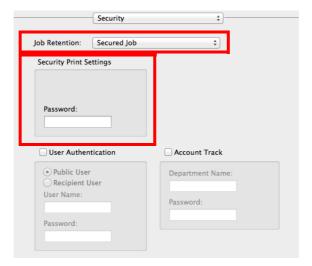

- 2 Enter the password.
- 3 Execute printing.

Print data is saved on the HDD of this machine. Continue to "Operations on this machine".


Operations on this machine

To print the saved data, you need to enter the password specified in the printer driver.

Tap [Document Print/Delete].



Tap [Documents to Print].

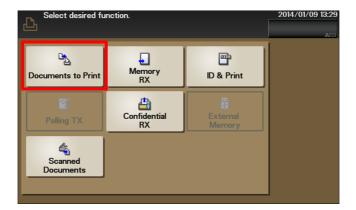

- 3 Select the desired user, then tap [Open].
- 4 Select a job to print, then tap [Print].
 - → To delete a job, tap [Delete].
- 5 Enter the password specified when printing data from the computer.
- 6 If necessary, change the number of copies, then tap [OK].

3-24 [Print Functions]

3.5.3 Attaching authentication information

Printing when authentication is set

When printing a document in an environment where user authentication or account track is employed, you need to send the authentication information (user name and password) to this machine to execute printing. This requirement limits the users who can use this machine, preventing unauthorized use by a third party.

When this machine receives a print job from a user who is not permitted to print, or a print job that does not contain authentication information, this machine automatically discards the job.




- A print job that does not contain authentication information is a print job that is sent without correctly configuring the User Authentication/Account Track setting using the printer driver even though the User Authentication/Account Track setting is configured on this machine.
 - If [Print] in [Job Retention:] is selected to execute a print job while the [User Authentication]/[Account Track] check box is cleared in the [Security] window of the printer driver, the print job is considered as a print job that does not contain authentication information.
- If [ID & Print] is set to [Enable] on [Security] [ID & Print Settings] of **Web Connection**, an ordinary print job is handled as an ID & Print job (default: [Disable]). For details on the ID & Print function, refer to page 3-26.

Reference

When printing a highly confidential document in an environment where user authentication or account track is employed, using the ID & Print function enables high security printing. For details, refer to page 3-26.

How to print from the computer

In the [Security] window, select the [User Authentication] check box (and the [Account Track] check box).

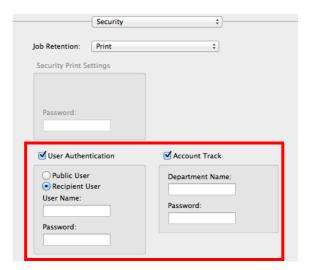

- When user authentication is enabled, select the [User Authentication] check box, select [Recipient User], then enter the user name and password.
 - → If access to this machine by public users (unregistered users) is allowed, you can select [Public User] and print data without entering the user name and password.
- When account track is enabled, select the [Account Track] check box, then enter the account name and password.
- 4 Execute printing.

Printing starts successfully when the authentication information is judged correct.

3.5.4 Printing at the same time as authentication ([ID & Print])

ID & Print

ID & Print is a function that saves print data to the HDD of this machine when user authentication is installed. Because the data is not printed straight away, this function prevents printed materials from going missing or being left unattended.

To print data from the HDD, you need to perform user authentication on this machine; this function is particularly suitable for safely printing highly confidential documents. When you are successfully authenticated, the print data of the login user is automatically printed. This enhances security as well as ensures smooth operation.


Reference

User Authentication/Account Track can only be configured using **Web Connection**. For details, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

To enable the ID & Print function, select [Security] - [ID & Print Settings] in the **Web Connection** administrator mode, then set [ID & Print] to [Enable]. For details, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

How to print from the computer

In [Job Retention:], select [ID & Print].

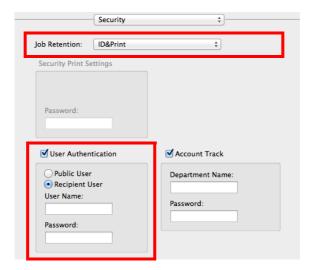

- 2 Select the [User Authentication], select [Recipient User], then enter the user name and password.
- 3 Execute printing.

Print data is saved on the HDD of this machine. Continue to "Operations on this machine".

Operations on this machine (Printing simultaneously with login)

Print all data saved by the ID & Print function simultaneously when performing authentication on this machine.

- 1 Enter the user name and password.
- Check that [ID & Print/MFP Access] is selected in [ID & Print], then tap [Login].
 - → When an optional **Authentication Unit** is used, you can switch [ID & PW] and [Authentication Device] in [Authentication Method].




After data has been printed, do not log in to the machine.

- → After data printing has been completed, you do not need to log in to this machine.
- → To change the default settings of [ID & Print] (default: [ID & Print/MFP Access]), select [Security] [ID & Print Settings] [Default Operation Selection] in the **Web Connection** administrator mode.

Operations on this machine (Printing only specific data)

To print only specific data, log in to this machine, then specify data to be printed.


- 1 Enter the user name and password.
- 2 In [ID & Print], select [Access Basic Screen], then tap [Login].

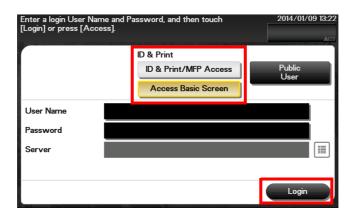


3 Tap [Document Print/Delete].



4 Tap [ID & Print].

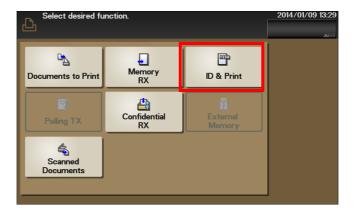

5 Tap [Login User].

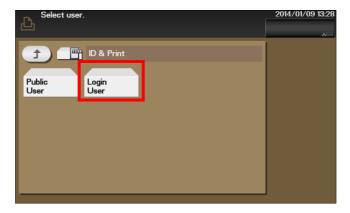

- 6 Select data to be printed, then tap [Print].
 - → To delete data, tap [Delete].

The printed data is deleted from the HDD.

3.6 Printer driver setting items

3.6.1 [Page Setup] window of the printer driver

How to display the [Page Setup] window

- Open the original data using the application software. From the [File] menu, click [Page Setup] (or [Paper Setup]).
- Check that the desired printer is selected in [Format for:].
 The [Page Attributes] window appears.



Available operations in [Page Attributes]

In [Page Attributes], you can configure basic paper settings.

Settings	Description
[Paper Size:]	Select the size of paper for printing. To print on custom sized paper, use [Manage Custom Sizes]. For details, refer to page 3-15.
[Orientation:]	Specify the orientation of the original created in application software. If the setting in the printer driver differs from the one specified in the application software, correct the setting.
[Scale:]	Specify the zoom ratio to enlarge or reduce the original image. The setting range differs depending on the Mac OS X version.




In Mac OS X 10.5 or later, you can also specify [Paper Size] and [Orientation] in the [Print] window.

3.6.2 [Print] window of the printer driver

How to display the [Print] window

- Open data of the original using the application software. From the [File] menu, select [Print].
- Check that the desired printer is selected in [Printer:].

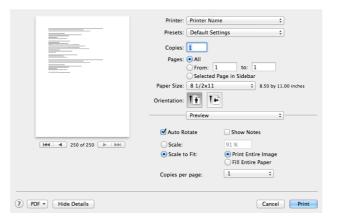

Items common to each window

This section describes the settings and buttons common to the [Print] window.

Settings	Description
[Copies:]	When printing multiple sets of copies, specify the number of sets.
[Collated]	Do not specify this function. In the [Basic] menu of [Printer Features], select the [Collate] checkbox.
[Pages:]	When printing a multi-page original, specify the range of pages to be printed.
[Paper Size:]	Specify the size of the paper to be printed.
[Orientation:]	Specify the printing orientation.
[Cancel]	Discards (or cancels) the current changes and closes the setting window.
[Print]	Applies the changes made to the settings and starts printing.



- [Copies:], [Pages:], [Paper Size:], and [Orientation:] are displayed in Mac OS X 10.5 or later.
- In Mac OS X 10.7/10.8/10.9/10.10, [Collated] is not displayed.
- In Mac OS X 10.3/10.4, [Copies:] and [Pages:] can be specified in [Copies & Pages].

3.6.3 Available operations in [Layout]

In [Layout], you can configure layout settings for printing.

Settings	Description
[Pages per Sheet:]	Select how many pages are to be printed on the same side of one sheet. For example, when you select [9], every set of nine pages is reduced and printed on the same side of one sheet. However, if you are using Adobe Reader, the system does not function accurately when a value other than [1] is specified for printing.
[Layout Direction:]	Select the paging order when [Pages per Sheet:] is specified.
[Border:]	Select whether or not to insert a border line between pages when [Pages per Sheet:] is specified. If you want to insert a border line between pages, select the border line type.
[Two-Sided]	Do not specify this function. In [Print Type:] of the [Layout] menu for [Printer Features], select this function.
[Reverse page orientation]	Select this check box to rotate a print image 180 degrees.
[Flip horizontally]	Select this check box to reverse the left and right sides of a print image.

3.6.4 Available operations in [Scheduler]

In [Scheduler] you can specify the print starting timing or priority sequence.

Settings	Description
[Print Document:]	 Specify the timing to start printing. [Now]: Starts printing immediately. [At]: Starts printing at the specified time. [On Hold]: Holds print jobs in the computer. Printing can be started from the job screen of the printer.
[Priority:]	Specify the priority level of each print job.



This function is available only for Mac OS X 10.3/10.4/10.5/10.6.

3.6.5 Available operations in [Paper Handling]

In [Paper Handling], you can specify pages to be printed or their order.

Settings	Description
[Collated]	Do not specify this function. In the [Basic] menu of [Printer Features], select the [Collate] checkbox.
[Pages To Print:]	Specify the pages to be printed from All, Odd, and Even.
[Page Order:]	 Specify the order of pages to be printed. [Automatic]: Automatically judges the order of pages to be printed. [Normal]: Prints pages in sequence from the first. [Reverse]: Prints pages in sequence from the last.
[Destination Paper Size:]	 Specify the size of the paper to be printed. [Scale to fit paper size]: Prints data on sheets of the specified size. [Scale down only]: Prints data only on sheets to be reduced.



[Collated] is only displayed in Mac OS X 10.7/10.8/10.9/10.10.

3.6.6 Available operations in [ColorSync]

In [ColorSync], you can specify the color conversion method or Quartz filter.

Settings	Description
[Color Conversion:]	Select the color conversion method. • [Standard]: Performs color conversion using the computer. • [In Printer]: Performs color conversion using the printer.
[Quartz Filter:]	Specify the Quartz filter to be applied.



This function is available only for Mac OS X 10.3/10.4.

3.6.7 Available operations in [Color Matching]

In [Color Matching], you can specify the color conversion method or a color profile.

Settings	Description
[ColorSync] / [In Printer]	Select the color conversion method. • [ColorSync]: Performs color conversion using the computer. • [In Printer]: Performs color conversion using the printer.
[Profile:]	Specify the color profile to be used for color conversion.



This function is available only for Mac OS X 10.5 or later.

3.6.8 Available operations in [Cover Page]

In [Cover Page], you can configure settings to print a cover page.

Settings	Description
[Print Cover Page:]	Select whether or not to print a cover page at the head or end of a document.
[Cover Page Type:]	Select the type of a message to be printed on a cover page.
[Billing Info:]	Enter billing information when printing it on a cover page.

3.6.9 Available operations in [Error Handling]

In [Error Handling], you can specify processing when an error has occurred during PS printing.

Settings	Description
[PostScript Errors]	Select whether or not to output a report when an error has occurred during PS printing.
[Tray Switching]	This function is not used in this printer driver.



This function is available only for Mac OS X 10.3/10.4.

3.6.10 Available operations in [Paper Feed]

In [Paper Feed], you can specify the paper tray for printing.

Settings	Description
[All Pages From:]	Specify the paper tray for printing.
[First Page From:]	Specify the paper tray to load sheets for printing the first page. Also, in [Remaining From:], specify the paper tray for printing the remaining pages.

3.6.11 Available operations in [Quick Settings]

In [Quick Settings], you can configure settings for the image quality of the original. You can specify image processing.

Settings	Description
[Brightness:]	Adjust the brightness to fit the original.
[Halftone]	Specify the screen property for the printer.
[Toner Save]	Select this check box to save the amount of toner consumed. The printing density is reduced.
[Edge Strength:]	Select this check box to enhance image edges when you want to sharpen small or faint characters.

3.6.12 Available operations in [Security]

In [Security], you can configure print settings.

Settings	Description
[Job Retention:]	Select the method to use to print the original from this machine.
[Print]	Select this option to print normally.
[Secured Job]	Select this option to print highly confidential documents. Printing is allowed when the ID and password are entered on this machine. For details, refer to page 3-23.
[Proof then Print]	Select this option to print a large number of copies. This machine prints only one copy and waits for the user's command before printing the remaining copies. For details, refer to page 3-22.
[ID & Print]	Select this option to print highly confidential documents in an environment where user authentication is employed. Printing is allowed when the user is authenticated to use this machine. For details, refer to page 3-26.
[Security Print Setting	s] Enter the password when [Secured Job] is selected in [Job Retention:].
[User Authentication]	When user authentication is employed, select this check box, then enter the user name and password.
[Account Track]	When account track is employed, select this check box, then enter the account name and password.

3.6

3.6.13 Available operations in [Printer Features]

Configure the basic print settings on the [Basic] menu.

Settings	Description
[Collate]	When printing multiple sets of copies, select this check box to output sets of copies one by one.
[Nearest Size and Scale]	Select whether or not to automatically enlarge or reduce the page size and print data on sheets of the next nearest size when the size of sheets loaded in the paper tray does not match that of the original data.
[Paper Type:]	Select the type of sheets to be printed.
[Resolution:]	Select the print resolution.

In the [Layout] menu, you can configure layout settings for printing.

Settings	Description
[Print Type:]	Select whether or not to print data on both sides of paper.
[Binding Position:]	When you have selected [2-Sided] in [Print Type:], select the binding position of paper.

The [Finish] menu allows you to configure a setting for finishing printed materials.

Settings	Description
[Staple:]	Specify the staple position when stapling printed sheets of paper.



To use the staple function, the optional **Finisher** is required.

3.6.14 Available operations in [Supply Levels]

In [Supply Levels], you can check the status of consumables.



- This function is displayed when a Bonjour connection, IPP connection, or LPD connection is established in Mac OS X 10.4 or later.
- This function may not be displayed depending on your application software.

3.6.15 Available operations in [Summary]

In [Summary], you can check the current print settings.



This function is displayed only in Mac OS X 10.3/10.4/10.5/10.6.

3.7 Uninstalling the printer driver

When you have to remove the printer driver, for example, when re-installation of the printer driver is necessary, uninstall the driver using the following procedure.

- Open [System Preferences...] in the Apple menu, then click the [Print & Fax] icon.
 - → In Mac OS X 10.7/10.8, click the [Print & Scan] icon. In Mac OS X 10.9/10.10, click the [Printer & Scanner] icon.
 - → In Mac OS X 10.3, select [Macintosh HD] (system hard disk) [Applications] [Utilities], then double-click [Printer Setup Utility] to open it.
- Select the printer you want to delete, then click [-] (or [Delete]).

The selected printer is deleted.

- 3 Close the screen.
- 4 Select [Macintosh HD] (hard disk of the system) in which you installed the printer driver, then select [Library] [Printers] [PPDs] [Contents] [Resources] ([Resources] in Mac OS X 10.5 or later, each language folder in [Resources] in Mac OS X 10.3/10.4). Then, drag the gz file of this machine to [Trash].
- 5 Delete unnecessary files from [Library] [Printers].
 - → Open [Library] [Printers] [KONICAMINOLTA], then drag the folder of this machine to [Trash].
- In Mac OS X 10.3/10.4/10.5, open [Library] [Recipients], then drag the pkg file of this machine to [Trash].
- 7 Restart the computer.

Uninstallation of the printer driver is then completed.

4

Printing without Using the Printer Driver

4 Printing without Using the Printer Driver

4.1 Directly printing from the computer (Direct Print)

Direct Print

4.1

Direct Print is a function that directly sends files on your computer to this machine to print them without using the printer driver. You can print a file stored on your computer by specifying it using **Web Connection**.

This function is available for file types PDF, Compact PDF, JPEG, TIFF, XPS, Compact XPS, OOXML (.docx/.xlsx/.pptx), and PPML (.ppml/.vdx/.zip).




- However, the encrypted PDF file cannot be printed.
- Application software programs that offer the same function as Direct Print of **Web Connection** through simpler operations include **Direct Print**. Features such as printing through drag-and-drop to the desktop icon, printing using the [Send To] menu in Windows, and automatic printing using a hot folder (print monitoring folder) are available. You can also register multiple job settings in which print settings are configured. To download **Direct Print**, select [PageScope Utilities] on the menu of the **Driver & Utilities CD-ROM** and display the download page of the utility software. For details, refer to the **Direct Print** manual.

How to use Direct Print

Connect to Web Connection using a Web browser, then specify the file you want to print.

- Access to the **Web Connection** using the Web browser.
 - → Enter the IP address of this machine in the URL field of the Web browser, then press the Enter key on the keyboard. http://<IP address of this machine>/
- 2 Log in with the account of a public user or registered user.
- 3 In the [Print] tab, click [Direct Print].
- 4 Click [Browse] to select a file to print, then click [Send].

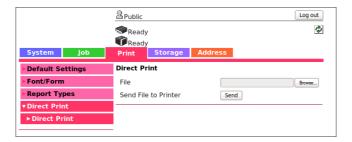

The file is sent and printed.

Related setting

- You can configure print settings to directly print the OOXML (.docx/.xlsx/.pptx) file.

 To configure settings: [Utility] [User Settings] [Printer Settings] [OOXML Print Settings]
- You can specify the method for determining the paper size when directly printing TIFF, JPEG, or PDF files.

To configure settings: [Utility] - [User Settings] - [Printer Settings] - [Paper Setting] - [TIFF Image Paper Setting] (default: [Priority Paper Size])

4.2 Printing directly from a USB memory device

Printing from a USB memory device

By connecting a USB memory device to this machine and specifying a file stored in the USB memory device, you can print the file.

This function is available for file types PDF, Compact PDF, JPEG, TIFF, XPS, Compact XPS, OOXML (.docx/.xlsx/.pptx), and PPML (.ppml/.vdx/.zip).



However, the encrypted PDF file cannot be printed.

Related setting (for the administrator)

You can specify whether to enable or disable printing data from USB memory. To configure settings: [Utility] - [Administrator Settings] - [System Settings] - [Folder Settings] - [External Memory Function Settings] - [Print Document] (default: [ON]).

Supported USB memory devices

USB memory devices that have the following specifications can be connected to this machine.

Item	Specifications
Supported media	USB memory device (USB 2.0 supported)
File system	FAT32



aqiT

Note the following points when connecting a USB memory device to this machine.

- Use the USB connector on the front of the machine that is near the Control Panel.
- Do not disconnect the USB memory device while saving a file to the USB memory or printing a file in the USB memory.
- Do not use any other USB devices (such as a hard disk) except a USB memory device or USB hub.
- Do not connect or disconnect the USB memory device when the hourglass is displayed in the Control Panel while this machine is active.
- When a USB memory device is installed, do not change the angle of the Control Panel. Contact with the Control Panel or damage to a USB memory device may result depending on the size or shape of the USB memory device.


4-3 [Print Functions]

Printing procedure

- 1 Connect a USB memory device to the USB port of this machine.
- 2 Tap [Document Print/Delete].



3 Tap [External Memory].

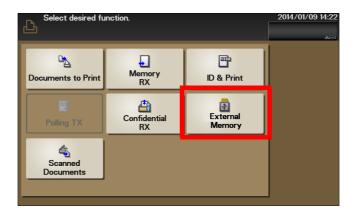

- 4 Select a file to print, then tap [Print].
 - → Tap [Up] to move upward.
 - → Tap [Open] to open the folder and move downward.
- 5 If necessary, change print settings, then tap [Print].

Settings	Description
[Paper Size]	Select the size of paper for printing. The paper size can be specified when the selected file type is TIFF or JPEG.
[Duplex]	Select whether or not to print data on one side or both sides of sheets of paper. To print data on both sides, select the binding position.
[Finishing] - [Collate]	When printing data by multiple copies, select whether or not to feed out copies separately one by one like "12345", "12345", and "12345".
[Finishing] - [Staple]	Staple each set of printed sheets of paper in a corner before feeding them out. This function is useful when preparing a project proposal or other booklet materials. This function is available when the optional Finisher is installed.

Related setting

- You can configure print settings to directly print the OOXML (.docx/.xlsx/.pptx) file.
 To configure settings: [Utility] [User Settings] [Printer Settings] [OOXML Print Settings]
- You can specify the method for determining the paper size when directly printing TIFF, JPEG, or PDF files

To configure settings: [Utility] - [User Settings] - [Printer Settings] - [Paper Setting] - [TIFF Image Paper Setting] (default: [Priority Paper Size])

4.3 Printing from an AirPrint-compatible terminal (AirPrint)

AirPrint

AirPrint is a function that automatically detects an MFP or printer on the same network from an iOS terminal (iPad, iPhone, or iPod touch) or Mac to make prints.

Using the AirPrint function, you can directly print out e-mails, photos, web pages, and other images, which are displayed on your iOS terminal or Mac, on this machine without installing the printer driver.



- To use the AirPrint function, your iOS terminal must be compatible with iOS 4.2 or later.
- The AirPrint function requires Mac OS X (10.7 or later). For details, visit the Apple website.
- To use the AirPrint function, your iOS terminal or Mac must be connected to the same network as this
 machine via Wi-Fi. For details on the iOS terminal and Mac network settings, refer to their relevant user's manuals.
- The AirPrint function does not support the user authentication function of this machine. To use the Air-Print function in an environment in which user authentication is employed, set [Security] [Authentication] [General Settings] [Print without Authentication] to [Allow] in the administrator mode of Web Connection.

Operations Required to Use this Function (For the Administrator)

Enable the AirPrint function on this machine.

For details on how to configure settings, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

Using an iOS terminal for printing

- 1 Check that this machine is turned on.
- Start the application using your iOS terminal to display the content to be printed.
- 3 Tap the printer icon or [Print].
 - → The operation procedure may vary depending on the iOS version or the application to be used.
- Select the desired printer.
- 5 If necessary, specify the page range, number of copies, and 2-sided printing.
 - → The available items vary depending on the application to be used or the file type.
- 6 Tap [Print].

Using Mac for printing

- ✓ The operation procedure may vary depending on the Mac OS version or the application to be used.
- 1 Check that this machine is turned on.
- 2 Start the application on your Mac to display the content to be printed.
- 3 In the [File] menu, click [Print].
- 4 Select the desired printer from the [Printer:] menu.
 - → If the desired printer is not displayed, click [Add Printer...] on the [Printer:] menu to add the target printer.
 - → To check the printer name, select [Network] [AirPrint Settings] in the administrator mode of **Web** Connection.
- 5 If necessary, specify the page range, number of copies, and 2-sided printing.
 - → The available items vary depending on the application to be used or the file type.
- 6 Click [Print].

4.4 **Printing from an Android terminal (Mopria print)**

the Mopria Print Function

Mopria is a standard for printing wirelessly from a mobile device without having to install specialized applications, such as the printer driver for a particular manufacturer or model.

Because this machine supports the Mopria print function, you can print from Mopria-compatible mobile devices.



ZaiT

- To use the Mopria print function, your Mopria-compatible mobile device must be connected to the same network as this machine via Wi-Fi. For details on the mobile device network settings, refer to the user's manual for the mobile device.
- The Mopria print function does not support the user authentication function of this machine. To use the Mopria print function in an environment in which user authentication is employed, set [Security] - [Authentication] - [General Settings] - [Print without Authentication] to [Allow] in the administrator mode of Web Connection.

Operations Required to Use this Function (For the Administrator)

To use the Mopria print function, enable the following settings.

- [Utility] [Administrator Settings] [Network Settings] [HTTP Server Settings] [HTTP Server Settings]
- [Utility] [Administrator Settings] [Network Settings] [HTTP Server Settings] [IPP Settings]
- [Utility] [Administrator Settings] [Network Settings] [Bonjour Setting]
- In the administrator mode of Web Connection, [Network] [IPP Settings] [Accept IPP Job]

How to Print

- The operation procedure may vary depending on the mobile device or the application to be used.
- Check that this machine is turned on.
- 2 Start the application using your Mopria-compatible mobile device to display the content to be printed.
- 3 Display the printer selection screen and select the desired printer.
- 4 If necessary, change the print settings.
- 5 Execute printing.

4-7 [Print Functions]

4.5 Using Wi-Fi Direct for printing

Wi-Fi Direct

Wi-Fi Direct is a standard that enables direct connection with a wireless terminal without an access point.

You can specify and print a file stored in a terminal using a mobile terminal such as a Wi-Fi Direct compatible smartphone or a tablet PC.



To use Wi-Fi Direct, the optional Network Interface Card and Mount Kit are required.

Machine side: Steps required to use this function (for the administrator)

Configure settings to use Wi-Fi Direct on this machine.

For details on how to configure settings, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].

Terminal side: Operations required to use this function

Connect the Wi-Fi Direct-compatible terminal to this machine using Wi-Fi Direct.

- ✓ For details on how to operate a terminal, refer to the relevant manual.
- Some terminals may not be able to be connected to this machine using Wi-Fi Direct. For details, refer to the relevant manual of your terminal.
- 1 Select "Wi-Fi Direct" on the setting menu of the terminal.
 - This displays a list of Wi-Fi Direct-compatible devices.
- From the list, select the virtual SSID for Wi-Fi Direct of this machine.
 This machine is registered in the terminal, and the connection setting is completed.



For a terminal that does not support Wi-Fi Direct, the virtual SSID for Wi-Fi Direct connection of this machine is displayed on the Wi-Fi (setting) screen. Selecting the virtual SSID of this machine on the Wi-Fi (setting) screen of the terminal can connect the terminal to this machine via Wi-Fi Direct.

Using a mobile terminal for printing

- ✓ You need to install Mobile (for iPhone/iPad/Android) in your mobile terminal.
- Register this machine in **Mobile (for iPhone/iPad/Android)**.
 - → This machine can be easily registered in **Mobile (for iPhone/iPad/Android)** by reading the QR code displayed on the screen of this machine using **Mobile (for iPhone/iPad/Android)**. For details on how to display the QR code, refer to Chapter 1 "Using Web Connection" in [User's Guide: Applied Functions].
- Specify a file to be printed, then execute printing.
 - → For details on how to make prints, refer to the help of Mobile (for iPhone/iPad/Android).

Using a computer for printing

After connecting this machine to the computer using Wi-Fi Direct, install the printer driver on the computer.

5 Index

5 Index

Numerics		M	
2-Sided	2-23, 3-17	Mopria	4-7
A		My Tab	
	0.44.0.05	0	
Account Track	•		0.0.0.10.0.11
Advanced		Options	
AirPrint	4-5	Original Size	
В		Other	2-62
Basic	2-58	Overlay Print	2-30
Binding Margin	2-25	Registration	
Bonjour	3-2, 3-4	-	
Booklet	2-24	P	
Brightness	3-20	Page Attributes	
		Page Number	
C		Page Setup	3-15, 3-29
Collate	•	Pages per Sheet	3-17
Color Matching	3-32	Paper Feed	.3-16, 3-19, 3-33
ColorSync	3-32	Paper Handling	3-31
Combination	2-22, 2-26	Paper Size	2-18
Composition	2-61	Paper Tray	2-20
Configure	2-53	Paper Type	2-19, 3-16
Copies	2-20, 3-16	Pattern	2-36
Copy Protect	2-33	Preparation	
Cover	2-34	Bonjour Connection	
Cover Page	3-19, 3-32	Network Connection	
Cover Sheet	2-60	USB Connection	•
D		Print Setting2-8, 2-14,	2-15, 3-12, 3-14
Date/Time	2.22	Printer Driver CD-ROM	2-4
Direct Print		Initial Settings (Bonjour Connection)	
		Initial Settings (Network Connection	
Distribution Control Number	2-31	Initial Settings (USB Connection)	
E		Install (Bonjour Connection)	
Edge Strength	2-37, 3-21	Install (Network Connection) Install (USB Connection)	
Error Handling		PCL Driver	•
•		PS Driver	
F		Settings	
Favorite	2-15	Uninstall	•
Finish		XPS Driver	
Flip horizontally		Printer Features	3-34
Font Settings		Printer Function	0.45 0.40
Front Cover	2-34	How to Print Overview	· ·
Н		System Environment	
Halftone	3-20	Printing Preferences	
riantone	5-20	Proof then Print	
I		Properties	
ID & Print	2-46, 3-26		2 00
Image Shift	2-27	Q	
Insert Paper	2-60	Quality	2-61
		Quality Adjustment	2-36
		Quick Settings	2-35, 3-33
LAN Cable			
Layout	2-59, 3-31		

R	
Rendezvous	3-2, 3-5
Resolution	2-35, 3-19
Reverse page orientation	3-18
Rotate 180	2-26
S	
Scale	3-15
Scheduler	3-31
Secured Job	2-41, 3-23
Security	3-33
Separator Page	2-34
Settings	2-53
Skip Blank Pages	2-23
Stamp	2-61
Staple	2-28
Store Job	2-43
Supply Level	3-34
Т	
Toner Save	2-37, 3-20
U	
USB Cable	1-4
USB Memory	4-3
User Authentication	
W	
Watermark	2-28
Wi-Fi Direct	
Z	
_	.



http://konicaminolta.com